

IMPORTANT

READ CAREFULLY BEFORE USE

KEEP IN SAFE PLACE READY TO CONSULT AT LATER DATE



MADE  
IN  
GERMANY



# BOSCH

## Translation of the original operating instructions for KETTLER pedelecs

### LED Remote

KB160-xxKD, KB160-xxKW	E-Transhill CX11 LG
KB189-xxKD, KB189-xxKT, KB189-xxKW	Quadriga Town&Country P10
KB190-xxKD, KB190-xxKT, KB190-xxKW	Quadriga P10
KB193-xxKD, KB193-xxKT, KB193-xxKW	Traveller E-Gold P9
KB194-xxFD, KB194-xxFW	Traveller E-Gold P5 (FL)
KB194-xxRD, KB194-xxRW	Traveller E-Gold P5 (RT)
KB195-xxKD, KB195-xxKW	Traveller E-Gold Town&Country P9



### LED Remote with Kiox 300 display

KB180-xxFD, KB180-xxFT, KB180-xxFW	Quadriga PRO Belt Automatic
KB181-xxKD, KB181-xxKW	Quadriga PRO CX11 LG
KB182-xxKD, KB182-xxKW	Quadriga Town&Country PRO CX 11 LG
KB183-xxKD, KB183-xxKT, KB183-xxKW	Quadriga Town&Country Comp CX11 LG
KB184-xxKD, KB184-xxKT, KB184-xxKW	Quadriga Comp CX11
KB187-xxKD, KB187-xxKT, KB187-xxKW	Quadriga Town&Country Comp ABS CX11 LG
KB200-xxKD, KB200-xxKW	Quadriga Town&Country PRO ABS LTD CX11 LG



### LED Remote with Intuvia 100 display

KB069-xxRW	Quadriga P5 HD Benelux Belt (RT)
KB084-xxFW	E-Comfort P5 (FL)
KB084-xxRW	E-Comfort P5 (RT)
KB085-xxFW	E-Comfort 8 (FL)
KB085-xxRW	E-Comfort 8 (RT)
KB087-xxFW	E-Comfort P5 Belt (FL)
KB087-xxRW	E-Comfort P5 Belt (RT)
KB112-xxFD, KB112-xxFT, KB112-xxFW	Quadriga P5 (FL)
KB112-xxRD, KB112-xxRT, KB112-xxRW	Quadriga P5 (RT)
KB136-xxFD, KB136-xxFW	Quadriga CX5 HD Benelux Belt (FL)
KB137-xxKD, KB137-xxKT, KB137-xxKW	Quadriga CX10 LG
KB156-xxFD, KB156-xxFT, KB156-xxFW	Quadriga P5 Belt (FL)
KB156-xxRD, KB156-xxRT, KB156-xxRW	Quadriga P5 Belt (RT)
KB158-xxKD, KB158-xxKW	Traveller E-Gold 10 Plus
KB159-xxFW	Traveller E-Gold 5 Plus (FL)
KB159-xxRW	Traveller E-Gold 5 Plus (RT)
KB161-xxFW	Traveller E-Gold 5 Plus Belt (FL)
KB161-xxRW	Traveller E-Gold 5 Plus Belt (RT)
KB184-xxKD, KB184-xxKT, KB184-xxKW	Quadriga COMP CX11 LG
KB188-xxKD, KB188-xxKW	Quadriga Town&Country CX10 LG
KB190-xxKD, KB190-xxKT, KB190-xxKW	Quadriga P10



# Contents

<b>1</b>	<b>About these operating instructions</b>	
1.1	Manufacturer	9
1.2	Laws, standards and directives	9
1.2.1	Warnings	9
1.2.2	Markups	9
1.3	For your information	9
1.4	Language	10
1.5	Aim of the operating instructions	10
1.6	Type number and model	11
1.7	Frame number	11
1.8	Identifying the operating instructions	11
<b>2</b>	<b>Safety</b>	
2.1	Residual risk	12
2.1.1	Risk of fire and explosion	12
2.1.2	Electric shock	14
2.1.3	Risk of a crash	14
2.1.4	Risk of amputation	14
2.1.5	Key breaking off	14
2.1.6	Malfunctions due to Bluetooth®	15
2.2	Toxic substances	16
2.2.1	Carcinogenic substances	16
2.2.2	Toxic materials	16
2.2.3	Irritants and corrosive substances	16
2.3	Requirements for the pedelec rider	17
2.3.1	In the case of bicycles for young adults	17
2.4	Vulnerable groups	18
2.4.1	In the case of bicycles for young adults	18
2.5	Personal protective equipment	18
2.5.1	For mountain bikes	18
2.6	Safety guards	18
2.7	Safety markings and safety instructions	19
2.8	What to do in an emergency	19
2.8.1	Dangerous situation in road traffic	19
2.8.2	Oil and lubricant leaks from the fork	19
2.8.3	Leaked brake fluid	19
2.8.4	Battery vapour emission	20
2.8.5	Battery fire	20
2.8.6	Oil and lubricant leaks from the rear frame damper	20
2.9	Data privacy information	21
<b>3</b>	<b>Description</b>	
3.1	Proper use	22
3.1.1	City and trekking bicycle	22
3.1.2	Folding bicycle	23
3.1.3	Mountain bike	24
3.1.4	Cargo bike	25
3.1.5	Cycle for children and young adults	26
3.1.6	Area of use as per EN 17406, from model year 2024	27
3.2	Technical data	29
3.2.1	Complete BOSCH vehicle	29
3.2.2	Mass	30
3.3	Model year 24 nameplate	32
3.4	Nameplate	33
3.5	Components	34

3.5.1	Overview	34
3.5.2	Chassis	101
3.5.3	Wheel	121
3.5.4	Brake	126
3.5.5	Saddle	132
3.5.6	Seat post	134
3.5.7	Mechanical drive system	138
3.5.8	Electric drive system	139
3.6	Description of controls and screens	143
3.6.1	Handlebars with BOSCH LED Remote and optional Intuvia 100 or Kiox 300 display	143
3.6.2	BOSCH LED Remote on-board computer	145
3.6.3	BOSCH Intuvia 100 display	150
3.6.4	Display	152
3.6.5	Handbrake	157
3.6.6	SHIMANO gear shift	158
3.6.7	Suspension and damping	162
3.6.8	Rechargeable battery	166
<b>4</b>	<b>Transporting and storing</b>	
4.1	Transportation	167
4.1.1	Using the transport securing system	167
4.1.2	Transporting the pedelec	167
4.1.3	Shipping a pedelec	168
4.1.4	Transporting the battery	168
4.1.5	Shipping the battery	168
4.2	Storing	169
4.2.1	Battery storage mode	169
4.2.2	Break in operation	169
<b>5</b>	<b>Assembly</b>	
5.1	Unpacking	170
5.2	Required tools	170
5.3	Commissioning	171
5.3.1	Checking the battery	171
5.3.2	Adjusting the suspension system to body weight	172
5.3.3	Adjusting the LIMOTEC seat post	173
5.3.4	Preparing the wheel	174
5.3.5	Installing the wheel in the SUNTOUR fork	175
5.3.6	Fitting the pedals	179
5.3.7	Checking the stem and handlebars	180
5.4	Selling the pedelec	180
<b>6</b>	<b>Operation</b>	
6.1	Risks and hazards	181
6.2	Tips for a greater range	183
6.3	Instruction and customer service	184
6.4	Adjusting the pedelec	184
6.4.1	Preparing	184
6.4.2	Riding position	185
6.4.3	Seat post	187
6.4.4	Saddle	187
6.4.5	Handlebars	194
6.4.6	Stem	196
6.4.7	Handles	198
6.4.8	Tyres	199
6.4.9	Brake	201
6.4.10	Control panel and gear shift	209
6.4.11	Suspension and damping	210

---

6.4.12	Adjusting the suspension fork sag	210
6.4.13	Adjusting the rear frame damper sag	220
6.4.14	Adjusting the suspension fork rebound damper	223
6.4.15	Adjusting the rear frame damper rebound damper	226
6.4.16	Adjusting the rear frame damper compression damper	228
6.4.17	Riding light	230
6.4.18	On-board computer	232
6.4.19	Adjusting the on-board computer	237
6.5	Accessories	243
6.5.1	Child seat	243
6.5.2	Trailer	244
6.5.3	Pannier rack	245
6.5.4	Panniers and cargo boxes	245
6.5.5	Front baskets	246
6.5.6	Bar ends	246
6.5.7	Kickstands	246
6.5.8	Additional battery headlight	246
6.5.9	Mobile holder	246
6.5.10	Suspension fork coil spring	246
6.5.11	Fixed weather protection systems	246
6.6	Personal protective equipment and accessories for road safety	247
6.7	Before each ride	247
6.7.1	Checking the ABS lamp	248
6.8	Personal protective equipment and accessories for road safety	249
6.8.1	Riding in bike parks and off-road	249
6.8.2	Riding on public roads	249
6.9	Before each ride	250
6.10	Using the BOSCH battery	251
6.10.1	Using the integrated battery	251
6.10.2	Frame battery	252
6.10.3	Removing the battery	252
6.10.4	Charging the battery	253
6.11	Straightening the quickly adjustable stem	254
6.12	Using the pannier rack	254
6.13	Raising the kickstand	255
6.14	Using the saddle	255
6.14.1	Using the leather saddle	255
6.15	Using the pedals	255
6.16	Setting the saddle height with the remote control	256
6.16.1	Lowering the saddle	256
6.16.2	Raising the saddle	256
6.17	Using the bell	256
6.18	Using the handlebars	256
6.18.1	Using multi-position handlebars	256
6.18.2	Using bar ends	257
6.18.3	Using leather handles	257
6.18.4	Adjusting the rear frame damper	258
6.19	Using the electric drive system	261
6.19.1	Switching on the electric drive system	261
6.19.2	Switching off the electric drive system	261
6.20	Using the on-board computer	262
6.20.1	Using the diagnosis port	262
6.20.2	Charging the on-board computer battery	262
6.20.3	Using the riding light	263
6.20.4	Setting the brightness of indicators	263
6.20.5	Using the push assist system	263
6.20.6	Selecting the level of assistance	264
6.21	Using the on-board computer	265
6.21.1	Using the diagnosis port	265

6.21.2	Charging the control panel battery	265
6.21.3	Using the riding light	266
6.21.4	Setting the brightness of indicators	266
6.21.5	Using the push assist system	266
6.21.6	Selecting the level of assistance	267
6.22	Using the brake	268
6.22.1	Using the handbrake	268
6.22.2	Using the back-pedal brake	268
6.22.3	Using ABS	269
6.23	Gear shift	271
6.23.1	Using the derailleur gears	271
6.23.2	Using a SHIMANO hub gear	272
6.23.3	Using eShift	273
6.23.4	Using an ENVIOLLO gear shift gear	274
6.24	Use suspension and damping	276
6.24.1	Locking the suspension	276
6.24.2	Adjusting the suspension fork compression damper	277
6.25	Parking	282
6.25.1	Screwing in the quickly adjustable stem	283
6.25.2	Folding up the pedal	283
6.25.3	Activating the lock function	284

## 7 Cleaning, maintenance and inspection

7.1	Before each ride	289
7.1.1	Checking the guards	289
7.1.2	Checking the frame	289
7.1.3	Checking the fork	289
7.1.4	Checking the rear frame damper	289
7.1.5	Checking the pannier rack	289
7.1.6	Checking the mudguards	289
7.1.7	Check wheel concentricity	289
7.1.8	Checking the quick releases	289
7.1.9	Checking the suspension seat post	290
7.1.10	Checking the bell	290
7.1.11	Checking the handles	290
7.1.12	Checking the USB cover	290
7.1.13	Checking the riding light	290
7.1.14	Checking the brake	290
7.2	After each ride	291
7.2.1	Cleaning the riding light and reflectors	291
7.2.2	Cleaning the suspension fork	291
7.2.3	Maintaining the suspension fork	291
7.2.4	Cleaning the pedals	291
7.2.5	Cleaning the brake	291
7.2.6	Cleaning the suspension seat post	291
7.2.7	Cleaning the rear frame damper	291
7.3	Basic cleaning	292
7.3.1	Cleaning the on-board computer and control panel	292
7.3.2	Cleaning the battery	292
7.3.3	Cleaning the motor	292
7.3.4	Cleaning the frame, fork, pannier rack, guards and kickstand	293
7.3.5	Cleaning the stem	293
7.3.6	Cleaning the handlebars	293
7.3.7	Cleaning the handles	293
7.3.8	Cleaning the seat post	293
7.3.9	Cleaning the saddle	294
7.3.10	Cleaning the tyres	294
7.3.11	Cleaning the spokes and spoke nipples	294
7.3.12	Cleaning the hub	294

7.3.13	Cleaning the switching elements	294
7.3.14	Cleaning the SRAM AXS rear derailleur	294
7.3.15	Cleaning the cassette, chain wheels and front derailleur	295
7.3.16	Cleaning the brake	295
7.3.17	Cleaning the brake disc	295
7.3.18	Cleaning the belt	295
7.3.19	Cleaning the chain	296
7.4	Maintenance	297
7.4.1	Maintain frame	297
7.4.2	Maintain fork	297
7.4.3	Maintain pannier rack	298
7.4.4	Maintain mudguard	298
7.4.5	Servicing the kickstand	298
7.4.6	Maintaining the stem	298
7.4.7	Maintaining the handlebars	298
7.4.8	Maintaining the handles	299
7.4.9	Maintaining the seat post	299
7.4.10	Maintaining the rims	299
7.4.11	Maintaining the leather saddle	299
7.4.12	Maintaining the hub	300
7.4.13	Maintaining the spoke nipples	300
7.4.14	Maintaining the gear shift	300
7.4.15	Maintaining the pedals	300
7.4.16	Maintaining the chain	301
7.4.17	Maintaining the battery	301
7.4.18	Maintaining the brake	302
7.4.19	Lubricating the Eightpins seat post tube	302
7.5	Inspection	303
7.5.1	Checking the wheel	303
7.5.2	Checking the brake system	307
7.5.3	Checking the chain	310
7.5.4	Checking the belt	312
7.5.5	Checking the riding light	315
7.5.6	Checking the stem	316
7.5.7	Checking the handlebars	316
7.5.8	Checking the saddle	316
7.5.9	Checking the seat post	316
7.5.10	Checking the pedal	316
7.5.11	Checking the gear shift	317
<b>8</b>	<b>Inspection and maintenance</b>	
8.1	Initial inspection	320
8.2	Major inspection	320
8.3	Component-specific maintenance	320
8.4	Carrying out initial inspection	323
8.5	Perform major inspection	324
8.5.1	Inspect frame	331
8.5.2	Inspecting the pannier rack	331
8.5.3	Inspecting and maintaining the rear frame damper	331
8.5.4	Inspecting the gear hub	332
8.5.5	Inspecting the stem	332
8.5.6	Inspect and grease steering headset	332
8.5.7	Inspecting the axle with quick release	333
8.5.8	Inspecting the fork	334
8.5.9	Inspecting the seat post	335
8.5.10	Torque	337
<b>9</b>	<b>Troubleshooting, fault clearance and repair</b>	
9.1	Preventing pain	348

---

9.1.1	Sitting discomfort	349
9.1.2	Pain in hips	349
9.1.3	Backache	349
9.1.4	Pain in shoulders and nape of neck	350
9.1.5	Numb or aching hands	350
9.1.6	Pain in upper thigh	350
9.1.7	Knee pain	351
9.1.8	Pain in the foot	351
9.2	Troubleshooting and fault clearance	352
9.2.1	Drive system or on-board computer does not start up	352
9.2.2	Errors in assistance function	353
9.2.3	Battery errors	354
9.2.4	Display screen errors	355
9.2.5	Lighting does not work	355
9.3	Error message	356
9.3.1	On-board computer	356
9.3.2	Rechargeable battery	356
9.4	Error message	358
9.4.1	On-board computer	358
9.4.2	Rechargeable battery	359
9.4.3	Correcting disc brake faults	360
9.4.4	Problems with back-pedal brake	361
9.4.5	Problems with ABS	362
9.4.6	Correcting faults in the SR SUNTOUR suspension fork	363
9.4.7	Correcting faults in the ROCKSHOX suspension fork	367
9.4.8	Correcting faults in the ROCKSHOX rear frame damper	371
9.4.9	Problems with hub gear	375
9.4.10	Correcting freewheel faults	377
9.4.11	Correcting lighting faults	378
9.4.12	Correcting faults in tyres	378
9.4.13	Correcting control seat post faults	378
9.4.14	Correcting other faults and errors	379
9.5	Repairs at the specialist dealer	380
9.5.1	Original parts and lubricants	380
9.5.2	Repairing the frame	380
9.5.3	Repairing the suspension fork	380
9.5.4	Replacing the riding light	381
9.5.5	Adjusting the headlight	381
9.5.6	Checking suspension fork-tyre clearance	381
9.5.7	Replacing pedelec components if lock function is installed	382
<b>10</b>	<b>Recycling and disposal</b>	
10.1	Guidelines on removal of waste	383
<b>11</b>	<b>Documents</b>	
11.1	Assembly report	385
11.2	Inspection and maintenance log	387
11.3	Charger operating instructions	391
<b>12</b>	<b>Glossary</b>	
12.1	Abbreviations	401
12.2	Simplified terms	401
<b>13</b>	<b>Appendix</b>	
I.	Translation of the original EC/EU Declaration of Conformity	402
II.	Translation of original EC/EU Declaration of Conformity	404
<b>14</b>	<b>Keyword index</b>	

## Thank you for your trust!

KETTLER pedelecs are premium quality vehicles. You have made an excellent choice. Your specialist dealer will provide you with guidance and instruction and assemble your product. Your specialist dealer will also be happy to assist you in the future, whether you require maintenance, a retrofit or repair.

Your new pedelec comes with these operating instructions. Please take time to become familiar with your new pedelec. Use the tips and suggestions in the operating instructions. They will help you to enjoy your pedelec for a long time to come. We hope you have fun and wish you well on all of your rides!

Download the operating instructions onto your phone at the following link, so that you can use them when you are out riding:

<https://www.kettler-alu-rad.de/gb/en/index/service.html>.



## Copyright

© KETTLER Alu-Rad GmbH

Distribution or reproduction of these operating instructions and utilisation or communication of their content is prohibited unless expressly approved. Anyone who does not comply with these restrictions is liable for compensation. All rights reserved in the event that a patent, utility model or industrial design is registered.

## Subject to internal changes

The information contained in these *operating instructions* are the approved technical specifications at the time of printing. In addition to the functions described here, the software may be modified at any time to rectify errors and extend functions.

Any significant changes are included in a new published version of the operating instructions. All changes and new versions of the operating instructions are published on the following website:

<https://www.kettler-alu-rad.de/de/de/index/service/downloads.html>

## Editing

Text and images:  
ZEG Zweirad-Einkaufs-Genossenschaft eG  
Longericher Strasse 2  
50739 Köln  
Germany

## Translation

ElaN Languages  
Bahnhofstrasse 27  
78713 Schramberg  
Germany

**Contact if you have any questions or problems, or wish to have a printed copy of these operating instructions:**

tecdoc@zeg.de



# 1 About these operating instructions

## 1.1 Manufacturer

KETTLER Alu-Rad GmbH  
 Longericher Strasse 2  
 50739 Köln  
 Germany

Tel.: +49 6805 6008-0  
 Fax: +49 6805 6008-3098  
 E-mail: [info@kettler-alu-rad.de](mailto:info@kettler-alu-rad.de)

## 1.2 Laws, standards and directives

The operating instructions comply with the essential requirements specified in:

- Machinery Directive 2006/42/EC
- RoHS Directive 2011/65/EU Restriction of the use of certain hazardous substances in electrical and electronic equipment
- Electromagnetic Compatibility Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU met in compliance with Appendix I, no. 1.5.1 of the Machinery Directive 2006/42/EC
- EN 15194:2017 Cycles – Electrically power assisted cycles – EPAC bicycles  
**Except Section 6 Instructions for Use; harmonised standard EN ISO 20607:2019 used in its place**
- EN ISO 20607: 2019 Safety of machinery – Instruction handbook – General drafting principles.

### 1.2.1 Warnings

Warnings indicate hazardous situations and actions. You will find three categories of warnings in the operating instructions:



**WARNING**

May lead to serious or even fatal injuries if ignored. Medium-risk hazard.

**CAUTION**

May lead to minor or moderate injuries if ignored. Low-risk hazard.

**Notice**

May lead to material damage if ignored.

### 1.2.2 Markups

You will find ten text markups in the operating instructions:

Stylised form	Use
<u>Underlined in blue</u>	Link
<u>Underlined in grey</u>	Cross references
✓	Requirements
▶	Instructions for actions with no specific order
3	Instructions for actions in specified order
⇒	Result of the action
SPACED	Indicators on the display screen
•	Bulleted lists
Only applies to pedelecs with this equipment	A notice beneath the heading indicates components which can be used as an option

Table 1: Markups

## 1.3 For your information

Different icons are used to make things easier to read.

	Text for specialist dealers
	Notice on replacing components
	Notice on fitness

## 1.4 Language

The original operating instructions are written in German. A translation is invalid without the original operating instructions.

## 1.5 Aim of the operating instructions

These operating instructions are an integral part of the pedelec. Therefore, if the pedelec is re-sold at a later time, they must be handed over to the next owner.

The operating instructions aim to provide users with the information they need to use their pedelec effectively and safely throughout its entire lifecycle while also identifying reasonably foreseeable misuse.

The operating instructions are designed for pedelecs that are sold online. As a result, there is no need for instruction from a specialist dealer.

Paragraphs with a white background are intended to enable non-professionals to make safe settings on the pedelec, use it, clean it and identify and eliminate any faults.



Sections intended for technical staff are highlighted in blue and marked with a spanner symbol. Technical staff are trained bicycle mechanics, bicycle mechatronics engineers or similar.

These sections aim to allow technical staff to carry out initial assembly, commissioning, adjustments, inspections and repairs safely.

Technical staff also need to read all sections for pedelec riders and operators to ensure they can provide better customer service.

Always fill out all reports in Section 11.1 and Section 11.2 when carrying out work.

Section		Rider	Specialist dealer
1	Manufacturer	<input type="checkbox"/>	<input type="checkbox"/>
2	Safety	<input type="checkbox"/>	<input type="checkbox"/>
3	Description	<input type="checkbox"/>	<input type="checkbox"/>
4	Transporting and storing	<input type="checkbox"/>	<input checked="" type="checkbox"/>
5.1	Assembly Specialist dealer		<input checked="" type="checkbox"/>
5.2	Assembly by end customer	<input type="checkbox"/>	<input checked="" type="checkbox"/>
6	Operation	<input type="checkbox"/>	<input checked="" type="checkbox"/>
7	Cleaning, maintenance and inspection	<input type="checkbox"/>	<input type="checkbox"/>
8	Inspection and maintenance	<input type="checkbox"/>	<input type="checkbox"/>
9.1	Preventing pain	<input type="checkbox"/>	<input type="checkbox"/>
9.2	Troubleshooting and fault clearance	<input type="checkbox"/>	<input type="checkbox"/>
9.8	Repair		<input checked="" type="checkbox"/>
10	Recycling and disposal	<input type="checkbox"/>	<input type="checkbox"/>
11	Documents		<input type="checkbox"/>
12	Glossary	<input type="checkbox"/>	<input type="checkbox"/>
13	Appendix		<input checked="" type="checkbox"/>
14	Keyword index	<input type="checkbox"/>	<input type="checkbox"/>

Table 2: Target groups-section matrix

## 1.6 Type number and model

These operating instructions are an integral part of pedelecs with the type numbers:

Type no.	Model	Pedelec type
KB069-xxRW	QUADRIGA P5 HD BENELUX BELT (RT)	City and trekking bicycle
KB084-xxFW	E-COMFORT P5 (FL)	City and trekking bicycle
KB084-xxRW	E-COMFORT P5 (RT)	City and trekking bicycle
KB085-xxFW	E-COMFORT 8 (FL)	City and trekking bicycle
KB085-xxRW	E-COMFORT 8 (RT)	City and trekking bicycle
KB087-xxFW	E-COMFORT P5 BELT (FL)	City and trekking bicycle
KB087-xxRW	E-COMFORT P5 BELT (RT)	City and trekking bicycle
KB112-xxFD, KB112-xxFT, KB112-xxFW	QUADRIGA P5 (FL)	City and trekking bicycle
KB112-xxRD, KB112-xxRT, KB112-xxRW	QUADRIGA P5 (RT)	City and trekking bicycle
KB136-xxFD, KB136-xxFW	QUADRIGA CX5 HD BENELUX BELT (FL)	City and trekking bicycle
KB137-xxKD, KB137-xxKT, KB137-xxKW	QUADRIGA CX10 LG	City and trekking bicycle
KB156-xxFD, KB156-xxFT, KB156-xxFW	QUADRIGA P5 BELT (FL)	City and trekking bicycle
KB156-xxRD, KB156-xxRT, KB156-xxRW	QUADRIGA P5 BELT (RT)	City and trekking bicycle
KB158-xxKD, KB158-xxKW	TRAVELLER E-GOLD 10 PLUS	City and trekking bicycle
KB159-xxFW	TRAVELLER E-GOLD 5 PLUS (FL)	City and trekking bicycle
KB159-xxRW	TRAVELLER E-GOLD 5 PLUS (RT)	City and trekking bicycle
KB160-xxKD, KB160-xxKW	E-TRANSHILL CX11 LG	Mountain bike
KB161-xxFW	TRAVELLER E-GOLD 5 PLUS BELT (FL)	City and trekking bicycle
KB161-xxRW	TRAVELLER E-GOLD 5 PLUS BELT (RT)	City and trekking bicycle
KB180-xxFD, KB180-xxFT, KB180-xxFW	QUADRIGA PRO BELT AUTOMATIC	City and trekking bicycle
KB181-xxKD, KB181-xxKW	Quadriga PRO CX11 LG	City and trekking bicycle

Table 3: Identification number

Type no.	Model	Pedelec type
KB182-xxKD, KB182-xxKW	QUADRIGA TOWN & COUNTRY PRO CX 11 LG	City and trekking bicycle
KB183-xxKD, KB183-xxKT, KB183-xxKW	QUADRIGA TOWN & COUNTRY COMP CX11 LG	City and trekking bicycle
KB184-xxKD, KB184-xxKT, KB184-xxKW	QUADRIGA COMP CX11 LG	City and trekking bicycle
KB187-xxKD, KB187-xxKT, KB187-xxKW	QUADRIGA TOWN & COUNTRY COMP ABS CX11 LG	City and trekking bicycle
KB188-xxKD, KB188-xxKW	QUADRIGA TOWN & COUNTRY CX10 LG	City and trekking bicycle
KB189-xxKD, KB189-xxKT, KB189-xxKW	QUADRIGA TOWN & COUNTRY P10	City and trekking bicycle
KB190-xxKD, KB190-xxKT, KB190-xxKW	QUADRIGA P10	City and trekking bicycle
KB193-xxKD, KB193-xxKT, KB193-xxKW	TRAVELLER E-GOLD P9	City and trekking bicycle
KB194-xxFD, KB194-xxFW	TRAVELLER E-GOLD P5 (FL)	City and trekking bicycle
KB194-xxRD, KB194-xxRW	TRAVELLER E-GOLD P5 (RT)	City and trekking bicycle
KB195-xxKD, KB195-xxKW	TRAVELLER E-GOLD Town & Country P9	City and trekking bicycle
KB200-xxKD, KB200-xxKW	QUADRIGA TOWN & COUNTRY PRO ABS LTD CX11 LG	City and trekking bicycle

Table 3: Identification number

## 1.7 Frame number

Each frame has an individual frame number stamped on it (see Figure 2). The frame number can be used to link the pedelec with the owner. The frame number is the most important identifier for verifying ownership.

## 1.8 Identifying the operating instructions

The operating instructions identification number is located in bottom left-hand corner of each page.

The identification number is composed of the document number, the version number and the release date.

Identification number	MY24K0a - 13_1.0_30.01.2024
-----------------------	-----------------------------

## 2 Safety

### 2.1 Residual risk

Pedelecs pose the following residual risks:

- Risk of fire and explosion
- Electric shock
- Risk of a crash
- Risk of amputation
- Key breaking off
- Malfunctions due to Bluetooth®



#### 2.1.1 Risk of fire and explosion

##### Never charge if there is a critical fault

If a charger is connected to the drive system when a critical error is reported, the battery may be damaged permanently and may catch fire.

- ▶ Connect charger to fault-free electric drive system only.

##### Protect against penetrating water

The battery is only protected from spray water. Penetration by water can cause a short circuit. The battery may self-ignite and explode.

- ▶ Never immerse battery in water.
- ▶ Take battery out of service if you suspect water has penetrated it.

##### Avoid heat

Temperatures over 60 °C can also cause liquid to leak from the battery and the battery will become damaged. The battery may self-ignite and explode.

- ▶ Protect the battery against heat.
- ▶ Never store next to hot objects.
- ▶ Never expose battery to continuous direct sunlight.
- ▶ Avoid wide temperature fluctuations.

##### Never use incorrect charger

Chargers with excessive voltage damage batteries. This may cause a fire or an explosion.

- ▶ Only use approved batteries to charge.

##### Prevent short circuit due to interconnection

Metal objects may interconnect the battery's electrical terminals. The battery may self-ignite and explode.

- ▶ Never insert paper clips, screws, coins, keys and other small parts into the battery.
- ▶ Place the battery on clean surfaces only. Prevent charging socket and contacts against contamination from dirt, sand and similar.

##### Handling a damaged or faulty battery

Faulty batteries are hazardous goods. These include:

- Cells or batteries which have been identified as faulty for safety reasons;
- Batteries which have leaked or discharged gas;
- Cells or batteries which have sustained external or physical damage;
- Cells or batteries which have not yet undergone a safety test.

The safety electronics may fail if the batteries are damaged or faulty. The residual voltage can cause a short circuit. The battery may self-ignite and explode.

- ▶ Only use and charge battery and accessories if they are in perfect condition.
- ▶ Never open or repair the battery.
- ▶ Batteries with external damage must be removed from service immediately.
- ▶ If a battery is dropped or struck, remove it from service and keep it under observation for at least 24 hours.
- ▶ Contact specialist dealer.

## Storing faulty batteries

Your specialist dealer will dispose of faulty batteries.

▶ Take faulty batteries to your specialist dealer.



▶ Store the battery in a safety container in a dry place as per special regulations (ADR SV 376, P908) until you dispose of it.



Figure 1: Example of a safety container

- ▶ Never store near flammable substances.
- ▶ Dispose of faulty batteries in the correct manner.

## Avoid overheating in the charger

The charger heats up when charging the battery. If the battery is not allowed to cool down sufficiently, it can cause a fire or burns to the hands.

- ▶ Never use charger on a highly flammable surface.
- ▶ Never cover the charger during charging.
- ▶ Never leave battery unattended during charging.

## Cool down overheated brakes and motors

The brakes and the motor may become very hot during operation. There is a risk of burns or fire in case of contact.

- ▶ Never touch the brakes or the motor immediately after a ride.
- ▶ Never place the pedelec on a flammable surface, such as grass or wood, directly after use.



### 2.1.2 Electric shock

#### Never use damaged network components

Damaged chargers, cables and plug connectors increase the risk of electric shock.

- ▶ Check the charger, cable and plug connector before each use. Never use a damaged charger.

#### Avoid water penetrating

If water penetrates into the charger, there is a risk of electric shock.

- ▶ Use the charger indoors only.

#### Dealing with condensate

Condensation may form in the charger and in the battery when the temperature changes from cold to hot, causing a short circuit.

- ▶ Wait until both charger and battery are at room temperature before connecting them.



### 2.1.3 Risk of a crash

#### Set the quick release correctly

Excessively high clamping force will damage the quick release and cause it to lose its function. Insufficient clamping force will result in unfavourable transmission of force. This can cause components to break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

#### Use correct torque

If a screw is fastened too tightly, it may break. If a screw is not fastened enough, it may loosen. This will cause a crash with injuries.

- ▶ Always observe the indicated tightening torque on the screw or in Section 8.5.10.

#### Use approved brakes only

The wheels are designed exclusively for use with rim brakes or disc brakes. The wheel may break if an incorrect brake is used. This will cause a crash with injuries.

- ▶ Only use the approved brakes on the wheel.



### 2.1.4 Risk of amputation

The brake disc in disc brakes is so sharp that it can cause serious injuries to fingers if they are inserted into the brake disc openings.

The chain wheels and belt sprockets can draw in fingers, thus causing serious injuries to fingers.

- ▶ Always keep fingers well away from rotating brake discs and the chain or belt drive.

#### 2.1.5 Key breaking off

If you leave a key inserted when riding or transporting the pedelec, it may break off or the locking system may open accidentally.

- ▶ Pull the key from the battery lock.

### 2.1.6 Malfunctions due to Bluetooth®

If you use the on-board computer with Bluetooth® and/or Wi-Fi®, it may cause interference with other devices, other equipment, aircraft, and medical devices, such as pacemakers and hearing aids.

Likewise, it cannot be completely ruled out that you will cause harm to people and animals in the immediate vicinity.

- ▶ Never use the pedelec with Bluetooth® when in close proximity to medical devices, filling stations, chemical plants, areas at risk of explosion and in blasting zones.
- ▶ Never use pedelec with Bluetooth® in aircraft.
- ▶ Avoid operating for longer periods in close proximity to the body.

## 2.2 Toxic substances

If substances are released or used which pose a risk to people and the environment, effective protective measures must be taken.

Possible hazards, contamination and health hazards due to:

- Carcinogenic, germ-cell-mutagenic and reproduction-toxic substances
- Toxic materials
- Irritants (skin, respiratory system) and corrosive substances

### What might happen?

- Serious harmful effects to health
- Threat to life
- Hazard to bystanders due to carry-over and contamination in the personal environment.



### 2.2.1 Carcinogenic substances

Carcinogenic hazardous substances are substances which can trigger cancer or promotes the formation of cancer. They are classified as categories 1A, 1B and 2 under European hazardous substances legislation and are labelled with the H-phrases codes H350/ H350i and H351. It is essential to carry out a professional risk assessment and select and use suitable protective measures due to the serious consequences for health and the occasionally long period of time it takes before the disease manifests itself.

### Suspension oil

If you come into contact with the suspension oil in the fork, the 8pins seat post or the rear frame damper, it will irritate the respiratory tract and can cause cancer, sterility and changes to the genetic make-up of germ cells oil.

- ▶ Never dismantle the rear frame damper or the suspension fork.
- ▶ It is forbidden for pregnant women to carry out maintenance and cleaning tasks.
- ▶ Avoid skin coming into contact with suspension oil.



### 2.2.2 Toxic materials

Toxic substances (also known as poison or toxins) refer to substances which can cause damage to living beings if they enter the organism above a specific low dose. The more the ingested amount of a toxic substance increases, the greater the likelihood of damage to health due to poisoning is. This can lead to death.

### Brake fluid

Brake fluid may leak out after an accident or due to material fatigue. Brake fluid can be fatal if swallowed or inhaled.

- ▶ Never dismantle the brake system.
- ▶ Avoid contact with skin.
- ▶ Do not inhale vapours.

### Suspension oil

The suspension oil in the fork, the 8pins seat post and the rear frame damper is toxic to the touch.

- ▶ Never dismantle the rear frame damper or the suspension fork.
- ▶ It is forbidden for pregnant women to carry out maintenance and cleaning tasks.
- ▶ Avoid skin coming into contact with suspension oil.

### 2.2.3 Irritants and corrosive substances



Corrosive substances (also known as corrosives) destroy living tissue or attack surfaces. Corrosive substances may be in solid, liquid or gaseous form.

Irritants are hazardous substances which irritate the skin and mucous membranes once you come into contact with them. This may cause inflammation of the affected areas.







## Defective battery

Liquids and vapours may leak from damaged or faulty batteries. Excessively high temperatures may also cause liquids and vapours to leak from the battery. Such liquids and vapours can irritate the airways and cause burns.

- ▶ Never dismantle the battery.
- ▶ Avoid contact with skin.
- ▶ Never inhale vapours.

## 2.3 Requirements for the pedelec rider

The pedelec rider must have adequate physical, motor and mental abilities to ride on public roads. A minimum age of 14 years is recommended. The area of use is labelled on the nameplate. It is important to remember that

Area of use as per EN 17406	
 EN 17406	Practice and technical skill is required for such rides.
 EN 17406	You need have technical skills and capacity to handle a bike for such rides.
 EN 17406	You need have exceptional technical skills and capacity to handle a bike for such rides.
 EN 17406	Practice and technical skills are required for such rides.

### 2.3.1 In the case of bicycles for young adults

If there are no legal requirements for pedelec riders, we recommend that the rider should be a minimum 14 years of age and have experience with muscle-powered bicycles.

Legal guardians hold sole responsibility for determining whether minors are capable of using the pedelec.

- ▶ The rider must demonstrate adequate physical and mental abilities to ride on public roads.
- ▶ According to national regulations, children up to the age of 10 are allowed to ride on footpaths at an appropriate speed with the pedelec switched off.
- ▶ Children under the age of 14 may use the vehicle under the supervision of a parent or guardian only.
- ▶ Children may only inspect, service and maintain the pedelec under the instruction of a parent or guardian.
- ▶ If minors are to use the pedelec, comprehensive instruction should be provided by or in the presence of the legal guardians. Supervised use should also be scheduled until it is certain that the pedelec is being used as per these operating instructions.

## 2.4 Vulnerable groups

- ▶ Keep batteries and the charger away from children and people with reduced physical, sensory or mental capacities or lacking in experience and knowledge.
- ▶ Children and young people must be provided with comprehensive instructions by a legal guardian.

### 2.4.1 In the case of bicycles for young adults

- ▶ Keep batteries and the charger away from children and people with reduced physical, sensory or mental capacities or lacking in experience and knowledge.
- ▶ Children and young people must be provided with comprehensive instructions by a legal guardian.
- ▶ Only adults may install, remove and charge the battery.
- ▶ The parent or guardian must check that the vehicle is in a ready-to-ride condition before setting off.
- ▶ The pedelec is very heavy for children. Children must not carry the pedelec (e.g. up or down stairs).
- ▶ Children must get used to the heavy weight of the pedelec.
- ▶ Before a child or adolescent can ride a pedelec, they must be able to ride a bicycle safely in traffic.
- ▶ The child's individual learning development must be taken into account.
- ▶ The attention span of children 8 years and older is about 30 minutes. The driving distance and duration should therefore be adapted to the child's abilities.
- ▶ The size of the pedelec must be checked regularly for orthopaedic reasons.
- ▶ A check must be made every three months to make sure that the permitted total weight is being observed.

## 2.5 Personal protective equipment

- ▶ Wear a suitable helmet. The helmet must have a reflective strip or a light in a clearly visible colour.
- ▶ Wear sturdy shoes which are not too tightly laced.
- ▶ Wear padded cycling gloves.
- ▶ Wear gloves when it is cold.
- ▶ Wear clothing which is as bright or retroreflective as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety. Never wear a skirt. Always wear trousers which reach down to your ankles instead.

### 2.5.1 For mountain bikes

- ▶ Wear sturdy shoes.
- ▶ Wear tight-fitting clothes only.
- ▶ Wear a suitable mountain bike helmet with highly effective impact absorption. Wear a full-face helmet in bike parks.
- ▶ Wear protectors on knees, elbows, back and neck (e.g. safety jacket).
- ▶ Wear gloves.
- ▶ Wear well-fitting glasses.

## 2.6 Safety guards

Three safety guards on the pedelec protect pedelec riders against heat, dirt or moving parts:

- Chain or belt guards prevent clothing from being pulled into the drive train (does not apply to mountain bikes).
- The motor cover on the motor casing protects against heat.
- Mudguards protect against dirt and water splashing up from the road
- ▶ Never remove the guards.
- ▶ Check the guards on a regular basis.
- ▶ Take pedelec out of service if a guard is damaged or missing. Contact specialist dealer.

## 2.7 Safety markings and safety instructions

Pedelec and battery nameplates contain the following safety markings and safety instructions:



Symbol	Explanation
	General warning
	Adhere to the instructions for use

Table 4: Safety markings












Symbol	Explanation
	Read the instructions
	Separate collection of electrical and electronic devices
	Separate collection of ordinary and rechargeable batteries
	Must not be thrown into fire (burning prohibited)
	It is forbidden to open any batteries
	Device of protection class II
	Only suitable for use indoors
	Fuse (device fuse)
	EU conformity
	Recyclable material
	Protect from temperatures above 50 °C and direct sunlight

Table 5: Safety instructions

## 2.8 What to do in an emergency

### 2.8.1 Dangerous situation in road traffic

- ▶ If you encounter any hazards or dangers in road traffic, apply the brake (emergency stop system) until the pedelec comes to a halt.

### 2.8.2 Oil and lubricant leaks from the fork

- ▶ Dispose of leaked oils and lubricants in an environmentally responsible way in accordance with statutory regulations (see Section 10.1).

### 2.8.3 Leaked brake fluid

- ▶ Remove those affected from the danger area to fresh air.
- ▶ Never leave those affected unattended.
- ▶ Remove any clothing contaminated with brake fluid immediately.
- ▶ Never inhale vapours. Ensure sufficient ventilation.
- ▶ Wear gloves and safety glasses as protective equipment.
- ▶ Keep unprotected persons away.
- ▶ Take care with leaked brake fluid as it poses a slip hazard.
- ▶ Keep leaked brake fluid away from naked flames, hot surfaces and sources of ignition.
- ▶ Avoid contact with skin and eyes.

#### If inhaled

- 1 Take in fresh air.
- 2 Immediately consult a doctor in case of any discomfort.

#### After skin contact

- 1 Wash affected skin with soap and water and rinse well.
- 2 Remove contaminated clothing.
- 3 Consult doctor in the event of pain or discomfort.

**After contact with eyes**

- 1 Rinse eyes under flowing water for at least ten minutes with the lids open; also rinse under lids.
- 2 Immediately consult a doctor in case of any pain or discomfort.

**If swallowed**

- 1 Rinse out mouth with water. Never induce vomiting. Risk of aspiration.
- 2 If a person is lying on their back and vomiting, place them in the recovery position.
- 3 Seek medical advice immediately.

**Environmental protection measures**

- ▶ Never allow brake fluid to flow into sewage, water courses or groundwater.
- ▶ Notify the relevant authorities if fluid penetrates the ground, water courses or the sewage system.
- ▶ Dispose of leaked brake fluid in an environmentally responsible way in accordance with statutory regulations (see Section 10.1).
- ▶ The brake system must be repaired immediately if brake fluid leaks out. Contact specialist dealer.

**2.8.4 Battery vapour emission**

Vapours may be emitted if the battery is damaged or used improperly. The vapours may cause respiratory tract irritation.

- 1 Get into fresh air.
- 2 Consult doctor in the event of pain or discomfort.

**After contact with eyes**

- 1 Carefully rinse eyes with plenty of water for at least 15 minutes. Protect unaffected eye.
- 2 Seek medical advice immediately.

**After skin contact**

- 1 Remove any solid particles immediately.
- 2 Remove contaminated clothing immediately.
- 3 Rinse the affected area with plenty of water for at least 15 minutes.
- 4 Then dab the affected skin gently. Do not rub dry.
- 5 Immediately consult a doctor if there is any redness, pain or discomfort.

**2.8.5 Battery fire**

The safety electronics may fail if the battery is damaged or faulty. The residual voltage can cause a short circuit. The battery may self-ignite and explode.

- 1 Keep your distance if the battery becomes deformed or starts to emit smoke.
- 2 If charging, remove the plug connector from the socket.
- 3 Contact the fire service immediately.
  - ▶ Use Class fire extinguishers to put out the fire.
  - ▶ Never extinguish damaged batteries with water or allow them to come into contact with water.

Inhaling vapours can cause intoxication.

- ▶ Stand on the side of the fire where the wind is blowing from.
- ▶ Use breathing apparatus if possible.

**2.8.6 Oil and lubricant leaks from the rear frame damper**

- ▶ Dispose of leaked oils and lubricants in an environmentally responsible way in accordance with statutory regulations (see Section 10.1).
- ▶ Contact specialist dealer.

## 2.9 Data privacy information

When the pedelec is connected to the diagnosis tool at the specialist dealer's, data is transferred to BOSCH eBike Systems (Robert Bosch GmbH) on the use of the Bosch drive unit, including its energy consumption and temperature, to help improve the product.

You will find more information on the Bosch eBike website:

[www.bosch-ebike.com](http://www.bosch-ebike.com).

## 3 Description

### 3.1 Proper use

#### 3.1.1 City and trekking bicycle

All check lists and instructions for actions in these operating instructions met. Approved accessories can be installed by specialist staff.

Use the pedelec when it is in perfect, proper working order only. National requirements may apply to the pedelec which the standard equipment may not meet. Different regulations apply across the country to the riding light, reflectors and other components when riding on public roads. The general laws and the regulations for the prevention of accidents and environmental protection in the respective country of use must be adhered to.

#### 3.1.1.2 Improper use

Failure to adhere to the proper use poses a risk of personal injury and material damage. It is prohibited to use the pedelec in the following ways:

- When the electrical drive system has been manipulated.
- Changing, eliminating or effacing frame numbers, nameplates or component serial numbers, or manipulating them in any other way.
- Riding with a damaged or incomplete pedelec.
- Riding over steps.
- Riding through deep water.
- Charging with an incorrect charger.
- Lending the pedelec to untrained pedelec rider.
- Carrying other people.
- Riding with excessive baggage.

The rechargeable batteries are designed to supply power to the pedelec motor only. Never use the batteries for other purposes.

#### 3.1.1.1 Pedelec type

Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.

##### City and trekking bicycle



City and trekking bicycles are designed for comfortable, daily use and are suitable for riding on public roads.

Table 6: Proper use

- Riding with no hands.
- Riding on ice and snow.
- Improper servicing.
- Improper repair.
- Tough areas of use, such as professional competitions.
- Acrobatics, riding up ramps, stunt riding or flying stunts.

##### City and trekking bicycle



City and trekking bicycles are not sports bicycles. If used for sports, the rider can expect reduced riding stability and diminished comfort.

Table 7: Improper use

### 3.1.2 Folding bicycle

All check lists and instructions for actions in these operating instructions met. Approved accessories can be installed by specialist staff.

Use the pedelec when it is in perfect, proper working order only. National requirements may apply to the pedelec which the standard equipment may not meet. Different regulations apply across the country to the riding light, reflectors and other components when riding on public roads. The general laws and the regulations for the prevention of accidents and environmental protection in the respective country of use must be adhered to.

The rechargeable batteries are designed to supply power to the pedelec motor only. Never use the batteries for other purposes.

#### 3.1.2.1 Improper use

Failure to adhere to the proper use poses a risk of personal injury and material damage. It is prohibited to use the pedelec in the following ways:

- When the electrical drive system has been manipulated.
- Changing, eliminating or effacing frame numbers, nameplates or component serial numbers, or manipulating them in any other way.
- Riding with a damaged or incomplete pedelec.
- Riding over steps.
- Riding through deep water.
- Charging with an incorrect charger.
- Lending the pedelec to untrained pedelec rider.
- Carrying other people.
- Riding with excessive baggage.
- Riding with no hands.
- Riding on ice and snow.
- Improper servicing.
- Improper repair.
- Tough areas of use, such as professional competitions.
- Acrobatics, riding up ramps, stunt riding or flying stunts.

Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.

#### Folding bicycle



Folding bicycles are suitable for riding on public roads.

Folding bikes can be folded together and thus save space when they are transported, e.g. in cars or on local transport.

The folding bicycle's folding design requires the use of smaller wheels and longer brake cables and Bowden cables. With increased strain, you should therefore expect a reduction in riding stability, braking power, comfort and durability.

Table 8: Proper use

#### Folding bicycle



A folding bicycle is not a touring or sports bicycle. When riding longer distances or using the bike for sports, the rider can expect reduced riding stability and diminished comfort.

Table 9: Improper use

### 3.1.3 Mountain bike

All check lists and instructions for actions in these operating instructions met. Approved accessories can be installed by specialist staff.

Use the pedelec when it is in perfect, proper working order only. National requirements may apply to the pedelec which the standard equipment may not meet. Different regulations apply across the country to the riding light, reflectors and other components when riding on public roads. The general laws and the

regulations for the prevention of accidents and environmental protection in the respective country of use must be adhered to.

The rechargeable batteries are designed to supply power to the pedelec motor only. Never use the batteries for other purposes.

Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.

#### Mountain bike



Mountain bikes are designed for sports use. Its specific design features are tyres with a thick tread, a reinforced frame structure and a wide transmission range.

Mountain bikes are sports bikes and not a means of transport. In addition to being physically fit, riders need time to adapt to using the pedelec. Appropriate training is required for its use. It is especially important to practice braking and riding around bends.

The strain on hands, wrists, arms, shoulders, the neck and back is considerable. Inexperienced pedelec riders tend to brake too hard and lose control as a result.

Table 10: Proper use

#### 3.1.3.1 Improper use

Failure to adhere to the proper use poses a risk of personal injury and material damage. It is prohibited to use the pedelec in the following ways:

- Riding on public roads. Mountain bikes must be retrofitted with riding light, a bell and other fittings as specified by national laws and regulations before they are used on public roads. The tyres also need to be adapted.
- When the electrical drive system has been manipulated.
- Changing, eliminating or effacing frame numbers, nameplates or component serial numbers, or manipulating them in any other way.
- Riding with a damaged or incomplete pedelec.
- Riding over steps.
- Riding through deep water.
- Charging with an incorrect charger.
- Lending the pedelec to untrained pedelec rider.
- Carrying other people.
- Riding with excessive baggage.
- Riding with no hands.
- Riding on ice and snow.
- Improper servicing.
- Improper repair.
- Tough areas of use, such as professional competitions.
- Acrobatics, riding up ramps, stunt riding or flying stunts.



### 3.1.4 Cargo bike

All check lists and instructions for actions in these operating instructions met. Approved accessories can be installed by specialist staff.

Use the pedelec when it is in perfect, proper working order only. National requirements may apply to the pedelec which the standard equipment may not meet. Different regulations apply across the country to the riding light, reflectors and other components when riding on public roads. The general laws and the

regulations for the prevention of accidents and environmental protection in the respective country of use must be adhered to.

The rechargeable batteries are designed to supply power to the pedelec motor only. Never use the batteries for other purposes.

Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.


Cargo bike

<p>Cargo bikes are suitable for transporting loads on public roads on a daily basis.</p> <p>The transportation of loads requires skill and physical fitness in order to balance the additional weight. The very varied loading conditions and weight distributions require special practice and skill when braking and riding in bends.</p> <p>A longer period is required to adaptation to the length, width and turning circle. You need to be cautious when riding a cargo bike. You must pay attention to the traffic on public roads and the condition of the route accordingly.</p>

Table 11: Proper use

#### 3.1.4.1 Improper use

Failure to adhere to the proper use poses a risk of personal injury and material damage. It is prohibited to use the pedelec in the following ways:

- Cargo bikes are not a touring or sports bicycle. When riding longer distances or using the bike for sports, the rider can expect reduced riding stability and diminished comfort.
- When the electrical drive system has been manipulated.
- Changing, eliminating or effacing frame numbers, nameplates or component serial numbers, or manipulating them in any other way.
- Riding with a damaged or incomplete pedelec.
- Riding over steps.
- Riding through deep water.
- Charging with an incorrect charger.
- Lending the pedelec to untrained pedelec rider.
- Carrying other people.
- Riding with excessive baggage.
- Riding with no hands.
- Riding on ice and snow.
- Improper servicing.
- Improper repair.
- Tough areas of use, such as professional competitions.

- Acrobatics, riding up ramps, stunt riding or flying stunts.

### 3.1.5 Cycle for children and young adults

All check lists and instructions for actions in these operating instructions met. Approved accessories can be installed by specialist staff.

Use the pedelec when it is in perfect, proper working order only. National requirements may apply to the pedelec which the standard equipment may not meet. Different regulations apply across the country to the riding light, reflectors and other components when riding on public roads. The general laws and the

regulations for the prevention of accidents and environmental protection in the respective country of use must be adhered to.

The rechargeable batteries are designed to supply power to the pedelec motor only. Never use the batteries for other purposes.

Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.


Cycle for children and young adults

<p>Cycles for children and young adults are suitable for riding on public roads.</p> <p>Legal guardians must read the operating instructions before putting the bike into use. Tell children and young people what the operating instructions contain in a way appropriate to their age.</p> <p>Measure the height of adolescents and check the settings on the pedelec every three months for orthopaedic reasons.</p> <p>Check compliance with the maximum permitted total weight (PTW) every 3 months.</p>

Table 12: Proper use

#### 3.1.5.1 Improper use

Failure to adhere to the proper use poses a risk of personal injury and material damage. It is prohibited to use the pedelec in the following ways:

- Cycles for children and young adults are not toys.
- When the electrical drive system has been manipulated.
- Changing, eliminating or effacing frame numbers, nameplates or component serial numbers, or manipulating them in any other way.
- Riding with a damaged or incomplete pedelec.
- Riding over steps.
- Riding through deep water.
- Charging with an incorrect charger.
- Lending the pedelec to untrained pedelec rider.
- Carrying other people.
- Riding with excessive baggage.
- Riding with no hands.
- Riding on ice and snow.
- Improper servicing.
- Improper repair.
- Tough areas of use, such as professional competitions.
- Acrobatics, riding up ramps, stunt riding or flying stunts.

## 3.1.6 Area of use as per EN 17406, from model year 2024













	Area of use	Average speed [km/h]	Unsuitability
  <b>1</b> EN 17406	Use on normal, paved surfaces where the tyres should maintain contact with the ground at average speed with occasional jumps.	15 ... 25	<ul style="list-style-type: none"> <li>• Never ride off road.</li> <li>• Never perform jumps over 15 cm.</li> </ul>
  <b>2</b> EN 17406	The area of use specified in Condition 1 applies. The vehicle can also be used on unpaved roads and gravel paths with moderate upward and downward slopes. Under these conditions, the bike may come into contact with uneven terrain and tyres may lose contact with the ground repeatedly.	15 ... 25	<ul style="list-style-type: none"> <li>• Never ride off road.</li> <li>• Never perform jumps over 15 cm.</li> </ul>
  <b>3</b> EN 17406	The area of use specified in Condition 2 applies. The vehicle can also be used on rough paths, bumpy roads, difficult terrain and undeveloped tracks. Practice and technical skill is required for such rides.	Not relevant	<ul style="list-style-type: none"> <li>• Never perform jumps over 60 cm.</li> <li>• Never use vehicle without practice.</li> <li>• Never use vehicle if you have no technical skills.</li> </ul>
  <b>4</b> EN 17406	The area of use specified in Condition 3 applies. The vehicle can also be used on descents on unpaved tracks at speeds up to 40 km/h.	Not relevant	<ul style="list-style-type: none"> <li>• Never perform jumps over 120 cm.</li> <li>• Never use vehicle without practice.</li> <li>• Never use vehicle if you have no technical skills and are unable to handle a bike.</li> </ul>
  <b>5</b> EN 17406	The area of use specified in Condition 4 applies. The vehicle can also be used for extreme jumps or descents on unpaved tracks at speeds of more than 40 km/h or for a combination of the two.	Not relevant	<ul style="list-style-type: none"> <li>• Never use vehicle without practice.</li> <li>• Never use vehicle if you have no extreme technical skills and are unable to handle the bike.</li> </ul>
  <b>6</b> EN 17406	The area of use specified in Condition 1 applies. The vehicle can also be used in competitions or for other purposes at speeds of more than 50 km/h (e.g. descents or sprints).	30 ... 55	<ul style="list-style-type: none"> <li>• Never ride off road.</li> <li>• Never perform jumps over 15 cm.</li> <li>• Never use vehicle without practice.</li> <li>• Never use vehicle if you have no technical skills.</li> </ul>

Table 13: Area of use, average speed and unsuitability

## 3.1.6.1 Up to model year 2023





	Area of use	Unsuitable terrain
 <b>1</b>	Suitable for tarmacked and paved roads.	Never ride off road or perform jumps.
 <b>2</b>	Suitable for tarmacked roads, cycle paths, firm gravel tracks and longer sections with moderate slopes and jumps up to 15 cm.	Never ride off road or perform jumps over 15 cm.
 <b>3</b>	Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, sections with moderate slopes and jumps up to 61 cm.	Never ride downhill or perform jumps over 61 cm.
 <b>4</b>	Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, limited downhill use and jumps up to 122 cm.	Never traverse extremely difficult off-road terrain or perform jumps over 122 cm.

Table 14: Area of use

## 3.2 Technical data

### 3.2.1 Complete BOSCH vehicle

Power output/system	250 W (0.25 kW)
Shut-off speed	25 km/h
Service life	7 years
Weight	See Section 3.1.3
PTW	See Section 3.1.4

Table 15: Pedelec technical data

#### 3.2.1.1 Emissions

The safety requirements as per Electromagnetic Compatibility Directive 2014/30/EU have been met. The pedelec and the charger can be used in residential areas without restriction.

A-weighted emission sound pressure level	< 70 dB(A)
Total vibration level for the hands and arms	< 2.5 m/s <sup>2</sup>
Highest effective value of weighted acceleration for the entire body	< 0.5 m/s <sup>2</sup>

Table 16: Emissions from the pedelec

#### 3.2.1.2 Environmental requirements

You can ride the pedelec within a temperature range between -5 °C and +40 °C. The electric drive system is limited in its performance outside this temperature range.

Operating temperature	-5 °C ... +40 °C
-----------------------	------------------

During winter use, especially at temperatures below 0 °C, we recommend that you don't insert a battery charged and stored at room temperature into the pedelec until just before setting off. We recommend using thermal protection sleeves when riding longer distances at low temperatures.

Temperatures under -10 °C and over +60 °C must be avoided as a general rule. Never put the battery in a car in summer or store it in direct sunlight.

You must also keep within the following temperature ranges:

Transportation temperature	+10 °C ... +40 °C
Storage temperature	+10 °C ... +40 °C
Work environment temperature	+15 °C ... +25 °C
Charging temperature	+10 °C ... +40 °C

The nameplate contains symbols for the pedelec's area of use.

- Check what tracks and roads you may ride on before setting off for the first time.

### 3.2.2 Mass

The pedelec may only be loaded to its *maximum permitted total weight* (PTW).

The maximum permitted total weight is

- the weight of the fully assembled pedelec
- plus body weight
- plus baggage

Type no.	Model	PTW [kg]	Weight [kg]
KB069-xxRW	QUADRIGA P5 HD BENELUX BELT (RT)	180	#
KB084-xxFW	E-COMFORT P5 (FL)	135	#
KB084-xxRW	E-COMFORT P5 (RT)	135	#
KB085-xxFW	E-COMFORT 8 (FL)	135	#
KB085-xxRW	E-COMFORT 8 (RT)	135	#
KB087-xxFW	E-COMFORT P5 BELT (FL)	135	#
KB087-xxRW	E-COMFORT P5 BELT (RT)	135	#
KB112-xxFD, KB112-xxFT, KB112-xxFW	QUADRIGA P5 (FL)	145	#
KB112-xxRD, KB112-xxRT, KB112-xxRW	QUADRIGA P5 (RT)	145	#
KB136-xxFD, KB136-xxFW	QUADRIGA CX5 HD BENELUX BELT (FL)	180	#
KB137-xxKD, KB137-xxKT, KB137-xxKW	QUADRIGA CX10 LG	145	#
KB156-xxFD, KB156-xxFT, KB156-xxFW	QUADRIGA P5 BELT (FL)	145	#
KB156-xxRD, KB156-xxRT, KB156-xxRW	QUADRIGA P5 BELT (RT)	145	#
KB158-xxKD, KB158-xxKW	TRAVELLER E-GOLD 10 PLUS	135	#
KB159-xxFW	TRAVELLER E-GOLD 5 PLUS (FL)	135	#
KB159-xxRW	TRAVELLER E-GOLD 5 PLUS (RT)	135	#
KB160-xxKD, KB160-xxKW	E-TRANSHILL CX11 LG	130	#
KB161-xxFW	TRAVELLER E-GOLD 5 PLUS BELT (FL)	135	#
KB161-xxRW	TRAVELLER E-GOLD 5 PLUS BELT (RT)	135	#
KB180-xxFD, KB180-xxFT, KB180-xxFW	QUADRIGA PRO BELT AUTOMATIC	145	#
KB181-xxKD, KB181-xxKW	Quadriga PRO CX11 LG	145	#
KB182-xxKD, KB182-xxKW	QUADRIGA TOWN & COUNTRY PRO CX 11 LG	145	#
KB183-xxKD, KB183-xxKT, KB183-xxKW	QUADRIGA TOWN & COUNTRY COMP CX11 LG	145	#
KB184-xxKD, KB184-xxKT, KB184-xxKW	QUADRIGA COMP CX11 LG	145	#
KB187-xxKD, KB187-xxKT, KB187-xxKW	QUADRIGA TOWN & COUNTRY COMP ABS CX11 LG	145	#
KB188-xxKD, KB188-xxKW	QUADRIGA TOWN & COUNTRY CX10 LG	145	#

Table 17: Type number, model, PTW and weight

Type no.	Model	PTW [kg]	Weight [kg]
KB189-xxKD, KB189-xxKT, KB189-xxKW	QUADRIGA TOWN & COUNTRY P10	145	#
KB190-xxKD, KB190-xxKT, KB190-xxKW	QUADRIGA P10	149	#
KB193-xxKD, KB193-xxKT, KB193-xxKW	TRAVELLER E-GOLD P9	135	#
KB194-xxFD, KB194-xxFW	TRAVELLER E-GOLD P5 (FL)	135	#
KB194-xxRD, KB194-xxRW	TRAVELLER E-GOLD P5 (RT)	135	#
KB195-xxKD, KB195-xxKW	TRAVELLER E-GOLD Town & Country P9	135	#
KB200-xxKD, KB200-xxKW	QUADRIGA TOWN & COUNTRY PRO ABS LTD CX11 LG	145	#

Table 17: Type number, model, PTW and weight

### 3.3 Model year 24 nameplate

The nameplate is situated on the frame. The exact position of the nameplate is shown in Figure 3. The nameplate contains up to twelve pieces of information.

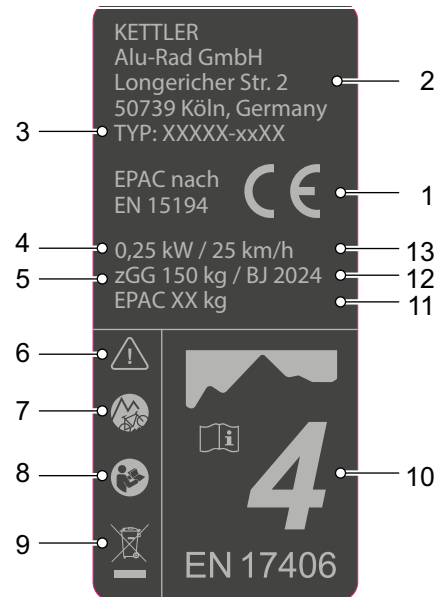


Figure 2: Example of ZEG nameplate

No.	Designation	Description	More information
1	CE marking	The manufacturer uses the CE marking to declare that the pedelec complies with applicable requirements.	Section 13
2	Manufacturer	You can contact the manufacturer at the address indicated.	Section 1.1
3	Type number	All pedelec models have an eight-digit type number, which is used to specify the design model year, the type of pedelec and the version.	Section 1.6
4	Maximum continuous power rating	The maximum continuous power rating is the greatest possible power for the electric motor output shaft over 30 minutes.	...
5	Maximum permitted total weight (PTW)	The maximum permitted total weight is the weight of the fully assembled pedelec with the body weight plus the baggage.	Section 3.1.3
6	Safety markings Caution	The safety markings warn of hazards.	Section 2.7
7	Pedelec type	Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.	Section 3.1.1
9	Disposal instructions	Follow the guidelines on waste disposal when disposing of the pedelec.	Section 10.1
10	Area of use	Ride pedelec in permitted locations only.	Section 3.1.5
11	Weight of the ready-to-ride pedelec (optional; only for pedelecs 25 kg or more)	The weight of the ready-to-ride pedelec is specified as a weight of 25 kg or above and refers to its weight at the time of purchase. Any extra accessories need to be added to the weight.	Section 4.1
12	Year of manufacture	The year of manufacture is the year in which the pedelec was manufactured.	...
13	Shut-off speed	The speed that the pedelec reaches at the moment when the current has dropped to zero or to the no-load current value.	...

Table 18: Explanation of information on the nameplate



### 3.4 Nameplate

The nameplate is situated on the frame. The precise position of the nameplate is shown in Figure 3.

The nameplate contains up to twelve pieces of information.

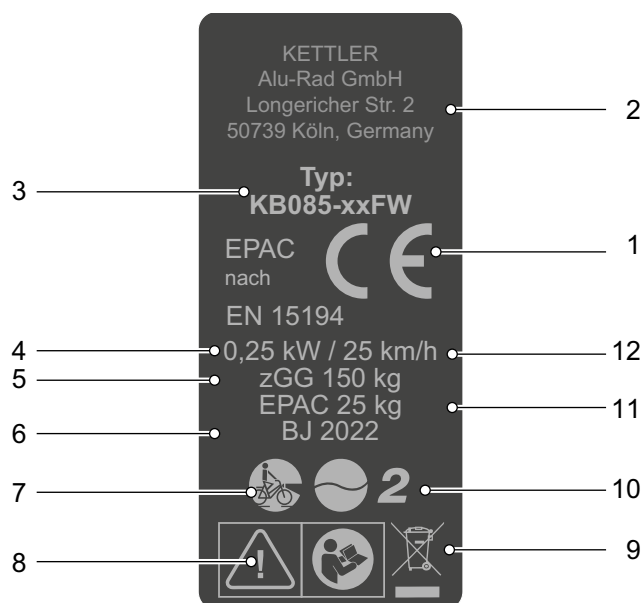


Figure 3: Example KETTLER nameplate

No.	Designation	Description	More information
1	CE marking	The CE marking is a declaration by the manufacturer that the pedelec complies with applicable requirements.	Appendix
2	Manufacturer	You can contact the manufacturer at the address indicated.	Section 1.1
3	Type number	All pedelec models have a nine-digit type number, which is used to specify the design model year, the type of pedelec and the version.	Section 1.6
4	Maximum continuous power rating	The maximum continuous power rating is the greatest possible power for the electric motor output shaft over 30 minutes.	
5	Maximum permitted total weight (PTW)	The maximum permitted total weight is the weight of the fully assembled pedelec with the body weight plus the baggage.	Section 3.1.3
6	Year of manufacture	The year of manufacture is the year in which the pedelec was manufactured.	
7	Pedelec type	Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.	Section 3.1.1
8	Safety markings	Safety markings warn of hazards.	Section 2.7
9	Disposal instructions	Follow the guidelines on waste disposal when disposing of the pedelec.	Section 10.1
10	Area of use	Ride pedelec in permitted locations only.	Section 3.1.5
11	Weight of the ready-to-ride pedelec (optional; only for pedelecs 25 kg or more)	The weight of the ready-to-ride pedelec is specified as a weight of 25 kg or above and refers to its weight at the time of purchase. Any extra accessories need to be added to the weight.	Section 4.1
12	Shut-off speed	The speed that the pedelec reaches at the moment when the current has dropped to zero or to the no-load current value.	

Table 19: Explanation of information on the nameplate

## 3.5 Components

### 3.5.1 Overview

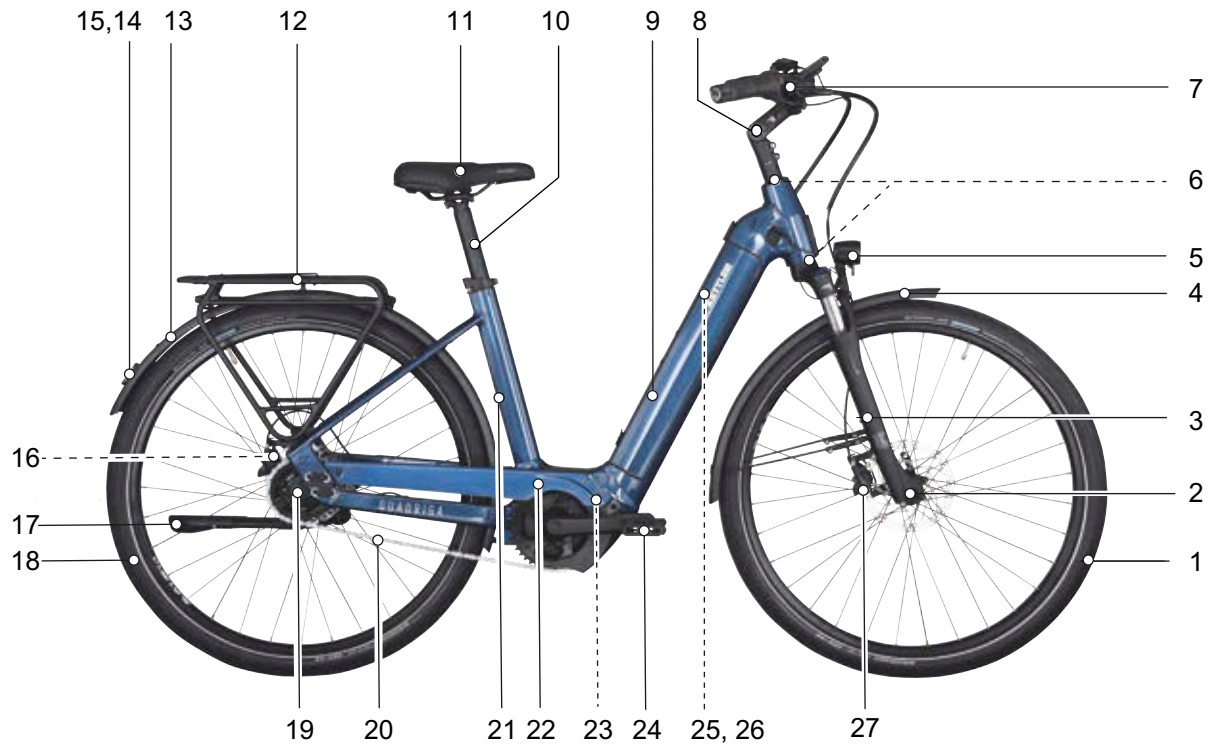


Figure 4: Pedelec viewed from right: KETTLER QUADRIGA P5 RT used as example

1	Wheel	10	Seat post	19	Hub
2	Hub	11	Saddle	20	Chain
3	Suspension fork	12	Pannier rack	21	Frame number
4	Guard	13	Guard	22	Chain guard
5	Front light	14	Rear light	23	Motor
6	Steering headset	15	Reflector	24	Pedal
7	Handlebars	16	Rear wheel brake	25	Rechargeable battery
8	Stem	17	Kickstand	26	Nameplate
9	Frame	18	Wheel	27	Front wheel brake

## 3.5.1.1 Components and repair parts for QUADRIGA P5 HD BENELUX BELT (RT)

## KB069-xxRW

## Wave

Frame	GREAT IM, Quadriga Perf BES3	Shape: Wave; size: 53 cm
Tyres	SCHWALBE, Marathon	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-M4050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7002-5CD	Mechanical gear hub, 5-speed, 32H, back-pedal brake
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, Zecure Up2+	Extension: 90 mm; see Section #
	SATORI, Zecure Up2+	Extension: 110 mm; see Section #
Handlebars	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
Fork	SR SUNTOUR, NCX-D-AIR LO DS 15QLC32S 700C	Suspension fork, air suspension, deflection: 63 mm, LO cartridge
Saddle	VELO CYCLE, Zecure XL VL-6485	#
Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Accessories	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VPE-821	with reflector
	VP COMPONENTS, ZECURE VP-658	with reflector
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	GATES®, 128T CDX (11M-128T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 128; width: 12 mm; length: # mm
Chain wheel/belt sprocket	GATES®, BOSCH GEN3 Spider Assembly CDX	Belt sprocket, 46T

Chain guard	#	
Sprocket/belt sprocket/ freewheel	GATES®, SHIMANO Inter-5E SF 6L Unified (CT1132YMN-U)	Belt sprocket, 32T
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
Charger	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Front brake	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
Rear brake	SHIMANO, BL-MT402-3A/BR-MT410	3-finger brake lever   Length: 1800 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
Brake disc	SHIMANO, SM-RT30	Ø: 180 mm
	TEKTRO, TR-45	Ø: 180 mm
Brake disc	SHIMANO, SM-RTC60	Ø: 160 mm
	TEKTRO, TR-47	Ø: 160 mm
Headlight	FUXON	
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL	
Motor cover guard	#	
Guard	SKS, #	#
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.2 Components and repair parts for E-COMFORT P5 (FL)

## KB084-xxFW

## Wave

Frame	GRATE IM, Comfort E BES3	Shape: Wave; size: 46
		Shape: Wave; size: 50
Tyres	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 272 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-MT200	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7000-5D	Mechanical gear hub, 5-speed, 32H
Steering headset	Lenkungslager	
Stem	KALLOYUNO, AS4005	Extension: 65 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	SATORI, SP-SC-255	# Ø: 27.2 mm; length: 350 mm
Saddle clamp	KALLOYUNO, XCZG1	Ø: 31.8 mm
Pedal	VP COMPONENTS, VPE-821	Incorrect dataset
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	KMC, PC10	Chain, 106 links; see Section #
	KMC, Z610	Chain, links: 126
Chain wheel/belt sprocket	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
Chain guard	HESLING	...
	HORN, CATENA 18	Plastic, 38T
Sprocket/belt sprocket/freewheel	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #

<b>Shifter</b>	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
<b>Motor</b>	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
<b>On-board computer</b>	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerPack 600 [BBP3560] (EB12.100.00M)	#
<b>Rechargeable battery</b>	BOSCH, PowerPack Frame 545 [BBP3550] (EB12.100.02J)	#
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
<b>Charger</b>	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
<b>Front brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Rear brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, HD-T280	3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Brake disc</b>	SHIMANO, SM-RT30	Ø: 180 mm
	TEKTRO, TR-35	Ø: 180 mm
<b>Headlight</b>	FUXON	
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard</b>	SKS, #	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, #	

...not available

# Information not available when document was produced

## 3.5.1.3 Components and repair parts for E-COMFORT P5 (RT)

## KB084-xxRW

## Wave

Frame	GRATE IM, Comfort E BES3	Shape: Wave; size: 46
		Shape: Wave; size: 50
Tyres	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 272 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-MT200	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7002-5CD	Mechanical gear hub, 5-speed, 32H, back-pedal brake
Steering headset	Lenkungslager	
Stem	KALLOYUNO, AS4005	Extension: 65 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	SATORI, SP-SC-255	# Ø: 27.2 mm; length: 350 mm
Saddle clamp	KALLOYUNO, XCZG1	Ø: 31.8 mm
Pedal	VP COMPONENTS, VPE-821	Incorrect dataset
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	KMC, PC10	Chain, 106 links; see Section #
	KMC, Z610	# Links: 126
Chain wheel/belt sprocket	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
Chain guard	HESLING	...
	HORN, CATENA 18	Plastic, 38T
Sprocket/belt sprocket/freewheel	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #

<b>Motor</b>	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
<b>On-board computer</b>	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerPack 600 [BBP3560] (EB12.100.00M)	#
	BOSCH, PowerPack Frame 545 [BBP3550] (EB12.100.02J)	#
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
<b>Front brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Rear brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, HD-T280	3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Brake disc</b>	SHIMANO, SM-RT30	Ø: 180 mm
	SHIMANO, SM-RTC60	Ø: 160 mm
	TEKTRO, TR-35	Ø: 180 mm
	TEKTRO, TR-47	Ø: 160 mm
<b>Headlight</b>	FUXON	
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, #	

...not available

# Information not available when document was produced



## 3.5.1.4 Components and repair parts for E-COMFORT 8 (FL)

## KB085-xxFW

## Wave

Frame	GRATE IM, Comfort E BES3	Shape: Wave; size: 46
		Shape: Wave; size: 50
Tyres	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 271 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-MT200	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C6001-8D	Mechanical gear hub, 8-speed, 32H; see Section #
Stem	KALLOYUNO, AS4005	Extension: 65 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles	ERGON, GC1	Winged grips, NEXUS
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	SATORI, SP-SC-255	# Ø: 27.2 mm; length: 350 mm
Saddle clamp	KALLOYUNO, XCZG1	Ø: 31.8 mm
Pedal	VP COMPONENTS, VPE-821	Incorrect dataset
Crank set	SAMOX, EC38-F5-BNI	Pedal crank length: # mm
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain	KMC, PC10	Chain, 104 links; see Section #
	KMC, Z610	Chain, links: 126
Chain wheel	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
Chain guard	HESLING	...
	HORN, CATENA 18	Plastic, 38T
Ring gear	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #
Shifter	SHIMANO, NEXUS SL-C6000-8	Twist grip shifter with indicator, 8-speed; see Section #
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #

<b>Motor</b>	BOSCH, Active Line Plus [BDU3340] (EB11.100.008)	See Section 3.5.06.1
<b>On-board computer</b>	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerPack Frame 545 [BBP3550] (EB12.100.02J)	#
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
<b>Charger</b>	BOSCH, Compact Charger, [BCS230] (0275.007.915)	Charging current (max.): 2 A; see Section #
<b>Brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
		3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
<b>Brake disc</b>	SHIMANO, RT-EM300	Ø: 180 mm, with magnet
	SHIMANO, SM-RT30	Ø: 180 mm
	TEKTRO, TR-35	Ø: 180 mm
<b>Headlight</b>	FUXON	
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard</b>	SKS, #	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, #	

...not available

# Information not available when document was produced

## 3.5.1.5 Components and repair parts for E-COMFORT 8 (RT)

## KB085-xxRW

## Wave

Frame	GRATE IM, Comfort E BES3	Shape: Wave; size: 46
		Shape: Wave; size: 50
Tyres	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-MT200	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C6001-8CD	Mechanical gear hub with backpedal, 8-speed, 32H; see Section #
Stem	KALLOYUNO, AS4005	Extension: 65 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	SATORI, SP-SC-255	# Ø: 27.2 mm; length: 350 mm
Saddle clamp	KALLOYUNO, XCZG1	Ø: 31.8 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	KMC, Z610	Chain, # links; see Section #
Chain wheel/belt sprocket	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
Chain guard	HORN, CATENA 18	Plastic, 38T
Sprocket/belt sprocket/freewheel	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #
	SHIMANO, NEXUS SM-GEAR	Sprocket, 18T; see Section #
Shifter	SHIMANO, NEXUS SL-C6000-8	Twist grip shifter with indicator, 8-speed; see Section #
	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Active Line Plus [BDU3340] (EB11.100.008)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #

<b>Rechargeable battery</b>	BOSCH, PowerPack Frame 545 [BBP3550] (EB12.100.02J)	#
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
<b>Front brake</b>	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
	TEKTRO, HD-T280	3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Brake disc</b>	TEKTRO, TR-35	Ø: 180 mm
	TEKTRO, TR-47	Ø: 160 mm
<b>Headlight</b>	FUXON	
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard</b>	SKS, #	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, #	

...not available

# Information not available when document was produced

## 3.5.1.6 Components and repair parts for E-COMFORT P5 BELT (FL)

## KB087-xxFW

## Wave

Frame	GRATE IM, Comfort E BES3	Shape: Wave; size: 46
		Shape: Wave; size: 50
Tyres	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-MT200	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7000-5D	Mechanical gear hub, 5-speed, 32H
Steering headset	Lenkungslager	
Stem	KALLOYUNO, AS4005	Extension: 65 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	SATORI, SP-SC-255	# Ø: 27.2 mm; length: 350 mm
Saddle clamp	KALLOYUNO, XCZG1	Ø: 31.8 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	GATES®, 125T CDX (11M-125T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 125; width: 12 mm; length: # mm
Chain wheel/belt sprocket	GATES®, BOSCH GEN3 Spider Assembly CDX	Belt sprocket, 46T
Chain guard	HESLING	...
	HORN, CATENA 18	Plastic, 38T
Sprocket/belt sprocket/freewheel	GATES®, SHIMANO Inter-5E SF 6L Unified (CT1130YMN-U)	Belt sprocket, 30T
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #

<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerPack 600 [BBP3560] (EB12.100.00M)	#
	BOSCH, PowerPack Frame 545 [BBP3550] (EB12.100.02J)	#
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
<b>Brake variant 1</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
		3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
<b>Brake variant 2</b>	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
		3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Brake disc variant 1</b>	SHIMANO, SM-RT30	Ø: 180 mm
<b>Brake disc variant 2</b>	TEKTRO, TR-35	Ø: 180 mm
<b>Headlight</b>	FUXON	
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard</b>	SKS, #	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, #	

...not available

# Information not available when document was produced

## 3.5.1.7 Components and repair parts for E-COMFORT P5 BELT (RT)

## KB087-xxRW

## Wave

Frame	GRATE IM, Comfort E BES3	Shape: Wave; size: 46
		Shape: Wave; size: 50
Tyres	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-MT200	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7002-5CD	Mechanical gear hub, 5-speed, 32H, back-pedal brake
Steering headset		
Stem	KALLOYUNO, AS4005	Extension: 65 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	SATORI, SP-SC-255	# Ø: 27.2 mm; length: 350 mm
Saddle clamp	KALLOYUNO, XCZG1	Ø: 31.8 mm
Pedal	VP COMPONENTS, VPE-821	Incorrect dataset
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	GATES®, 125T CDX (11M-125T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 125; width: 12 mm; length: # mm
Chain wheel/belt sprocket	GATES®, BOSCH GEN3 Spider Assembly CDX	Belt sprocket, 46T
Chain guard	HESLING	...
Chain guard	HORN, CATENA 18	Plastic, 38T
Sprocket/belt sprocket/freewheel	GATES®, SHIMANO Inter-5E SF 6L Unified (CT1130YMN-U)	Belt sprocket, 30T
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #

<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerPack 600 [BBP3560] (EB12.100.00M)	#
	BOSCH, PowerPack Frame 545 [BBP3550] (EB12.100.02J)	#
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
<b>Brake variant 1</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
		3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
<b>Brake variant 2</b>	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
		3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Brake disc variant 1</b>	SHIMANO, SM-RT30	Ø: 180 mm
	SHIMANO, SM-RTC60	Ø: 160 mm
<b>Brake disc variant 2</b>	TEKTRO, TR-35	Ø: 180 mm
	TEKTRO, TR-47	Ø: 160 mm
<b>Headlight</b>	FUXON	
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard</b>	SKS, #	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, #	

...not available

# Information not available when document was produced



## 3.5.1.8 Components and repair parts for QUADRIGA P5 (FL)

KB112-xxFD, KB112-xxFT, KB112-xxFW

Diamant, Trapez, Wave

Frame	GREAT IM, Quadriga Perf BES3	Shape: Wave; size: 58 cm
		Shape: Wave; size: 55 cm
		Shape: Wave; size: 53 cm
		Shape: Wave; size: 50 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 47 cm
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 43 cm
		Shape: Trapez; size: 55 cm
		Shape: Trapez; size: 53 cm
		Shape: Trapez; size: 50 cm
		Shape: Trapez; size: 48 cm
		Shape: Trapez; size: 47 cm
		Shape: Diamant; size: 60 cm
		Shape: Diamant; size: 55 cm
Shape: Diamant; size: 53 cm		
Shape: Diamant; size: 50 cm		
Shape: Diamant; size: 48 cm		
Shape: Diamant; size: 47 cm		
Tyres	SCHWALBE, Big Ben	Size: ETRTO 50-622 (28 × 2.00 inches), version: K-Guard; see Section: #
	SCHWALBE, Marathon	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-M4050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7000-5D	Mechanical gear hub, 5-speed, 32H
Steering headset	FSA, HS NO.55R 1,5"	

Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
	ERGON, GP1	Winged grips; size: S
	VELO ENTERPRISE, VLG-649D2S	#
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 350 mm
		# Ø: 34.9 mm; length: 300 mm
		# Ø: 34.9 mm; length: 250 mm
Saddle clamp	#, SRA-R013	Ø: 38.6 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	KMC, PC10	Chain, 96 links; see Section #
		Chain, 111 links; see Section #
	KMC, Z610	Chain, # links; see Section #
Chain wheel/belt sprocket	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
	SAMOX, EMS05-BHV03-S44T-C50	# Chain wheel, 44T; chainline: 50 mm
Chain guard		
Sprocket/belt sprocket/freewheel	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 500 Vertical [BBP3751] (EB12.100.016)	See Section #
	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
Charger	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions

Brake variant 1	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
		3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
		3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 180 mm
Brake disc variant 2	TEKTRO, TR-35	Ø: 180 mm
Headlight	FUXON	
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Guard	SKS, #	#
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.9 Components and repair parts for QUADRIGA P5 (RT)

KB112-xxRD, KB112-xxRT, KB112-xxRW  
Diamant, Trapez, Wave

Frame	GREAT IM, Quadriga Perf BES3	Shape: Diamant; size: 48 cm
		Shape: Diamant; size: 53 cm
		Shape: Trapez; size: 48 cm
		Shape: Trapez; size: 53 cm
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
		Shape: Wave; size: 58 cm
Tyres	SCHWALBE, Big Ben	Size: ETRTO 50-622 (28 × 2.00 inches), version: K-Guard; see Section: #
	SCHWALBE, Marathon	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 269 mm; see Section #
		14G, Ø: 2 mm; length: 294 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-M4050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7002-5CD	Mechanical gear hub, 5-speed, 32H, back-pedal brake
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
	ERGON, GP1	Winged grips; size: S
	VELO ENTERPRISE, VLG-649D2S	#
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle

Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 250 mm
		# Ø: 34.9 mm; length: 300 mm
Saddle clamp	#, SRA-R013	Ø: 38.6 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	KMC, PC10	Chain, 96 links; see Section #
		Chain, 111 links; see Section #
	KMC, Z610	Chain, # links; see Section #
Chain wheel/belt sprocket	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
	SAMOX, EMS05-BHV03-S44T-C50	# Chain wheel, 44T; chainline: 50 mm
Chain guard	Kettenschutz	
Sprocket/belt sprocket/ freewheel	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 500 Vertical [BBP3751] (EB12.100.016)	See Section #
	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
		3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
		3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 180 mm
	SHIMANO, SM-RTC60	Ø: 160 mm
Brake disc variant 2	TEKTRO, TR-35	Ø: 180 mm
	TEKTRO, TR-47	Ø: 160 mm
Headlight	FUXON	
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL	
Guard	SKS, #	#

<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, BLO BMZ IT1 XPLUS	...
<b>Bottle holder</b>	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.10 Components and repair parts for QUADRIGA CX5 HD BENELUX BELT (FL)

## KB136-xxFD, KB136-xxFW

## Diamant, Trapez, Wave

Frame	GREAT IM, QUAD E-Bike Cross 750	Shape: Diamant; size: 48
		Shape: Diamant; size: 53
		Shape: Diamant; size: 58
		Shape: Trapez; size: 48
		Shape: Trapez; size: 53
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
Tyres	SCHWALBE, Marathon	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-M4050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7000-5D	Mechanical gear hub, 5-speed, 32H
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, Zecure Up2+	Extension: 90 mm; see Section #
		Extension: 110 mm; see Section #
Handlebars	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm
	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
	ERGON, GP1	Winged grips; size: S
Fork	SR SUNTOUR, NCX-D-AIR LO DS 15QLC32S 700C	Suspension fork, air suspension, deflection: 63 mm, LO cartridge
Saddle	VELO CYCLE, ZECURE VL-3561	Size: M
	VELO CYCLE, ZECURE VL-6483	Size: L
	VELO CYCLE, ZECURE VL-6485	Size: XL

Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, ZECURE VP-658	# with reflector
Crank set	SAMOX, EC40-F17-ISIS	Pedal crank length: 170 mm
Chain/belt	GATES®, 125T CDX (11M-125T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 125; width: 12 mm; length: # mm
	GATES®, 128T CDX (11M-128T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 128; width: 12 mm; length: # mm
Chain wheel/belt sprocket	GATES®, BOSCH GEN4 Spider Assembly CDX	Belt sprocket, 46T
	GATES®, CDX-S42-BG4UB	Belt sprocket, 42T
Chain guard	#	
Sprocket/belt sprocket/freewheel	GATES®, SHIMANO Inter-5E SF 6L Unified (CT1132YMN-U)	Belt sprocket, 32T
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT402-3A/BR-MT410	3-finger brake lever   Length: 1800 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
		# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 180 mm
Brake disc variant 2	TEKTRO, TR-45	Ø: 180 mm
Headlight	FUXON	
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL	
Motor cover guard	#	
Guard	SKS, #	
Stand	URSUS, Wave Rear	Kickstand; see Section #



Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.11 Components and repair parts for QUADRIGA CX10 LG

KB137-xxKD, KB137-xxKT, KB137-xxKW  
Diamant, Trapez, Wave

Frame	GREAT IM, QUAD E-Bike Cross 750	Shape: Diamant; size: 48
		Shape: Diamant; size: 53
		Shape: Diamant; size: 58
		Shape: Trapez; size: 48
		Shape: Trapez; size: 53
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
Tyres	SCHWALBE, Big Ben	Size: ETRTO 50-622 (28 × 2.00 inches), version: K-Guard; see Section: #
	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 293 mm; see Section #
	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
	MACH1, Plus	14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Nr. 870/53	4 hooks; inner Ø: 160 mm
Front wheel hub	SHIMANO, HB-M4050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, FH-M4050	Freewheel hub, 32H; see Section #
	SHIMANO, FH-QC400-HM	Freewheel hub, 32H; quick release length: 173 mm
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips
	ERGON, GP1-GFK-S	#
	VELO ENTERPRISE, VLG-649D2S	#

<b>Fork</b>	SR SUNTOUR, NCX-D-AIR LO DS 15QLC32S 700C	Suspension fork, air suspension, deflection: 63 mm, LO cartridge
<b>Saddle</b>	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
<b>Seat post</b>	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 350 mm
		# Ø: 34.9 mm; length: 300 mm
<b>Saddle clamp</b>	#, SRA-R013	Ø: 38.6 mm
<b>Pedal</b>	VP COMPONENTS, VPE-821	#
<b>Crank set</b>	SAMOX, EC40-F17-ISIS	Pedal crank length: 170 mm
<b>Chain/belt</b>	#, CX10	Chain, # links, #
	SHIMANO, CN-LG500	Chain, 124 links; see Section #
<b>Chain guard</b>	#	...
<b>Rear derailleur</b>	SHIMANO, DEORE RD-M5130-GS	See Section #
<b>Sprocket/belt sprocket/ freewheel</b>	SAMOX, EP01A-BHV04-D0-C50+NWP202-44T-NS	# Sprocket, 44T
	SHIMANO, CS-LG400-10 (11-43T)	# Cassette; 10-speed, 11-13-15-17-20-23-26-30-36-43T (11-43T)
<b>Shifter</b>	SHIMANO, DEORE SL-M5130-R10	Shifter with indicator, 10-speed
<b>Motor</b>	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
<b>On-board computer</b>	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
<b>Brake variant 1</b>	SHIMANO, BL-MT402-3A/BR-MT410	3-finger brake lever   Length: 1800 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
<b>Brake variant 2</b>	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
<b>Brake disc variant 1</b>	SHIMANO, SM-RT30	Ø: 180 mm
<b>Brake disc variant 2</b>	TEKTRO, TR-45	Ø: 180 mm
<b>Headlight</b>	FUXON	
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#

<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard</b>	SKS, #	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, BLO BMZ IT1 XPLUS	...
<b>Bottle holder</b>	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.12 Components and repair parts for QUADRIGA CX10 LG

KB156-xxFD, KB156-xxFT, KB156-xxFW  
Diamant, Trapez, Wave

Frame	GREAT IM, Quadriga Perf BES3	Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
		Shape: Diamant; size: 48 cm
		Shape: Diamant; size: 53 cm
		Shape: Wave; size: 58 cm
		Shape: Trapez; size: 48 cm
		Shape: Trapez; size: 53 cm
Tyres	SCHWALBE, Big Ben	Size: ETRTO 50-622 (28 × 2.00 inches), version: K-Guard; see Section: #
	SCHWALBE, Marathon	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 272 mm; see Section #
		14G, Ø: 2 mm; length: 269 mm; see Section #
		14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-M4050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7000-5D	Mechanical gear hub, 5-speed, 32H
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
	ERGON, GP1	Winged grips; size: S
	VELO ENTERPRISE, VLG-649D2S	#
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper

Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	LIMOTEC, S1	Ø: 34.9 mm; bearing weight: 85-105 kg; see Section #
	SATORI, Harmony-LT2	# Suspension seat post; Ø: 34.9 mm; length: 350 mm; see Section #
Saddle clamp	#, SRA-R013	Ø: 38.6 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	GATES®, 128T CDX (11M-128T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 128; width: 12 mm; length: # mm
Chain wheel/belt sprocket	GATES®, BOSCH GEN3 Spider Assembly CDX	Belt sprocket, 46T
Chain guard	#	...
Sprocket/belt sprocket/freewheel	GATES®, SHIMANO Inter-5E SF 6L Unified (CT1132YMN-U)	Belt sprocket, 32T
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
Charger	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
		3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 180 mm
Brake disc variant 2	TEKTRO, TR-35	Ø: 180 mm
Headlight	FUXON	
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL	
Guard	SKS, #	#
Stand	URSUS, Wave Rear	Kickstand; see Section #

Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.13 Components and repair parts for QUADRIGA P5 BELT (RT)

KB156-xxRD, KB156-xxRT, KB156-xxRW  
Diamant, Trapez, Wave

Frame	GREAT IM, Quadriga Perf BES3	Shape: Diamant; size: 48 cm
		Shape: Diamant; size: 53 cm
		Shape: Trapez; size: 48 cm
		Shape: Trapez; size: 53 cm
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
		Shape: Wave; size: 58 cm
Tyres	SCHWALBE, Big Ben	Size: ETRTO 50-622 (28 × 2.00 inches), version: K-Guard; see Section: #
	SCHWALBE, Marathon	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 269 mm; see Section #
		14G, Ø: 2 mm; length: 272 mm; see Section #
		14G, Ø: 2 mm; length: 294 mm; see Section #
		14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, HB-M4050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7002-5CD	Mechanical gear hub, 5-speed, 32H, back-pedal brake
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
	ERGON, GP1	Winged grips; size: S
	VELO ENTERPRISE, VLG-649D2S	#
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper



Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	LIMOTEC, S1	Ø: 34.9 mm; bearing weight: 85-105 kg; see Section #
	SATORI, Harmony-LT2	# Suspension seat post; Ø: 34.9 mm; length: 350 mm; see Section #
Saddle clamp	#, SRA-R013	Ø: 38.6 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	GATES®, 128T CDX (11M-128T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 128; width: 12 mm; length: # mm
Chain wheel/belt sprocket	GATES®, BOSCH GEN3 Spider Assembly CDX	Belt sprocket, 46T
Chain guard	#	
Sprocket/belt sprocket/freewheel	GATES®, SHIMANO Inter-5E SF 6L Unified (CT1132YMN-U)	Belt sprocket, 32T
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 500 Vertical [BBP3751] (EB12.100.016)	See Section #
	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
Charger	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
	TEKTRO, HD-T280	3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston; see Section #
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 180 mm
	SHIMANO, SM-RTC60	Ø: 160 mm
Brake disc variant 2	TEKTRO, TR-35	Ø: 180 mm
	TEKTRO, TR-47	Ø: 160 mm
Headlight	FUXON	
Rear light	FUXON, R-Glow EB	6...12 V; see Section #

<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard</b>	SKS, #	#
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, BLO BMZ IT1 XPLUS	...
<b>Bottle holder</b>	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.14 Components and repair parts for QUADRIGA P5 BELT (RT)

## KB160-xxKD, KB160-xxKW

## Diamant, Wave

Frame	KETTLER, TRAVELLER E TRANSHILL CX11 750 27.5"	Shape: Wave; frame height: 41 cm, aluminium
		Shape: Wave; frame height: 44 cm, aluminium
		Shape: Wave; frame height: 48 cm, aluminium
		Shape: Wave; frame height: 54 cm, aluminium
Frame	KETTLER, TRAVELLER E TRANSHILL CX11 750 29"	Shape: Gent; frame height: 44 cm, aluminium
		Shape: Gent; frame height: 48 cm, aluminium
		Shape: Gent; frame height: 54 cm, aluminium
		Shape: Gent; frame height: 60 cm, aluminium
Tyres	VEETIRE, Crown Gem	# Size: ETRTO 66-584 (27.5 × 2.60 ?), 27 TPI
		# Size: ETRTO 66-622 (29 × 2.6 ?), 27 TPI
Tube	VEETIRE, AV	Valve: AV; valve length: 40 mm
Rim band	SCHWALBE	Tubeless
Rim band	SHIN CHANG, "SHN" SH-304BR-01	Size: 30 mm
Rim	RYDE, Disc 30 27.5"	13G, 32H; see Section #
	RYDE, Disc 30 27.5"	14G, 32H; see Section #
Rim	RYDE, Disc 30 29"	13G, 32H; see Section #
	RYDE, Disc 30 29"	14G, 32H; see Section #
Spoke	ALWAYS, #	13G; length: 173.5 mm; Ø: # mm; stainless steel
	ALWAYS, #	13G; length: 272.5 mm; Ø: # mm; stainless steel
	ALWAYS, #	13G; length: 291.5 mm; Ø: # mm; stainless steel
	ALWAYS, #	13G; length: 292.5 mm; Ø: # mm; stainless steel, with brass nipple
	ALWAYS, #	14G; length: 275.5 mm; Ø: # mm; stainless steel
	ALWAYS, #	14G; length: 295.0 mm; Ø: # mm; stainless steel
	MACH1, #	14G; length: 276.5 mm; Ø: 2.3 mm; stainless steel
	MACH1, #	14G; length: 294.0 mm; Ø: 2.3 mm; stainless steel
	SAPIM, GNLE14	# Stainless steel 14G, 2 × 276 mm; see Section #
	SAPIM, GNLE14	# Stainless steel 14G, 2 × 292 mm; see Section #
	SAPIM, GNLE14	# Stainless steel 14G, 2 × 294 mm; see Section #
	SAPIM, GNLE14	13G; length: 296.0 mm; Ø: 2 mm, corrosion-resistant steel
	SAPIM, GNLE14	Stainless steel #G, 2 × 272 mm; see Section #
Front wheel hub	SHIMANO, HB-TC500-15	32H; see Section #
	SHIMANO, HB-TC500-15-B	32H; see Section #
Rear wheel hub	FORMULA, CL-2241QR	

Steering headset	FSA, # (NO.575C)	#, 1"-5 1 1/8" ANODIZED MATT ANODIZED MATT,0 / ANODIZED MATT ANODIZED MATT,0 COVER, (H2108A) ANODIZED MATT BLACK TOP
Steering headset	FSA, HS NO.57e	1 1/8
Stem	KALLOYUNO, ASZG4	# Stem length: 50 mm; Ø: 28.6 mm; shaft length: 31.8 mm, angle: 7°
		# Stem length: 70 mm; Ø: 28.6 mm; shaft length: 31.8 mm, angle: 7°
		# Stem length: 90 mm; Ø: 28.6 mm; shaft length: 31.8 mm, angle: 7°
Handlebars	KALLOYUNO, HBRB12L-ENM	Width: 740 mm; height: 25 mm; backsweep: 9°; see Section #
Handles/tapered	ERGON, GA3	# Size: S
Fork	SR SUNTOUR, XCR34 BOOST AIR DS LOR 15LH-110 29" CTS	Suspension fork, shaft length: 272 mm
Saddle	SELLE ROYAL, 4007HRN	Men's saddle
Seat post	COMUS, #	# Patent seat post; Ø: 30.9 mm; length: 400 mm
	KALLOYUNO, SPF102	2D forged head; diameter: 31.6 mm; length: 350 mm; see Section #
Saddle clamp	KALLOYUNO, SC-ML1	# Ø: 34.9 mm
Pedal	WELLGO, ZZE-01M	with DIN reflector
Crank set	FSA, CK-220/IS	Aluminium, crank set, crank length: 165 mm; for BOSCH™ motors, IS
Chain/belt	SHIMANO, CN-LG500	Chain, 122 links; see Section #
Chain wheel/belt sprocket	FSA, WB488/W0147	# Chain wheel: 38T/Spider; see Section #
Chain guide/snubber	MR CONTROL, CH-GN4-ZEG3438	Chain guide
Rear derailleur	SHIMANO, CUES RD-U6000	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG400-11 (11-50T)	Cassette, 11-speed, 11-13-15-17-20-23-26-30-36-43-50T (11-50T); see Section #
Shifter	SHIMANO, CUES SL-U6000-11R	Shifter with indicator, 11-speed
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake	SHIMANO, BL-M4100/BR-MT410	2-finger brake lever   Length: # mm   Hydraulic disc brake, 2-piston
	SHIMANO, BL-M4100/BR-MT420	2-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston   Ø: 203 mm
	SHIMANO, BL-MT401/BR-MT410	2-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston   Ø: 160 mm
Brake disc	SHIMANO, RT-EM300	Ø: 180 mm
	SHIMANO, SM-RT30	Ø: 180 mm
Reflectors, rear	FUXON, ML-RR	...

<b>Reflectors, front</b>	COMUS, ML-FR	For MonkeyLink interface
<b>Battery lock</b>	ABUS, BLO BOS IT3 XPLUS	...
<b>Bottle holder</b>	FIDLOCK	Bottle holder

...not available

# Information not available when document was produced

## 3.5.1.15 QUADRIGA PRO BELT AUTOMATIC components and repair parts

## KB180-xxFD, KB180-xxFT, KB180-xxFW

## Diamant, Trapez, Wave

Frame	GREAT IM, QUAD E-Bike Cross 750	Shape: Diamant; size: 48 cm
		Shape: Diamant; size: 53 cm
		Shape: Diamant; size: 58 cm
		Shape: Trapez; size: 48 cm
		Shape: Trapez; size: 53 cm
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
Tyres	SCHWALBE, Marathon E-Plus	Size: ETRTO 55-622 (28 × 2.15 inches); version: Smart DualGuard; see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 244 mm; see Section #
		14G, Ø: 2 mm; length: 264 mm; see Section #
		14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Front wheel hub	SHIMANO, DEORE HB-M6010	32H; see Section #
Rear wheel hub	ENVILOLO, CVP-TR-32-DC	Gear hub, continuously variable, 36H; see Section #
Steering headset	FSA, HS NO.55R 1,5"	TH-894-1; see Section #
Stem	SATORI, All-Up 2.0 (SR-55)	for 1.5" stem
Handlebars	SATORI, Noir	# Length: 660 mm; height: 5 mm; Ø: 31.8 mm; #backswEEP: 35°; see Section #
	SATORI, Noir 35 (MTB-AL-727BT-35)	Length: 680 mm; height: 15 mm; backswEEP: 15°; see Section #
	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backswEEP: 20°; swEEP: 15°; see Section #
	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 680 mm; height: 20 mm; backswEEP: 20°; swEEP: 15°; see Section #
Handles/tapered	ERGON, GC1	Winged grips
	ERGON, GP1-GFK-S	#
	VELO ENTERPRISE, VLG-649D2S	#

Fork	SR SUNTOUR, Mobie25 Air DS LOR 15LH 700C	Suspension fork, air suspension, deflection: 63 mm, LOR damper; shaft length: 300 mm
	SR SUNTOUR, Mobie25 DS LOR 15QLC32 700C CTS	Suspension fork, air suspension, deflection: 63 mm, LOR damper; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Accessories	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm
Seat post	LIMOTEC, A3	Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VPE-821	Incorrect dataset
Pedal	VP COMPONENTS, ZECURE VP-658	# with reflector
Crank set	SAMOX, EC40-F17-ISIS	Pedal crank length: 170 mm
Chain/belt	GATES®, 125T CDX (11M-125T-12CT)	# Belt, polyurethane/carbon; pitch: 11, number of teeth: 125; width: 12 mm; length: # mm
Chain wheel/belt sprocket	GATES®, BOSCH GEN4 Spider Assembly CDX	Belt sprocket, 50T
Chain guard	#	...
Sprocket/belt sprocket/freewheel	GATES®, 22T Enviolo CDX (CT1122VMN)	Belt sprocket, 22T
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Kiox 300 [BHU3600] (EB13.100.003)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, DEORE BL-T6000/BR-M6000	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, DEORE BL-T6000/BR-M6000	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
Brake disc variant 1	SHIMANO, SM-RT64	Ø: 180 mm
	SHIMANO, SM-RT66	Ø: 180 mm
Brake disc variant 2	TEKTRO, TR-17	Ø: 180 mm
	TEKTRO, TR-45	Ø: 180 mm

<b>Headlight</b>	FUXON, FF-100 HB/FFB-60	Light cable length: 1100 mm; remote control cable: 850 mm; see Section #
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL	
<b>Guard, rear</b>	SKS, # EDGE AL 66	#
<b>Guard, front</b>	SKS, # EDGE AL 66	#
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	#	...
<b>Bottle holder</b>	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced



## 3.5.1.16 QUADRIGA PRO BELT AUTOMATIC components and repair parts

## KB181-xxKD, KB181-xxKW

## Diamant, Wave

Frame	GREAT IM, QUAD E-Bike Cross 750	Shape: Diamant; size: 48
		Shape: Diamant; size: 53
		Shape: Diamant; size: 58
		Shape: Trapez; size: 48
		Shape: Trapez; size: 53
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
Tyres	SCHWALBE, Marathon E-Plus	Size: ETRTO 55-622 (28 × 2.15 inches); version: Smart DualGuard; see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Front wheel hub	SHIMANO, DEORE HB-M6010	32H; see Section #
Rear wheel hub	SHIMANO, DEORE FH-M6000	Freewheel hub, 32H; see Section #
Steering headset	Steering headset	
Stem	SATORI, All-Up 2.0 (SR-55)	for 1.5" stem
Handlebars	SATORI, Noir	# Length: 660 mm; height: 5 mm; Ø: 31.8 mm; #backsweep: 35°; see Section #
	SATORI, Noir 35 (MTB-AL-727BT-35)	Length: 680 mm; height: 15 mm; backsweep: 15°; see Section #
Handles/tapered	ERGON, GC1	Winged grips
	ERGON, GP1-GFK-S	#
Fork	SR SUNTOUR, Mobie25 AIR DS LOR 15LH 700C	Suspension fork, air suspension, deflection: 63 mm, LOR damper; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Handlebars	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm

Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, ZECURE VP-658	# with reflector
Crank set	SAMOX, EC40-F17-ISIS	Pedal crank length: 170 mm
Chain/belt	SHIMANO, CN-LG500	Chain, 126 links; see Section #
Chain guard	#, CX11	#
Front sprocket	SAMOX, EP01A-BHV04-D0-C50+NWP202-44T-NS	# Sprocket, 44T
Rear derailleur	SHIMANO, DEORE XT RD-M8130-SGS	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG700-11 (11-50T)	Cassette, 11-speed, 11-13-15-17-20-23-26-30-36-43-50T (10-50T); see Section #
Shifter	SHIMANO, DEORE XT SL-M8130-R11	Shifter with indicator, 11-speed
Motor	BOSCH, Performance Line CX/Cargo [BDU3740](EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Kiox 300 [BHU3600] (EB13.100.003)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT402-3A/BR-MT410	3-finger brake lever   Length: 1800 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
Brake variant 21	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
Brake disc variant 1	SHIMANO, SM-RT64	Ø: 180 mm
Brake disc variant 2	TEKTRO, TR-45	Ø: 180 mm
Headlight	FUXON, FF-100 HB/FFB-60	Light cable length: 1100 mm; remote control cable: 850 mm; see Section #
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL	
Guard	SKS, # EDGE AL 66	#
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...

...not available

# Information not available when document was produced

## 3.5.1.17 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY PRO CX 11 LG

## KB182-xxKD, KB182-xxKW

## Diamant, Wave

Frame	GRAT IM, QUAD SUV 750	Shape: Diamant; size: 46 cm
		Shape: Diamant; size: 51 cm
		Shape: Diamant; size: 56 cm
		Shape: Wave; size: 42 cm
		Shape: Wave; size: 46 cm
		Shape: Wave; size: 51 cm
Tyres	SCHWALBE, Smart Sam Plus	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: DD, GreenGuard, see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	RODI, TRYP 30 EVO 27.5"	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 271 mm; see Section #
		14G, Ø: 2 mm; length: 274 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014 SAPIM, Polyax	Inside Ø: 14G; length: 20 mm
		Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Front wheel hub	SHIMANO, DEORE XT HB-M8110	32H; see Section #
Rear wheel hub	SHIMANO, DEORE XT FH-M8010-B	32H; see Section #
Axle	SHIMANO, AX-MT500-142x12	E-THRU axle, see Section #
Steering headset	FSA, HS NO.55R 1.5"	
Stem	SATORI, Zecure Up2+	Extension: 90 mm; see Section #
		Extension: 110 mm; see Section #
Handlebars	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	ERGON, GP3	Winged grips; size: L
Fork	SR SUNTOUR, Mobie35 EQ Boost DS 2CR-PCS 15LH-110 27.5" CTS	Suspension fork, steel suspension, deflection: 100 mm; spring stiffness: medium; damper: 2CR-PCS; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Handlebars	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm

Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VP-469	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: 170 mm
Chain/belt	SHIMANO, CN-LG500	Chain, 124 links; see Section #
Chain guard		Chain, 000 links; see Section #
Sprocket	SAMOX, EP01A-BHV04-D0-C53	# Sprocket, 38T
Rear derailleur	SHIMANO, DEORE XT RD-M8130-SGS	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG700-11 (11-50T)	Cassette, 11-speed, 11-13-15-17-20-23-26-30-36-43-50T (10-50T); see Section #
Shifter	SHIMANO, DEORE XT SL-M8130-R11	Shifter with indicator, 11-speed
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Kiox 300 [BHU3600] (EB13.100.003)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
Brake	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
Brake	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
Brake	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
Accessories	TEKTRO, PM A12	Brake adapter
Brake disc	SHIMANO, SM-RT30	Ø: 203 mm
Brake disc	TEKTRO, TR-45	Ø: 203 mm
Headlight	FUXON, FF-100 HB/WB10	Light cable length: 1100 mm; remote control cable: 850 mm; see Section #
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL	
Guard	SKS, # EDGE AL 66	#
Guard, rear		
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell

Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.18 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY ABS CX11 LG

KB183-xxKD, KB183-xxKT, KB183-xxKW

Diamant, Wave

Frame	GRAT IM, QUAD SUV 750	Shape: Diamant; size: 46 cm
		Shape: Diamant; size: 51 cm
		Shape: Diamant; size: 56 cm
		Shape: Wave; size: 42 cm
		Shape: Wave; size: 46 cm
		Shape: Wave; size: 51 cm
Tyres	SCHWALBE, Smart Sam	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: Performance; see Section #
	SCHWALBE, Smart Sam Plus	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: DD, GreenGuard, see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	RODI, TRYP 30 EVO 27.5"	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 275 mm; see Section #
		14G, Ø: 2 mm; length: 271 mm; see Section #
		14G, Ø: 2 mm; length: 274 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Rear wheel hub	SHIMANO, DEORE XT FH-M8010-B	32H; see Section #
Front wheel hub	SHIMANO, DEORE XT HB-M8110	32H; see Section #
Axle	SHIMANO, AX-MT500-142x12	E-THRU axle, see Section #
Steering headset	FSA, HS NO.55R 1,5"	TH-894-1; see Section #
Stem	SATORI, Zecure Up2+	Extension: 90 mm; see Section #
	SATORI, Zecure Up2+	Extension: 110 mm; see Section #
Handlebars	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	ERGON, GP3	Winged grips; size: L
Fork	SR SUNTOUR, Mobie35 EQ Boost DS 2CR-PCS 15LH-110 27.5" CTS	Suspension fork, steel suspension, deflection: 100 mm; spring stiffness: medium; damper: 2CR-PCS; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Accessories	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm

Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VP-469	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: 170 mm
Chain/belt	SHIMANO, CN-LG500	Chain, 124 links; see Section #
Chain guard	Great IM	...
Sprocket	SAMOX, EP01A-BHV04-D0-C53	# Sprocket, 38T
Rear derailleur	SHIMANO, DEORE XT RD-M8130-SGS	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG700-11 (11-50T)	Cassette, 11-speed, 11-13-15-17-20-23-26-30-36-43-50T (10-50T); see Section #
Shifter	SHIMANO, DEORE XT SL-M8130-R11	Shifter with indicator, 11-speed
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Kiox 300 [BHU3600] (EB13.100.003)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 203 mm
Brake disc variant 2	TEKTRO, TR-45	Ø: 203 mm
Headlight	FUXON, FF-100 HB/WB10	Light cable length: 1100 mm; remote control cable: 850 mm; see Section #
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL, SW-CA113E	
Guard	SKS, # EDGE AL 66	#
Guard, rear	STANDWELL, SW-RE877SB	
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...

...not available

# Information not available when document was produced

## 3.5.1.19 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY ABS CX11 LG

KB184-xxKD, KB184-xxKT, KB184-xxKW

Diamant, Trapez, Wave

Frame	GREAT IM, QUAD E-Bike Cross 750	Shape: Diamant; size: 48
		Shape: Diamant; size: 53
		Shape: Diamant; size: 58
		Shape: Trapez; size: 48
		Shape: Trapez; size: 53
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
Tyres	SCHWALBE, Marathon E-Plus	Size: ETRTO 55-622 (28 × 2.15 inches); version: Smart DualGuard; see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMAN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Front wheel hub	SHIMANO, DEORE HB-M6000	32H; see Section #
Rear wheel hub	SHIMANO, DEORE FH-M6000	Freewheel hub, 32H; see Section #
Axle	SHIMANO, AX-MT500-142x12	E-THRU axle, see Section #
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, Zecure Up2+	Extension: 90 mm; see Section #
		Extension: 110 mm; see Section #
Handlebars	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	ERGON, GC1	Winged grips
Fork	SR SUNTOUR, NCX-D-AIR LO DS 15QLC32S 700C	Suspension fork, air suspension, deflection: 63 mm, LO cartridge
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Handlebars	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm



Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC40-F17-ISIS	Pedal crank length: 170 mm
Chain/belt	SHIMANO, CN-LG500	Chain, 126 links; see Section #
Chain guard	Great IM	...
Rear derailleur	SHIMANO, DEORE XT RD-M8130-SGS	See Section #
Sprocket/belt sprocket/freewheel	SAMOX, EP01A-BHV04-D0-C50+NWP202-44T-NS	# Sprocket, 44T
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG700-11 (11-50T)	Cassette, 11-speed, 11-13-15-17-20-23-26-30-36-43-50T (10-50T); see Section #
Shifter	SHIMANO, DEORE XT SL-M8130-R11	Shifter with indicator, 11-speed
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT402-3A/BR-MT410	3-finger brake lever   Length: 1800 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
		# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 180 mm
Brake disc variant 2	TEKTRO, TR-45	Ø: 180 mm
Headlight	FUXON, FF-100 HB/FFB-60	Light cable length: 1100 mm; remote control cable: 850 mm; see Section #
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL, SW-CA113B	
Guard	SKS, EDGE AL 56 Set	See Section #
Guard, rear	STANDWELL, SW-RE877SC	
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...

...not available

# Information not available when document was produced

## 3.5.1.20 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY COMP ABS CX11 LG

KB187-xxKD, KB187-xxKT, KB187-xxKW

Diamant, Trapez, Wave

Frame	GRAT IM, QUAD SUV 750	Shape: Diamant; size: 46 cm
		Shape: Diamant; size: 51 cm
		Shape: Diamant; size: 56 cm
		Shape: Trapez; size: 46 cm
		Shape: Trapez; size: 51 cm
		Shape: Wave; size: 42 cm
		Shape: Wave; size: 46 cm
		Shape: Wave; size: 51 cm
Tyres	SCHWALBE, Smart Sam	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: Performance; see Section #
	SCHWALBE, Smart Sam Plus	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: DD, GreenGuard, see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	RODI, TRYP 30 EVO 27.5"	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 271 mm; see Section #
		14G, Ø: 2 mm; length: 274 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Front wheel hub	FORMULA, DC-711	# 32H
Rear wheel hub	FORMULA, EHL-148S	# Freewheel hub, 148 × 12 mm, 6-Bolt
Axle	SHIMANO, AX-MT500-142x12	E-THRU axle, see Section #
Steering headset	FSA, HS NO.55R 1,5"	TH-894-1; see Section #
Stem	SATORI, Zecure Up2+	Extension: 90 mm; see Section #
		Extension: 110 mm; see Section #
Handlebars	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	ERGON, GP3	Winged grips; size: L
Fork	SR SUNTOUR, Mobie35 EQ Boost ABS 2CR PCS 15LH-110 27.5" CTS	Suspension fork, steel suspension, deflection: 100 mm; spring stiffness: medium; damper: 2CR-PCS; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Handlebars	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm

Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VP-469	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: 170 mm
Chain/belt	SHIMANO, CN-LG500	Chain, 124 links; see Section #
Chain guard	Great IM	...
Sprocket	SAMOX, EP01A-BHV04-D0-C53	# Sprocket, 38T
Rear derailleur	SHIMANO, DEORE XT RD-M8130-SGS	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG700-11 (11-50T)	Cassette, 11-speed, 11-13-15-17-20-23-26-30-36-43-50T (10-50T); see Section #
Shifter	SHIMANO, DEORE XT SL-M8130-R11	Shifter with indicator, 11-speed
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Kiox 300 [BHU3600] (EB13.100.003)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Front brake	MAGURA, MT4 eSTOP	3-finger brake lever   Length: 850 mm   Hydraulic disc brake, 2 pistons
Rear brake	MAGURA, MT4 eSTOP	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake disc	MAGURA, MDR-C	Ø: 180 mm; see Section #
Tonewheel	MAGURA, R58	ABS sensing
Headlight	FUXON, FF-100 HB/WB10	Light cable length: 1100 mm; remote control cable: 850 mm; see Section #
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL, SW-CA113E	
	STANDWELL, SW-CA113K	
Guard	SKS, # EDGE AL 66	#
Guard	SKS, # EDGE AL 66	#
Guard, rear	STANDWELL, SW-RE877SB	
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.21 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY COMP ABS CX11 LG

KB188-xxKD, KB188-xxKW  
Diamant, Wave

Frame	GRAT IM, QUAD SUV 750	Shape: Diamant; size: 46 cm
		Shape: Diamant; size: 51 cm
		Shape: Diamant; size: 56 cm
		Shape: Wave; size: 42 cm
		Shape: Wave; size: 46 cm
Tyres	SCHWALBE, Smart Sam	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: Performance; see Section #
	SCHWALBE, Smart Sam Plus	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: DD, GreenGuard, see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	RODI, TRYP 30 EVO 27.5"	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 274 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Nr. 870/53	4 hooks; inner Ø: 160 mm
Front wheel hub	SHIMANO, HB-MT400-B	32H; see Section #
	SHIMANO, HB-TC500-15-B	32H; see Section #
Rear wheel hub	SHIMANO, FH-MT400	Freewheel hub, 32H; see Section #
	SHIMANO, FH-TC500-HM-B	Freewheel hub, 32H; see Section #
Axle	SHIMANO, AX-MT500-142x12	E-THRU axle, see Section #
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	HL CORP, MTB-AL-320NBT	# Width: 680 mm
Handles/tapered	HERRMANS, DD37B	
Fork	SR SUNTOUR, XCM34 BOOST DS LO 15AH2-110	Suspension fork, steel suspension, deflection: 100 mm; spring stiffness: medium; damper: LO; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 350 mm
		# Ø: 34.9 mm; length: 300 mm
Saddle clamp	#, SRA-R013	Ø: 38.6 mm
Pedal	VP COMPONENTS, VP-469	#

<b>Crank set</b>	SAMOX, EC39-F20-ISIS	Pedal crank length: 170 mm
<b>Chain/belt</b>	SHIMANO, CN-LG500	Chain, 120 links; see Section #
<b>Chain guard</b>	Great IM	...
<b>Sprocket</b>	SAMOX, EP01A-BHV04-D0-C53	# Sprocket, 38T
<b>Rear derailleur</b>	SHIMANO, DEORE RD-M5130-GS	See Section #
<b>Sprocket/belt sprocket/ freewheel</b>	SHIMANO, CS-LG400-10 (11-43T)	# Cassette; 10-speed, 11-13-15-17-20-23-26-30-36-43T (11-43T)
<b>Shifter</b>	SHIMANO, DEORE SL-M5130-R10	Shifter with indicator, 10-speed
<b>Motor</b>	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
<b>On-board computer</b>	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
<b>Brake variant 1</b>	SHIMANO, BL-MT402-3A/BR-MT410	3-finger brake lever   Length: 1800 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT402-3A/BR-MT420	3-finger brake lever   Length: 1100 mm   Hydraulic disc brake, 2 pistons
<b>Brake variant 2</b>	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 1200 mm   Hydraulic disc brake, 2-piston
	TEKTRO, # HD-T532	# 3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2-piston
<b>Brake disc variant 1</b>	SHIMANO, SM-RT30	Ø: 180 mm
<b>Brake disc variant 2</b>	TEKTRO, TR-45	Ø: 180 mm
<b>Headlight</b>	FUXON, FS-70 EB/WB10	Light cable length: # mm; see Section #
<b>Rear light</b>	FUXON, R-Glow EB	6...12 V; see Section #
<b>Reflectors, rear</b>	COMUS, FZR-006	#
<b>Pannier rack, rear</b>	STANDWELL, SW-CA113E	
<b>Guard, rear</b>	SKS, PET A65 R380	
	STANDWELL, SW-RE877SB	
<b>Guard, front</b>	SKS, PET A65 28"	#
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, BLO BMZ IT1 XPLUS	...
<b>Bottle holder</b>	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.22 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY P10

KB189-xxKD, KB189-xxKT, KB189-xxKW

Diamant, Wave

Frame	GREAT IM, Frame Quadriga Performance BES3	Shape: Diamant; size: 46 cm
		Shape: Diamant; size: 51 cm
		Shape: Diamant; size: 56 cm
		Shape: Wave; size: 42 cm
		Shape: Wave; size: 46 cm
		Shape: Wave; size: 51 cm
		Shape: Trapez; size: 46 cm
		Shape: Trapez; size: 51 cm
Tyres	SCHWALBE, Smart Sam Plus	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: DD, GreenGuard, see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	RODI, TRYP 30 EVO 27.5"	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 275 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Front wheel hub	SHIMANO, HB-MT400-B	32H; see Section #
	SHIMANO, HB-TC500-15-B	32H; see Section #
Rear wheel hub	SHIMANO, FH-MT400	Freewheel hub, 32H; see Section #
	SHIMANO, FH-TC500-HM-B	Freewheel hub, 32H; see Section #
Axle	SHIMANO, AX-MT500-142x12	E-THRU axle, see Section #
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	HL CORP, MTB-AL-320NBT	# Width: 680 mm
Handles/tapered	HERRMANS, DD37B	
Fork	SR SUNTOUR, XCM34 BOOST DS LO 15AH2-110	Suspension fork, steel suspension, deflection: 100 mm; spring stiffness: medium; damper: LO; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle

Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 350 mm
		# Ø: 34.9 mm; length: 300 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VP-469	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	SHIMANO, CN-HG541	# Chain, 120 links; see Section #
Chain wheel/belt sprocket	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
Chain guard	Great IM	...
Rear derailleur	SHIMANO, CUES RD-U6000	See Section #
	SHIMANO, DEORE RD-M5120-SGS	See Section #
Sprocket/belt sprocket/ freewheel	SUNRISE, CSMS2.TAZ0.ES0	10-speed, 11-46T
	SHIMANO, CS-LG300-10 (11-48T)	Cassette, 10-speed, 11-13-15-17-20-23-28-34-41-48T (11-48T); see Section #
	SHIMANO, DEORE CS-M4100-10 (11-46T)	Cassette, 10-speed, 11-13-15-18-21-24-28-32-37-46T (11-46T); see Section #
Shifter	SHIMANO, CUES SL-U6000-10R	Shifter with indicator, 10-speed
	SHIMANO, DEORE SL-M4100-R	Shifter with indicator, 10-speed
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
Rechargeable battery	BOSCH, PowerTube 500 Vertical [BBP3751] (EB12.100.016)	See Section #
	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Front brake	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
Rear brake	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake disc	SHIMANO, SM-RT30	Ø: 180 mm
Headlight	FUXON, FF-50 EB/WB10	Reflector with moped approval; see Section #
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL, SW-CA113E	
Guard, rear	SKS, PET A65	
	SKS, PET A65 R380	
	STANDWELL, SW-RE877SB	
Guard, front	SKS, PET A65 28"	#
Stand	URSUS, Wave Rear	Kickstand; see Section #

Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced



## 3.5.1.23 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY P10

KB190-xxKD, KB190-xxKT, KB190-xxKW

Diamant, Wave

Frame	GREAT IM, Quadriga Perf BES3	Shape: Diamant; size: 48 cm
		Shape: Diamant; size: 53 cm
		Shape: Trapez; size: 48 cm
		Shape: Trapez; size: 53 cm
		Shape: Wave; size: 43 cm
		Shape: Wave; size: 48 cm
		Shape: Wave; size: 53 cm
		Shape: Wave; size: 58 cm
Tyres	SCHWALBE, Energizer Plus	Size: ETRTO 50-622 (28 × 2.00 inches), version: GreenGuard; see Section: #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 293 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Front wheel hub	SHIMANO, HB-M3050	32H; see Section #
	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, FH-M3050	Freewheel hub, 32H; see Section #
	SHIMANO, FH-QC400-HM	Freewheel hub, 32H; quick release length: 173 mm
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	HERRMANS, DD37B	
Fork	SR SUNTOUR, NEX-E25 DS HLO 700C	Suspension fork, air suspension, deflection: 63 mm, HLO damper
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6483)	Ladies' saddle
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 300 mm
		# Ø: 34.9 mm; length: 350 mm
Saddle clamp	#, SRA-R013	Ø: 38.6 mm
Pedal	VP COMPONENTS, VPE-821	#

<b>Crank set</b>	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
<b>Chain/belt</b>	SHIMANO, CN-HG54	Chain, # links; see Section #
	SHIMANO, CN-HG541	# Chain, 124 links; see Section #
	SHIMANO, CN-LG500	Chain, # links; see Section #
<b>Chain wheel/belt sprocket</b>	SAMOX, EMS05-BHV03-NS44T-C5	# Chain wheel, 44T; chainline: # mm
<b>Chain guard</b>	Great IM	...
<b>Rear derailleur</b>	SHIMANO, CUES RD-U6000	See Section #
	SHIMANO, DEORE RD-M5120-SGS	See Section #
<b>Sprocket/belt sprocket/ freewheel</b>	SUNRISE, CSMS2.TAZ0.ES0	10-speed, 11-46T
	SHIMANO, CS-LG400-10 (11-48T)	Cassette, 10-speed, 11-13-15-17-20-23-28-34-41-48T (11-48T); see Section #
	SHIMANO, DEORE CS-M4100-10 (11-46T)	Cassette, 10-speed, 11-13-15-18-21-24-28-32-37-46T (11-46T); see Section #
<b>Shifter</b>	SHIMANO, CUES SL-U6000-10R	Shifter with indicator, 10-speed
	SHIMANO, DEORE SL-M4100-R	Shifter with indicator, 10-speed
<b>Motor</b>	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
<b>On-board computer</b>	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
<b>Display</b>	BOSCH, Intuvia 100 [BHU3200] (EB13.100.00F)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerTube 500 Vertical [BBP3751] (EB12.100.016)	See Section #
	BOSCH, PowerTube 625 Vertical [BBP3761] (EB12.100.010)	See Section #
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
<b>Front brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
<b>Rear brake</b>	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
<b>Brake disc</b>	SHIMANO, SM-RT30	Ø: 180 mm
<b>Headlight</b>	FUXON, F-130-EB	6...12 V, 30 lux; see Section #
<b>Rear light</b>	FUXON, RZ-100 EB	# 6...12 V, with reflector; see Section #
<b>Pannier rack, rear</b>	STANDWELL, SW-CA113B	
<b>Guard</b>	SKS, #	#
<b>Guard, rear</b>	STANDWELL, SW-RE877SC	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, BLO BMZ IT1 XPLUS	...
<b>Bottle holder</b>	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

## 3.5.1.24 Components and repair parts for TRAVELLER E-GOLD P9

KB193-xxKD, KB193-xxKT, KB193-xxKW

Diamant, Trapez, Wave

Frame	HAOJE, Traveller Gold P9	Diamant shape; size: 50 cm
		Diamant shape; size: 55 cm
		Diamant shape; size: 60 cm
		Trapez shape; size: 45 cm
		Trapez shape; size: 50 cm
		Trapez shape; size: 55 cm
		Wave shape; size: 45 cm
		Wave shape; size: 50 cm
	Wave shape; size: 55 cm	
Tyres	CST, Supero Optima Safe (C-3031)	# Size: ETRTO 50-622 (29 × 2.00 ?), 27 TPI
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 293 mm; see Section #
		14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Nr. 870/53	4 hooks; inner Ø: 160 mm
Front wheel hub	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, FH-QC400-HM	Freewheel hub, 32H; quick release length: 173 mm
Steering headset	ACROS, AZF-1038	ZS44/28.6   ZS56/40
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	HERRMANS, DD37B	
Fork	SR SUNTOUR, NVX30 DS 29"	# Suspension fork, steel suspension, deflection: # mm; spring stiffness: medium; shaft length: 300 mm
Saddle	SELLE ROYAL, Vivo RVL Moderate (50F2DR0)	Ladies' saddle
	SELLE ROYAL, Vivo RVL Moderate (50F2HR0)	Men's saddle
Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 300 mm
		# Ø: 34.9 mm; length: 350 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm

Chain/belt	SHIMANO, CN-LG500	Chain, # links; see Section #
Chain wheel/belt sprocket	SAMOX, EMS05-BHV03-S44T-C50	# Chain wheel, 44T; chainline: 50 mm
Chain guard	Great IM	...
	HERRMANS	
	HORN, Bracket	Chain guard ring
Rear derailleur	SHIMANO, CLARIS RD-R2000-GS	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG300-9 (11-41T)	Cassette, 9-speed, 11-13-15-17-20-23-28-34-41T (11-41T); see Section #
Shifter	SHIMANO, CUES SL-U4000-9R	Shifter with indicator, 9-speed
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Rechargeable battery	BOSCH, PowerTube 500 Horizontal [BBP3750] (EB12.100.032)	See Section #
	BOSCH, PowerTube 625 Horizontal (BBP3760) [EB12.100.011]	See Section #
Charger	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
Brake variant 1	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
Brake variant 2	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
Brake disc variant 1	SHIMANO, SM-RT30	Ø: 180 mm
Brake disc variant 2	TEKTRO, TR-35	Ø: 180 mm
Headlight	FUXON, F-130-EB	6...12 V, 30 lux; see Section #
Rear light	FUXON, RZ-100 EB	# 6...12 V, with reflector; see Section #
Pannier rack, rear	STANDWELL, SW-CA113B	
	STANDWELL, SW-FH148S	
Guard	SKS, #	
Guard, rear	STANDWELL, SW-RE877SC	
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Operating instructions	Q-DRUCK, SLATCH, 800008423	...

...not available

# Information not available when document was produced

## 3.5.1.25 Components and repair parts for TRAVELLER E-GOLD P5 (FL)

KB194-xxFD, KB194-xxFW

Diamant, Wave

Frame	HAOJE, Traveller Gold P5	Diamant shape; size: 50 cm
		Diamant shape; size: 55 cm
		Wave shape; size: 45 cm
		Wave shape; size: 50 cm
		Wave shape; size: 55 cm
Tyres	CST, Supero Optima Safe (C-3031)	# Size: ETRTO 50-622 (29 × 2.00 ?), 27 TPI
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 269 mm; see Section #
		14G, Ø: 2 mm; length: 271 mm; see Section #
		14G, Ø: 2 mm; length: 293 mm; see Section #
		14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Nr. 870/53	4 hooks; inner Ø: 160 mm
Front wheel hub	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7000-5D	Mechanical gear hub, 5-speed, 32H
Steering headset	ACROS, AZF-1038	ZS44/28.6   ZS56/40
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
	ERGON, GP1	Winged grips; size: S
Fork	SR SUNTOUR, NVX30 DS 29"	# Suspension fork, steel suspension, deflection: # mm; spring stiffness: medium; shaft length: 300 mm
Saddle	SELLE ROYAL, Vivo RVL Moderate (50F2DR0)	Ladies' saddle
	SELLE ROYAL, Vivo RVL Moderate (50F2HR0)	Men's saddle
Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 300 mm
		# Ø: 34.9 mm; length: 350 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	KMC, Z610	Chain, # links; see Section #

Chain wheel/belt sprocket	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
	SAMOX, EMS05-BHV03-S44T-C50	# Chain wheel, 44T; chainline: 50 mm
Chain guard	Great IM	...
Chain guard	HERRMANS	
Chain guard	HORN, Bracket	Chain guard ring
Sprocket/belt sprocket/freewheel	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #
Shifter	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Rechargeable battery	BOSCH, PowerTube 500 Horizontal [BBP3750] (EB12.100.032)	See Section #
	BOSCH, PowerTube 625 Horizontal (BBP3760) [EB12.100.011]	See Section #
Charger	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
Brake	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
Brake	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
Brake disc	SHIMANO, SM-RT30	Ø: 180 mm
Brake disc	TEKTRO, TR-35	Ø: 180 mm
Headlight	FUXON, F-130-EB	6...12 V, 30 lux; see Section #
Rear light	FUXON, RZ-100 EB	# 6...12 V, with reflector; see Section #
Pannier rack, rear	STANDWELL, SW-CA113B	
	STANDWELL, SW-FH148S	
Guard	SKS, #	
Guard, rear	STANDWELL, SW-RE877SC	
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...

...not available

# Information not available when document was produced

## 3.5.1.26 Components and repair parts for TRAVELLER E-GOLD P5 (FL)

KB194-xxFD, KB194-xxFW

Diamant, Wave

Frame	HAOJE, Traveller Gold P5	Diamant shape; size: 55 cm
		Wave shape; size: 45 cm
		Wave shape; size: 50 cm
		Wave shape; size: 55 cm
Tyres	CST, SUPERO ALL GROUND	# Size: ETRTO 55-622 (28 × 2.15 ?), # TPI
	CST, Supero Optima Safe (C-3031)	# Size: ETRTO 50-622 (29 × 2.00 ?), 27 TPI
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	SCHÜRMANN, YAK19 (622-19)	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 269 mm; see Section #
		14G, Ø: 2 mm; length: 271 mm; see Section #
		14G, Ø: 2 mm; length: 293 mm; see Section #
		14G, Ø: 2 mm; length: 295 mm; see Section #
Spoke nipples	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Nr. 870/53	4 hooks; inner Ø: 160 mm
Front wheel hub	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, NEXUS SG-C7002-5CD	Mechanical gear hub, 5-speed, 32H, back-pedal brake
Steering headset	ACROS, AZF-1038	ZS44/28.6   ZS56/40
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	ERGOTEC, ERGO Series/31,8	Width: 620 mm; see Section #
Handles/tapered	ERGON, GC1	Winged grips, NEXUS
	ERGON, GP1	Winged grips; size: S
Fork	SR SUNTOUR, NVX30 DS 29"	# Suspension fork, steel suspension, deflection: # mm; spring stiffness: medium; shaft length: 300 mm
Saddle	SELLE ROYAL, Vivo RVL Moderate (50F2DR0)	Ladies' saddle
	SELLE ROYAL, Vivo RVL Moderate (50F2HR0)	Men's saddle
Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 300 mm
		# Ø: 34.9 mm; length: 350 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm

<b>Chain/belt</b>	KMC, Z610	Chain, # links; see Section #
<b>Chain wheel/belt sprocket</b>	SAMOX, BHV03-EP07A-DO-C47	# Chain wheel, 38T; chainline: 47 mm
	SAMOX, EMS05-BHV03-S44T-C50	# Chain wheel, 44T; chainline: 50 mm
<b>Chain guard</b>	Great IM	...
	HERRMANS	
	HORN, Bracket	Chain guard ring
<b>Sprocket/belt sprocket/freewheel</b>	SHIMANO, NEXUS CS-C7000	Sprocket, 30T; see Section #
<b>Shifter</b>	SHIMANO, NEXUS SL-C7000-5	Twist grip shifter with indicator, 5-speed; see Section #
<b>Motor</b>	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
<b>On-board computer</b>	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
<b>Rechargeable battery</b>	BOSCH, PowerTube 500 Horizontal [BBP3750] (EB12.100.032)	See Section #
	BOSCH, PowerTube 625 Horizontal (BBP3760) [EB12.100.011]	See Section #
<b>Charger</b>	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
<b>Brake</b>	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
<b>Brake disc</b>	SHIMANO, SM-RT30	Ø: 180 mm
	TEKTRO, TR-35	Ø: 180 mm
	TEKTRO, TR-47	Ø: 180 mm
<b>Headlight</b>	FUXON, F-130-EB	6...12 V, 30 lux; see Section #
<b>Rear light</b>	FUXON, RZ-100 EB	# 6...12 V, with reflector; see Section #
<b>Pannier rack, rear</b>	STANDWELL, SW-CA113B	
	STANDWELL, SW-FH148S	
<b>Guard</b>	SKS, #	
<b>Guard, rear</b>	STANDWELL, SW-RE877SC	
<b>Stand</b>	URSUS, Wave Rear	Kickstand; see Section #
<b>Bell/horn</b>	NUVO ENTERPRISE, NH-405AP	Bell
<b>Battery lock</b>	ABUS, BLO BMZ IT1 XPLUS	...

...not available

# Information not available when document was produced



## 3.5.1.27 Components and repair parts for TRAVELLER E-GOLD Town &amp; Country P9

KB195-xxKD, KB195-xxKW

Diamant, Wave

Frame	HAOJE, Traveller Gold T&C	Diamant shape; size: 50 cm
		Diamant shape; size: 55 cm
		Diamant shape; size: 60 cm
		Wave shape; size: 45 cm
		Wave shape; size: 50 cm
		Wave shape; size: 55 cm
Tyres	CST, Gripper	# Size: ETRTO 57-584 (27.5 × 2.25 inches)
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/ 635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	RODI, TRYP 30 EVO 27.5"	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 275 mm; see Section #
Spoke nipples	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Nr. 870/53	4 hooks; inner Ø: 160 mm
Front wheel hub	SHIMANO, HB-QC400	32H; see Section #
Rear wheel hub	SHIMANO, FH-QC400-HM	Freewheel hub, 32H; quick release length: 173 mm
Steering headset	ACROS, AZF-1038	ZS44/28.6   ZS56/40
Stem	SATORI, TDS-C269-8	# Ø: 31.8 mm; extension: 90 mm; see Section #
		# Ø: 31.8 mm; extension: 110 mm; see Section #
Handlebars	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	HERRMANS, DD37B	
Fork	SR SUNTOUR, NVX30 DS 27.5"	Suspension fork, steel suspension, deflection: 75 mm; spring stiffness: medium; shaft length: 300 mm
Saddle	SELLE ROYAL, Vivo RVL Moderate (50F2DR0)	Ladies' saddle
	SELLE ROYAL, Vivo RVL Moderate (50F2HR0)	Men's saddle
Seat post	KALLOYUNO, SP216 BL	# Ø: 34.9 mm; length: 300 mm
		# Ø: 34.9 mm; length: 350 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VPE-821	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: # mm
Chain/belt	SHIMANO, CN-LG500	Chain, # links; see Section #
Chain wheel/belt sprocket	SAMOX, EMS05-BHV03-S44T-C50	# Chain wheel, 44T; chainline: 50 mm

Chain guard	Great IM	...
	HERRMANS	
	HORN, Bracket	Chain guard ring
Rear derailleur	SHIMANO, CLARIS RD-R2000-GS	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG300-9 (11-41T)	Cassette, 9-speed, 11-13-15-17-20-23-28-34-41T (11-41T); see Section #
Shifter	SHIMANO, CUES SL-U4000-9R	Shifter with indicator, 9-speed
Motor	BOSCH, Performance Line [BDU3360] (EB11.100.00A)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Rechargeable battery	BOSCH, PowerTube 500 Horizontal [BBP3750] (EB12.100.032)	See Section #
	BOSCH, PowerTube 625 Horizontal (BBP3760) [EB12.100.011]	See Section #
Charger	BOSCH, 2A Charger [BPC3200] (EB12.110.016)	Charging current (max.): 2 A, 220-240 V; see charger instructions
Brake	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 950 mm   Hydraulic disc brake, 2 pistons
	SHIMANO, BL-MT200/BR-MT200	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 2 pistons
	TEKTRO, HD-T280	3-finger brake lever   Length: 1000 mm   Hydraulic disc brake, 2-piston; see Section #
Brake disc	SHIMANO, SM-RT30	Ø: 180 mm
	TEKTRO, TR-35	Ø: 180 mm
Headlight	FUXON, F-130-EB	6...12 V, 30 lux; see Section #
Rear light	FUXON, RZ-100 EB	# 6...12 V, with reflector; see Section #
Guard, rear	SKS, PET A65	
	STANDWELL, SW-RE877SB	
Guard, front	SKS, PET A65 28"	#
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...

...not available

# Information not available when document was produced

## 3.5.1.28 Components and repair parts for QUADRIGA TOWN &amp; COUNTRY PRO ABS LTD CX11 LG

KB200-xxKD, KB200-xxKW

Diamant, Wave

Frame	GRAT IM, QUAD SUV 750	Shape: Diamant; size: 46 cm
Tyres	SCHWALBE, Smart Sam Plus	Size: ETRTO 57-584 (27.5 × 2.25 inches), version: DD, GreenGuard, see Section #
Tube	SCHWALBE, AV19 (27.5"/28"/29")	Valve: AV; valve length: 40 mm; size: ETRTO 40/62-584/635; version: Standard
Rim band	TAPIR, 6781	Size: 8 mm × 2000 mm; thickness: 0.30 mm, colour: Yellow
Rim	RODI, TRYP 30 EVO 27.5"	32H; see Section #
Spoke	MACH1, Plus	14G, Ø: 2 mm; length: 271 mm; see Section #
		14G, Ø: 2 mm; length: 274 mm; see Section #
Spoke nipples	MACH1, 8CCBZ2014	Inside Ø: 14G; length: 20 mm
	SAPIM, Polyax	Inside Ø: 14G; length: 14 mm
Spoke guard	WESTPHAL GMBH, Regina	52T; inner Ø: 100 mm; outer Ø: 230 mm
Front wheel hub	FORMULA, DC-711	# 32H
Rear wheel hub	FORMULA, EHL-148S	# Freewheel hub, 148 × 12 mm, 6-Bolt
Axle	SHIMANO, AX-MT500-142x12	E-THRU axle, see Section #
Steering headset	FSA, HS NO.55R 1,5"	
Stem	SATORI, Zecure Up2+	Extension: 90 mm; see Section #
		Extension: 110 mm; see Section #
Handlebars	SATORI, ZECURE Wien	Aluminium, Ø: 31.8 mm; width: 640 mm; height: 20 mm; backsweep: 20°; sweep: 15°; see Section #
Handles/tapered	ERGON, GP3	Winged grips; size: L
Fork	SR SUNTOUR, Mobie35 EQ Boost ABS 2CR PCS 15LH-110 27.5" CTS	Suspension fork, steel suspension, deflection: 100 mm; spring stiffness: medium; damper: 2CR-PCS; shaft length: 300 mm
Saddle	VELO CYCLE, COMODORO (VL-3561)	Size: M
	VELO CYCLE, COMODORO (VL-6485)	Men's saddle
Handlebars	LIMOTEC, RM04	Remote control lever for seat post; length: 2000 mm
Seat post	LIMOTEC, A3	Ø: 34.9 mm; deflection: 80 mm (40/40); without remote control
		Ø: 30.9 mm; deflection: 120 mm (40/80); without remote control
		Ø: 34.9 mm; deflection: 100 mm
Saddle clamp	MR CONTROL, CL-95-386	Ø: 38.9 mm
Pedal	VP COMPONENTS, VP-469	#
Crank set	SAMOX, EC39-F20-ISIS	Pedal crank length: 170 mm
Chain/belt	SHIMANO, CN-LG500	Chain, 126 links; see Section #

Chain guard	Great IM	...
Sprocket	SAMOX, EP01A-BHV04-D0-C53	# Sprocket, 38T
Rear derailleur	SHIMANO, DEORE XT RD-M8130-SGS	See Section #
Sprocket/belt sprocket/freewheel	SHIMANO, CS-LG700-11 (11-50T)	Cassette, 11-speed, 11-13-15-17-20-23-26-30-36-43-50T (10-50T); see Section #
Shifter	SHIMANO, DEORE XT SL-M8130-R11	Shifter with indicator, 11-speed
Motor	BOSCH, Performance Line CX / Cargo [BDU3740] (EB11.100.001)	See Section 3.5.06.1
On-board computer	BOSCH, LED Remote [BRC3600] (EB13.100.00E)	See Section #
Display	BOSCH, Kiox 300 [BHU3600] (EB13.100.003)	See Section #
Rechargeable battery	BOSCH, PowerTube 750 Vertical [BBP3771] (EB12.100.00W)	See Section #
Charger	BOSCH, 4A Charger [BPC3400] (EB12.110.001)	Charging current (max.): 4 A, 220-240 V; see charger instructions
Front brake	MAGURA, MT5 eSTOP	2-finger brake lever   Length: 850 mm   Hydraulic disc brake, 4-piston
Rear brake	MAGURA, CT ABS	3-finger brake lever   Length: 2000 mm   Hydraulic disc brake, 4-piston; see Section #
Brake disc	MAGURA, MDR-C	Ø: 180 mm; see Section #
Tonewheel	MAGURA, R58	ABS sensing
Tonewheel	MAGURA, R70	ABS sensing
Headlight	FUXON, FF-100 HB/WB10	Light cable length: 1100 mm; remote control cable: 850 mm; see Section #
Rear light	FUXON, R-Glow EB	6...12 V; see Section #
Reflectors, rear	COMUS, FZR-006	#
Pannier rack, rear	STANDWELL, SW-CA113K	
Guard	SKS, # EDGE AL 66	#
Guard, rear	STANDWELL, SW-RE877SB	
Stand	URSUS, Wave Rear	Kickstand; see Section #
Bell/horn	NUVO ENTERPRISE, NH-405AP	Bell
Battery lock	ABUS, BLO BMZ IT1 XPLUS	...
Bottle holder	FIDLOCK, Bike Base	Fidlock system

...not available

# Information not available when document was produced

### 3.5.2 Chassis

The chassis comprises two components:

- Frame and
- steering system

#### 3.5.2.1 Frame

The frame absorbs all forces which act on pedelec from body weight, pedalling and the ground. The frame also acts as a carrier for most components.

The frame geometry determines the pedelec's ride performance. A frame comprises the following elements:

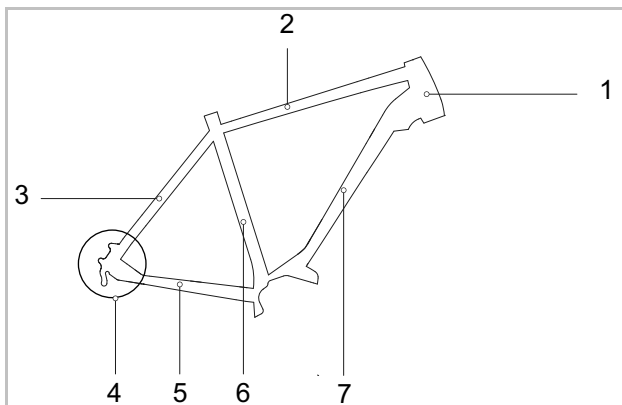


Figure 5: Elements of the frame

- |   |                      |
|---|----------------------|
| 1 | Head tube            |
| 2 | Top tube             |
| 3 | Rear frame seat stay |
| 4 | Rear frame fork end  |
| 5 | Chain stay           |
| 6 | Seat tube            |
| 7 | Down tube            |

Suspension frames also feature a rear frame damper.

### Carbon frame

Carbon (CFRP) is a carbon-fibre-reinforced polymer made of high-strength, rigid fibres. Carbon frames comprise several layers of carbon with an epoxy resin matrix. The uppermost layer is known as the visible layer.

#### Benefits

- Carbon frames are more rigid than aluminium and offer greater fatigue strength.
- Carbon frames do not rust.
- If carbon frames are fitted correctly and are not involved in a serious accident, they have a similar long life cycle to aluminium frames.
- Fatigue is significantly less common in carbon frames than in aluminium frames.

#### Disadvantages

- Carbon breaks if the maximum load is exceeded.
- Carbon is highly delicate. Interior damage may not be visible on the outside after an accident. Damage can only be detected by pulse thermography or ultrasonic excitation, for example, at a specialist retailer's.
- Carbon frames are sensitive to heat. Several hours over 65 °C can soften the frame and cause the individual layers of carbon to separate from one another. This is called delamination.
- Fractures which cut through carbon fibres cannot be repaired. A new frame needs to be acquired in such a case.
- Carbon is very difficult to recycle.

#### Frame size

The size of the frame must be adjusted to the rider's height.

#### City and trekking bicycle, folding bicycle and cargo bike

The tolerance for the frame height and its associated top tube length is somewhat greater for city bicycles due to the more upright riding position. As the handlebars and saddle can be adjusted to the rider's height, the range of recommended frame sizes can be somewhat wider.

Rider's height [cm]	Frame size [cm]	
155... 165	S	43... 48
165... 175	M	48... 53
175... 185	L	53... 58
185... 195	XL	58... 62
195... 215	XXL	62... 65

**Table 20: Recommended frame size for city and trekking bicycles**

### Mountain bike

The frame geometries for mountain bikes differ depending on the type and area of use. The frame size is not dependent on the wheel size. The differences are already taken into account in the recommended frame sizes.

Rider's height [cm]	Frame size [cm]	Wheel size [Inches]
150... 160	33... 37	26
160... 170	38... 43	26, 27.5
170... 180	43... 47	26, 27.5, 29
180... 190	47... 52	26, 27.5, 29
190... 200	51... 56	27.5, 29
200... 215	53... 60	27.5, 29

**Table 21: Recommended frame size for mountain bikes**

### Racing bicycles and gravel bikes

The different frame heights are closer together on racing bicycles and gravel bikes. Smaller increments in the frame heights ensure precise adjustment to the rider's height.

The seat on the pedelec is largely determined by the length of the top tube:

- The shorter the top tube is, the steeper the sitting position is.
- The longer the top tube is, the more stretched-out the sitting position is.

Rider's height [cm]	Frame size [cm]
160... 175	XS
165... 180	S
170... 185	M
175... 190	L
180... 195	XL
185... 200	XXL

**Table 22: Recommended frame size for racing bicycles and gravel bikes**

### Bicycle for young adults

A person grows in height rapidly during adolescence. As a result, the frame size needs to be checked every six months.

Rider's height [cm]	Frame size [cm]
140... 150	33... 35
150... 160	35... 38
160... 170	38... 41
170... 180	41... 46
180... 190	46... 53

**Table 23: Recommended frame size for mountain bikes and bicycles for young adults**

### Child's bike

Children are growing constantly. As a result, the frame size needs to be checked every six months.

It is important that riders, especially learners, can safely put both feet on the ground. Children thus need a pedelec that is appropriate for their height. This is the only way to ensure a safe ride.

Rider's height [cm]	Wheel size [inches]
85... 110	12
90... 120	16
100... 125	18
110... 130	20
120... 145	24
135... 165	26

**Table 24: Recommended wheel size for child's bicycles**

### 3.5.2.2 Rear frame damper

A rear frame damper is primarily fitted to mountain bikes and helps to protect the pedelec and rider against impacts and vibrations caused by uneven ground.

#### Rear frame damper suspension

A rear frame damper deflects when a steel spring, air suspension, or both suspension types act on it.

#### Negative deflection (sag)

Sag is the percentage of the entire spring deflection that is compressed by the rider's body weight, including equipment (such as a backpack), their seating position and frame geometry. Sag is not caused by riding.

The rear frame damper rebounds at a controlled speed if it is optimally adjusted. The rear wheel does not bounce off rough surfaces or the ground;

it stays in contact with the ground instead (blue line).

The saddle is raised slightly if the bump is compensated and gently sinks downwards when the suspension deflects as soon as the wheel touches the ground after the bump. The rear frame damper rebounds in a controlled way, so that the rider remains sitting in a horizontal position when the next bump is absorbed. The suspension motion is predictable and controlled. The rider is not thrown upwards or forwards (green line).



Figure 6: Optimum rear frame damper ride performance

#### Lock

Compression can be disabled in all rear frame dampers using the **lockout**. The frame will then behave in the same way as one without a rear frame damper.

The suspension system absorbs a great deal of motor and muscle power during rides uphill or on optimally tarmacked roads. This increases energy consumption and reduces propulsion. That is why it is a good idea to disable the suspension.

#### Threshold

The threshold is an optimal lockout mode.

If a threshold is set, the rear frame damper behaves as if it were locked out. The threshold prevents deflection until a medium impact or downward force occurs.

## Rear frame damper damping

After compressing, the suspension fork returns to its original position. If there is a damper, it will decelerate movement, preventing the suspension system from springing back in an uncontrolled manner and stopping the suspension fork vibrating up and down.

### Rebound dampers

The rear frame damper rebounds at a controlled speed if it is optimally adjusted. The rear wheel does not bounce off rough surfaces or the ground; it stays in contact with the ground instead (blue line). The saddle is raised slightly if the bump is compensated and gently sinks downwards when the suspension deflects as soon as the wheel touches the ground after the bump. The rear frame damper rebounds in a controlled way, so that the rider remains sitting in a horizontal position when the next bump is absorbed.

A distinction is made between two types of dampers:

- Rebound dampers,
- Compression damper

The suspension motion is predictable and controlled. The rider is not thrown upwards or forwards (green line).

The setting on the rebound damper depends on the air pressure setting. A higher sag requires lower rebound damping.



Figure 7: Optimum rear frame damper ride performance



### Compression damper

The compression damper controls the compression lifting speed or amount by which the rear frame damper deflects in response to slow impacts. The compression damper affects the absorption of bumps when weight shifts or when braking and during transitions, cornering, and uniform impacts caused by bumps.

When optimally adjusted, the rear frame damper counteracts deflection, stays higher in its deflection range and helps to maintain speed when riding on hilly parts of terrain.

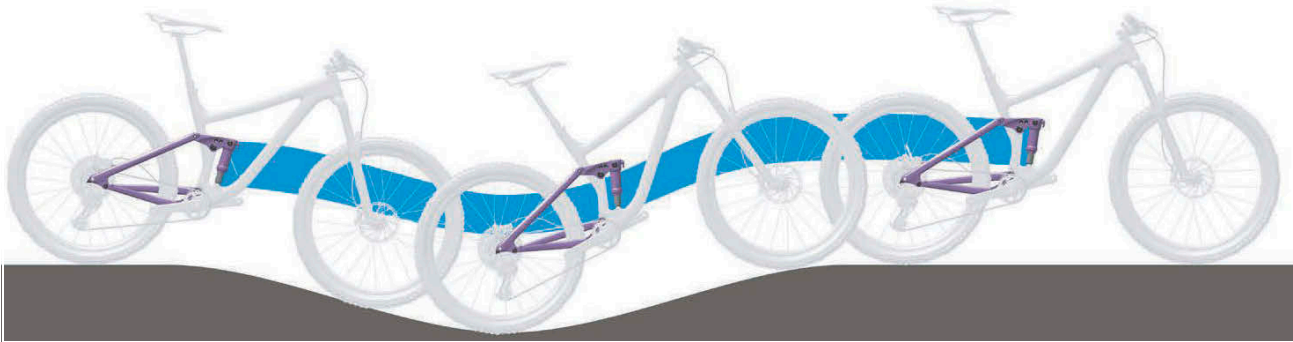


Figure 8: Optimum rear frame damper ride performance on hilly terrain

## ROCKSHOX Monarch RT rear frame damper

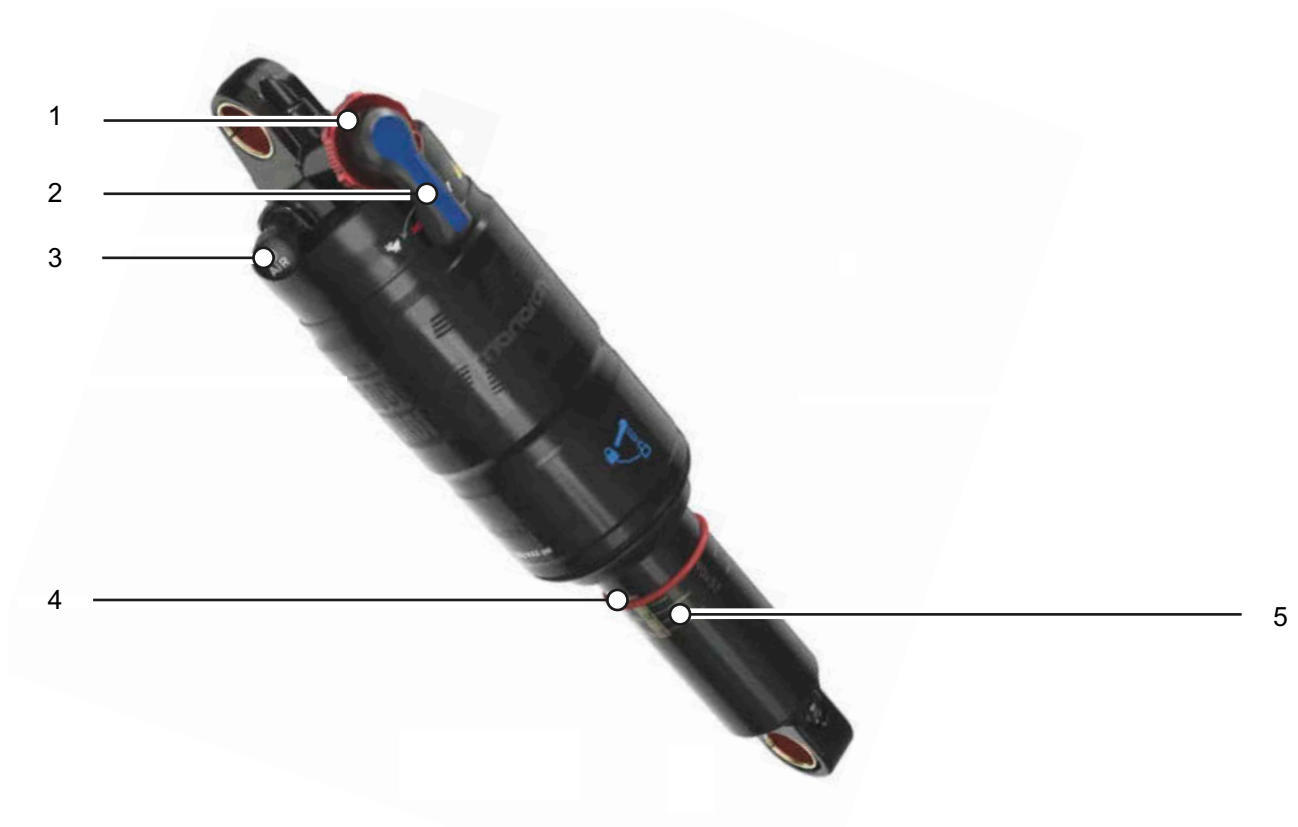


Figure 9: Parts of a ROCKSHOX Deluxe Ultimate

- 1 Rebound adjuster wheel
- 2 Compression adjuster
- 3 Air valve (rear frame damper)
- 4 O-ring
- 5 Scale

## Specifications

Suspension type	with DebonAir™ air suspension Separate, independent pistons for open and platform mode
Settings while riding	<ul style="list-style-type: none"> <li>• The adjuster can be used to operate the open damper, threshold and lockout</li> </ul>
<b>Piston tuning</b>	
Rebound setting	H, L, M
Compression tune	H, L, L1, L3, M
Lockout level	320, 380

Table 25: ROCKSHOX Deluxe Select specifications

## ROCKSHOX Super Deluxe Select+ structure design



Figure 10: ROCKSHOX Super Deluxe Select+ rear frame damper structure design

- 1 Rebound adjuster (rear frame damper)
- 2 Compression lever (rear frame damper)
- 3 IFP chamber
- 4 Air valve (rear frame damper)
- 5 O-ring
- 6 Scale

## Specifications

<b>Suspension type</b>	with DebonAir™ air suspension Separate, independent pistons for open and platform mode
------------------------	--

Table 26: ROCKSHOX Deluxe Select specifications

### 3.5.2.3 Steering system

The steering system components are:

- Steering headset,
- Stem,
- Handlebars and
- Suspension fork.

### 3.5.2.4 Steering headset

The steering headset (also known as a bike headset or simply a headset) is the fork bearing system in the frame. A distinction is made between two different types:

- Conventional steering headsets for fork steerers with thread and
- Steering headsets for threadless fork steerers or what are known as headsets.

### 3.5.2.5 Stem

The stem connects the handlebars to the fork steerer tube. The stem is used to adjust the handlebars to body size. The stem is used to adjust the handlebar height and the gap between the handlebars and saddle (see Section 6.4.6).

### Quickly adjustable stems

Quickly adjustable stems are an extension to the fork steerer. You can change the height and angle of quickly adjustable stems without any tools. Up to 3 settings can be adjusted, depending on the model:

- 1 Adjust handlebar height
- 2 Adjust twist function
- 3 Adjust stem angle.

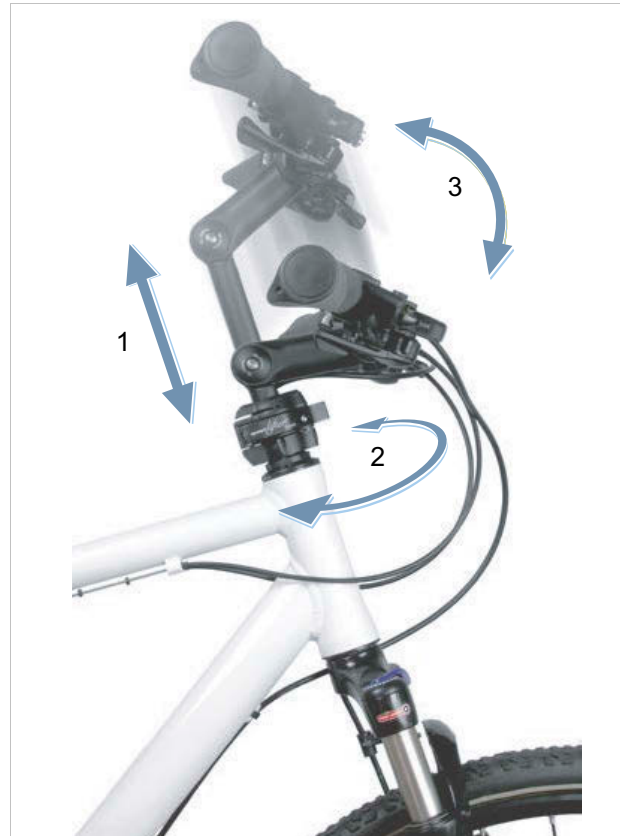


Figure 11: Example – BY.SCHULZ seat Speedlifter Twist Pro SDS

Adjusting the height and stem angle increase riding comfort as different riding positions can be adopted on longer rides. The twist function saves space when parking.



Figure 12: Twist function, using BY.SCHULZ as an example

### 3.5.2.6 Handlebars

The pedelec is steered using the handlebars. The handlebars are used to support the upper body and are used to mount operating and display components (see Section 3.4.1).

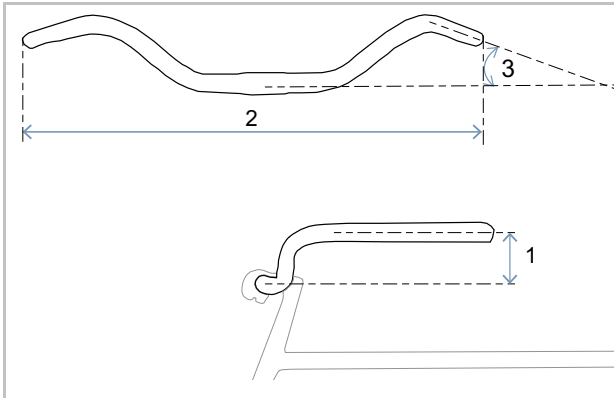


Figure 13: Handlebar dimensions

The main dimensions of handlebars are:

- 1 Rise
- 2 Width
- 3 Backsweep

### 3.5.2.7 Suspension fork

The stem and handlebars are attached to the top end of the fork steerer. The axle is fastened to the fork ends. The wheel is fastened to the axle.

Unlike rigid forks, suspension forks improve contact with the ground and thus enhance comfort using two functions:

- Suspension and
- Damping (optional function).

#### Suspension

A suspension fork deflects when a steel suspension, air suspension or both suspension types act on it.

A pedelec's suspension prevents an impact, such as one caused by a stone lying in the pedelec's path, from being channelled directly into the rider's body via the suspension fork. The impact is absorbed by the suspension system instead. This causes the suspension fork to compress.

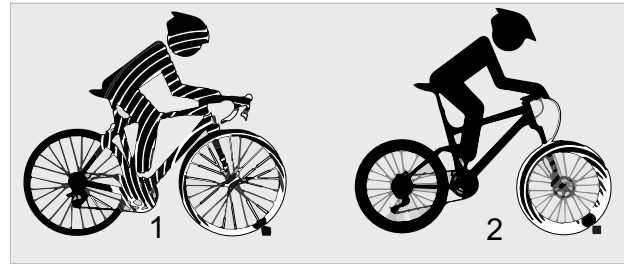


Figure 14: Without suspension (1) and with suspension (2)

#### Damping

After compressing, the suspension fork returns to its original position. If there is a damper, it will decelerate movement, preventing the suspension system from springing back in an uncontrolled manner and stopping the suspension fork vibrating up and down. A distinction is made between two types of dampers:

- Rebound dampers,
- Compression dampers.

Rebound dampers and compression dampers can be optionally divided into two different sections:

- High-speed damper,
- Low-speed damper.

## Parts of a suspension fork

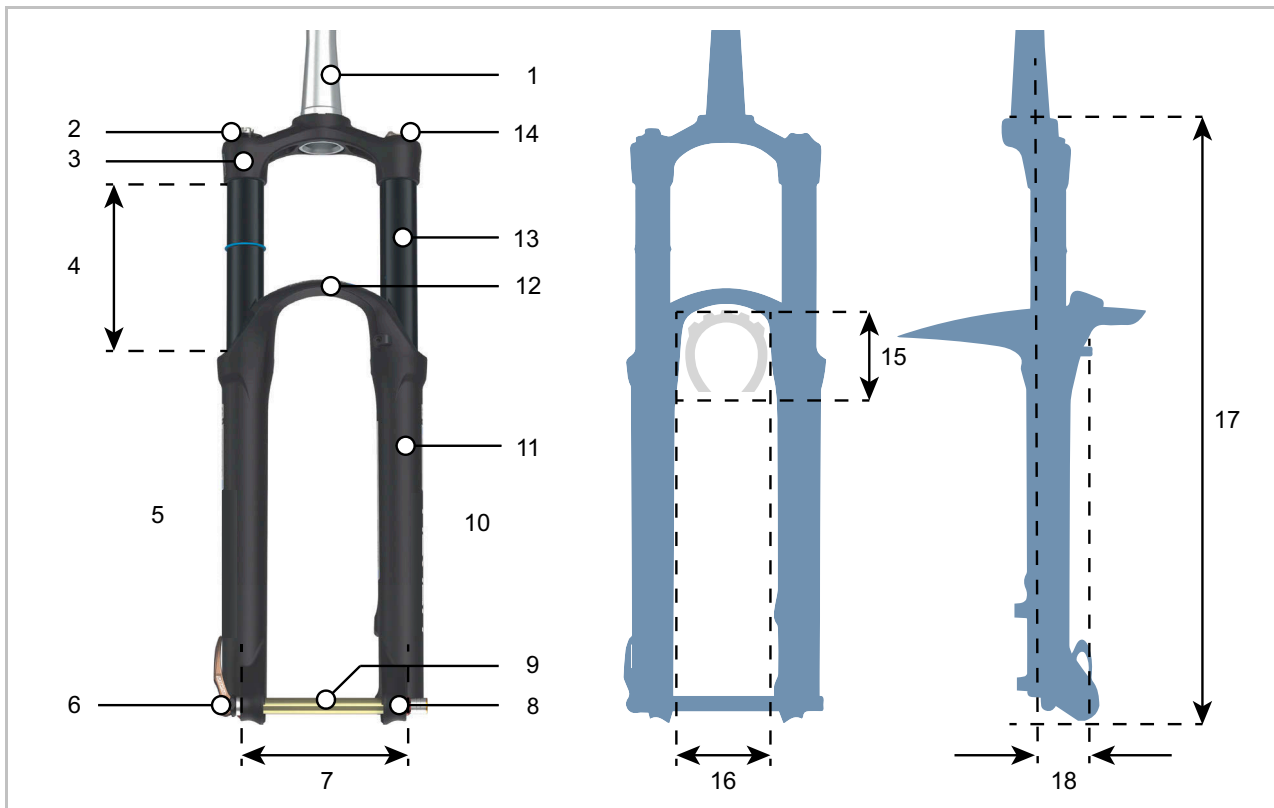


Figure 15: Parts of a suspension fork

- 1 Fork steerer
- 2 Sag adjuster
- 3 Fork crown
- 4 Deflection (suspension fork)
- 5 Damper side
- 6 Quick release
- 7 Pitch
- 8 Fork end (suspension fork)
- 9 Quick release axle
- 10 Air suspension side
- 11 Stanchion
- 12 Fork bridge
- 13 Stanchion
- 14 Lock

**Tyre clearance**

- 15 Tyre height
- 16 Tyre passage width

**Side view**

- 17 Installation height
- 18 Offset

## Suspension fork assembly groups

A suspension fork can feature up to three different assembly groups:

- Compression damper (blue)
- Rebound damper (red)
- Air suspension or steel spring (orange)

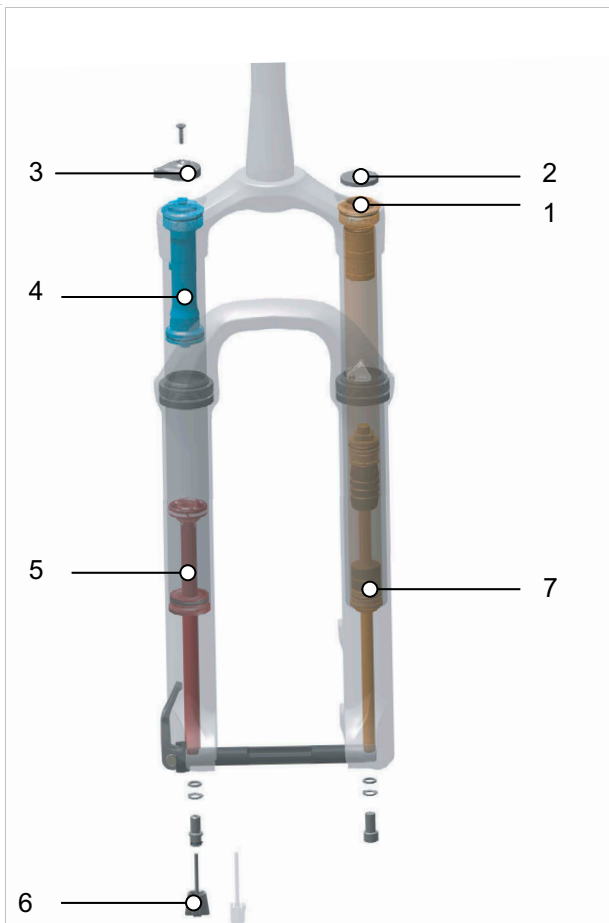


Figure 16: Internal structure of an air suspension fork

- 1 Air valve (fork)
- 2 Air valve cap
- 3 Damping adjuster
- 4 Compression dampers
- 5 Rebound damper
- 6 Rebound adjuster (suspension fork)
- 7 Air suspension

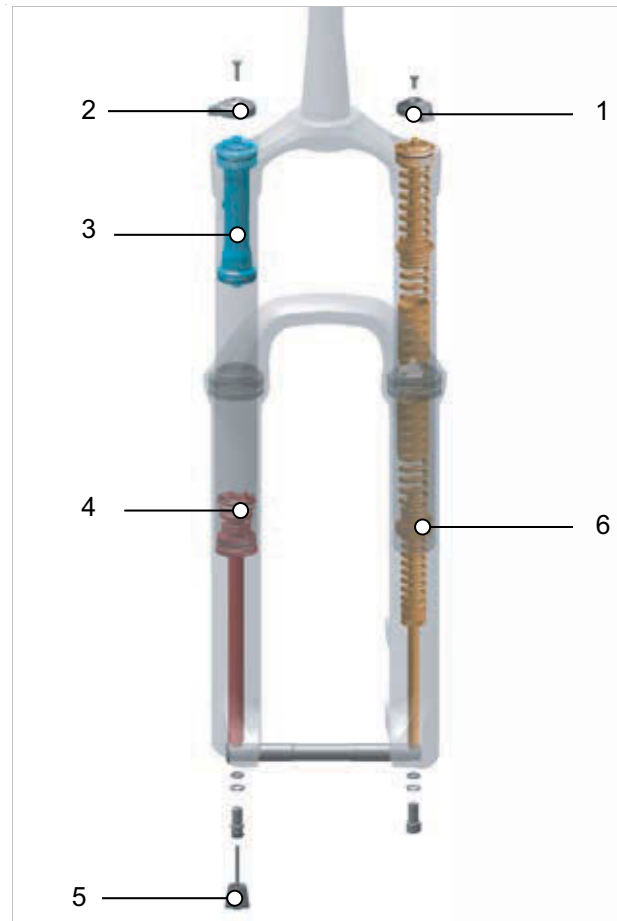


Figure 17: Internal structure of a steel suspension fork

- 1 Sag setting wheel
- 2 Damping adjuster
- 3 Compression dampers
- 4 Rebound damper
- 5 Rebound adjuster (suspension fork)
- 6 Steel spring

## Cartridges

Dampers may be housed in closed structural elements, known as cartridges. These cartridges are fitted into the suspension fork. Different cartridges can be fitted into forks. This has no effect on the suspension fork's total bearing capacity.

## Lock

The compression can be disabled in any suspension fork. A suspension fork will then behave like a rigid fork.

A suspension system is designed to cushion and compensate for unevenness on a surface whether the user is riding on bumpy cycle paths, dirt roads or off road.

A suspension system absorbs great deal of motor and muscle power during rides uphill or on optimally tarmacked roads. This increases energy consumption and reduces propulsion. It thus makes sense to lock the suspension on tarmacked roads and when riding uphill.

Some suspension forks thus feature a lockout on the fork crown or a remote lockout on the handlebars.

## Negative deflection (sag)

The negative deflection (sag) is the percentage of entire deflection that is compressed by the rider's body weight, including equipment (such as a backpack), the seating position and frame geometry. Sag occurs whether you are actually riding or not.

The pedelec rebounds at a controlled speed if it is optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line). The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.

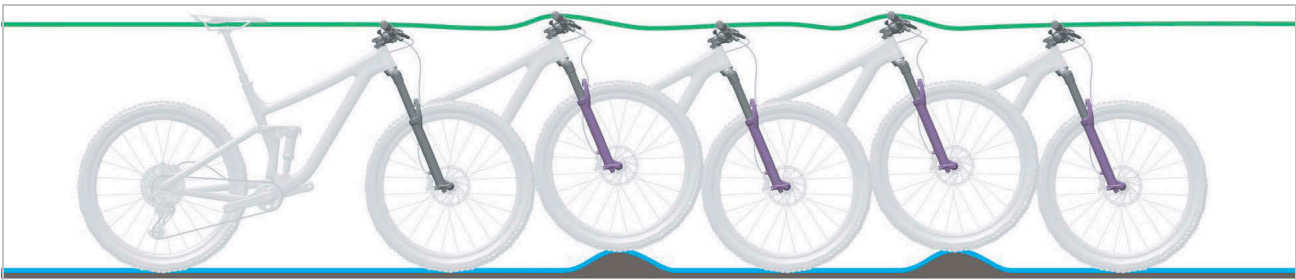


Figure 18: Optimum suspension fork ride performance

When optimally adjusted, the suspension fork counteracts deflection on hilly terrain and remains higher in its deflection range.

This allows the rider to maintain the same speed more easily on hilly terrain.

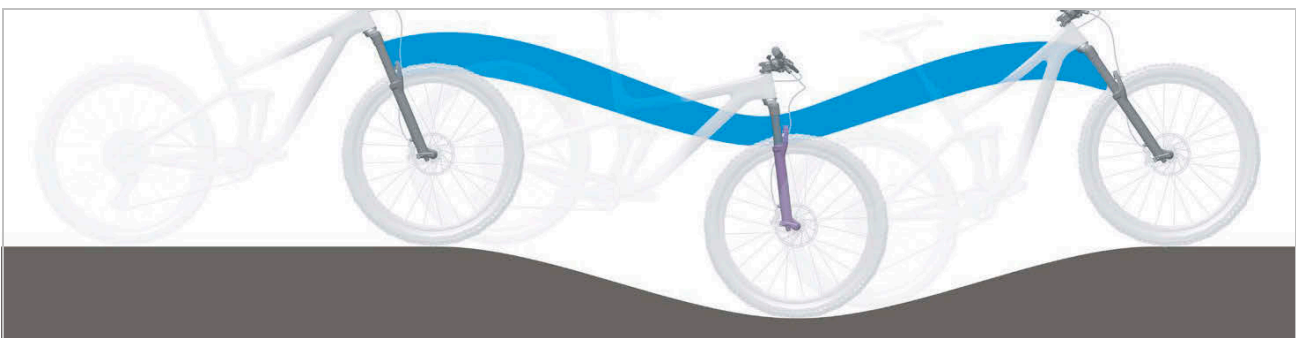


Figure 19: Optimum suspension fork ride performance on hilly terrain



The suspension fork also deflects quickly and unhindered when hitting bumps and cushions the bump when placed at an optimum setting. Traction is retained (blue line).

The suspension fork responds instantly to the impact. The headset and handlebars rise slightly when absorbing a bump (green line).



Figure 20: Optimum suspension fork ride performance over bumps

### Rebound dampers

Rebound dampers damp rebound movements, i.e. rebound stress loads.

Rebound damping determines the speed at which the suspension rebounds after being exposed to load. Rebound damping controls the suspension fork extension and rebound speed, which, in turn, has an impact on traction and control.

The damper rebounds at a controlled speed if the suspension fork is optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line). The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.



Figure 21: Optimum suspension fork ride performance

### Compression dampers

Compression dampers damp deflection movements, i.e. compression loads.

The compression damper controls the compression stroke speed or the extent to which the suspension fork deflects during slow impacts.

When optimally adjusted, the suspension fork counteracts deflection on hilly terrain, stays higher in its deflection range and helps to maintain speed when riding on hilly terrain.

The suspension fork deflects instantly unhindered and absorbs bumps when the bike hits one. Traction is retained (blue line).

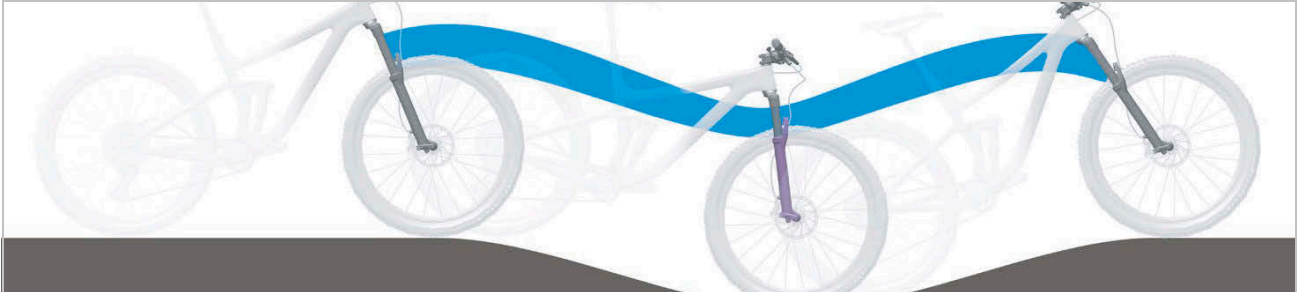


Figure 22: Optimum ride performance on hilly terrain

### High-speed damper

The high-speed damper (also abbreviated to HSC from *high-speed compression*) is a specialised compression damper.

A high speed is generated in the suspension fork

on a mogul slope or on landing after a jump.

The high-speed damper controls the suspension fork's behaviour positively in such riding situations.

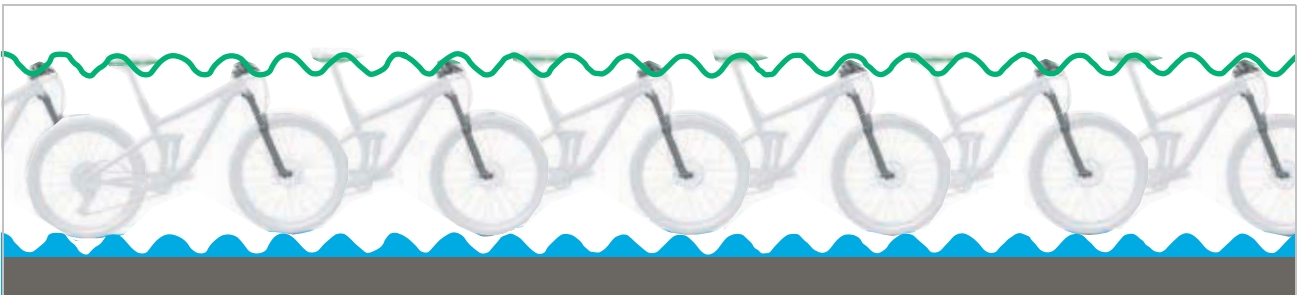


Figure 23: High-speed movements

### Low-speed damper

The low-speed damper (also abbreviated to LSC from *low-speed compression*) is a specialised compression damper.

A slow compression speed is generated in the suspension fork when riding over bumps. The low-speed damper controls the suspension fork's behaviour positively in such riding situations.

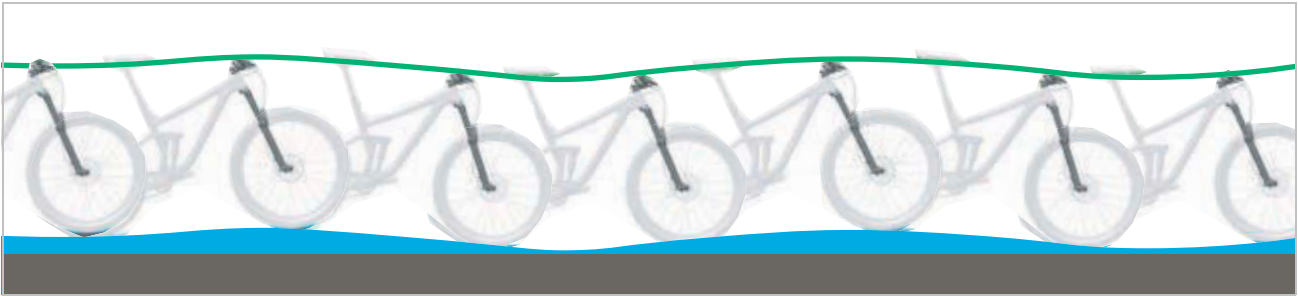


Figure 24: Low-speed movements

## SR SUNTOUR cartridge function chart

	Lockout Remote control	Lockout Fork head	Compression damping setting			Rebound damping setting			Blow-off feature	PCS
			High-speed	Low-speed	Fixed	High-speed	Low-speed	Fixed		
R2C2-PCS			X	X		X	X		X	X
RC2-PCS			X	X			X		X	X
RC-PCS				X			X		X	X
RLRC-PCS	X			X			X		X	X
LORC-PCS		X		X			X		X	X
R2C2			X	X		X	X		X	
RC2			X	X			X		X	
RC				X			X		X	
RLRC	X			X			X		X	
LORC		X		X			X		X	
RLR	X				X		X		X	
LOR		X			X		X		X	
RL	X				X			X	X	
LO		X			X			X	X	
NLO		X						X		
HLO		X								

## 3.5.2.8 SR SUNTOUR 2CR-PCS



Figure 25: Operating elements for the 2CR-PCS

The Suntour 3CR-PCS cartridge features a PCS damper platform with

- a low-speed compression damper
- a rebound damper

Floating pistons within the PCS cartridge provide consistent damping on all driving surfaces through minimal cavitation (formation and dissolution of bubbles by mixing air and oil).

Before riding, the rebound adjuster (1) is used to adjust the system to the surface concerned.

While riding, the user can select two settings on the compression adjuster (2) to adapt the suspension system to the current ground surface:

- FIRM
- OPEN

If the pressure in the fork is too high, the blow-off feature releases air by opening a valve. This prevents any damage due to overpressure.

		Function available
	Lockout remote control	...
	Fork head lockout	...
Compression damping	High-speed	x
	Low-speed	x
	Fixed	...
Rebound damping	High-speed	...
	Low-speed	x
	Fixed	...
	Blow-off feature	x
	PCS	x

Table 27: An overview of SR SUNTOUR 2CR-PCS functions

## 3.5.2.9 SR SUNTOUR LOR cartridge LOR

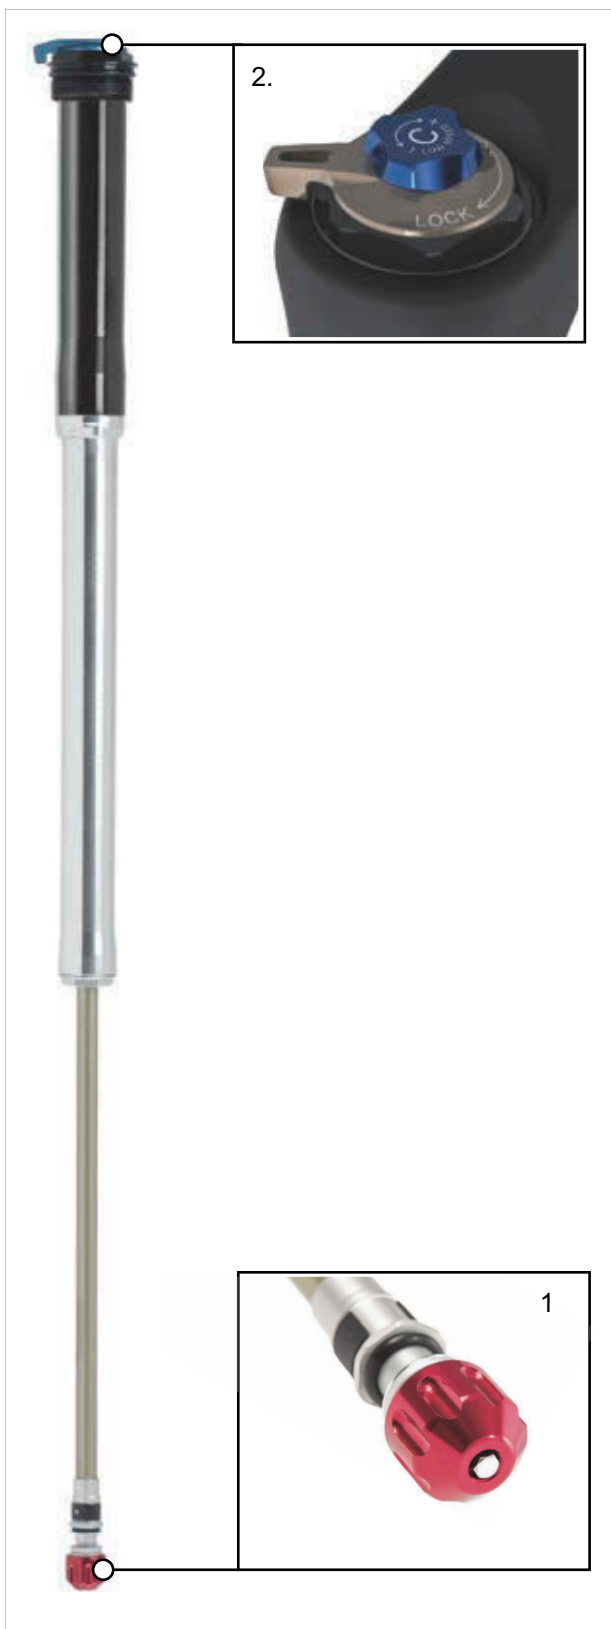


Figure 26: LOR operating elements

The SR Suntour LOR cartridge features

- a low-speed compression damper
- a low-speed rebound damper

Before riding, use the **rebound adjuster (suspension fork)** (1) to adjust the system to the surface you will ride on.

The suspension system can be adjusted to the current surface during rides using the low-speed compression adjustment wheel (2). The **compression adjuster** can also be used to open and close the damping.

If the pressure in the suspension fork is too high, the blow-off feature releases air by opening a valve. This prevents any damage due to overpressure.

		Function available
	Lockout remote control	...
	Fork head lockout	x
Compression damping	High-speed	...
	Low-speed	x
	Fixed	...
Rebound damping	High-speed	...
	Low-speed	x
	Fixed	...
	Blow-off feature	x
	PCS	...

Table 28: An overview of SR SUNTOUR LOR functions

## 3.5.2.10 SR SUNTOUR cartridge LO

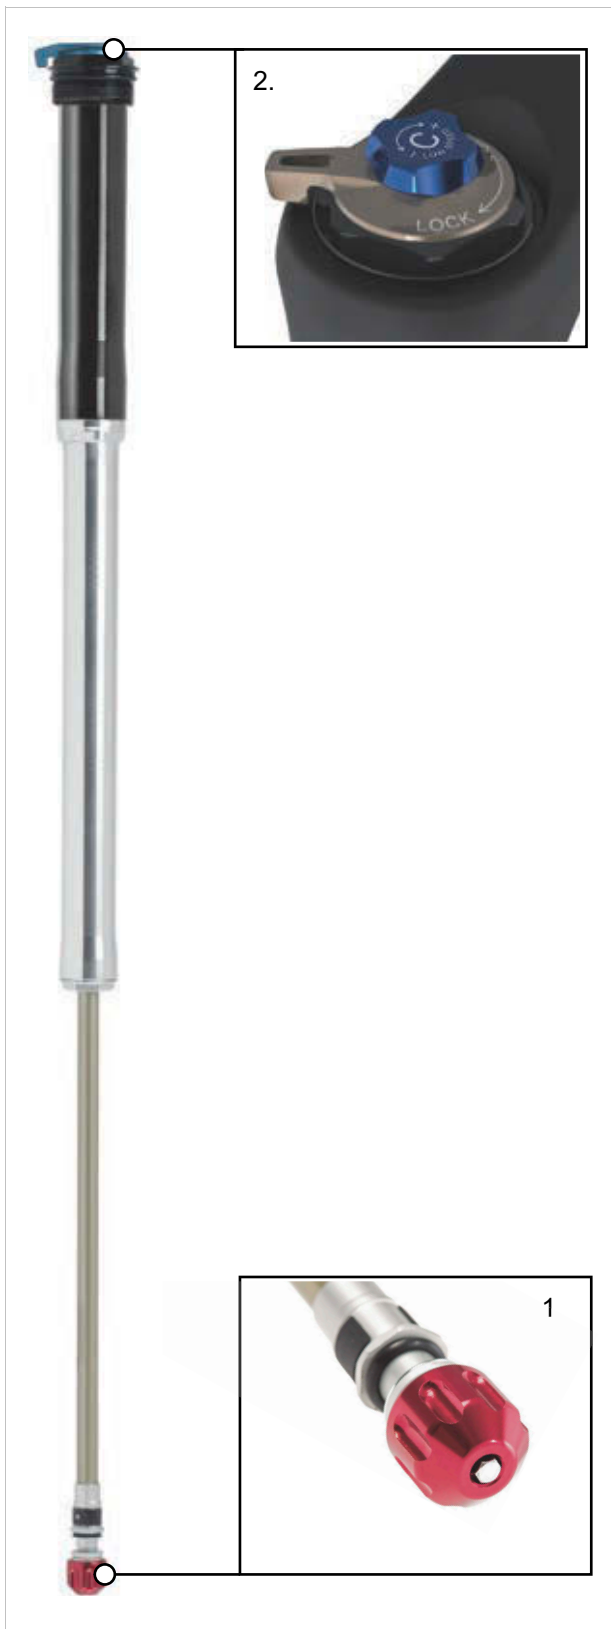


Figure 27: LO operating elements

The SR Suntour LO cartridge features

- a compression damper
- a rebound damper

Before riding, use the **rebound adjuster** (fork) (1) to adjust the system to the surface you will ride on.

You can use the **compression adjuster** (2) remote control to open and close the damping.

If the pressure in the fork is too high, the blow-off feature releases air by opening a valve. This prevents any damage due to overpressure.

		Function available
	Lockout remote control	...
	Fork head lockout	x
Compression damping	High-speed	...
	Low-speed	...
	Fixed	x
Rebound damping	High-speed	...
	Low-speed	...
	Fixed	x
	Blow-off feature	x
	PCS	...

Table 29: An overview of SR SUNTOUR LO functions

## Design of SR SUNTOUR HLO cartridge



Figure 28: HLO operating elements

The SR Suntour HLO cartridge features

- a compression damper
- a rebound damper

Before riding, use the **rebound adjuster (fork)** (1) to adjust the system to the surface you will ride on.

You can use the **compression adjuster** (2.2) remote control to open and close the damping.

If the pressure in the fork is too high, the blow-off feature releases air by opening a valve. This prevents any damage due to overpressure.

		Function available
	Lockout remote control	...
	Fork head lockout	x
Compression damping	High-speed	...
	Low-speed	...
	Fixed	...
Rebound damping	High-speed	...
	Low-speed	...
	Fixed	...
	Blow-off feature	...
	PCS	...

Table 30: An overview of SR SUNTOUR HLO functions



### 3.5.3 Wheel

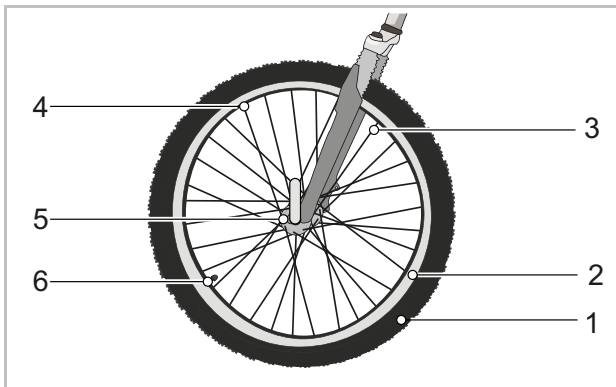


Figure 29: Visible wheel components

1	Tyres
2	Rim
3	Spoke
4	Spoke nipples
5	Hub
6	Valve

The wheel comprises a tyre, an inner tube with a valve and the wheel itself.

#### 3.5.3.1 Tyres

The tyre forms the outer section of the wheel. The tyre is pulled onto the rim. Tyres differ in design, profile and width, depending on their intended use.



Figure 30: Example: Information on tyres

#### Tyre size

The tyre size pressure range is indicated on the side of the tyre.

#### Tyre pressure

The permitted pressure range is indicated on the side of the tyre. It is indicated in psi or bars. The tyre is only able to support the pedelec if there is adequate tyre pressure. The tyre pressure must be adjusted to the body weight and then checked on a regular basis.

#### Tyre design types

There are five different tyre design types:

- Tube-type tyres
- Tubeless tyres (also tubeless ready)
- Tubular or single tube tyres
- Solid tyres
- Mixed types.

#### 3.5.3.2 Tube-type tyre

A distinction is made between different kinds of tube-type tyre:

- Clinchers with steel wire reinforcement in bead core
- Folding tyres with aramid fibre reinforcement in bead core
- Beaded edge tyres without reinforcement in the bead core but with pronounced beads that hook under the rim edge and overlap in the rim well



Figure 31: Structure of tube-type tyre

1	Rim
2	Tread with profile
3	Puncture protection belt (optional)
4	Carcass
5	Bead core

## Carcass

The carcass is the tyre's supporting structure. There are usually three carcass plies beneath the tread. The carcass comprises a webbing with threads, usually made of polyamide (nylon). The webbing is coated with rubber on both sides and cut at an angle of 45°. The carcass gives the tyre stability thanks to this cut at an angle to the direction of travel. The carcass plies are woven with different densities, depending on the quality of the tyres. The density of the carcass fabric is indicated by the number of threads per inch, in EPI (*ends per inch*) or TPI (*threads per inch*). There are tyres with between 20 and 127 EPI carcasses.

If the EPI value is higher, the diameter of the threads used is lower. Carcass plies with a higher EPI value have threads with a smaller diameter. The higher the EPI value:

- the less rubber is needed to encase the threads,
- the lighter the tyres are
- the more flexible the tyres are and they consequently have less rolling resistance.
- The webbing is denser so that it is more difficult for foreign bodies to penetrate. This increases puncture resistance.

In carcasses with 127 EPI, each individual thread is just 0.2 mm thick and, consequently, more susceptible to damage. This means that a 127 EPI tyre offers low puncture protection. 67 EPI offers the optimum compromise between weight and robustness.

Besides the webbing, the tyre's rubber compound is also important. The rubber compound comprises numerous parts:

40 ... 60%	Natural and synthetic rubber
15 ... 30%	Fillers, e.g. carbon black, silicic acid or silica gel
20 ... 35%	<ul style="list-style-type: none"> <li>• Anti-ageing agent</li> <li>• Vulcanisation agent, e.g. sulphur</li> <li>• Vulcanisation accelerator, e.g. zinc oxide</li> <li>• Pigments and dyes</li> </ul>

**Table 31: Rubber compound in carcasses**

## Tread with profile

A rubber tread is attached to the exterior of the carcass.

The tread has little influence on riding characteristics on a smooth road. The grip between the road and tyre is mainly provided by the rolling friction between the rubber and the road surface.

## Slicks and road tyres

Unlike cars, a pedelec will not aquaplane. The tread contact is small and the contact pressure high. Thanks to the small contact surface on narrow and treadless tyres, the tyre interlocks with the road surface finish. Theoretically, the tyre will not aquaplane until speeds of 200 km/h are reached.

On a clean road, whether dry or wet, slick tyres will grip more effectively than treaded tyres because the contact surface is larger. The rolling resistance of slick tyres is also lower.

## Off-road tyres

The tread is highly important on terrain. In this case, the tread creates an interlock with the ground, thus enabling the driving, braking and steering forces to be transmitted. The MTB tread can also help improve control on dirty roads or farm tracks.

Tread blocks on MTB tyres deform as they meet the contact surface. The energy used for this is partly converted into heat. Another part is stored and converted into the tread block's sliding movement when it leaves the contact surface, which contributes to the tyre's wear.

If a tyre with a deep tread is used on asphalt, this may make an unpleasant noise. If a pedelec with an MTB tyre is mainly ridden on the road, it is thus best to change the tyre for a pair of tyres with as little tread as possible to reduce wear and save energy. In such a case, the specialist dealer needs to replace the tyre with a new one with a shallow tread.

## Bead core

Tyre carcasses are wrapped around bead cores. Wrapping the carcass around both sides creates three carcass plies.

To ensure that tyres do not slip when inflated on the rim and have an effective grip, the bead cores are stabilised in two different ways:



Figure 32: Steel bead core (1) and Kevlar bead core (2)

- with a steel wire. These tyres are called clinchers.
- with aramid fibres (Kevlar®). These tyres are called folding tyres. Folding tyres are about 50-90 g lighter than clinchers. It can also be folded into a smaller pack size.

## Puncture protection belt (optional)

There may be a puncture protection belt between the carcass and the tread.



Figure 33: Effect of puncture protection belt

Each tyre manufacturer has its own puncture protection classes which are not on par with one another.

## 3.5.3.3 Rim

The rim is the metal profile on a wheel which holds the tyre, tube and rim band together. The rim is joined to the hub with spokes.

In rim brakes, the outer surface of the rim is used to brake.

## 3.5.3.4 Valve

Each tube-type tyre has a valve. Air is pumped into the tyre via the valve. There is a valve cap on each valve.

The screw-on valve cap keeps out dust and dirt.

The pedelec has either a:

- Dunlop valve
- Presta valve
- Schrader valve

## Dunlop valve

The Dunlop valve, also known as a conventional valve, is the most widely used valve. The valve insert can be replaced easily and air can be let out very quickly.

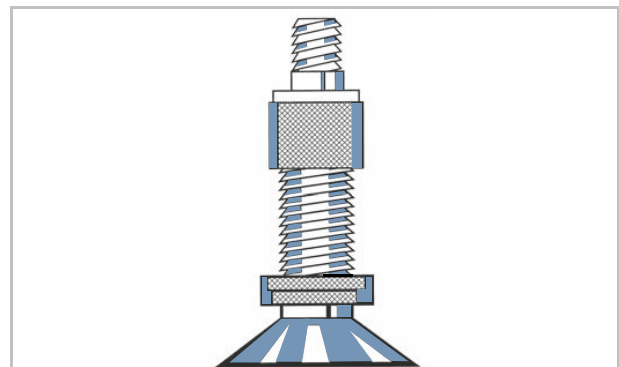


Figure 34: Dunlop valve

### Presta valve

The Presta valve, also known as the Sclaverand valve or the French valve, is the narrowest variant of all valves. The Presta valve requires a smaller hole in the rim, which is why it is especially suitable for the narrow rims on racing bikes. It is about 4 to 5 g lighter than a Dunlop or Schrader valve.

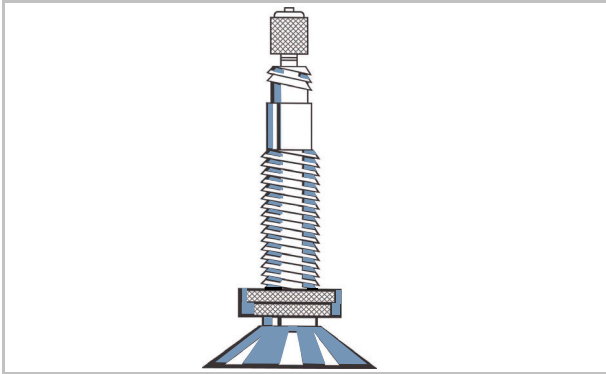


Figure 35: Presta valve

### Schrader valve

The Schrader valve can be pumped at filling stations. Older, simple bicycle air pumps are unsuitable for Schrader valves.

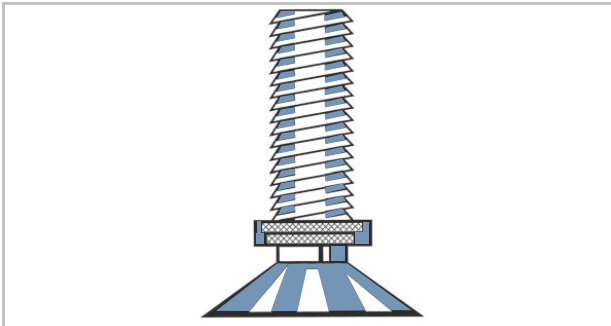


Figure 36: Schrader valve

### 3.5.3.5 Spoke

A spoke is a rod that connects the hub to the rim. The bent end of the spoke which is hooked into the hub is called the spoke head. A thread between 10 mm and 15 mm is attached to the other end of the spoke.

### 3.5.3.6 Spoke nipples

Spoke nipples are screw elements with an internal thread which fits onto the spoke thread. Fitted spokes are tensioned by tightening the spoke nipples. This straightens the wheel uniformly.

### 3.5.3.7 Hub

The hub is located in the centre of the wheel. The hub is connected to the rim and tyre with the spokes. An axle runs through the hub, connecting the hub with the fork at the front and with the frame at the rear.

The hub's main task is to transfer the pedelec's force of weight to the tyres. Special hubs on the rear wheel perform additional functions. There is a distinction between five types of hub:

- Hubs without additional features
- Brake hub (see back-pedal brake)
- Gear hub, also known as a hub gear
- Generator hub (for bicycles only)
- Motor hubs (for front- and rear-driven pedelecs only).

#### Hub without additional features

The front wheel hubs on pedelecs with central or rear motors are normally hubs without additional features.

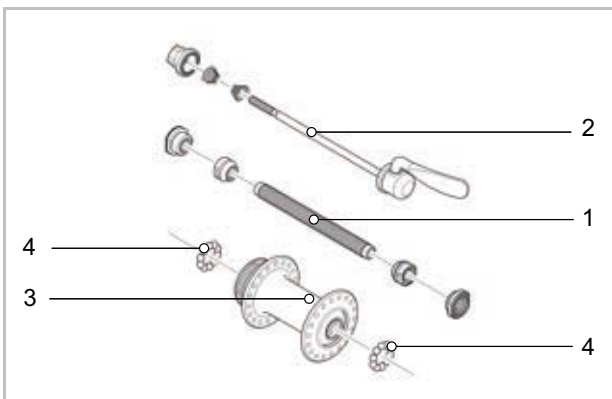


Figure 37: Example of front wheel hub: SHIMANO

- |   |               |
|---|---------------|
| 1 | Hub axle      |
| 2 | Quick release |
| 3 | Hub body      |
| 4 | Ball bearings |

### 3.5.4 Brake

A pedelec's brake system is primarily operated using the brake lever on the handlebars.

- If the left brake lever is pulled, the brake on the front wheel is applied.
- If the right brake lever is pulled, the brake on the rear wheel is applied.

The brakes are used to regulate speed and make an emergency stop. Applying the brakes will bring the pedelec to a safe, rapid halt in an emergency.

The brake is applied using the brake lever either

- with the brake lever and brake cable (mechanical brake) or
- with the brake lever and hydraulic brake cable (hydraulic brake).

#### 3.5.4.1 Mechanical brake

The brake lever is connected to the brake via a wire inside the shift cable (also known as a Bowden cable).



Figure 38: Bowden cable structure

#### 3.5.4.2 Hydraulic brake

The brake fluid is in a closed hose system. If the brake lever is pulled, the brake fluid transfers pressure to the brake on the wheel.

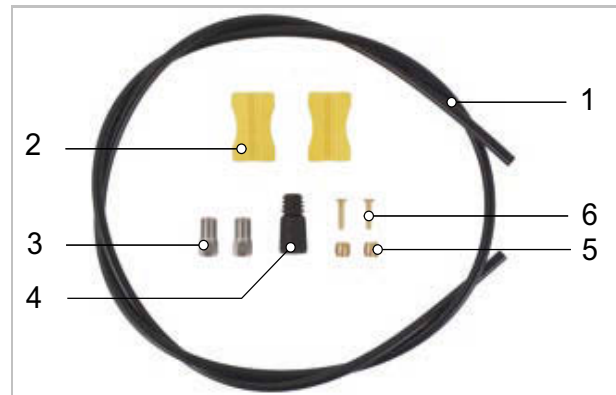


Figure 39: Components in a brake cable

- |   |             |
|---|-------------|
| 1 | Brake cable |
| 2 | Cable clip  |
| 3 | Union nut   |
| 4 | Cover cap   |
| 5 | Knob        |
| 6 | Insert pin  |

### 3.5.4.3 Disc brake

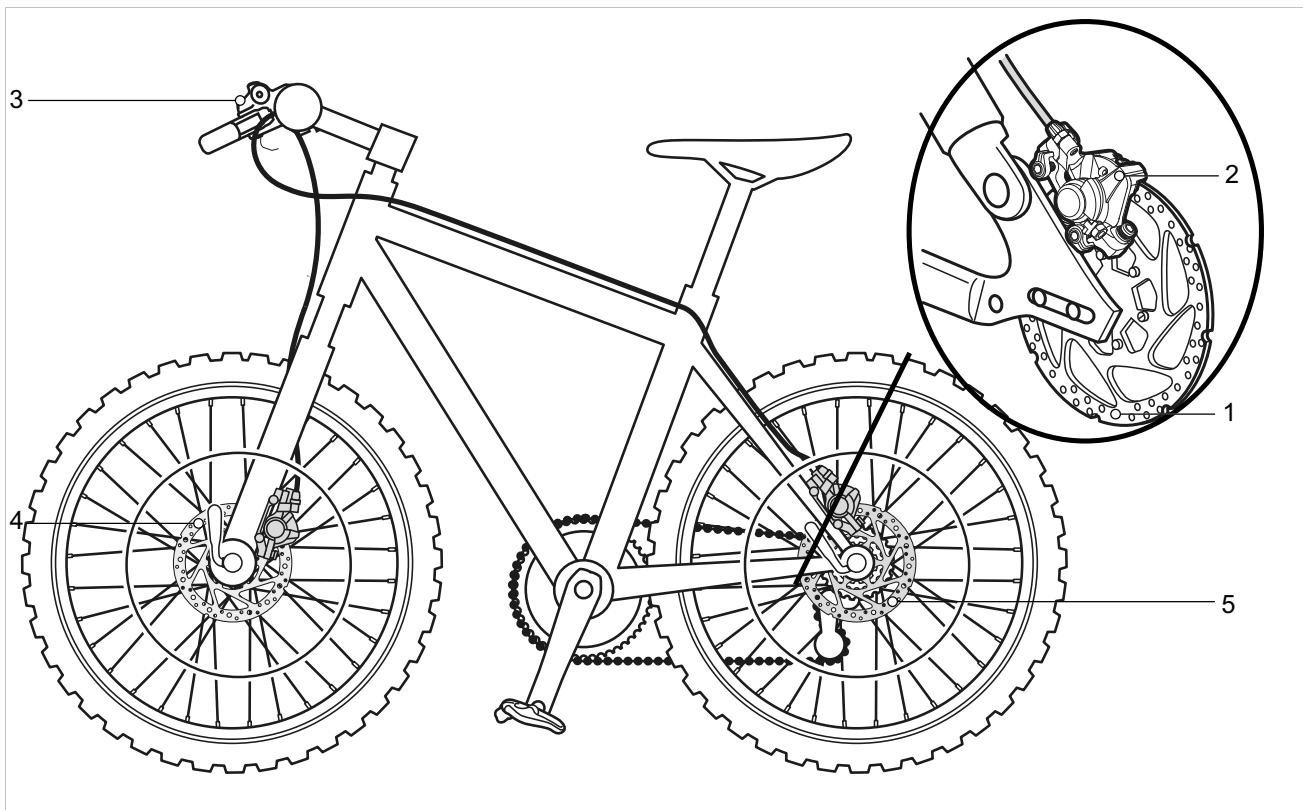


Figure 40: Brake system with disc brake – example

- 1 Brake disc
- 2 Brake calliper with brake linings
- 3 Handlebars with brake lever
- 4 Front wheel Brake disc
- 5 Rear wheel brake disc

On a pedelec with a disc brake, the brake disc is permanently screwed to the hub.

You increase brake pressure by pulling the brake lever. The brake fluid is used to transfer pressure through the brake cables to the cylinders in the brake calliper.

The braking force is boosted by a speed reduction and applied to the brake linings. These apply the brake disc mechanically. If the brake lever is pushed, the brake linings are pressed against the brake disc and the wheel movement is decelerated until it comes to a stop.

### 3.5.4.4 Back-pedal brake



Figure 41: Brake system with a back-pedal brake – example

- 1 Rear wheel rim brake
- 2 Handlebars with brake lever
- 3 Front wheel rim brake
- 4 Pedal
- 5 Backpedal brake

The back-pedal brake is an extra brake. The back-pedal brake stops the rear wheel from moving by pushing the pedals in the opposite direction to the direction of travel.



## 3.5.4.5 Rim brake

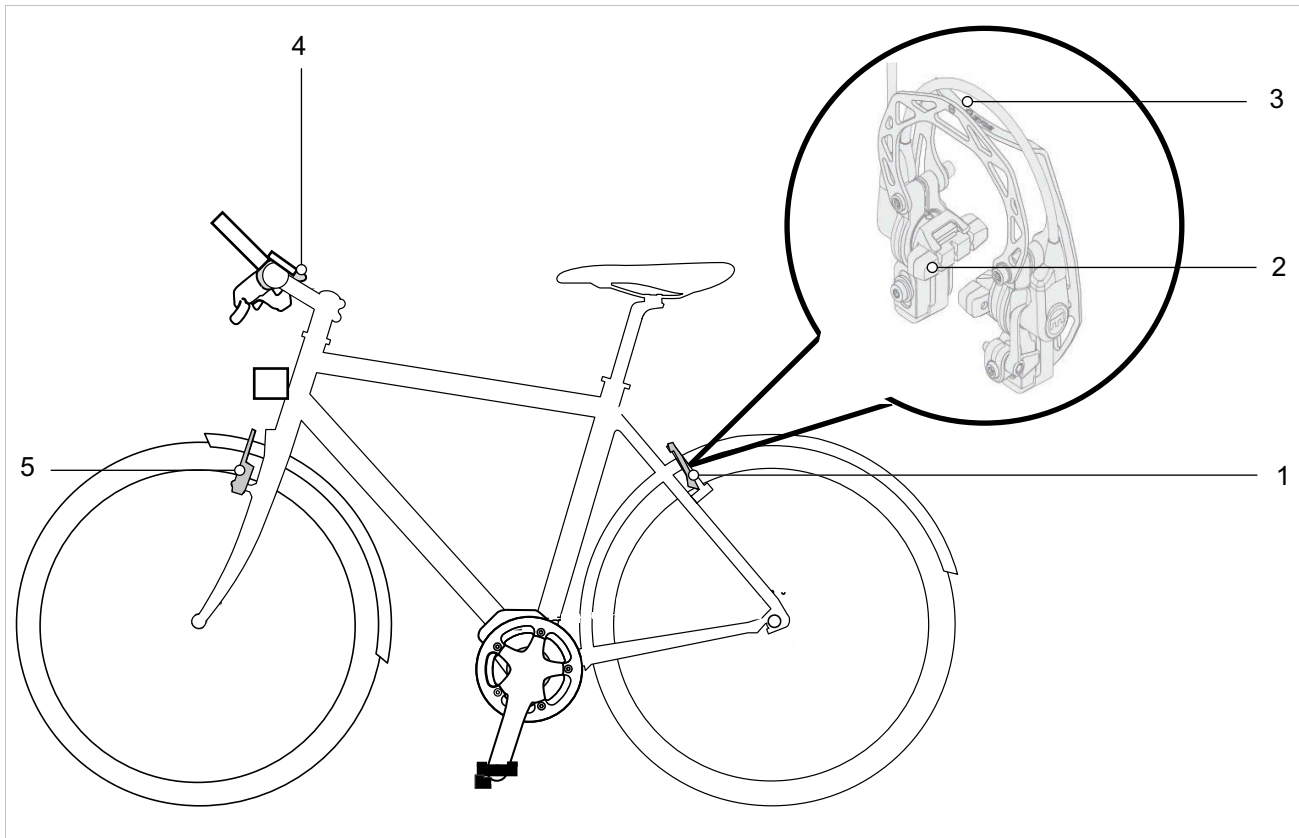


Figure 42: Brake system with rim brake in detail – MAGURA HS22 used as an example

- 1 Rear wheel rim brake
- 2 Brake lining
- 3 Brake booster
- 4 Handlebars with brake lever
- 5 Front wheel rim brake

The rim brake stops the wheel moving when the rider pulls the brake lever, causing two brake linings, positioned opposite one another, to press onto the rims. The hydraulic rim brake features a locking lever. The rim brake locking lever is not marked with any lettering. Only specialist dealers may set the rim brake locking lever.

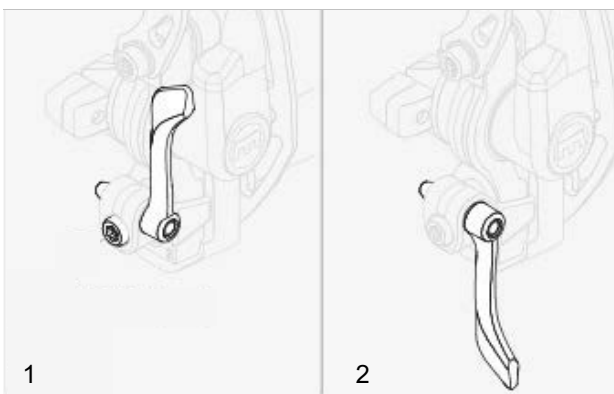


Figure 43: Rim brake locking lever closed (1) and open (2)

### 3.5.4.6 BOSCH ABS

The BOSCH anti-blocking system (ABS) is an optional accessory for the Magura hydraulic disc brake. It is safer to brake with the two brakes at the same time thanks to the BOSCH ABS. Sensors on the wheels measure the wheel speed and regulate the brake pressure. A distinction is made between the front wheel and rear wheel ABS in this respect.

#### Front wheel ABS

The ABS can prevent the front wheel from locking, thus helping to prevent skidding.

Wheel speed sensors monitor the speed of the wheels. If the front wheel is on the verge of locking when brakes are applied too hard, the Bosch ABS regulates the brake pressure and improves the pedelec's driving stability and steerability. This is particularly noticeable on slippery surfaces. The balanced, sensitively regulated braking behaviour provides greater control and stability.



Video 10: How ABS works on the front wheel

#### Rear wheel ABS



Video 11: How ABS works on the rear wheel

If the brake is applied extremely hard to the front wheel, the intelligent rear wheel lift-off control of the Bosch ABS reduces the risk of your rear wheel lifting off the ground unintentionally. It is less likely that the rider will be thrown over the handlebars. The front wheel brake can be used more actively and efficiently.

#### Accessing braking statistics

Information about braking performance is displayed on the display screen. The braking distance and time are recorded when the front brake is applied. This way, it is possible to understand what influence a surface has on the braking distance. Comparison and analysis can improve braking behaviour.



Figure 44: BOSCH ABS components

- 1 Wheel speed sensor
- 2 ABS indicator lamp
- 3 Hydraulic disc brake
- 4 Bosch ABS control unit
- 5 Wheel speed sensor

#### 1, 5 Wheel speed sensor

Wheel speed sensors on the front and rear wheels continuously check the speed of the wheels during the ride.

#### 2 ABS indicator lamp

The ABS indicator lamp signals whether there is an ABS error or the ABS is functioning correctly.

#### 3 Hydraulic brake

Magura hydraulic disc brake with brake handle and sensor discs on the front and rear wheels.

#### 4 Bosch ABS control unit

The ABS control unit makes the calculations and operates the ABS system.

### 3.5.5 Saddle

The purpose of the saddle is to absorb body weight, provide support and enable different riding positions. The shape of the saddle thus depends on the intended use of the pedelec and the rider's physique and posture.

When riding, the rider's body weight is distributed between the pedals, the saddle and the handlebars. When the rider is in an upright position, the relatively small saddle area bears about 75% of their body weight.

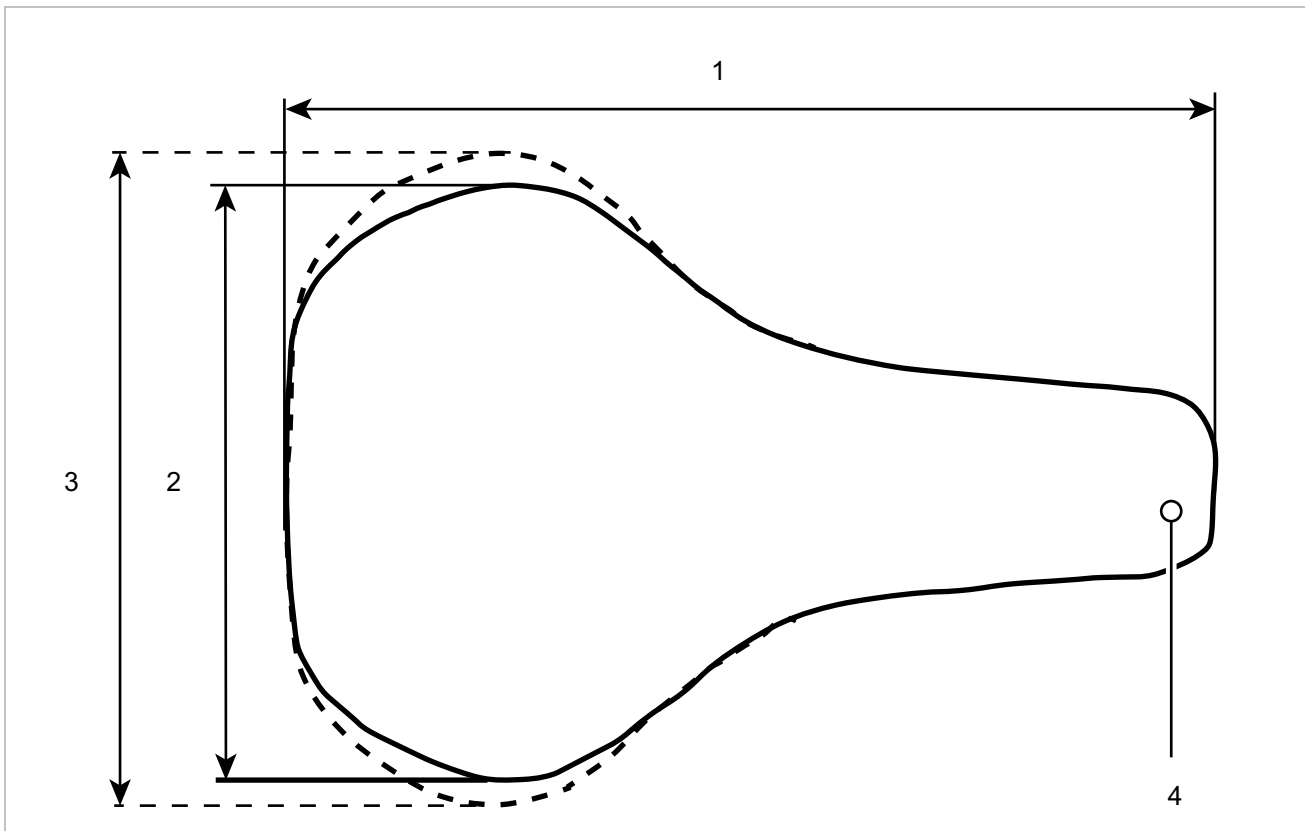


Figure 45: Saddle dimensions

- 1 Saddle length
- 2 Saddle width (narrow version)
- 3 Saddle width (wide version)
- 4 Saddle nose

The seat area is one of the most sensitive regions of the body. The saddle should allow the rider sit free of pain and fatigue. The saddle shape must suit each individual's anatomy. Solutions for sitting discomfort are listed in Section 9.1.

Saddles are provided in different sizes. The width of the pelvis and the gap between the sitting bones is crucial when selecting a saddle. Different saddle variants thus differ in their width.

You will find two methods to calculate the minimum saddle width in Sections 6.4.4.3 and .

### 3.5.5.1 Ladies' saddle

The distance between the ischial tuberosities and the pubic symphysis is on average a quarter less in women than in men. This is why painful pressure points can occur on men's saddles through the saddle nose since saddles that are too narrow or too soft press on the genitals or coccyx.

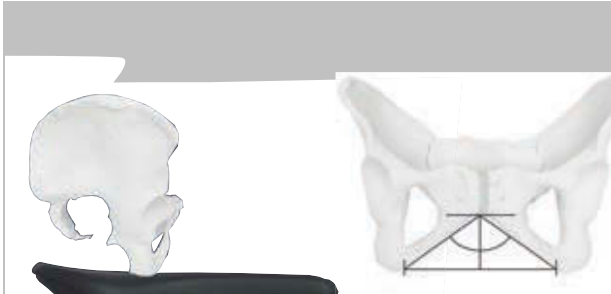


Figure 46: Female pelvis on saddles

For anatomical reasons, the pubic symphysis (front cartilage connection between the two halves of the pelvis) is, on average, a quarter lower than in the male pelvis. The angle between the pubic bones is wider.

The pelvis is more mobile in women than it is in men. Consequently, the pelvis often tilts forward more on the saddle. This causes high pressure in the genital area.

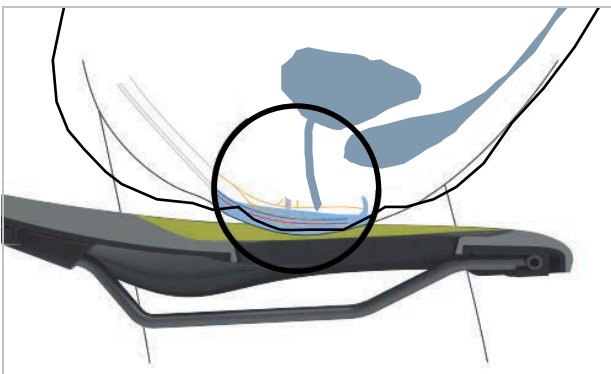


Figure 47: Pressure points on a saddle, female anatomy

### 3.5.5.2 Men's saddle

In contrast to the female anatomy, men's pubic bones are at a much steeper angle to one another. The pubic symphysis is much higher.



Figure 48: Male pelvis on saddles

The male pelvis is less flexible than women's. Men sit more upright on the saddle and put greater strain on the sitting bones. This means that the transition area between the saddle rear and nose can be kept narrow (Y-shape). This gives more space to pedal.

Numbness when pedalling is often caused by high pressure in the sensitive perineal area. If the saddle is adjusted incorrectly, too narrow or too hard, the nose of the saddle presses directly onto the genitals. Blood circulation deteriorates. The genitals on the outside are seldom the cause of discomfort since they can move out of the way and are not compressed by bone structures.

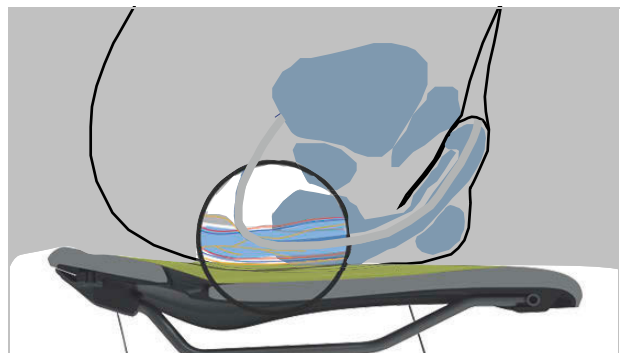


Figure 49: Pressure points on a saddle, male anatomy

### 3.5.6 Seat post

Seat posts are not designed to fasten the saddle but also to adjust exactly to the optimum sitting position. The seat post can:

- adjust the seat height in the seat tube
- adjust the saddle horizontally with a clamping mechanism and
- adjust the saddle angle by swivelling the entire saddle clamping mechanism.

Retractable seat posts feature a remote control on the handlebars, which can be used to lower the seat post at traffic lights, for example, and then raise it again.

#### 3.5.6.1 Patent seat post



Figure 50: Example of ergotec patent seat post with either one or two seat clamp screws

Patent seat posts have a rigid link between the saddle and the post. Patent seat posts which are angled more markedly towards the rear are offset seat posts. Offset seat posts provide a greater distance between the saddle and the handlebars.

In patent saddle posts, the saddle is attached to the head with one or two seat clamp screws. It is recommended to lubricate the thread in these screws to ensure sufficient tension when tightening the screw.

Patent saddle posts are fastened into the seat tube with either a quick release or a screwable clamp.

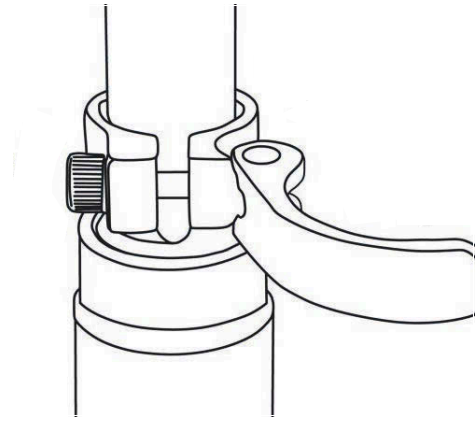


Figure 51: Example of a quick release

#### 3.5.6.2 Suspension seat post

Suspension seat posts can reduce shock after one-time hard impacts, thus improving ride comfort significantly. However, suspension seat posts are not able to compensate for bumps in the road.

If the seat post is the only suspension element, the entire pedelec is a non-suspended mass. This has an unfavourable effect on loaded touring bikes or pedelecs with child trailers.

Suspension seat posts feature small, heavy-duty slide bearings, guides and articulated joints. If they are not lubricated on a regular basis, the sensitive response behaviour diminishes considerably, causing excessive wear.

The pre-tensioning in non-damped suspension seat posts must be adjusted in such a way that the suspension seat post does not deflect with just body weight. This prevents the suspension seat post from deflecting and bobbing intermittently at higher pedalling frequencies or if the rider pedals irregularly.

The spring stiffness can be set lower with damped suspension seat posts, thus making use of the negative deflection.

### 3.5.6.3 Structure of LIMOTEC, A1

The LIMOTEC A1 seat post is a continuously height-adjustable seat post.

The remote control on the handlebars lowers the seat post. This can be used to adjust the saddle height during a ride, e.g. when stopped at traffic lights. Both hands remain on the handlebars during adjustment.

#### Structure

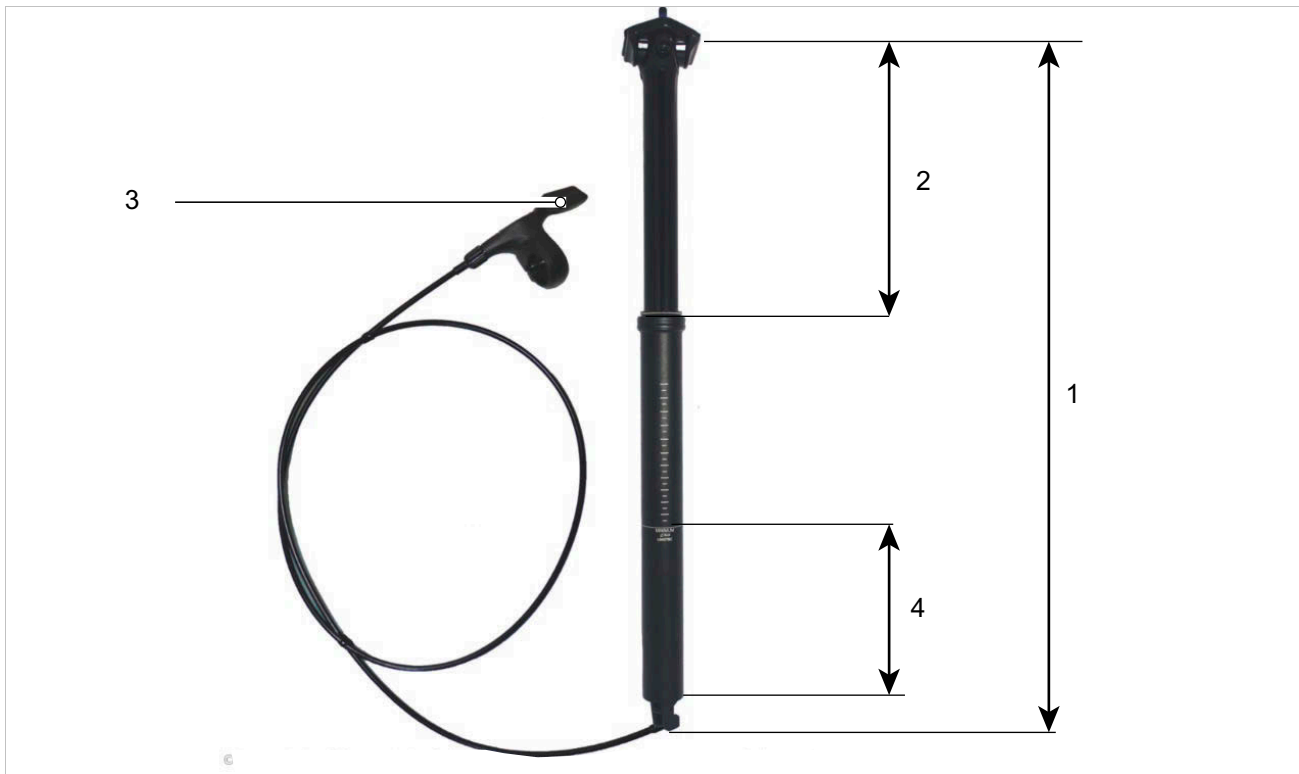


Figure 52: Structure and dimensions of the LIMOTEC A1 seat post

- 1 Seat post length
- 2 Stroke travel
- 3 Seat post remote control
- 4 Minimum insertion depth

#### Stroke travel

The *piston stroke* is the maximum height that the seat post can extend.

### 3.5.6.4 Structure of LIMOTEC A3 dropper post

The LIMOTEC Alpha 3 suspension seat post is a continuously height-adjustable seat post, which can be lowered using a remote control on the handlebars.

The remote control can be used to adjust the saddle height during a ride, e.g. when stopped at traffic lights. Both hands remain on the handlebars during adjustment.

The suspension in the seat post ensures sitting comfort when riding over rough terrain (e.g. in woodland or on farm tracks).

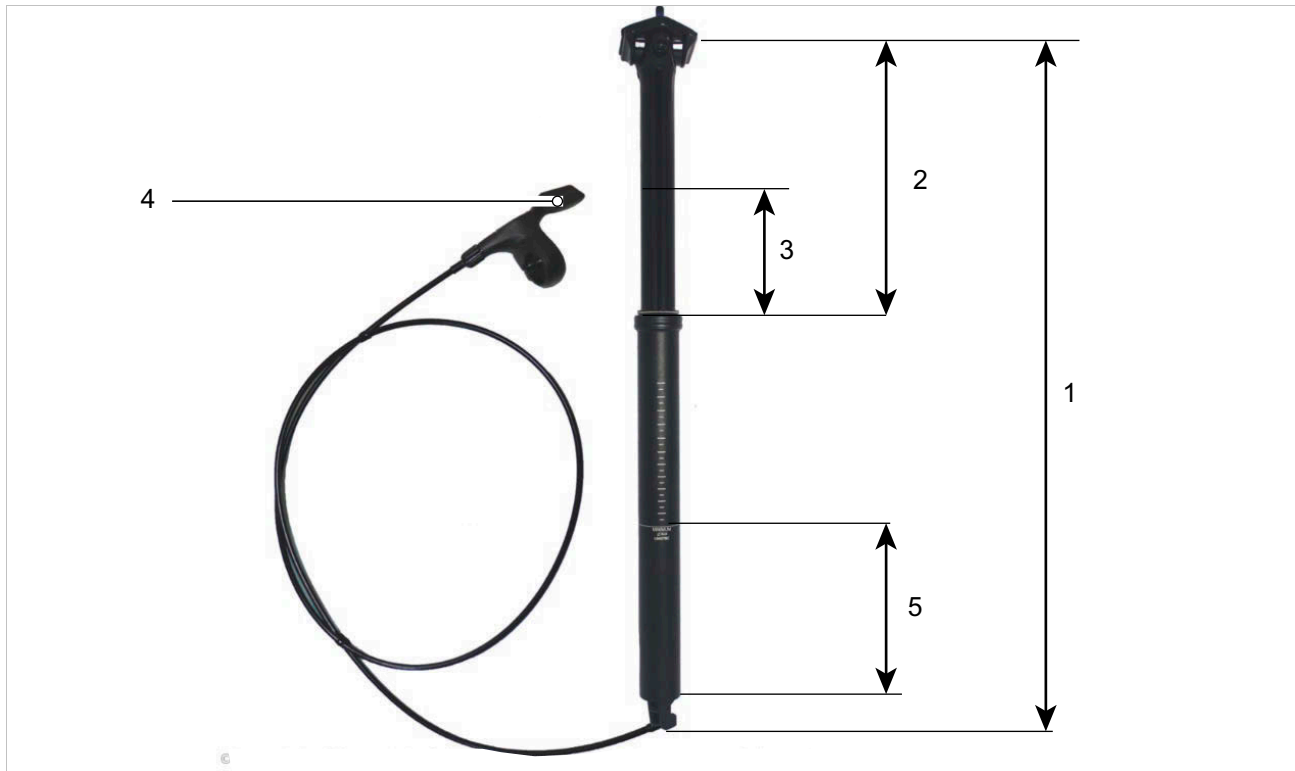


Figure 53: Structure and dimensions of the LIMOTEC A3 seat post

- 1 Seat post length
- 2 Stroke travel
- 3 Deflection
- 4 Seat post remote control
- 5 Minimum insertion depth

#### Stroke travel

The stroke travel is the maximum height that the seat post can extend.

#### Deflection

Deflection is the distance that the suspension seat post can deflect.



### 3.5.6.5 Design of SATORI Harmony LT2 patented seat post

The Satori Harmony LT2 is a patented seat post which is immune to side play thanks to a patented, square stanchion forged in a single piece.

It contains a coil spring which can be replaced to adjust to the rider's body weight.



Figure 54: Structure and dimensions of the SATORI LT2 seat post

- 1 Seat post length
- 2 Stroke travel

#### Stroke travel

The stroke travel is the maximum height that the seat post can extend.

### 3.5.7 Mechanical drive system

The pedelec is driven by muscle power, just like a bicycle.

The force which is applied by pedalling in the direction of travel drives the front chain wheel. The chain or belt transmits the force onto the rear chain wheel and then onto the rear wheel.

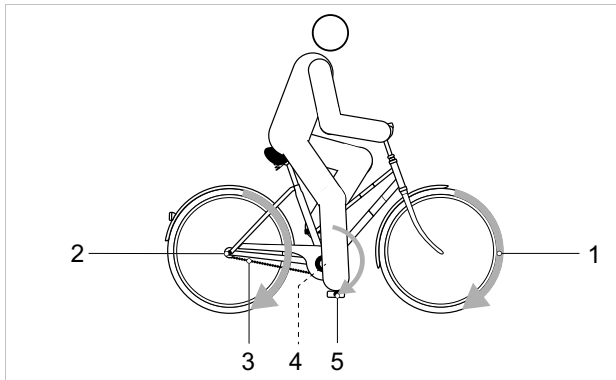


Figure 55: Diagram of mechanical drive system

- |   |                                  |
|---|----------------------------------|
| 1 | Direction of travel              |
| 2 | Chain or belt                    |
| 3 | Rear chainring or belt sprocket  |
| 4 | Front chainring or belt sprocket |
| 5 | Pedal                            |

The pedelec is equipped with either a chain or belt drive.

#### 3.5.7.1 Chain drive layout



Figure 56: Chain drive with derailleur gears

- |   |                 |
|---|-----------------|
| 1 | Rear derailleur |
| 2 | Chain           |

The chain drive is compatible with a

- Back-pedal brake,
- Hub gear or
- Derailleur gears.

#### 3.5.7.2 Parts of a belt drive



Figure 57: Belt drive

- |   |                     |
|---|---------------------|
| 1 | Front belt sprocket |
| 2 | Rear belt sprocket  |
| 3 | Belt                |

A belt drive is compatible with

- Back-pedal brake and
- Hub gear.

A belt drive is not compatible with derailleur gears.

### 3.5.8 Electric drive system

The pedelec has an electric drive system in addition to a mechanical one.

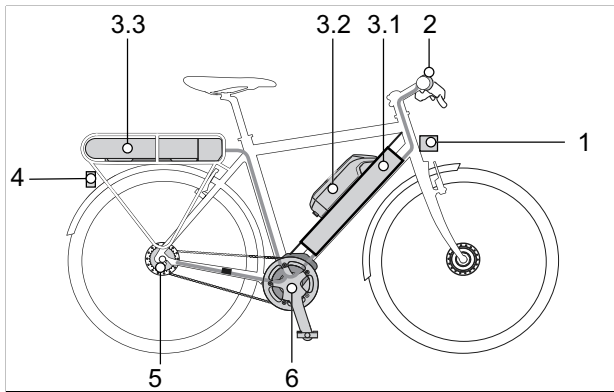


Figure 58: Diagram of an electric drive system with electric components

- |   |  |
|---|--|
| 1 | Front lamp   |
| 2 | On-board computer  |
| 3 | Display (optional)                                       |
| 4 | PowerTube battery or                                     |
| 5 | PowerPack battery  |
| 6 | Rear light   |
| 7 | Electric gear shift (optional)                           |
| 8 | Motor  |
| 9 | A charger which is designed for the battery (not shown). |

#### 3.5.8.1 Motor

As soon as the muscle power required for pedalling passes a certain level, the motor is activated gently and assists the pedalling motion. The motor power always depends on the power used to pedal: Motor assistance is lower when little muscle power is used than when a great deal of muscle power is used. This happens regardless of the level of assistance.

The motor switches off automatically as soon as the rider no longer pedals, the temperature is outside the permitted range, there is an overload or the shut-off speed of 25 km/h has been reached.

A push assist system can be activated. The speed depends on the selected gear. The motor continues to drive the pedelec as long as the rider presses the push assist button on the handlebars. The speed can be a maximum of 6 km/h in this case. The electric drive system stops when the

push assist button is released. The pedelec does not have a separate emergency shut-off button. In the event of an emergency, the motor can be stopped by removing the on-board computer. The mechanical brakes are used as an emergency stop system and bring the bicycle to a halt quickly and safely in the event of an emergency.

#### 3.5.8.2 Charger

Each pedelec is supplied with a charger. The following BOSCH charger may be used:

- the 4 A Charger BPC3400.

Observe the operating instructions in the Section 11.4 Documents.

#### 3.5.8.3 Lighting

Lighting always includes

- the front lamp (also known as headlight or front light)
- the rear light (also known as rear lamp)

The headlight and the rear light are also on whenever the riding light is activated.

### 3.5.8.4 Rechargeable battery

BOSCH batteries are lithium ion batteries which are developed and manufactured to the latest technical standards. Each battery cell is protected by a steel cup and encased in a plastic battery housing. Applicable safety regulations are met.

- The battery has an interior electronic protection circuit, which is specifically designed for the charger and the pedelec.
- The battery temperature is monitored at all times.
- The battery is protected against deep discharge, overcharging, overheating and short circuits by Electronic Cell Protection (ECP).

In the event of a hazard, a protective circuit switches the battery off automatically. In the event of a hazard, a protective circuit switches the battery off automatically.

The battery has a high energy content when charged. The code of practice for their safe handling is found in Section 2 Safety and Section 6.9 Rechargeable battery in the operating instructions. If the electric drive system is not used for 10 minutes and no button has been pressed on the on-board computer or the control panel, the electric drive system and the battery are automatically switched off to save energy.

The type and duration of operating conditions have a significant effect on the battery life. Just like any other lithium-ion battery, the battery will age naturally if it is not being used. The battery's service life can be extended if the battery is well maintained and stored at the correct temperature. The charging capacity will decrease with age, even if the battery is maintained properly. If the operating time is severely shortened after charging, this is a sign that battery has reached the end of its useful life.

Battery performance is reduced when the temperature drops since this increases electrical resistance. You should expect the range to be less than normal at low temperatures in winter. We recommend using thermal protection sleeves when riding longer distances at low temperatures. Each battery has its own lock.

The following battery can be built into the pedelec:



PowerTube 500  
BBP375Y

PowerTube 625  
BBP376Y

PowerTube 750  
BBP377Y

Figure 59: Overview of battery variants

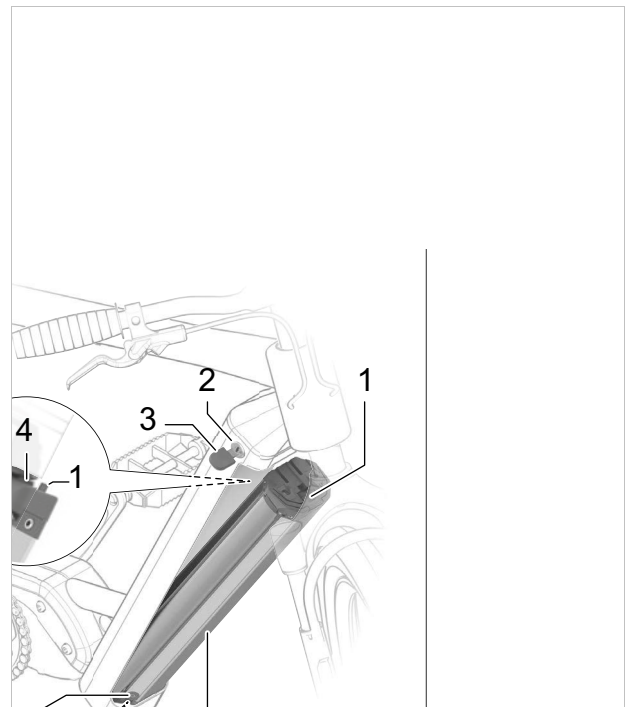


Figure 60: Details on PowerTube

- |   |                                   |
|---|-----------------------------------|
| 1 | Securing hook                     |
| 2 | Battery lock                      |
| 3 | Battery key                       |
| 4 | Retainer guard                    |
| 5 | On-Off button (battery)           |
| 6 | Battery level indicator (battery) |
| 7 | Socket for charger plug           |
| 8 | Battery housing                   |

### 3.5.8.5 BOSCH LED Remote on-board computer

The on-board computer on the handlebars is used as a control panel. It controls the system and all indicators on the display screen using six buttons.



Figure 61: BOSCH LED Remote on-board computer

The eBike Flow app can be accessed via Bluetooth®.

The on-board computer has an internal lithium ion battery. The pedelec battery powers the on-board computer. If a sufficiently charged battery is inserted into the pedelec and the drive system switched on, the internal battery is charged.

### Display

The on-board computer can be used with two different displays.

The display switches off automatically if it is removed from its mount.

The display shows the main drive system functions and the ride data.



Figure 62: BOSCH Kiox 300 display

The Kiox 300 display is powered by a CR2450 button cell.



Figure 63: BOSCH Intuvia 100 display

The pedelec battery powers the Intuvia 100 display.

### 3.5.8.6 BOSCH Purion 200 on-board computer

The on-board computer on the handlebars is used as a control panel. It controls the system and all indicators on the display screen using six buttons.



Figure 64: BOSCH Purion 200 on-board computer

The eBike Flow app can be accessed via Bluetooth®.

The on-board computer has an internal lithium ion battery. The pedelec battery powers the on-board computer. If a sufficiently charged battery is inserted into the pedelec and the drive system switched on, the internal battery is charged.

If the internal control panel battery is low, connect it to a power bank or other suitable power source using a USB type C® cable via the diagnosis port (charge voltage 5 V; max. charging current 600 mA).

### 3.6 Description of controls and screens

#### 3.6.1 Handlebars with BOSCH LED Remote and optional Intuvia 100 or Kiox 300 display

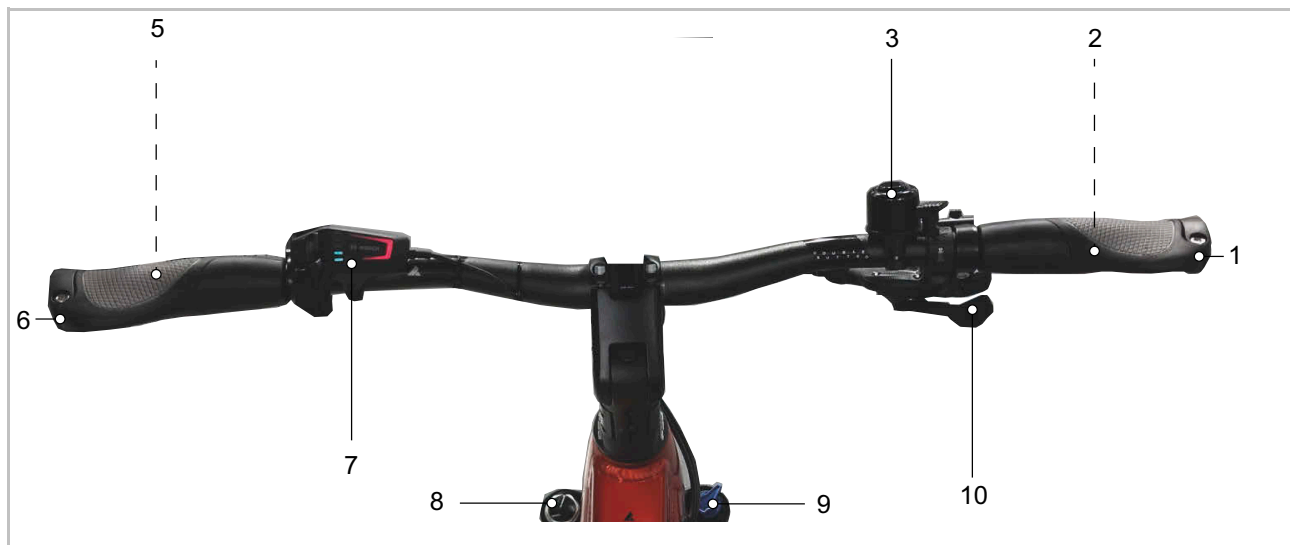


Figure 65: Detailed view of handlebars with BOSCH LED Remote, example

1, 6	Handle	7	BOSCH LED Remote on-board computer
2	Rear wheel handbrake (behind handlebars)	8	Air valve cap
3	Bell	9	Sag setting wheel
5	Front wheel handbrake (behind handlebars)	10	Shifter

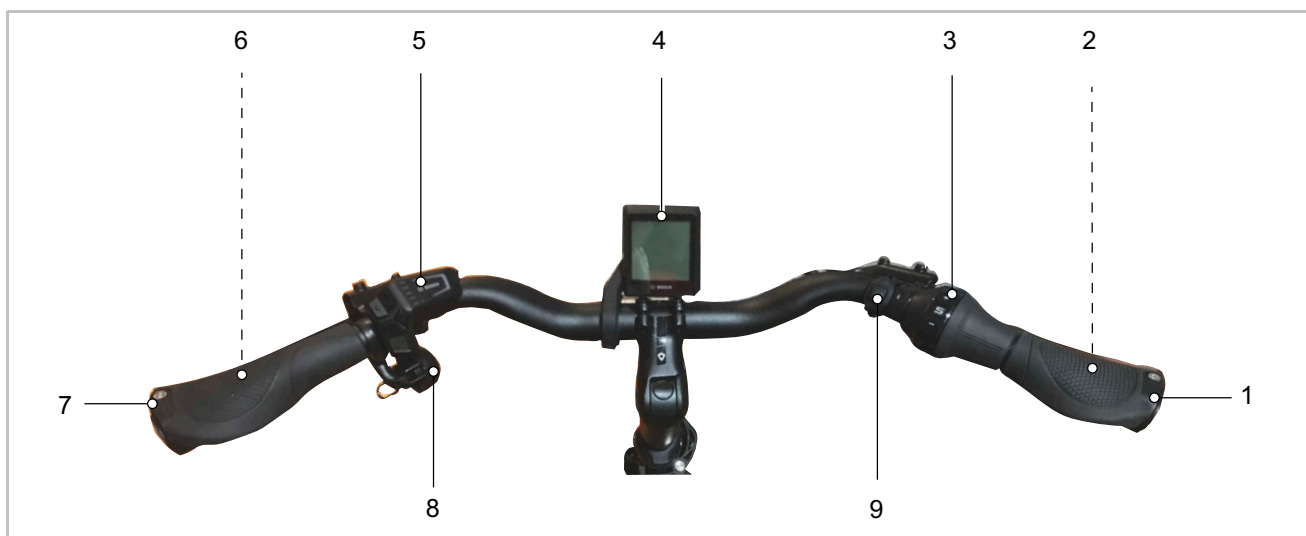


Figure 66: Detailed view of handlebars with BOSCH Intuvia 100, example

1	Handle	6	Front wheel handbrake (behind handlebars)
2	Rear wheel handbrake (behind handlebars)	7	Handle
3	Twist shifter	8	Bell
4	BOSCH Intuvia 100 display	9	Main beam switch
5	BOSCH LED Remote on-board computer		



Figure 67: Detailed view of handlebars with BOSCH Kiox 300, example

1, 6	Handle	7	BOSCH LED Remote on-board computer
2	Rear wheel handbrake (behind handlebars)	8	Air valve cap
3	Bell	9	Sag setting wheel
4	Display Kiox 300	10	Shifter
5	Front wheel handbrake (behind handlebars)		



### 3.6.2 BOSCH LED Remote on-board computer

The on-board computer on the handlebars is used as a control panel. It controls the system and all indicators on the display screen using six buttons.

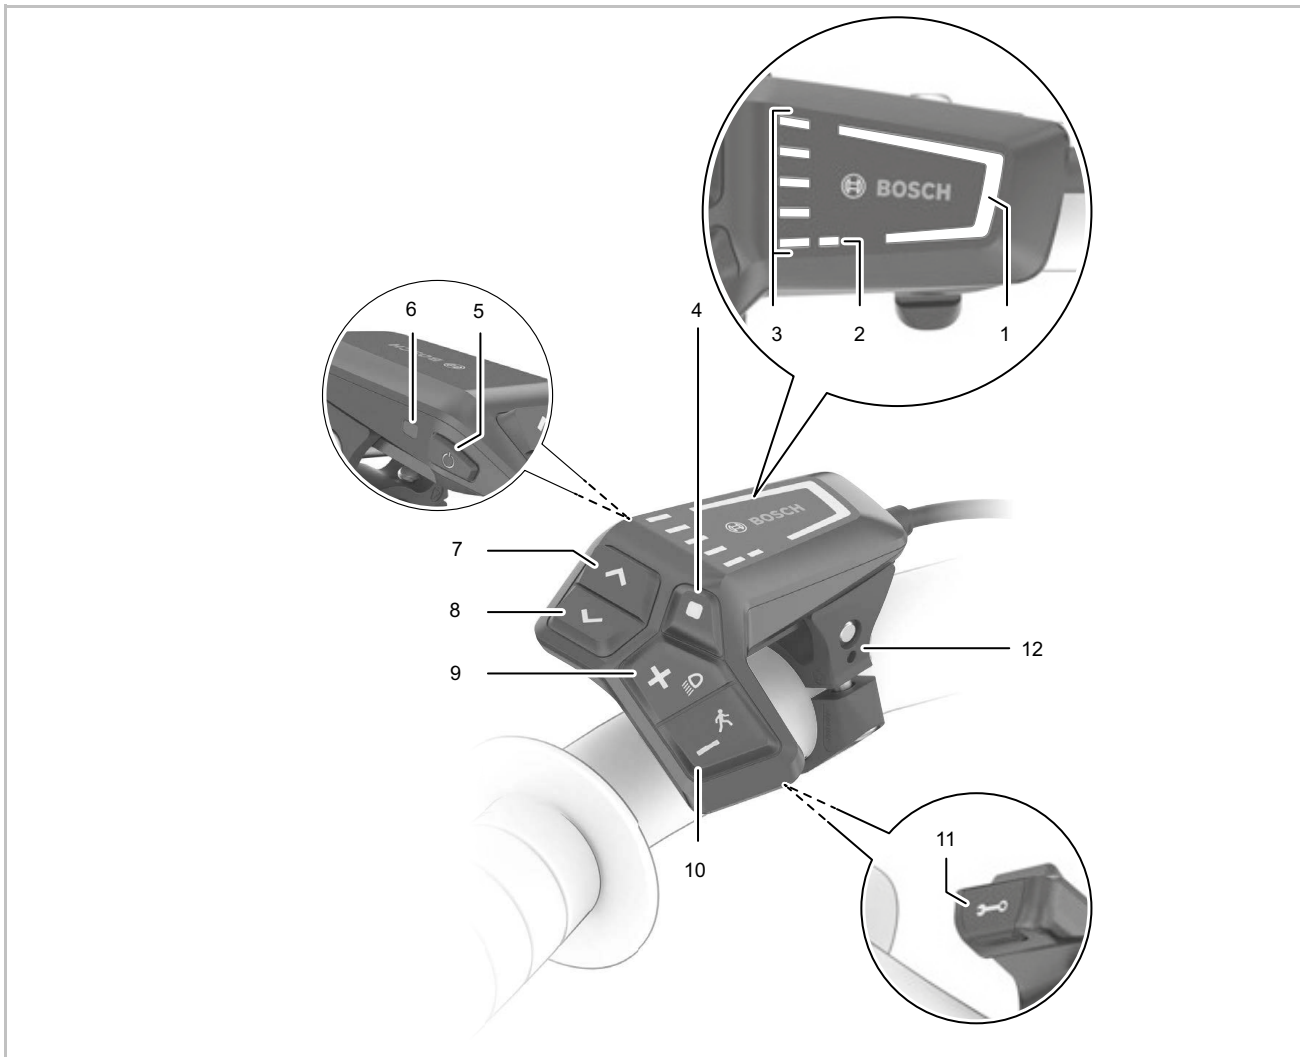


Figure 68: Overview of BOSCH LED Remote on-board computer

1	Selected level of assistance indicator	8	<	Decrease brightness button/ back button
2	ABS indicator (optional)	9	+	Plus button/ light button
3	Battery level indicator (on-board computer)	10	-	Minus button/ push assist button
4	Select button	11		Diagnosis connection (for maintenance purposes only)
5	On-Off button (on-board computer)	12		Mount
6	Ambient light sensor			
7	> Increase brightness button/ forward button			

### 3.6.2.1 Selected level of assistance indicator

The higher the selected level of assistance, the more the drive system assists with pedalling.

eMTB mode is available for Performance Line CX drives. In eMTB mode, the assistance factor and the torque are dynamically adjusted depending on the pedalling force applied to the pedals.

Level of assistance	Colour	Use
OFF	No	When the drive system is switched on, the motor assistance is switched off. Use the pedelec like a normal pedelec by simply pedalling
ECO	Green	Limited assistance with maximum efficiency for maximum range
TOUR	blue	Constant assistance, for long-range tours
eMTB/SPORT	Purple	Powerful assistance, for sporty start-up, optimal assistance on all types of terrain
TURBO	Red	Maximum assistance up to high pedalling frequencies, for sport riding

Table 32: Overview of level of assistance

### 3.6.2.2 ABS indicator (optional)

The ABS indicator lights up on pedelecs with an ABS system when they start up.

The ABS will switch off if the pedelec reaches a speed of 6 km/h.

If there is a fault, the ABS indicator lights up together with the indicator of the selected level of assistance, which will flash orange.

Press the Select button to acknowledge the fault and the flashing indicator for the selected level of assistance will go out. The ABS indicator remains lit to indicate that the ABS system is not in operation.

### 3.6.2.3 Battery level indicator (on-board computer)

The battery level indicator (on-board computer) shows the battery charge level. You can also see the battery charge level on the LEDs on the battery itself.

Each blue bar on the indicator signals 20% capacity and each white bar 10% capacity. The top bar indicates maximum capacity. The two lower indicators will change colour if the capacity is low:

Flash sequence	Capacity
	90 ... 100%
	80 ... 89%
	70 ... 79%

Flash sequence	Capacity	Flash sequence	Capacity
	60 ... 69%		10 ... 19%
	50 ... 59%		0 ... 9%
	40 ... 49%		Red LED is flashing: 0%
	30 ... 39%	The uppermost bar will flash if the battery is charging.	
	20 ... 29%	<b>3.6.2.4 System message</b>	
		The on-board computer indicates whether a critical or less critical error has arisen in the drive system.	
		The error messages generated by the drive system can be read in the eBike Flow app and by the specialist dealer.	
		The rider can use a link in the eBike Flow app to display all information on errors and assistance on eliminating errors.	
		You will find more information and a table containing all system messages in Section 6.2.	

### 3.6.2.5 Software updates

Software updates are automatically transferred to the on-board computer in the background of the BOSCH eBike Flow smartphone app as soon as the app is connected to the on-board computer.

The battery level indicator will flash green during updates to show how the update is progressing.

Flash sequence	Meaning
	<p>Green LED is flashing: Update</p>

Once an update has been completely transferred, this is displayed three times when the on-board computer is restarted.

Alternatively, the user can check whether an update is pending under **SETTINGS <My eBike> <Components>**.

### 3.6.2.6 Activity tracking

User recognition is required on a PC or smartphone to record activities.

The rider needs to agree to location data being saved on the portal or the app to record activities. Only then will all activities be displayed on the portal or app.

Your location will only be logged if the on-board computer is connected to the eBike Connect app.

Activities will be displayed after synchronisation in the app and on the portal.

### 3.6.2.7 Lock function

When the lock function is used, the on-board computer acts in a similar way to a key for the drive system. Once the lock function is switched on, the e-bike drive unit assistance is deactivated by removing the on-board computer. The rider can continue to use the mechanical drive system.

It can then only be activated using the on-board computer belonging to the pedelec. The lock function is linked to the eBike Connect app user account.

The lock function does not provide anti-theft protection; it is more a supplement to a mechanical lock. The lock function does not provide mechanical blocking of the pedelec or similar. It only deactivates assistance from the drive unit.

If third parties are to have temporary or permanent access to the pedelec, the lock function must be deactivated in the eBike Connect app.

When activating and deactivating the lock function, the drive system emits audible lock signals. The audible feedback signal is activated by default. The feedback signal can be deactivated under **SETTINGS <My eBike>**.

### 3.6.3 BOSCH Intuvia 100 display

The display is controlled on the LED Remote on-board computer.



Figure 69: Intuvia 100 display

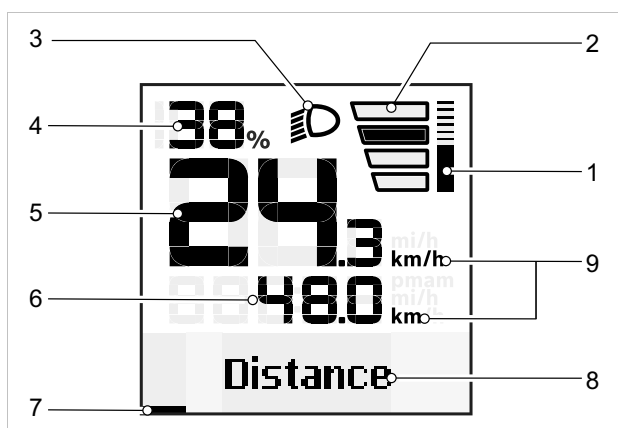


Figure 70: Overview of start screen

- 1 [Motor power indicator](#)
- 2 [Selected level of assistance indicator](#)
- 3 [Riding light symbol](#)
- 4 [Battery level indicator \(display screen\)](#)
- 5 [Speed indicator](#)
- 6 [Motor power indicator](#)
- 7 [Guidance bar](#)
- 8 [Text display/shift recommendation](#)
- 9 [Values indicator](#)

#### 1 Motor power indicator

The motor power used is displayed as a bar. The maximum motor power depends on the selected level for assistance.

#### 2 Selected level of assistance indicator

The higher the selected level of assistance, the more the drive system assists with pedalling.

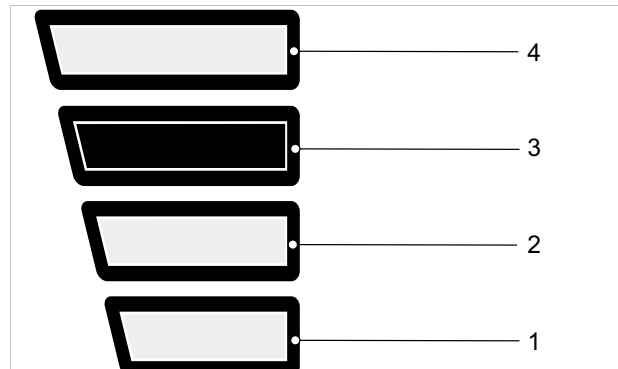



Figure 71: Selected level of assistance

Level of assistance	Use
NO SCREEN DISPLAY	The motor assistance function is switched off. The pedelec can be used like a normal bicycle by simply pedalling.
1	Limited assistance with maximum efficiency for maximum range
2	Constant assistance, for long-range tours
3	Powerful assistance, for sporty start-up, optimal assistance on all types of terrain
4	Maximum assistance up to high pedalling frequencies, for sport riding

Table 33: Overview of level of assistance

#### 3 Riding light symbol

 The riding light symbol is shown when the riding light is on.

#### 4 Battery level indicator (display screen)

If the on-board computer is removed from its mount, the last battery level message is saved.

#### 5 Speed indicator

The speed is displayed either in km/h or mph.

## 6 Values indicator

The following functions can be selected on the Values screen:

Function	Explanation
DISTANCE	Distance travelled since the last reset
RIDING TIME	Riding time since the last reset
TIME	Current time
RANGE	Expected range of the available battery charge (under constant conditions such as level of assistance, route profile, etc.)
AVG. SPEED	Average speed reached since the last reset
MAX. SPEED	Maximum speed reached since the last reset
TOTAL DISTANCE	Displays the total distance travelled with the pedelec (cannot be reset)

**Table 34: Overview of selectable functions**

## 7 Guidance bar

### 8 Text display/shift recommendation

The title screen indicates the page name and the displayed function.

The shift recommendation is also displayed here.

### 9 Unit of speed

The unit of speed is displayed either in km/h or mph.

### 3.6.3.1 Settings

The following system relevant values can be changed in the settings by the LED Remote. The settings menu structure is customised and may change when components or services are added. The settings menu is only shown when stationary.

Submenu	Explanation
<b>Change/exit basic settings</b>	
<Language>	Sets preferred display language
<Units>	Sets speed and distance to kilometres or miles
<Time>	Adjusts the clock
<Time format>	Sets to 12- or 24-hour format
<Shift recommendation>	Switches shift recommendations on or off
<Backlight>	Sets duration of backlight activation
<Brightness>	Adjusts the display brightness
<Settings reset>	Reset all settings to their factory settings
<Certifications>	

**Table 35: Basic menu structure for Intuvia 100**

The following system and service-relevant values can be read and changed in the eBike Flow app. The settings menu structure is customised and may change when components or services are added.

Menu	Submenu
	→ <Wheel circum.>
	→ <Range reset>
	→ <Auto trip reset>
	→ <Hours of operation>
	→ <BOSCH components used>

**Table 36: Adjustable and viewable values for the Intuvia 100 display in the eBike Flow app**

### 3.6.4 Display

The display is controlled using the control panel.



Figure 72: BOSCH Kiox 300 display

The following pages are on the display screen:

- START SCREEN, see Section 3.4.8.1
- STATUS SCREEN, see Section 3.6.4.2
- SETTINGS, see Section 3.4.8.5

#### 3.6.4.1 Start screen

The START SCREEN is displayed if no other page was selected before the last time the display was switched off.

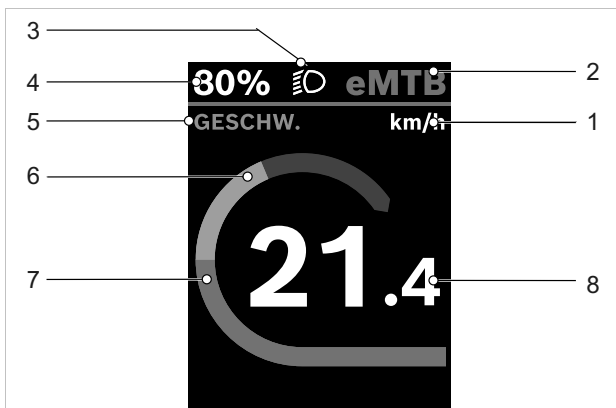


Figure 73: Overview of start screen, screen 1

- 1 Unit of speed
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Title screen
- 6 Own power indicator
- 7 Motor power indicator
- 8 Speed indicator

Indicators 2 to 4 make up the status bar and are displayed on every page.

You open the second start screen by pressing the **select button**.

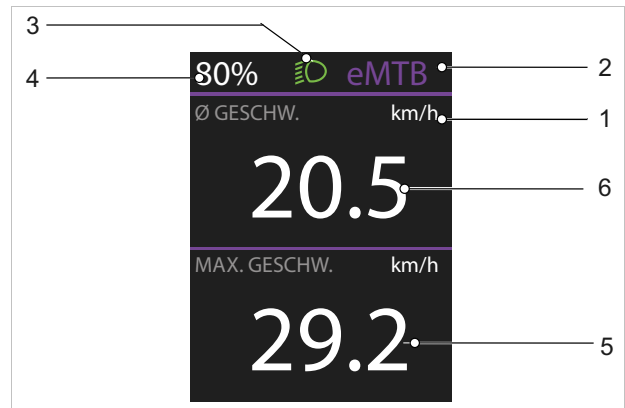


Figure 74: Overview of start screen, screen 2

- 1 Unit of speed
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Maximum speed indicator
- 6 Average speed indicator

#### 1. Unit of speed

The unit of speed is displayed either in km/h or mph.

#### 2. Selected level of assistance indicator

The higher the selected level of assistance, the more the drive system assists with pedalling.


eMTB mode is available for Performance Line CX drives. In eMTB mode, the assistance factor and the torque are dynamically adjusted depending on the pedalling force applied to the pedals.

Level of assistance	Use
OFF	When the drive system is switched on, the motor assistance is switched off. The pedelec can be used like a normal bicycle by simply pedalling.
ECO	Limited assistance with maximum efficiency for maximum range
TOUR	Constant assistance, for long-range tours
<b>eMTB/SPORT</b>	Powerful assistance, for sporty start-up, optimal assistance on all types of terrain
TURBO	Maximum assistance up to high pedalling frequencies, for sport riding

Table 37: Overview of levels of assistance



### 3. Riding light symbol

 The riding light symbol is shown when the riding light is on.

### 4. Battery level indicator (display screen)

If the on-board computer is removed from its mount, the last battery level message is saved. The battery level indicator (display screen) can be viewed on the STATUS SCREEN and in the status bar.

### 5. Title screen

The title screen indicates the page name and the displayed function.

### 6. Own power indicator

The power that is currently being applied to the pedals is displayed as a semi-circle.

### 7. Motor power indicator

The motor power used is displayed as a bar. The maximum motor power depends on the selected level for assistance.

### 8. Speed indicator

The speed is displayed either in km/h or mph.

### 3.6.4.2 Status screen

You open the Status screen by pressing the **<- button** on the start screen. You can open the settings on this screen.

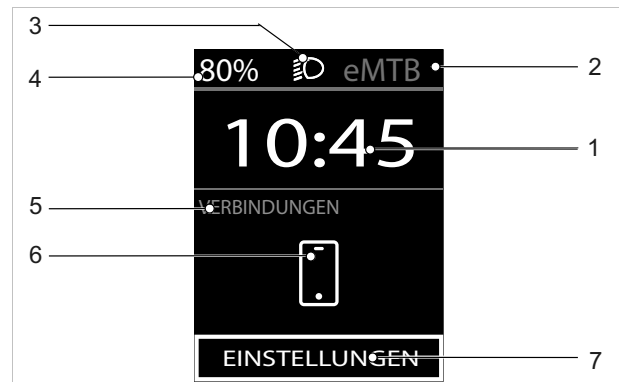


Figure 75: Overview of Status screen

- 1 Clock indicator
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Connections indicator
- 6 Symbol showing connection to smartphone
- 7 Settings
- 8 Connection status

### 3.6.4.3 TRIP screen

You open the Trip screen by pressing the **>- button** on the start screen.

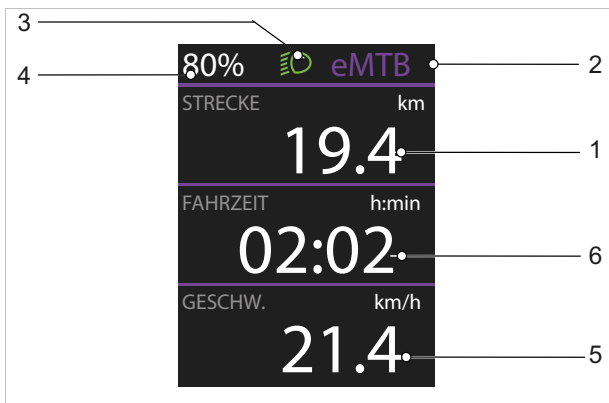


Figure 76: Overview of Trip screen, screen 1

- 1 Distance screen
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Speed indicator
- 6 Riding time indicator

You open the second Trip screen by pressing the **select button**.

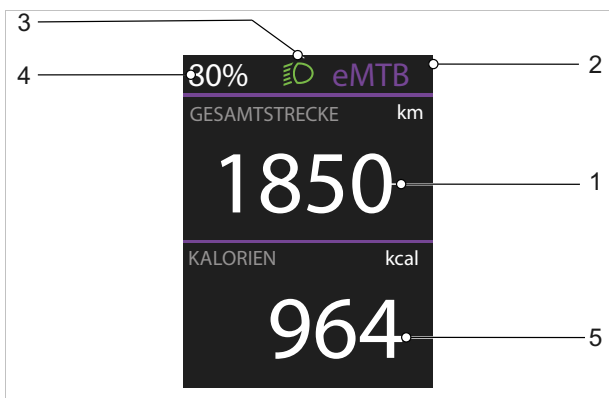


Figure 77: Overview of Trip screen, screen 2

- 1 Total distance screen
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Energy consumption indicator

### 3.6.4.4 Range screen

You open the Range screen by pressing the **>- button** on the start screen.

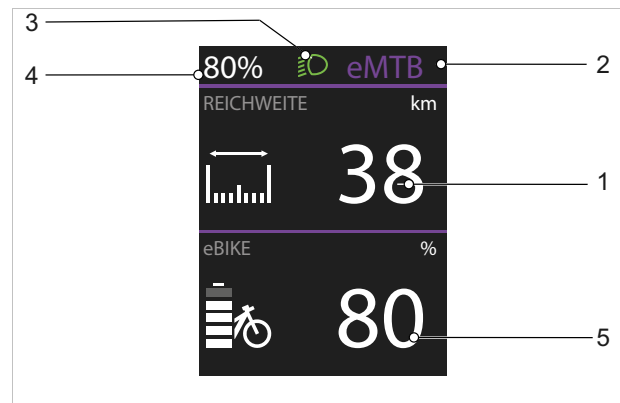


Figure 78: Overview of Range screen, screen 1

- 1 Range indicator
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Battery level indicator 2 (display screen)

You open the second Range screen by pressing the **select button**.

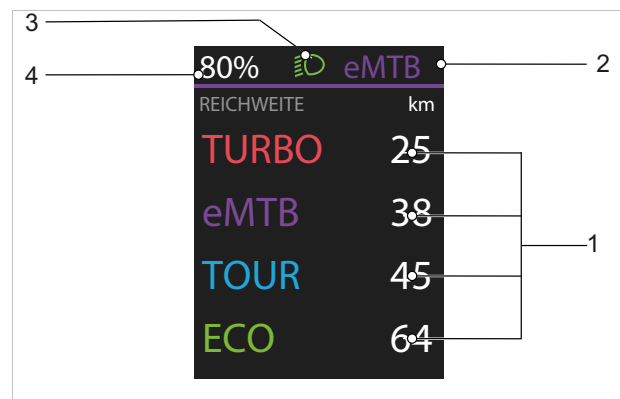


Figure 79: Overview of Range screen, screen 2

- 1 Indicator of range in relation to the level of assistance
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)

### 3.6.4.5 Fitness screen

You open the Fitness screen by pressing the **>- button** on the start screen.

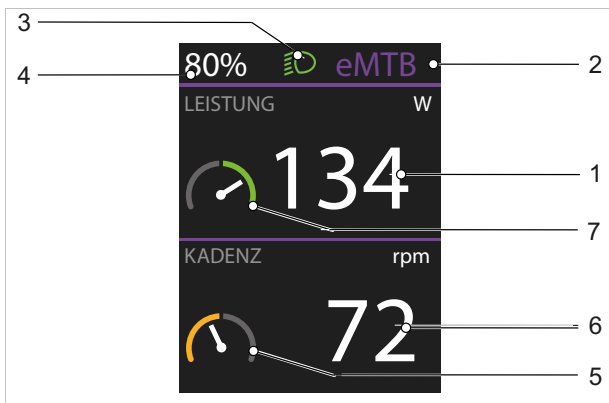


Figure 80: Overview of Fitness screen, screen 1

- 1 Own power indicator
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Destination indicator (below average)
- 6 Pedalling frequency indicator
- 7 Destination indicator (above average)

You open the second Fitness screen by pressing the **select button**.

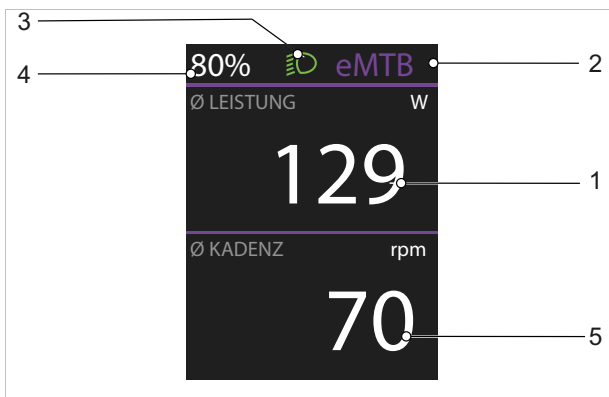


Figure 81: Overview of Fitness screen, screen 2

- 1 Indicator for Average Power in watts
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Indicator for Average Cadence in revolutions per minute

### 3.6.4.6 ABS screen

**Only applies to pedelecs with this equipment**

You open the ABS screen by pressing the **>- button** on the start screen.

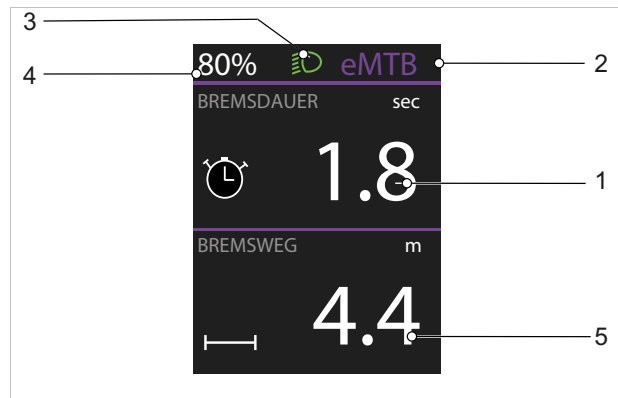


Figure 82: Overview of ABS screen

- 1 Braking Time indicator
- 2 Selected level of assistance indicator
- 3 Riding light symbol
- 4 Battery level indicator (display screen)
- 5 Braking Distance indicator

### 3.6.4.7 Settings

All system and service-relevant values can be read and changed in the settings. The settings menu structure is customised and may change when components or services are added.

Menu	Submenu
My eBike	
	→ <Range reset>
	→ <Auto trip reset>
	→ <Wheel circumf.>
	→ <Service>
	→ <Components>
My Kiox	
	→ <Status bar>
	→ <Language>
	→ <Units>
	→ <Time>
	→ <Time Format>
	→ <Brightness>
	→ <Settings reset>
Information	
	→ <Contact>
	→ <Certificates>

**Table 38: Basic menu and submenu structure for Kiox 300**

### 3.6.5 Handbrake

There is a handbrake on the left and right of the handlebars.

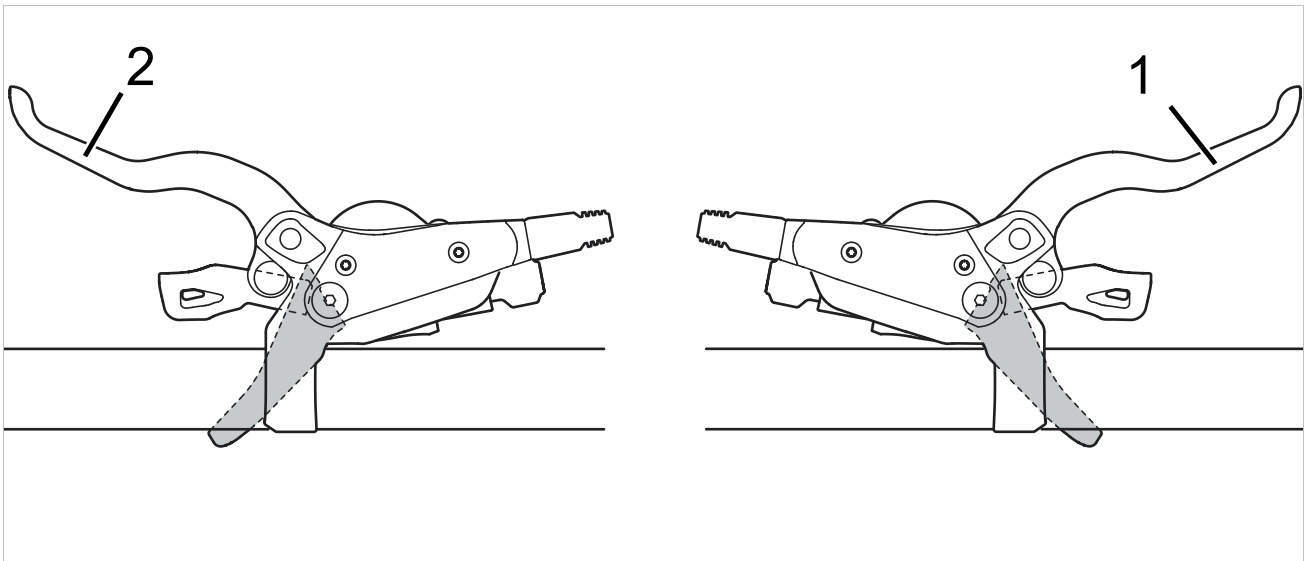


Figure 83: Front wheel (2) and rear (1) brake levers – Shimano brake used as an example

The left handbrake (2) controls the front wheel brake.

The right handbrake (1) controls the rear wheel brake.

### 3.6.6 SHIMANO gear shift

There is either a switch control panel or a shifter on the right side of the handlebars. There can be three different switches, depending on the model:

- 3-switch control panel
- 2-switch control panel or
- MTB control panel.

#### 3.6.6.1 3-switch switch control panel

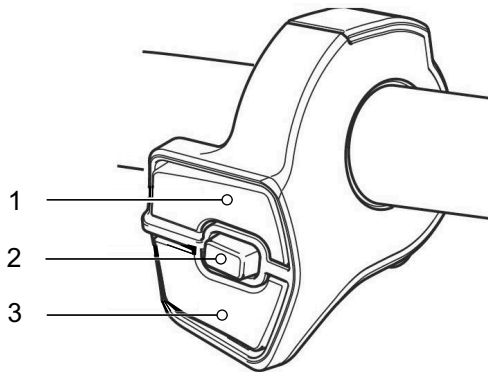


Figure 84: Overview of 3-switch control panel

- 1 Switch X
- 2 Switch A
- 3 Switch Y

#### 3.6.6.2 2-switch switch control panel

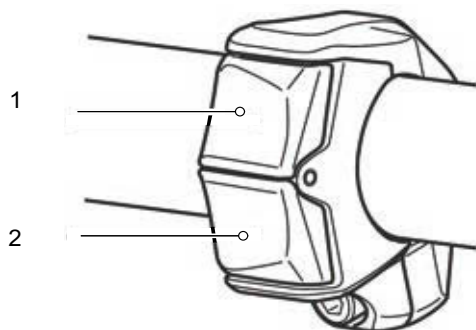


Figure 85: 2-switch control panel

- 1 Switch X
- 2 Switch Y

#### 3.6.6.3 MTB switch control panel

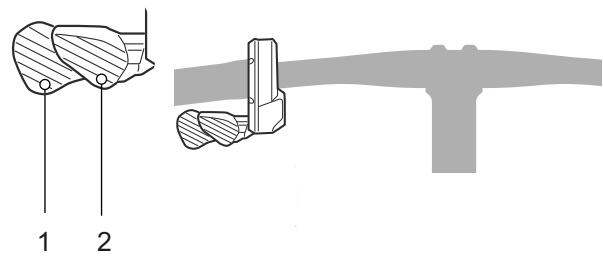


Figure 86: MTB control panel

- 1 Switch Y
- 2 Switch X

#### 3.6.6.4 Switch control panel functions on right

Switch	Function
X	Change up
Y	Change down
A	Switching between automatic and manual gear shift

If there is no switch A on the switch control panel, the button on the on-board computer will control these functions.

#### 3.6.6.5 Shifter SL-M5100

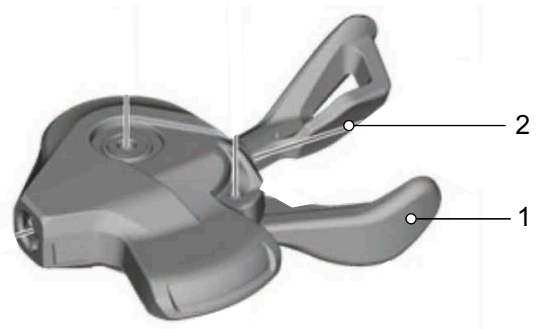


Figure 87: Shifter SL-M5100

- 1 Shifter A
- 2 Shifter B

### 3.6.6.6 Shifter SL-M8100

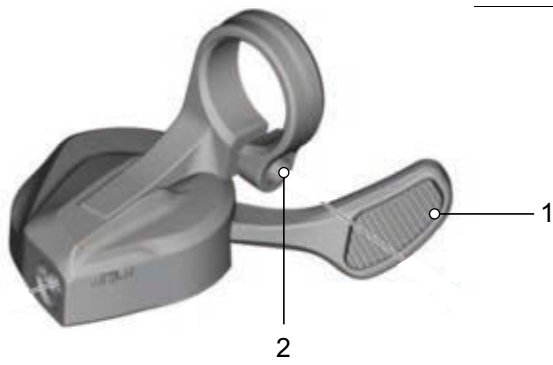


Figure 88: Shifter SL-M8100

- 1 Shifter
- 2 Attachment screw for shifter

### 3.6.6.7 SHIMANO NEXUS SL-C7000-5 twist grip shifter

Only applies to vehicles with this equipment

SHIMANO hub gears feature a NEXUS SL-C7000-5 twist grip shifter with an indicator on the right of the handlebars.



Figure 89: SHIMANO NEXUS SL-C7000-5 twist grip shifter

- 1 Twist grip shifter
- 2 Gear indicator

You change gears by turning the twist grip shifter.

The Gear indicator shows the selected gear.



### 3.6.6.8 ENVIOLLO hub gear

Only applies to vehicles with this equipment

The Automatic+ system is integrated into the drive system and offers an automatic switching option. The automatic ENVIOLLO gear shift includes a twist grip with an indicator.

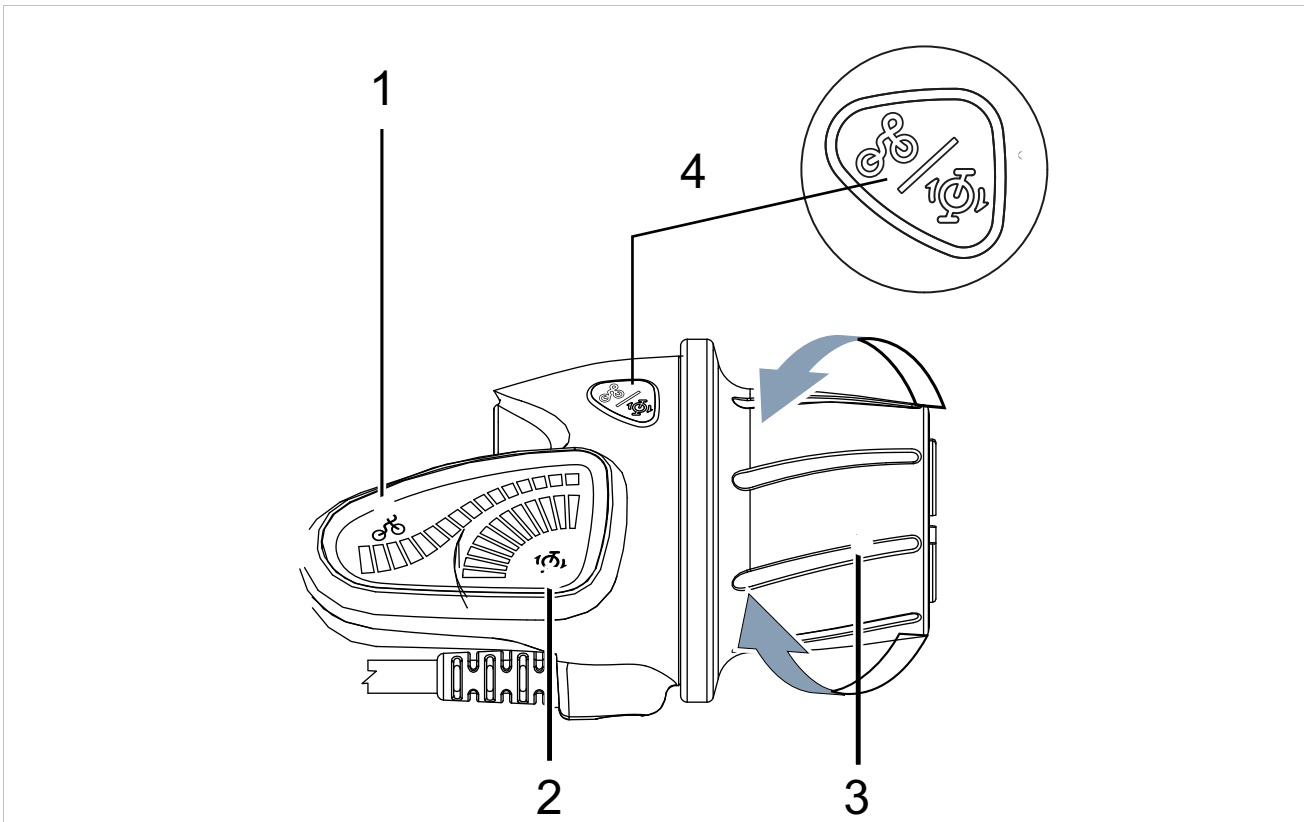


Figure 90: ENVIOLLO twist grip with indicator

- 1 Manual gear shift indicator
- 2 Automatic gear shift indicator
- 3 Twist grip
- 4 Mode button

The rider has the choice between automatic and manual gear switching.

In automatic mode, the system automatically adjusts transmission to maintain the preferred cadence (pedalling frequency). The required pedalling frequency is set on the on-board computer.

In manual switching mode, the rider uses the twist grip to shift up and down gears.




### 3.6.7 Suspension and damping

#### 3.6.7.1 SR SUNTOUR air valve (fork) and sag setting wheel (fork)

Model	AIR EQ	AIR	COIL Adjustable	COIL
	Air valve (fork)	Air valve (fork)	Sag setting wheel	Sag setting wheel
Suspension	Air suspension	Air suspension	Steel spring	Steel spring
				
Rux		x		
Durolux	x			
Auron	x			
ZERON35		x	x	
Axon		x		
Epixon9	x			
Raidon		x		
XCR		x	x	
XCM		x	x	
XCT		x	x	
XCE			x	
M3010			x	x
Mobie45/34/25		x	x	
Mobie35	x			
MobieA32			x	
GVX		x		
NRX		x	x	
NCX32/NCX/TR-HSI		x	x	
NVX			x	
NEX			x	
CR			x	x

### 3.6.7.2 SR SUNTOUR adjuster damper

Only applies to vehicles with this equipment

Model	R2C2-PCS RC2-PCS RC2	3CR-PCS	2CR-PCS 2CR	RC-PCS RC
Suspension fork				
Aion		O		O
Durolux	O			O
Mobie34		x	O/x	
Mobie35		O	O	
Raidon			x	
Rux	O			
XCR			x	
Zeron35		x	x	x

x = fitted O = fitted in PCS piston

#### Explanation

R2C2-PCS	Rebound damper with high-speed and low-speed setting options and high-/low-speed compression damper in the piston compensator system
RC2-PCS	Rebound damper with low-speed setting option and high-/low-speed compression damper in the piston compensator system
RC2	Rebound damper with low-speed setting option and high-/low-speed compression damper
3CR-PCS	3-level compression damper and rebound damper with low-speed setting option in the piston compensator system
2CR-PCS	2-level compression damper and rebound damper with low-speed setting option in the piston compensator system
2CR	2-level compression damper and rebound damper with low-speed setting option
RC-PCS	Rebound damper with low-speed setting option and low-speed compression damper in the piston compensator system
RC	Rebound damper with low-speed setting option and low-speed compression damper

Model	LORC-PCS LORC	LOR
Suspension fork		
Aion	O	
Axon	O/x	
GVX		x
Mobie25		x
NRX		x
Raidon		x
X1		x
XCM		x
XCR		x
Zeron35		x

x = fitted O = fitted in PCS piston

### Explanation

LORC-PCS	Rebound damper with low-speed setting option and low-speed compression damper with lockout in the piston compensator system
LORC	Rebound damper with low-speed setting option and low-speed compression damper with lockout
LOR	Rebound damper with low-speed setting option with lockout

### 3.6.7.3 SR SUNTOUR adjuster damper with remote control

#### Only applies to vehicles with this equipment

There is a remote control to open and close the damper on the handlebars.

Model	R-3CR-PCS R-2CR-PCS	RLRC-PCS	RLRC RLR
Suspension fork			
Aion	O	O	
Axon		O/x	
GVX			x
Mobie25			x
Mobie34	O		
NRX			x
Raidon	x		x
XCR	x		x
X1			x
Zeron35	x		x

x = fitted O = fitted in PCS piston

#### Explanation

R-3CR-PCS	3-level compression damper and rebound damper with low-speed setting option and lockout function on the handlebars in the piston compensator system
R-2CR-PCS	2-level compression damper and rebound damper with low-speed setting option and lockout function on the handlebars in the piston compensator system
RLRC-PCS	Low-speed rebound damper and low-speed compression damper and lockout function on the handlebars in the piston compensator system
RLRC	Rebound damper with low-speed setting option and low-speed compression damper and lockout function on the handlebars
RLR	Rebound damper with low-speed setting option and lockout function on the handlebars

### 3.6.8 Rechargeable battery

#### 3.6.8.1 Battery level indicator screen

Each battery has its battery level indicator:

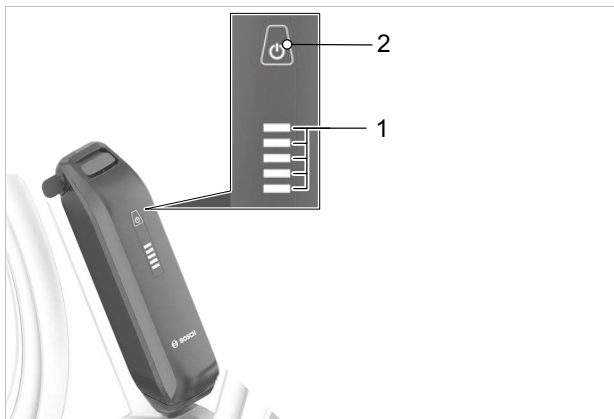


Figure 91: BOSCH PowerPack battery indicator and operating element



Figure 92: BOSCH PowerTube indicator and operating element

- 1 On-Off button (battery)
- 2 Battery Level indicator screen

The five green LEDs on the battery level indicator show the charge level when the battery is switched on. Each LED represents 20% of battery capacity.

LED 1,2,3,4,5	Battery level
● ● ● ● ●	100 ... 80%
● ● ● ● ○	79 ... 60%
● ● ● ○ ○	59 ... 40%
● ● ○ ○ ○	39 ... 20%
● ○ ○ ○ ○	19 ... 15%
○ ○ ○ ○ ○	5 ... 0%

Figure 93: Battery level indicator

Symbols:



LED on



LED off

All five LEDs will light up when the battery is fully charged. The charge level for the activated battery is also shown on the on-board computer.

If the battery capacity is less than 10%, the last remaining LED indicator will flash.

If the battery level falls below 5%, all the LEDs on the battery level indicator will go out.

The battery level is still shown on the on-board computer.

## 4 Transporting and storing

### 4.1 Transportation



#### Crash caused by unintentional activation

There is a risk of injury if the electric drive system is activated unintentionally.

- ▶ Remove the battery.

#### 4.1.1 Using the transport securing system

Only applies to Pedelecs with disc brakes



#### Oil leak if no transport securing device

The brake securing device prevents the brakes from being applied accidentally during transportation or shipment. This could cause irreparable damage to the brake system or an oil leak, which will harm the environment.

- ▶ Never pull on handbrake when the wheel has been dismantled.
- ▶ Always use the transport securing system when transporting or shipping.

- ▶ Insert the **transport securing devices** between the brake linings.

⇒ Transport securing device is squeezed between the two linings and prevents undesired sustained braking which can cause brake fluid to leak out.

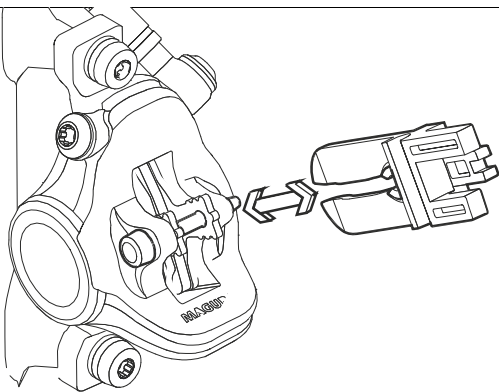


Figure 94: Fastening the transport securing device

### 4.1.2 Transporting the pedelec

Lithium-ion batteries store great amounts of energy. You must comply with a few precautionary measures when transporting gas cylinders.

- ▶ Discharge the battery to about 30% before placing pedelec in a vehicle to transport or take it on a trip.
- ▶ Recharge battery fully at destination.

#### 4.1.2.1 By car

Bicycle rack systems which use the handlebars or frame to hold the pedelec in an upside-down position exert inadmissible forces on its components during transportation. This can cause the supporting parts to break.

- ▶ Remove battery and all detachable components (screen, bicycle pump, water bottle and similar) from the pedelec.
- ▶ Transport the battery in a dry, clean position where it is protected from direct sunlight.
- ▶ Never use bicycle rack systems which use the pedelec's handlebars or frame to hold the pedelec in an upside-down position. The specialist dealer will give a consultation on correct selection and safe use of a rack system.
- ▶ Take into account the weight of the ready-to-use pedelec when transporting it.

#### 4.1.2.2 By train

Pedelecs can usually be transported in trains with a bicycle compartment.

- ✓ If you want to take your e-bike with you on the train, you should take into account that routes to platforms are not always barrier-free. You should thus allow enough time to get on and off the train.

- 1 Buy a bicycle ticket for the pedelec.
- 2 Fasten the pedelec securely in the compartment.
- 3 Take a seat in the passenger carriage.

It is possible to take a pedelec on certain high-speed train routes. The battery must remain firmly mounted during the journey and must not be charged.

#### 4.1.2.3 By local transport

You can normally take pedelecs on local public transport, e.g. by bus or suburban rail, if you purchase a bike ticket. There may be times when this is not permitted. Local transport companies will give you relevant information.

#### 4.1.2.4 By long-distance bus

Pedelecs can usually be taken on the long-distance bus for an extra charge, although places are limited. It is best to book early. However, not every bus line accepts pedelecs. You should check with the long-distance bus provider concerned before travelling.

#### 4.1.2.5 On flights

It is forbidden to transport rechargeable batteries on passenger planes. Most airlines won't even transport pedelecs without batteries on passenger planes either.

It is a good idea to find out about pedelec leasing at your destination in advance if you wish to use a pedelec while on holiday. This way, you won't need to forgo pedelec riding fun during your holidays.

#### 4.1.3 Shipping a pedelec

- ▶ Private users are not permitted to ship rechargeable batteries, neither by road nor by air freight.
- ▶ When shipping the pedelec, we recommend that you have the specialist dealer place it in proper packaging.

#### 4.1.4 Transporting the battery

Batteries are subject to hazardous goods regulations. Undamaged batteries may be transported by private persons in road traffic.

Commercial transport operators must comply with regulations on packaging, labelling and the transportation of hazardous goods. Open contacts must be covered and the battery securely packaged.

#### 4.1.5 Shipping the battery

The battery is considered a hazardous good and only trained persons may pack and ship a battery. Contact specialist dealer.



## 4.2 Storing

- ▶ Store pedelec, on-board computer, battery and charger in a clean, dry place where they are protected from sunlight. Do not store outdoors to ensure a long service life.

<b>Optimum pedelec storage temperature</b>	+10 ... +20 °C
--	----------------

**Table 39: Optimum storage temperature for batteries and pedelec bikes**

- ✓ Temperatures under -10 °C or over +40 °C must generally be avoided.
- ✓ Storage at about 10 °C to 20 °C is beneficial to a long battery life.
- ✓ Store pedelec, on-board computer, battery and charger separately.

### 4.2.1 Battery storage mode

#### Only applies to pedelecs with this equipment

The battery features a power-saving charge-to-storage mode, which minimises discharge from the battery.

- ▶ Setting the storage mode status in the settings.

### 4.2.2 Break in operation

#### Notice

The battery discharges when not in use. This can cause irreparable damage to the battery.

- ▶ The battery must be recharged every 6 months.

The battery may become damaged if it is connected permanently to the charger.

- ▶ Never connect the battery to the charger permanently.

The on-board computer battery discharges when it is not in use. This can cause irreparable damage to it.

- ▶ Recharge the on-board computer battery for at least 1 hour every 3 months.

- ▶ Remove the on-board computer from its mount if the pedelec is not going to be used for up to four weeks. Store the on-board computer away safely in a dry environment at room temperature.

- ▶ If the pedelec is removed from service for longer than four weeks, you need to prepare it for a break in operation.

#### 4.2.2.1 Preparing a break in operation

- ✓ Remove the rechargeable battery from the pedelec. Charge battery to about 30%–60%.
- ✓ The pedelec needs to be cleaned with a damp cloth and preserved with wax spray. Never wax the friction surfaces of the brake.
- ✓ Before longer periods without use, it is recommendable to have your specialist dealer carry out an inspection and basic cleaning and apply preservative agent.
- ✓ Pump tyres to maximum pressure. The side wall will be squashed and damaged if the pedelec stands on flat tyres.

#### 4.2.2.2 Carrying out a break in operation

- 1 Store the pedelec, battery and charger in a dry, clean environment. We recommend storing them in uninhabited rooms with smoke alarms. Dry locations with an ambient temperature between 10 °C and 20 °C are ideal.
- 2 Check the battery level after 6 months. If only one LED on the battery level indicator lights up, recharge the battery to around 30%–60%.
- 3 Recharge the display battery for at least 1 hour every 3 months.
- 4 Check the tyre pressure with an air gauge on a regular basis.
- 5 Check brake on a regular basis.
- 6 Deflect suspension fork and rear frame damper regularly to ensure a little oil reaches the seals and the suspension elements remain smooth.



## 5 Assembly

### WARNING

#### Risk of eye injury

Problems may arise if components are set incorrectly. They may cause serious injuries to the face.

- ▶ Always wear safety glasses to protect eyes when assembling pedelecs.

### CAUTION

#### Crash and crushing hazard caused by unintentional activation

There is a risk of injury if the electric drive system is activated unintentionally.

- ▶ Remove the battery.

- ✓ Assemble the pedelec in a clean, dry environment.
- ✓ The work environment temperature should be between 15 °C and 25 °C.
- ✓ The fitting stand used must be approved for a maximum weight of least 30 kg.

### 5.1 Unpacking

The packaging material consists mainly of cardboard and plastic film.

- ▶ Dispose of the packaging in accordance with the regulatory requirements (see Section 10).
- ⇒ Pedelecs are fully assembled in the factory for test purposes and then dismantled for transportation. The pedelec is 95% to 98% pre-assembled.

### Scope of delivery

<input type="checkbox"/>	1 × pre-assembled pedelec
<input type="checkbox"/>	1 × front wheel
<input type="checkbox"/>	2 × pedals
<input type="checkbox"/>	2 × quick releases (optional)
<input type="checkbox"/>	1 × charger
<input type="checkbox"/>	1 × set of operating instructions on CD
<input type="checkbox"/>	1 × battery (supplied separately from the pedelec)

### 5.2 Required tools

The following tools are required to assemble the pedelec:

	Knife
	Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm
	Torque wrench Working range 5... 40 Nm
	<b>by.schulz handlebars:</b> TORX® bits: T50, T55, and T60
	Hex key 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm
	Cross-recess screwdriver
	Slotted-head screwdriver

Table 40: Tools required for assembly



## 5.3 Commissioning

Only trained specialist staff may perform initial commissioning since initial commissioning of the pedelec requires special tools and specialist knowledge.

Experience has shown that a pedelec which has not yet been sold is automatically handed to customers as soon as it appears ready to ride.

It makes sense to prepare each pedelec so that it is fully ready for use immediately after being assembled.

- ▶ Complete an assembly report to document quality assurance (see Section 11.1).
- ▶ Carry out all possible assembly work specified on the assembly report.
- ▶ Record all actions completed on the assembly report.

### 5.3.1 Checking the battery

The battery must be checked before it is charged for the first time.

- ▶ Press the **On-Off button (battery)**.
- ⇒ If none of the LEDs on the **battery level indicator** light up, the battery may be damaged.
- ⇒ The battery may be fully charged if at least one, but not all, of the LEDs on the **battery level indicator** lights up.



### 5.3.2 Adjusting the suspension system to body weight

#### Not included in price



Seat post and forks are components that may be replaced after approval by the vehicle or parts manufacturer.

Replacing with different sizes and hardnesses within a product series is permitted for seat posts.

Steel suspension in suspension forks and seat posts are designed to bear the rider's body weight. If the body weight is exceeded or not reached, the suspension system will no longer function as intended. This has no effect on the suspension fork's or seat post's approved load capacity but the suspension system will no longer function perfectly or it won't work at all.

- ▶ Adjust all components such as suspension forks or suspension seat posts with steel springs to the rider's body weight.

#### 5.3.2.1 Adjusting SR Suntour suspension elements

##### Not included in price

SR SUNTOUR steel suspension forks and parallelogram seat posts are available in three different hardness types for different body weights:

Coil spring model	Soft	Medium	Rigid
Max. bodyweight [kg]	50... 75	70... 95	90... 120

Table 41: Suspension hardness and body weight

Unless specified otherwise, SR Suntour forks and seat posts are supplied with medium hardness ex factory.

A harder and a softer suspension hardness are available so that the suspension fork can be adjusted to the rider's body weight.



Figure 95: SR Suntour coil spring hard

- 1 Ask about body weight before selling the pedelec.
- 2 Compare with Table Tabelle 41 auf Seite 172.
- 3 If the body weight differs from the specifications, order suitable spring elements from SR Suntour and install them.



### 5.3.3 Adjusting the LIMOTEC seat post

Only applies to pedelecs with this equipment

- ✓ The rider's body weight exceeds or falls below the seat post's functional weight.
- 1 Order new Limotec seat post with suitable functional weight.
- 2 Remove existing seat post.

#### Replacing Limotec A1 and A5

- 3 Use the seat height formula to calculate the optimum seat post height for leg length:  
Seat height ( $SH$ ) = inner leg length ( $I$ )  $\times$  0.9
- 4 Lower the seat post further into the seat tube.
- 5 Tighten the seat post Bowden cable in the frame up to the remote control to the same length as the seat post was lowered.
- 6 Trim the seat post Bowden cable on the handlebars if necessary.



### 5.3.4 Preparing the wheel

There is an arrow on the sides of the tyres with the inscription ROTATION to show the direction of rotation. The inscription says DRIVE on older tyres. The rotation direction arrow indicates the recommended direction of rotation. On road tyres, the direction of rotation is mainly for optical reasons.



Figure 96: Rotation direction arrow

The direction of rotation is much more important on off-road terrain because the tread creates an interlock with the ground. While the rear wheel needs to transmit the drive forces, the front wheel is responsible for transmitting braking and steering forces. Drive and braking forces have different directions of action. This is why some tyres are mounted on the front and rear wheels in opposite directions. On these tyres, there are two rotation direction arrows:

- The FRONT rotation direction arrow indicates the recommended direction of rotation for the front wheel.
- The REAR rotation direction arrow indicates the recommended direction of rotation for the rear wheel.



Figure 97: Rotation direction arrow on MTB tyres

- ▶ The rotation direction arrow must point in the direction of travel when the wheel is placed in the fork.
- ▶ There are also non-directional tyre profiles with no rotation direction arrow.



### 5.3.5 Installing the wheel in the SUNTOUR fork

Only applies to Suntour forks with this equipment

#### 5.3.5.1 Screw-on axle (12AH2 and 15AH2)

Only applies to Suntour forks with this equipment

✓ Before installing the wheel, ensure that the O-ring is in the right position on the thread piece.

- 1 Insert the front wheel into the fork ends.
- 2 Insert the axle into the hub on the drive side.

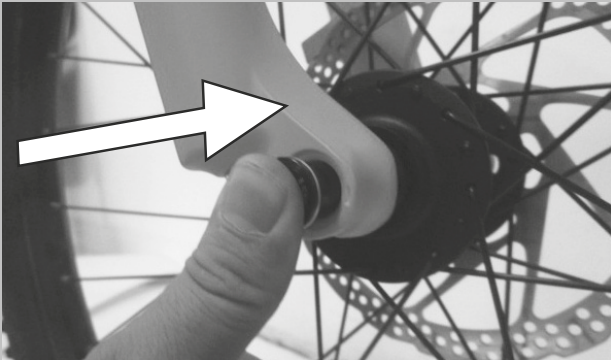


Figure 98: Inserting the axle in the direction of the arrow

- 3 Use a 6 mm hex key to tighten the axle using between 8 and 10 Nm. The axle thread must be visible.

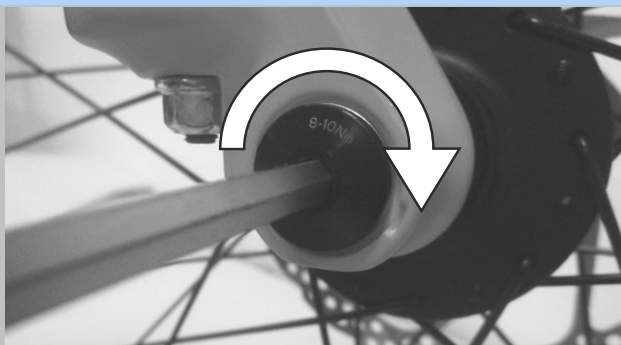


Figure 99: Tighten the axle in the direction of the arrow

- 4 Insert the securing screw on the non-drive side.



Figure 100: Inserting the securing screw

- 5 Tighten the securing screw with a 5 mm hex key using between 5 and 6 Nm.

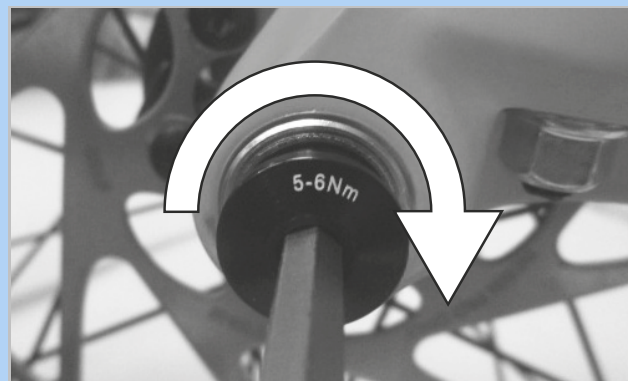


Figure 101: Tightening the securing screw

⇒ The wheel is now fitted.



### 5.3.5.2 20 mm cross axle

Only applies to Suntour forks with this equipment

**CAUTION**

**Crash caused by loose cross axle**

A faulty or incorrectly installed cross axle may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Never fit a defective cross axle.

**Crash caused by faulty or incorrectly installed cross axle**

The brake disc becomes very hot during operation. Parts of the cross axle may become damaged as a result. The cross axle becomes loose. This will cause a crash with injuries.

- ▶ The cross axle and the brake disc must be opposite one another.

**Crash caused by incorrectly set cross axle**

Insufficient clamping force will result in unfavourable transmission of force. The suspension fork or the quick release axle may break. This will cause a crash with injuries.

- ▶ Never fasten the cross axle with a tool (e.g. hammer or pliers).

- 1 Insert the cross axle into the hub on the drive side.

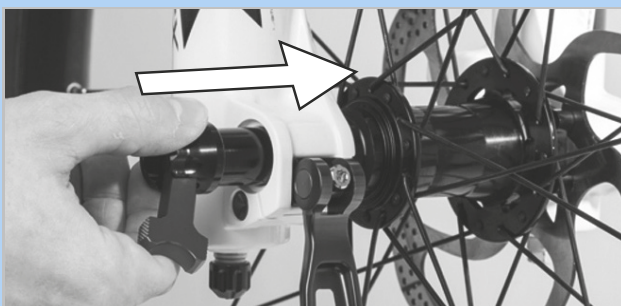


Figure 102: Inserting the cross axle in the direction of the arrow

- 2 Tighten the cross axle with the red handle.

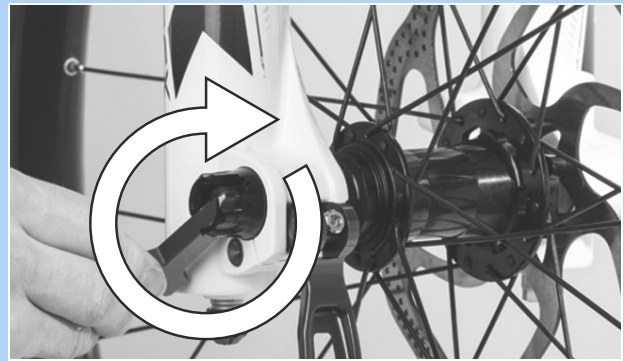


Figure 103: Tighten the axle in the direction of the arrow

- 3 Push red lever into the cross axle.

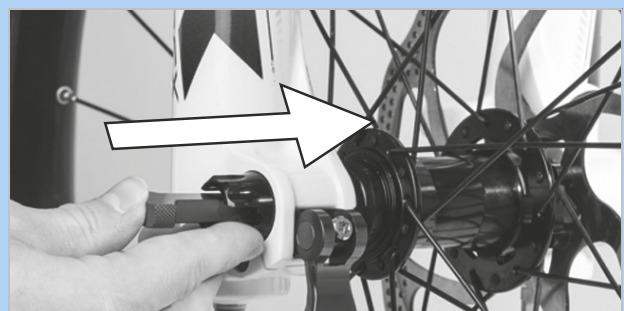


Figure 104: Pushing the red lever in the direction of the arrow

- 4 Closing the quick release lever.

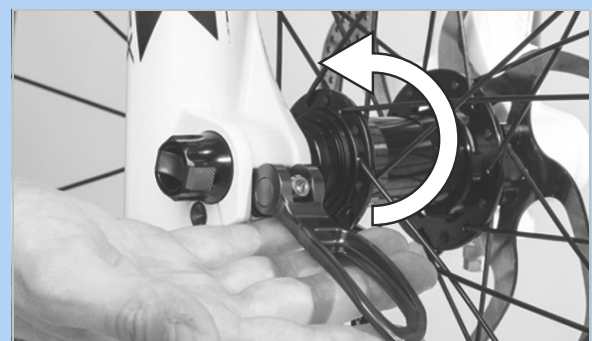


Figure 105: Pressing the quick release lever in the direction of the arrow

⇒ The cross axle is secured.





- 5 Check the position and clamping force of the quick release lever. The quick release lever must be flush with the shock absorber.



Figure 106: Perfect position for the clamping lever

- 6 Use 4 mm hexagon socket spanner to adjust the clamping lever clamping force if required.

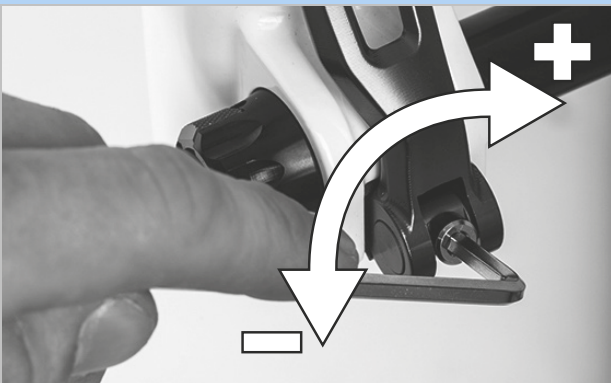


Figure 107: Adjusting the quick release clamping force

- 7 Check the quick release lever position and clamping force.

⇒ The wheel is now fitted.



### 5.3.5.3 Q-LOC quick release

Only applies to Suntour forks with this equipment

#### CAUTION

##### Crash caused by unfastened quick release

A faulty or incorrectly installed quick release may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Never fit a defective quick release.

##### Crash caused by faulty or incorrectly installed quick release

The brake disc becomes very hot during operation. Parts of the quick release may become damaged as a result. The quick release comes loose. This will cause a crash with injuries.

- ▶ The front wheel quick release lever and the brake disc must be situated on opposite sides.

##### Crash caused by incorrectly set clamping force

Excessively high clamping force will damage the quick release and cause it to lose its function. Insufficient clamping force will result in unfavourable transmission of force. The suspension fork or the quick release may break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

- ✓ Before installing, ensure that the quick release flange is extended. Open the lever fully.

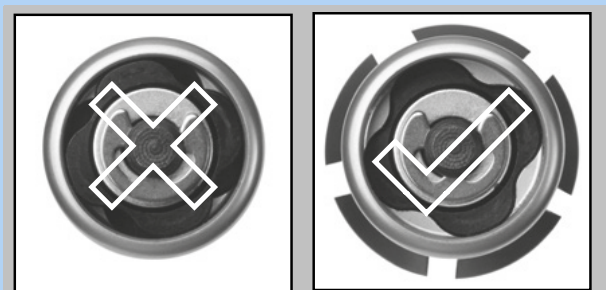


Figure 108: Closed and opened flange

- 1 Push in the quick release until you can hear a click. Make sure that the flange is extended.



Figure 109: Inserting the quick release in the direction of the arrow

- 2 Adjust tensioning with half-open clamping lever until the flange reaches the fork end.

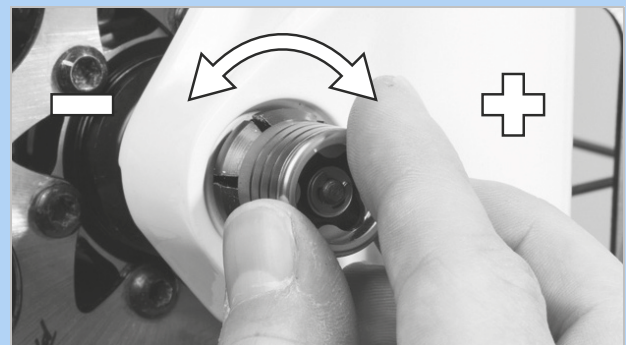


Figure 110: Adjusting the clamping

- 3 Fully close the quick release. Check that it is firmly in place and adjust it on the flange if necessary.



Figure 111: Closing the quick release

- ⇒ The wheel is now fitted.



### 5.3.6 Fitting the pedals

The pedals have two different threads to ensure they don't come loose while the rider is pedalling.

- The pedal on the left facing the direction of travel has a left-hand thread and is marked L.
- The pedal on the right facing the direction of travel has a right-hand thread and is marked R.

The mark is either on the top end, the axle or the pedal body.

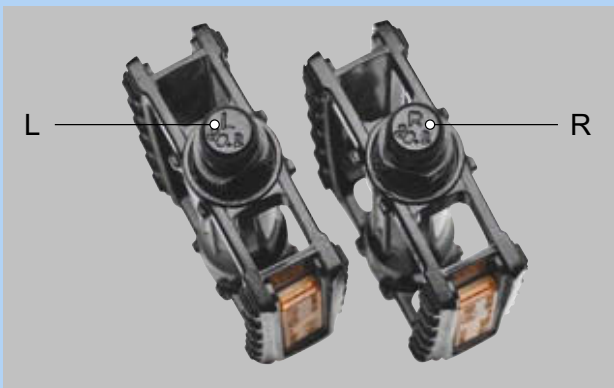


Figure 112: Example of mark on pedals

- 1 Coat threads in both pedals with waterproof grease.
- 2 Turn the pedal marked L anti-clockwise by hand into the crank arm on the left as seen when facing the direction of travel.



Figure 113: L-pedal in the left-hand crank arm

- 3 Turn the pedal marked R anti-clockwise by hand into the crank arm on the right as seen when facing the direction of travel.



Figure 114: R-pedal in the right-hand crank arm

- 4 Use a 15 mm spanner to fasten the left-hand pedal thread in an anti-clockwise direction and the right-hand pedal in a clockwise direction with a torque between 33 Nm and 35 Nm.



## 5.3.7 Checking the stem and handlebars

### 5.3.7.1 Checking the connections

- 1 Stand in front of the pedelec. Clamp the front wheel between your legs. Grasp the handlebar grips.
- 2 Try to twist the handlebars against the direction of the front wheel.  
⇒ The stem must not move or twist.
- 3 If the stem can be twisted, check fastening.  
⇒ If the stem cannot be fastened, contact your specialist dealer.

### 5.3.7.2 Checking stem is firmly in position

- 1 Press full body weight on the handlebars.  
⇒ The handlebars must not move downwards in the fork.

#### Stem with clamping lever version I

- 2 If the handlebars should move, increase the lever tension in the clamping lever.
- 3 Turn knurled nut in a clockwise direction with the clamping lever open.
- 4 Close clamping lever and check stem is firmly in position again.
- 5 If the handlebars cannot be fastened, contact your specialist dealer.

#### Stem with clamping lever version II and stem with screw

- ▶ If the handlebars cannot be fastened, contact your specialist dealer.

### 5.3.7.3 Checking the bearing clearance

- 1 Place the fingers of one hand on the upper headset cup. Pull the front wheel brake with the other hand and try to push the pedelec backwards and forwards.  
Keep in mind that there may be noticeable backlash due to worn-out bearing bushes or brake lining backlash in suspension forks and disc brakes.  
⇒ The headset cup halves must not move towards one another.
- 2 Adjust bearing clearance as per the stem repair manual as quickly as possible; otherwise, the bearing will become damaged. Contact specialist dealer.

## 5.4 Selling the pedelec

- ▶ Complete pedelec pass on the operating instructions envelope.
- ▶ Note down the manufacturer and the number of the battery key.
- ▶ Adjust the stand and shifter.
- ▶ [Adjusting the pedelec](#) (see Section 6.4).
- ▶ Briefly instruct pedelec rider on all the pedelec's functions (see Section 6.8 to Section 6.18.2).

## 6 Operation

### 6.1 Risks and hazards

#### WARNING

##### Injuries and death caused by blind spots

Other road users, trucks, cars and pedestrians often underestimate the speed of pedelecs. Likewise, other road users frequently do not see pedelecs. This may lead to an accident with serious injuries or even death.

- ▶ Wear a helmet. The helmet must have a reflective strip or a light in a clearly visible colour.
- ▶ Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety.
- ▶ Always take a defensive approach to riding.
- ▶ Avoid the blind spots of vehicles turning off the road. Reduce speed as a precaution when other road users turn right.

##### Injuries and death caused by riding incorrectly

A pedelec is not a bicycle. Mistakes made while riding and underestimated speeds quickly lead to hazardous situations. This can cause an accident with serious or fatal injuries.

- ▶ Slowly get used to road traffic and speed before riding at speeds over 12 km/h, especially if you have not ridden a bike for some time.
- ▶ Increase the levels of assistance gradually.
- ▶ Practice braking hard on a regular basis.
- ▶ Take and complete a riding safety course.

#### WARNING

##### Injuries and death caused by distraction

A lack of concentration while riding increases the risk of an accident. This may cause a crash with serious injuries.

- ▶ Never allow yourself to be distracted by the on-board computer or your smartphone.
- ▶ Stop pedelec if you want to make inputs on the on-board computer other than change the level of assistance. Only enter data when stationary.

#### CAUTION

##### Crash caused by loose clothing

Laces, scarves and other loose items may become entangled in the spokes on the wheels and the chain drive. This may cause a crash with injuries.

- ▶ Wear sturdy footwear and close-fitting clothing.

##### Crash caused by difficult-to-spot damage

If the pedelec topples over or you have a fall or an accident, there may be difficult-to-spot damage to components such as the brake system, quick releases or frame. This may cause a crash with injuries.

- ▶ Take pedelec out of service. Contact specialist dealer.

##### Crash caused by soiling

Heavy soiling can impair pedelec functions, such as braking. This may cause a crash with injuries.

- ▶ Remove coarse soiling before riding.


**CAUTION**

### Crash caused by material fatigue

Intensive use can cause material fatigue. A component may suddenly fail in case of material fatigue. This may cause a crash with injuries.

- ▶ Remove the pedelec from service immediately if there are any signs of material fatigue. Have your specialist dealer inspect the component.
- ▶ Arrange the mandatory inspection appointments with your specialist dealer on a regular basis. During the major inspection, the specialist dealer will inspect the pedelec for any signs of material fatigue on the frame, fork, suspension element mountings (if there are any) and components made of composite materials.

Carbon becomes brittle when exposed to heat radiation such as heating. This can cause the carbon part to break and result in a crash with injuries.

- ▶ Never expose carbon components parts on the pedelec to strong sources of heat.

### Crash caused by poor road conditions

Loose objects, such as branches and twigs, may become caught in the wheels and cause a crash with injuries.

- ▶ Be aware of the road conditions.
- ▶ Ride slowly and brake in good time.

The *tyres* may slip on wet roads. In wet conditions you must also expect a longer braking distance. The braking sensation differs from the usual sensation. This can cause loss of control or a crash, which may result in injuries.

- ▶ Ride slowly and brake in good time when it is raining.

## Notice

Heat or direct sunlight can cause the *tyre pressure* to increase above the permitted maximum pressure. This can destroy the *tyres*.

- ▶ Park pedelec in the shade.
- ▶ On hot days, regularly check the *tyre pressure* and adjust it as necessary.

When riding downhill, high speeds may be reached. The pedelec is only designed to exceed a speed of 25 km/h for short intervals. The *tyres* in particular can fail if exposed to a continuous load.

- ▶ Use the brakes to decelerate the pedelec if you reach speeds greater than 25 km/h.

Moisture penetrating at low temperatures may impair individual functions due to the open structural design.

- ▶ Always keep the pedelec dry and free from frost.
- ▶ If the pedelec is used at temperatures below 3 °C, the specialist dealer must perform a major inspection beforehand and prepare it for winter use.

Off-road riding subjects the joints in the arms to severe strain.

- ▶ Take a break from riding every 30 to 90 minutes, depending on the road surface conditions and your physical fitness.

## 6.2 Tips for a greater range

The pedelec's range depends on many influencing factors. A single battery charge may only last fewer than 20 kilometres but much more than 100 is also possible. Test the pedelec's range before embarking on longer rides. There are a few tips which will generally help you maximize range.

### Suspension elements

- ▶ Only open suspension fork and damper when necessary on terrain or gravel paths. Block suspension fork and damper on tarmacked roads or on hills.

### Mileage

The more own physical effort the rider makes, the greater the attainable range is.

- ▶ Shift down 1 to 2 gears to increase the induced power and pedalling frequency.

### Pedalling frequency

- ▶ Ride using pedalling frequencies of over 50 revolutions per minute. This optimises the electric drive's efficiency.
- ▶ Avoid pedalling very slowly.

### Weight

- ▶ Minimise the total weight of pedelec and baggage.

### Stopping and starting

- ▶ Ride long distances at a constant speed.
- ▶ Avoid stopping and starting frequently.

### Level of assistance

- ▶ The lower the selected level of assistance is, the greater the range is.

### Gear switching habits

- ▶ Use a low gear and a low level of assistance on hills and when setting off.
- ▶ Switch up a gear depending on the speed and terrain.
- ▶ 50-80 crank rotations per minute are optimal.
- ▶ Avoid high stress loads on the crank during a gear change.
- ▶ Switch gear back in good time, e.g. before inclines.

### Tyres

- ▶ Always select the right tyres for the surface type. As a general rule, narrower treads move along more easily than heavier ones. Long studs and large grooves usually have an unfavourable effect on energy consumption.
- ▶ When riding on asphalt, it is important to always use the maximum permitted tyre pressure.
- ▶ When riding off-road, on gravel tracks or soft woodland or meadow soils, it is important to remember: the lower the tyre pressure is, the greater the rolling resistance is and thus the greater electric drive system energy consumption is.

### Rechargeable battery

Electrical resistance increases as the temperature drops. Battery performance is reduced. As a result, you should expect the range to be shorter than normal in winter.

- ▶ Use a thermal protection sleeve on the battery in winter.

The range also depends on the battery's age, charge level and state of repair.

- ▶ Maintain the battery and replace older batteries where necessary.

## 6.3 Instruction and customer service

The supplying specialist dealer will provide customer service. Contact details can be found on the pedelec pass for these operating instructions. The specialist dealer will explain all the pedelec functions to the new owner in person, this being when the specialist dealer hands over the pedelec at the latest. These operating instructions are provided with every pedelec, so that the rider can consult them at a later stage.

The supplying specialist dealer will also perform all inspection, modifications and repairs in the future.

## 6.4 Adjusting the pedelec



### Crash caused by incorrectly adjusted torque

If a screw is fastened too tightly, it may break. If a screw is not fastened enough, it may loosen. This will cause a crash with injuries.

- ▶ Always observe the torque indicated on the screw and in the operating instructions.

Only a correctly adjusted pedelec will guarantee the desired ride comfort and health-promoting activity.

All settings must be re-configured if the body weight or maximum baggage weight changes.

## 6.4.1 Preparing

The following tools are required to adjust the pedelec:









	Tape measure
	Scales
	Spirit level
	Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm und 15 mm
	Torque wrench Working range 5... 40 Nm
	Hex key 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm
	Cross-recess screwdriver
	Slotted-head screwdriver

Table 42: Tools required for assembly



## 6.4.2 Riding position

The starting point for a comfortable posture is the correct position of the pelvis. If the pelvis is in the wrong position, it can cause different types of pain, e.g. in the shoulder or back.

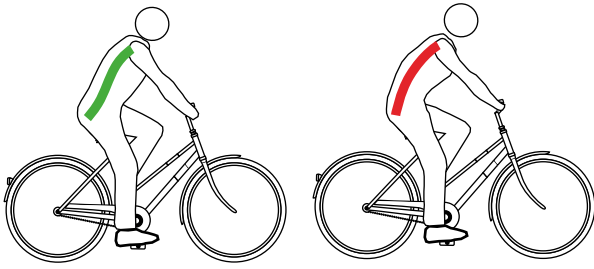


Figure 115: The pelvis is in the right position (green) or incorrect position (red)

The pelvis is in the right position if the spine forms an S-shape and a natural, easy arch.

The pelvis is positioned incorrectly if it tilts slightly backwards. As a result, the spine becomes curved and can no longer deflect to an optimal extent.

A suitable riding position must be selected beforehand depending on the pedelec type, physical fitness and desired trip distance or speed.

It is especially advisable to check and optimise the riding position once more before longer rides.





	Position on roadster	Position on city bike	Position on trekking bike	Position on sports bike
				
<b>Angle of upper body (black dashed line)</b>	Upright, almost vertical posture, back at an angle of almost 90°. Handlebars and handles are very close to the upper body.	Slightly inclined upper body, back at an angle of 60°...70°.	Sharply inclined upper body, back at an angle of 30°...60°. Greater distance between handlebars and saddle.	Greatly inclined upper body, back at an angle of 15°...30°. Saddle higher than the handlebars.
<b>Upper arm-upper body angle (red line)</b>	Extremely acute angle at around 20°. The upper arms are almost parallel to the upper body. Hands are simply placed loosely on the handlebars.	An angle of 75°–80° is optimum. Many people prefer a smaller angle of up to 60° as it requires less effort to support the shoulders, arms and hands.	An angle of 90° is optimum. The muscular support required in the arms, back and shoulder girdle is reduced at 90°.	Above 90°. Shoulders, arms and hands need to provide a great deal of support, the supporting muscles in the back are heavily strained and the load on the bearing surface shifts to the front.
<b>Saddle-handlebar height difference [cm] (blue and green line)</b>	>10 The handlebars are positioned far higher than the saddle.	10... 5 The handlebars are positioned higher than the saddle.	5... 0 Handlebars and saddle are almost at the same height.	< 0 The saddle is positioned far higher than the handlebars.
<b>Benefits</b>	The spine is intuitively moved into its natural S-shape. The strain on arms and hands is very slight – no effort required to support.	The upright position provides a good overview in traffic. Force can be applied to the pedals when pedalling without using much energy.	Shoulders, neck and hands provide more of the support effort, thus promoting a dynamic, agile riding style. Impact is reduced on the back, spine and buttocks, which is particularly important on longer rides. The whole body can apply force to the pedals effectively.	Optimum power transmission. Aerodynamic: low air resistance.
<b>Disadvantages</b>	Force is applied relatively inefficiently to the pedals. Weight rests exclusively on the buttocks. The spine slumps after a short time for many people (pelvic straightening).	The arms are often stretched through to the high handlebars – this leads to tense shoulders and painful hands. The spine tends to slump quickly due to the "high position".	There is greater strain on the hands, neck and shoulders. The muscular system needs to be trained for this higher strain, i.e. riders should practise.	Requires highly trained muscles in back, legs, shoulders, abdomen! Comfortable riding position only for people who are fit.
<b>Fitness level and use</b>	Low fitness level, occasional cyclists.	Medium fitness level, city cyclists.	Medium to high fitness level, riding long distances.	Speed-oriented, sports pedelec riding.
<b>Suitable pedelec types</b>	City bike Folding bike	City bike Cargo bike	Trekking bike	Mountain bike Racing bicycle

Table 43: Overview of riding positions

### 6.4.3 Seat post

#### 6.4.3.1 Adjusting the seat post to body weight

Not included in price

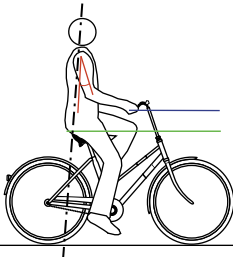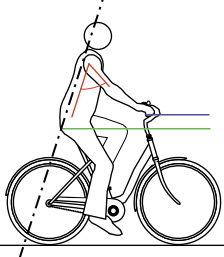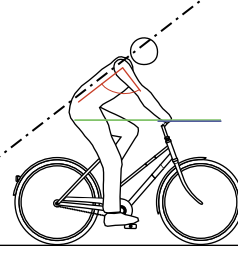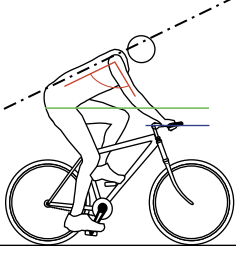

Seat posts are components that may be replaced after approval by the vehicle or parts manufacturer. Only seat posts that are approved for use on e-bikes may be used to replace existing ones.

Replacing with different sizes and hardnesses within a product series is permitted for seat posts. Moreover, seat posts may be exchanged if the rearward offset for the series or original range of use is not greater than 20 mm. This is because a change in load distribution outside the intended adjustment range can lead to hazardous steering performance. The seat post length must always be the same when replacing posts.

The correct functioning of the following seat posts depends on the body weight:

- Suspension seat post
- Rhomboid seat post
- Lowerable seat post

If the body weight falls below or exceeds the specifications in Section Maximum permitted total weight (PTW), either the seat post spring or, in the case of integrated seat posts, the complete seat post must be replaced with a seat post from the same product series that is appropriate for the body weight.

The preload in non-damped suspension seat posts must be adjusted in such a way that the suspension seat post does not deflect with just body weight. This prevents the suspension seat post from deflecting and bobbing intermittently at higher pedalling frequencies or if the rider pedals irregularly.

The spring stiffness can be set lower with damped suspension seat posts, thus making use of the negative deflection.

### 6.4.4 Saddle

#### 6.4.4.1 Replacing the saddle

Not included in price



Saddles are components that may be replaced after approval by the vehicle or parts manufacturer. Replacing different sizes within a product series is permitted for saddles.

Moreover, saddles may be exchanged if the rearward offset to the series or original range of use is not greater than 20 mm since a change in load distribution outside the intended adjustment range can lead to critical steering performance. The saddle shape plays a role here. Only saddles that are approved for use on e-bikes may be used to replace the existing ones.

If the pre-mounted saddle is uncomfortable or causes pain, a saddle optimised to the rider's physique must be used.

- 1 Determining the saddle shape (see Section 6.4.4.2).
- 2 Determining the minimum saddle width (see Section 6.4.4.3).
- 3 Selecting the saddle hardness (see Section 6.4.4.4).

### 6.4.4.2 Determining the saddle shape

#### Ladies' saddle

To distribute the pressure optimally over the female bone structure in the seat area, a ladies' saddle should:

- have a relief opening far to the front
- have a wide V-shaped saddle edge.



Figure 116: Example: Ergotec ladies' saddle

#### Men's saddle

Numbness when pedalling is often caused by high pressure in the sensitive perineal area. If the saddle is adjusted incorrectly, too narrow or too hard, the nose of the saddle presses directly onto the genitals. Blood circulation deteriorates.

The genitals on the outside are seldom the cause of discomfort since they can move out of the way and are not compressed by bone structures.

You should always consult a doctor if you have problems with your prostate. After a prostate operation or inflammation, it is advisable to avoid any pressure in the perineal area and take a longer break from pedelec riding after consulting your doctor. A prostate saddle should then be used. This reduces the pressure in the perineal area by up to 100%.

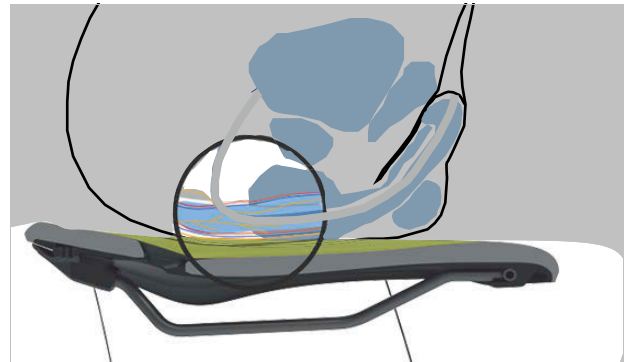


Figure 117: Pressure points on a saddle, male anatomy

To distribute the pressure on the male bone structure in the seat area optimally, the saddle should:

- Shift the pressure to the sitting bones and parts of the pubic arches
- The perineal area must remain as free of pressure as possible



Figure 118: Example: Ergotec men's saddle

### 6.4.4.3 Determining the minimum saddle width

#### With corrugated cardboard

- 1 Place corrugated cardboard on a flat, hard, unpadded seat.
- 2 Sit in the middle of the corrugated board.

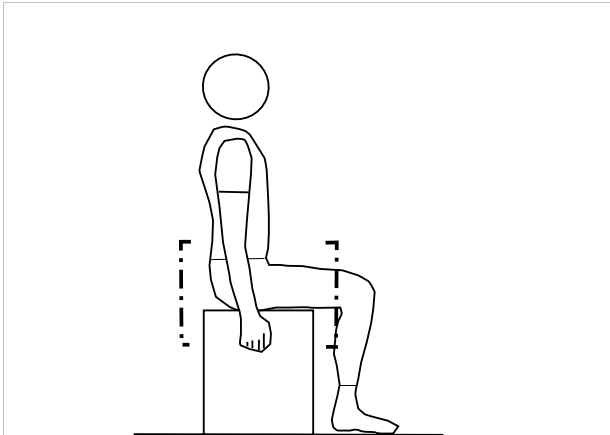


Figure 119: Sitting on the corrugated board

- 3 Pull the seat with your hands and arch your back.
  - ⇒ The sitting bones are more prominent and stand out more clearly on the corrugated cardboard.
- 4 Trace the outer edges of the two depressed areas in a circle.
- 5 Determine the centre of both circles and mark them with a dot.
- 6 Measure the distance between the two centres.

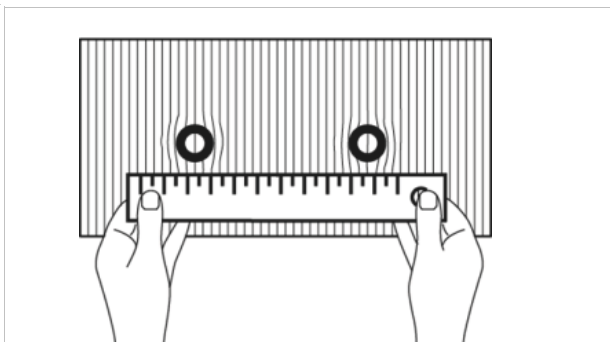


Figure 120: Measuring the distance

- ⇒ The distance between the two centre points is the sit bone distance and corresponds to the minimum saddle width.
- 7 Calculate saddle width (see Section 6.5.4.4).



#### With a gel cushion

- 1 Smooth gel cushion.
- 2 Place gel cushion on a flat, hard, unpadded seat.
- 3 Sit in the middle of the gel cushion.

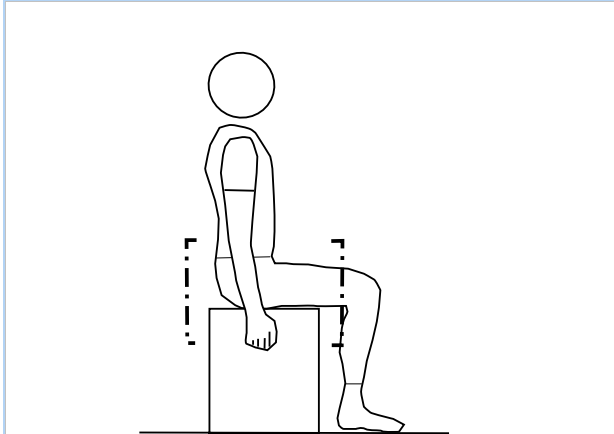


Figure 121: Sitting on the gel cushion

Pull the seat with your hands and arch your back.

- 4 The sitting bones are more prominent and stand out more clearly on the gel cushion.

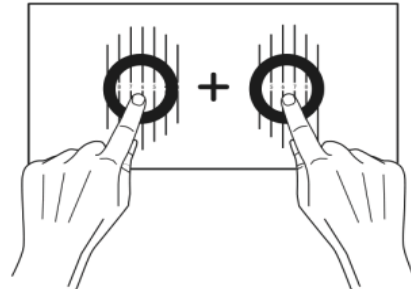


Figure 122: Adding the centres together

- 5 Determine the centres of both sitting bones.
- 6 Add the two values together.
  - ⇒ The total of the values is the sitting bone distance and corresponds to the minimum saddle width.
- 7 Calculate saddle width (see Section 6.5.4.4).

## Using calculation

Depending on the position, the following value is added to the minimum saddle width.

Position on roadster	+ 4 cm
Position on city bike	+ 3 cm
Position on trekking bike	+ 2 cm
Position on sports bike	+ 1 cm
Triathlon/time trials	+ 0 cm

**Table 44: Calculating the saddle width**

### 6.4.4.4 Selecting the saddle hardness

Saddles are available in a wide range of hardnesses and must be adapted to the pedelec's use:

- A pedelec that is mainly used for commuting in jeans calls for a soft saddle.
- A pedelec that is mainly used for sports riding with padded cycling shorts requires a hard saddle.

If the degree of hardness is not suitable, a new saddle must be selected.

### 6.4.4.5 Adjusting the saddle hardness

#### Only applies to pedelecs with this equipment

The hardness of air cushion saddles can be adjusted using the pump valve beneath the seat surface.

Soft	Pump 3 times
Medium	Pump 5 times
Hard	Pump 10 times

**Table 45: VELO air cushion saddle settings**

#### 6.4.4.6 Straightening the saddle

- Position saddle in direction of travel. In doing so, align the tip of the saddle with the top tube.

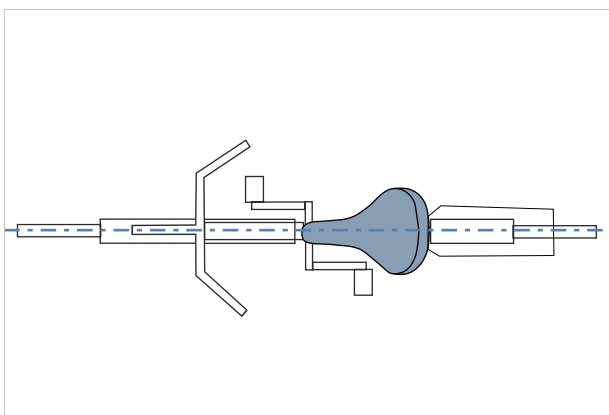


Figure 123: Positioning the saddle in direction of travel

#### 6.4.4.7 Adjusting the saddle height

- ✓ To adjust the saddle height safely, either:
  - Push the pedelec near to a wall so that the pedelec rider can lean on the wall to support themselves or
  - Ask another person to hold the pedelec.
- 1 Use the seat height formula to roughly set the saddle height:  

$$\text{Seat height (SH)} = \text{inner leg length (I)} \times 0.9$$
- 2 Climb onto the bicycle.
- 3 Place your heel on the pedal and extend your leg, so that the pedal is at the lowest crank rotation point. Your knee should now be fully extended.

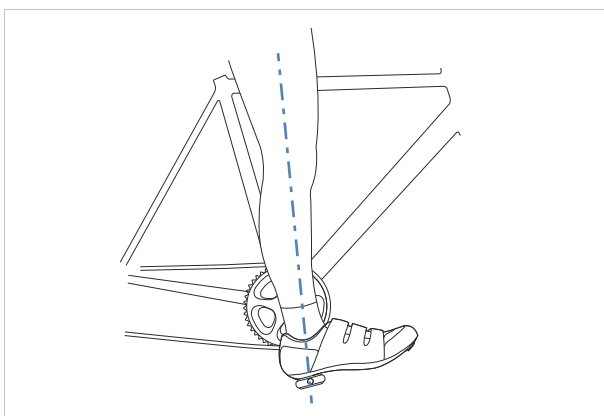


Figure 124: Heel method

- 4 Take a test ride.

- ⇒ Pedelec riders sit straight on the saddle at an optimal saddle height.
  - If the pelvis moves to the left and right as you pedal, the saddle is too high.
  - If your knees are painful after a few kilometres, the saddle is too low.
- ⇒ Position the seat post according to needs if necessary. Adjust the seat height with the quick release.

- 5 Open the quick release on the seat post to change the seat height (1). To do so, push the clamping lever away from the seat post (3).

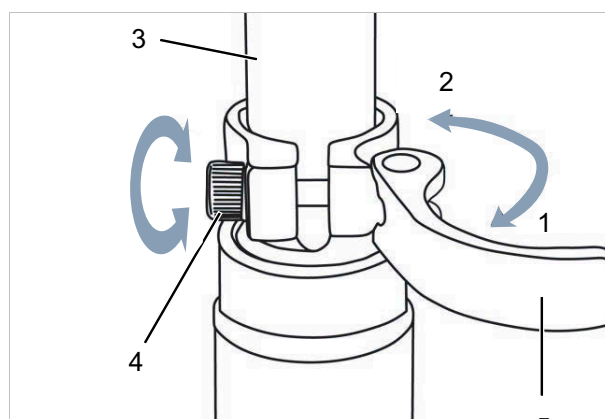


Figure 125: Opening the seat post quick release

- 6 Set the seat post to the required height.

### CAUTION

#### Crash caused by an excessively high seat post setting

A *seat post* which is set too high will cause the *seat post* or the *frame* to break. This will cause a crash with injuries.

- Do not pull the seat post out of the frame beyond the minimum insertion depth marking.

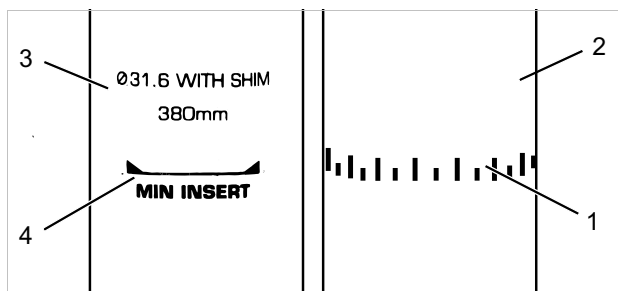


Figure 126: Detailed view of the seat post – examples of the minimum insertion depth marking

- 7 To close it, push the *seat post clamping lever* as far as it will go into the *seat post* (2).
- 8 Check the clamping force of the quick releases.

#### 6.4.4.8 Setting the saddle height with the remote control

Use the seat height formula to set the saddle height:

$$\text{Seat height (SH)} = \text{inner leg length (l)} \times 0.9$$

- 1 Lowering the saddle (see Section 6.16.1).
- 2 Raising the saddle (see Section 6.16.2).

### Notice

- ▶ If you are unable to achieve the required saddle height, lower the seat post further into the seat tube. The seat post Bowden cable must be tightened in the frame up to the remote control to the same length as the seat post was lowered.
- ▶ If this is not possible, contact your specialist dealer.

#### 6.4.4.9 Adjusting the saddle position

The saddle can be shifted on the saddle frame. The right horizontal position ensures an optimal leverage position for legs. This prevents knee pain and painful incorrect pelvis positions. If you have displaced the saddle more than 10 mm, you need to adjust the saddle height again since both settings affect one another.

- ✓ The saddle setting must only be made when the bicycle is stationary.
- ✓ To set the saddle position, either:
  - Push the pedelec near to a wall so that the pedelec rider can lean on the wall to support themselves or
  - Ask another person to hold the pedelec.
- ✓ Move the saddle within its permitted displacement range only (marked on the saddle stay).

- 1 Climb onto the pedelec.
- 2 Place the pedals into the vertical position with your feet.
  - ⇒ Pedelec riders are adopting the optimal saddle position if the perpendicular line from the kneecap runs through the pedal axle.
  - ▶ If the perpendicular line crosses behind the pedal, bring the saddle further forward.
  - ▶ If the perpendicular line crosses in front of the pedal, bring the saddle further back.

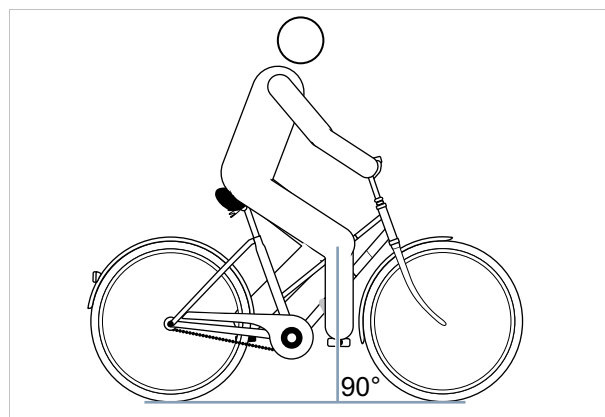


Figure 127: Knee cap perpendicular line

- 3 Unfasten and adjust the designated screw connections, and clamp them with the maximum tightening torque for the saddle clamping screws.



#### 6.4.4.10 Adjusting the saddle tilt

The saddle tilt must be adjusted to the seat height, the saddle and handlebar position, and the saddle shape to ensure an optimum fit. The seating position can be optimised in this way if needed.

The saddle prevents pedelec riders from slipping backwards or forwards when placed in a horizontal position. This prevents seat problems. In any other position, the tip of the saddle may press uncomfortably into the crotch area. It is also recommended that the centre of the saddle is exactly straight. This ensures that the rider is seated with their sit bones on the wide rear part of the saddle.

- 1 Adjust the saddle tilt to horizontal.
- 2 Position saddle middle so that it is completely straight.

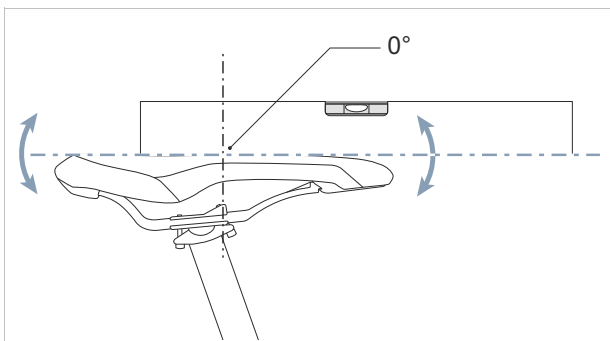


Figure 128: Horizontal saddle tilt with 0° tilt in the centre of the saddle

- ⇒ Pedelec riders sit comfortably on the saddle and do not slip backwards or forwards.
- 3 Pedelec riders tend to slip forwards on the narrow part of the saddle, adjust the saddle again to position (see Section [6.4.4.9](#)) or tilt the saddle very slightly backwards.

#### 6.4.4.11 Checking the saddle

- Check the saddle after adjustment (see Section [7.5.8](#)).

## 6.4.5 Handlebars

### 6.4.5.1 Replacing the handlebars

#### Not included in price



Handlebars are components that may be replaced after approval by the vehicle or parts manufacturer. Only handlebars that are approved for use on e-bikes may be used to replace the existing ones. Handlebars may be replaced if the cable and/or line lengths do not need to be changed. A change in riding position is allowed within the original cable length. Furthermore, the load distribution on the pedelec changes considerably and may potentially lead to hazardous steering performance.

- ▶ Check handlebar width and hand position.
- ▶ Have handlebars replaced at the specialist dealer's if necessary.

### 6.4.5.2 Adjusting the handlebar width

The handlebar width should be as wide as the rider's shoulders as a minimum. This is measured from mid-point to mid-point on the hand contact surfaces.

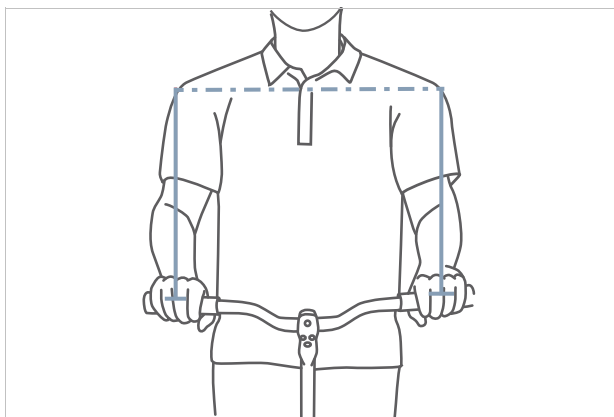


Figure 129: Determining the optimal handlebar width

The wider the handlebars are, the more control they provide, although wide handlebars require greater supporting force. Wider handlebars are particularly useful to ensure a safer ride for loaded touring bikes.

### 6.4.5.3 Adjusting the hand position

The hand is in an optimal position on the handlebars when the forearm and hand are in a straight line, i.e. the wrist is not bent. In this way, the nerves are not pinched and do not cause pain.

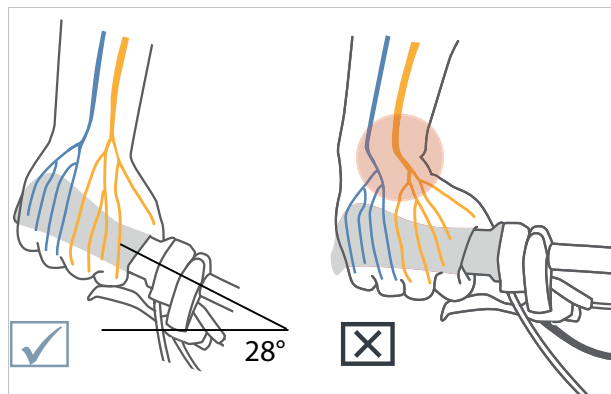


Figure 130: Distribution of nerves with curved and straight handlebars

The narrower the shoulders are, the greater the bend of the handlebars should be (maximum 28°).

Straight handlebars are advisable for sports bikes (e.g. MTB). They support direct steering behaviour, but lead to peaks in pressure and greater muscular strain on the arm and shoulder muscles.

#### 6.4.5.4 Adjusting the handlebars

The handlebars and their position determine the posture that the pedelec rider adopts on the pedelec.

- 1 After selecting the seating position (see Section 6.5.2), determine the angle of the upper body and the upper arm.
- 2 Tension the back muscles when adjusting the handlebars. The only way to stabilise the spine and protect it from excessive strain is to tension the back and abdominal muscles. Passive muscles are not able to perform this important task.
- 3 Set the required handlebar position by adjusting height and angle (see Section 6.4.6).
- 4 After adjusting the handlebars, check the saddle height and riding position again. The position of the pelvis on the saddle may have changed when the handlebars were adjusted. This can have considerable impact on the position of the hip joint due to the pelvis tilting and may change the usable leg length on the saddle support by up to 3 cm.
- 5 Correct the saddle height and position if necessary (see Section 6.5.4.8 and 6.5.4.11).

## 6.4.6 Stem

### 6.4.6.1 Replacing the stem

#### Not included in price



Handlebar-stem units are components that may be replaced after approval by the vehicle or parts manufacturer.

Only units that are approved for use on e-bikes may be used to replace the existing ones. A stem must be replaced if cable and/or line lengths do not need to be changed.

A change in riding position is allowed within the original cable length. Furthermore, the load distribution on the pedelec changes considerably and may potentially lead to hazardous steering performance.

### 6.4.6.2 Adjusting the handlebar height with quick release

#### Only applies to pedelecs with this equipment

- 1 Open the stem clamping lever.

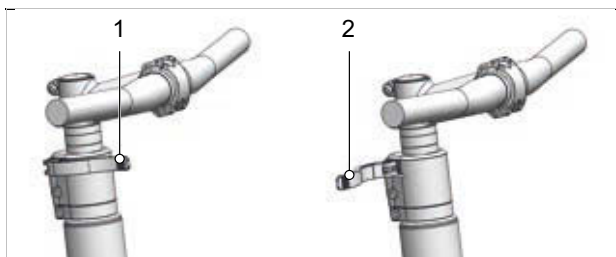


Figure 131: Open (2) and closed (1) stem clamping lever; All Up used as an example

- 2 Pull out the handlebars to the required height. Observe minimum insertion depth.

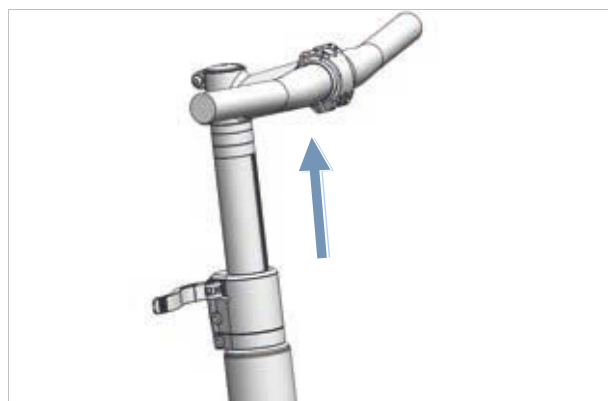


Figure 132: Pulling the handlebars upwards; All Up used as an example

- 3 Close the stem clamping lever.

### 6.4.6.3 Checking the stem stability

- ▶ Hold handlebars firmly after adjusting the saddle. Press full body weight on the handlebars.
- ⇒ The handlebars remain stable in their position.

### 6.4.6.4 Adjusting the quick release clamping force



#### Crash caused by incorrectly set clamping force

Applying excessive clamping force damages the quick release. Insufficient clamping force will result in unfavourable transmission of force. This can cause components to break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).

If the *handlebar clamping lever* stops before reaching its end position, unscrew the *knurled nut*.

- ▶ Tighten the *knurled nut* on the seat post if the *seat post clamping lever's* clamping force is not effective enough.
- ▶ Contact your specialist dealer if the clamping force cannot be set.

### 6.4.6.5 Setting the quill stem

#### Only applies to pedelecs with this equipment

In the case of a quill stem, the stem and fork steerer form a permanently interconnected component, which is clamped in the fork steerer. The stem and shaft must be replaced together.

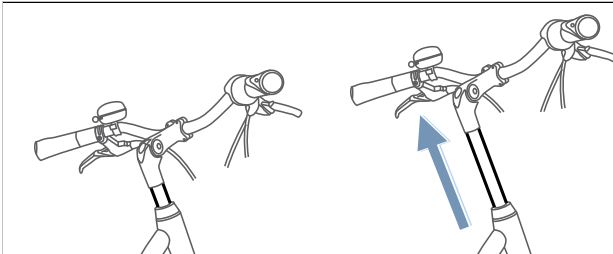


Figure 133: Adjusting the quill stem height

- 1 Undo screw.
- 2 Pull quill stem out.
- 3 Tighten screw.

#### Only applies to pedelecs with this equipment

Angle-adjustable stems are available in different lengths for quill and Ahead stems.

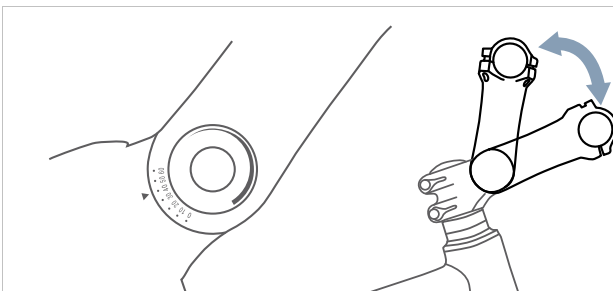


Figure 135: Different versions of angle-adjustable stems

Adjusting the stem angle (c) changes both the distance from the upper body to the handlebars (b) and the handlebar height (a).

### 6.4.6.6 Adjusting the Ahead stem

#### Only applies to pedelecs with this equipment

In the case of an Ahead stem, the stem is placed directly on the fork steerer, which protrudes over the frame.

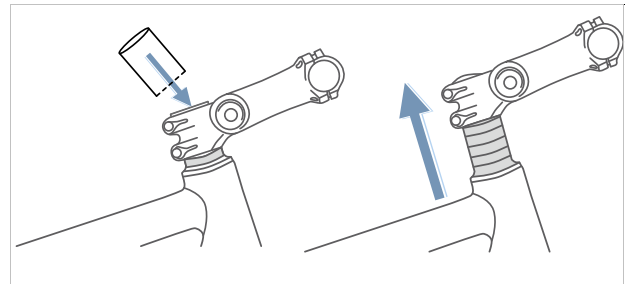


Figure 134: Raising the Ahead stem by fitting spacer rings

The handlebar height is adjusted once during production using spacer rings. The part of the fork steerer protruding is then cut off. The handlebar stem can then no longer be set higher, but only slightly lower.



Figure 136: City bike (blue) and trekking bike position (red) by changing the angle

### 6.4.6.8 Checking the stem

- Check saddle stem after adjusting it (see Section 7.5.6).

## 6.4.7 Handles

### 6.4.7.1 Replacing the handles

Not included in price



Handles with bolt clamps are components which may be replaced without approval. Only handles that are approved for use on e-bikes may be used to replace the existing ones.

If there is pain or numbness in the index, middle finger or thumb, this may be due to excessive pressure on the exit of the carpal tunnel. On longer rides, this can increasingly cause hand fatigue and make it more and more difficult to maintain a correct hand position.

In the case of ergonomically shaped handles, the palm rests on the anatomically shaped handle. A greater contact surface means that the pressure is more evenly distributed. Nerves and vessels are no longer squeezed in the carpal tunnel.

Moreover, the hand is supported and held in the correct position so that the hand can no longer bend.

If the pre-mounted handles are uncomfortable or cause pain or numbness in the index, middle finger or thumb, ergonomic handles, bar ends or multi-position handlebars should be used.

### 6.4.7.2 Adjusting ergonomic handles

Only applies to pedelecs with this equipment

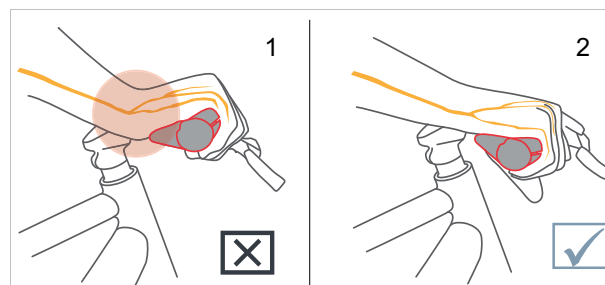


Figure 137: Incorrect (1) and correct (2) position of the handle



- 1 Undo handle clamping screw.
  - 2 Turn handle into the right position.
  - 3 Fasten handle clamping screw with the torque value indicated there.
- ⇒ The handles are firmly fastened.
- ⇒ The pull-off force of the handles is at least 100 N in the roadster, city and trekking positions, and at least 200 N in the sporty position.

### 6.4.7.3 Checking the handles

- ▶ Check handlebars after adjusting the handles (see Section [7.5.7](#)).

## 6.4.8 Tyres

### 6.4.8.1 Replacing tyres

#### Not included in price



Different tyres need to be used when the area of use is changed, more weight or greater puncture protection is added, and greater acceleration or more dynamic cornering is used.

Tyres are may only be replaced after approval by the vehicle or parts manufacturer.

Tyres may be replaced if

- They are approved for use on e-bikes
- They comply with ETRTO dimensions
- They have the same load capacity as a minimum
- They have a comparable level of puncture protection as a minimum

### 6.4.8.2 Adjust tyre pressure

The correct tyre pressure largely depends on the weight load on the tyres. This load is determined by the pedelec’s tare weight, the rider’s body weight and the luggage load.

Unlike cars, the weight of the vehicle has little impact on the total weight. Moreover, the personal preferences for low rolling resistance or a high degree of suspension comfort vary a great deal.

It is important to remember that

- the higher the tyre pressure is, the lower the wear, rolling resistance and the risk of breakdown are.
- the lower the pressure in the tyre is, the greater the comfort and grip that the tyre offers is.

In the case of pedelecs used on the road, the rule is the greater the tyre pressure is, the lower the tyre rolling resistance is. The risk of breakdown is also lower when the pressure is high. A permanently excessively low tyre pressure often leads to premature wear in the tyre. Cracking in the side wall is a typical consequence of very low tyre pressure. Abrasion is also unnecessarily high.

On the other hand, a tyre can absorb road impacts more effectively at a low pressure.

As a general rule, wide tyres are operated at a lower tyre pressure. They provide the option of exploiting the advantages of the lower tyre pressure without the serious disadvantages it causes with regard to wear, rolling resistance and breakdown protection.

- ✓ Never exceed or go below the minimum and maximum pressure limits indicated on the tyre.

1 Pump the tyre to the recommend tyre pressure.

Tyre width	Tyre pressure in bar for body weight		
	approx. 60 kg	approx. 80 kg	approx. 110 kg
25 mm	6.0	7.0	8.0
28 mm	5.5	6.5	7.5
32 mm	4.5	5.5	6.5
37 mm	4.0	5.0	6.0
40 mm	3.5	4.5	6.0
47 mm	3.0	4.0	5.0
50 mm	2.5	4.0	5.0
55 mm	2.0	3.0	4.0
60 mm	2.0	3.0	4.0

Table 46: SCHWALBE recommend tyre pressure

**2** Perform a visual check on tyres.



**Figure 138: Correct tyre pressure. The tyre is barely deformed under the load of the body weight**



**Figure 139: Far too little tyre pressure**



## 6.4.9 Brake

The handbrake grip distance can be adjusted to ensure that it can be reached more easily. The pressure point can also be adjusted to the pedelec rider's preferences.

### 6.4.9.1 Replacing brakes

#### Not included in price



The braking system components may only be replaced with original components.

In the case of disc brake linings, the lining compound may be adapted to the surface and the rider's experience.

### 6.4.9.2 Retracting the brake linings

Disc brakes require wearing-in time. The braking force increases over time. The braking force is increased during break-in time. This is also the case when the brake pads or brake discs are replaced.

- 1 Accelerate pedelec to 25 km/h.
  - 2 Brake pedelec until it comes to a halt.
  - 3 Repeat process 30 to 50 times.
- ⇒ The disc brake is retracted and provides optimal braking power.

### 6.4.9.3 Changing the handbrake position

Having the handbrake in the correct position prevents the rider from stretching their wrist too far. Moreover, the brake can also be operated without any discomfort and without changing the handle position or releasing the handle.

- ✓ Apply handbrake with the third finger phalanx in bursts to brake gently.
  - ✓ The setting for the middle finger is used for pedelec riders who brake with their middle finger or with two fingers.
- 1 Position your hand on the handle in such a way that the outer heel of the hand is flush with the end of the handlebar.
  - 2 Extend the index finger (about 15°).

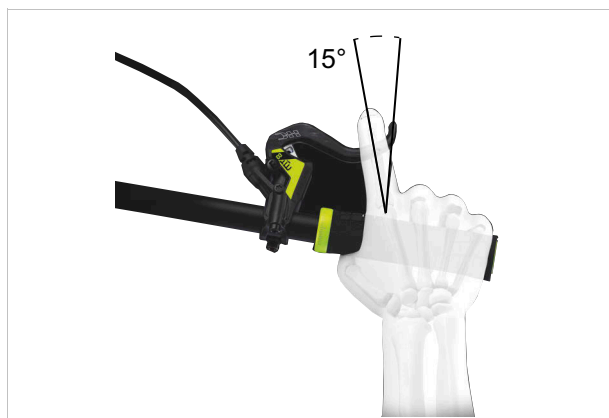


Figure 140: Handbrake position

- 3 Push handbrake outwards until the third finger phalanx sits in the recessed grip.

### 6.4.9.4 Changing the handbrake inclination angle

The nerves that pass through the carpal tunnel are connected to the thumb and the index and middle fingers. An excessively steep or excessively flat brake angle will cause the wrist to bend, thus narrowing the carpal tunnel. This can cause numbness and tingling in the thumb and index and middle fingers.

- 1 Calculate the difference between the height of the handlebars and the saddle height to determine the saddle-handlebar height difference.

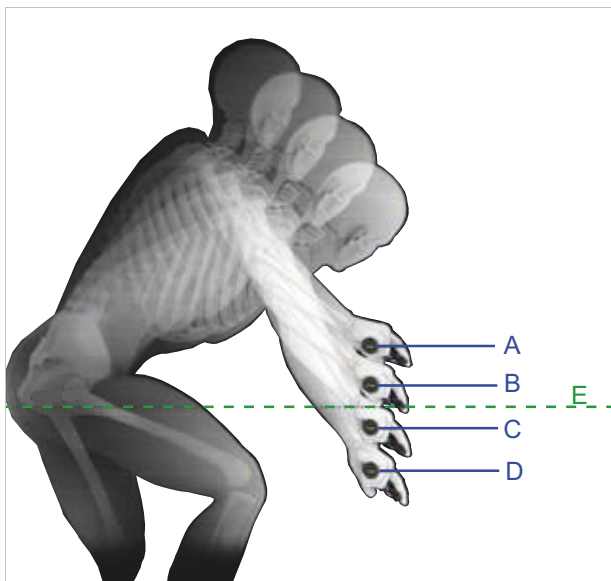



Figure 141: Example of 4 different handlebar heights (A, B, C and D) and the saddle height (E)

Calculation	Saddle-handlebar height difference [mm]
A – E	>10
B – E	0... +10
C – E	0... -10
D – E	< -10

Table 47: Examples of saddle-handlebar height difference

Adjust the angle of the handbrake so that it forms a natural extension of the forearm.

- 2 Set the brake lever angle as indicated in the table.

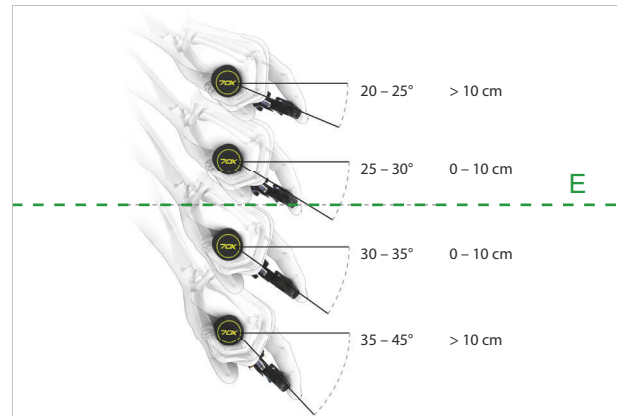

Saddle-handlebar height difference (mm)	Brake angle
>10	20°...25°
0... 10	25°...30°
0... -10	30°...35°
< -10	35°...45°

Figure 142: Brake angle

### 6.4.9.5 Determining the grip distance

- 1 Measure hand size using the grip distance gauge.
- 2 Adjust the grip distance at the pressure point based on the hand size.



Figure 143: Handbrake positioning

Hand size	Grip distance (cm)
S	2
M	3
L	4

### 6.4.9.6 MAGURA handbrake pressure point

Only applies to pedelecs with this equipment

#### WARNING

#### Brake failure due to incorrect setting

If the pressure point is set with brakes where the brake linings and brake disc have reached their wear limit, the brakes may fail and cause an accident with injury.

- ▶ Before you adjust the pressure point, ensure that the brake linings and brake disc have not reached their wear limit.

The pressure point setting is adjusted using the twist knob.

- ▶ Turn the twist knob towards the plus (+) symbol.
  - ⇒ The handbrake moves closer to the handlebars.
  - ⇒ The lever pressure point activates sooner.
- ▶ Re-adjust the grip distance as necessary.
- ▶ Turn the twist knob towards the minus (-).
  - ⇒ The brake lever moves further away from the handlebars.
  - ⇒ The lever pressure point activates later.
- ▶ Re-adjust the grip distance as necessary.

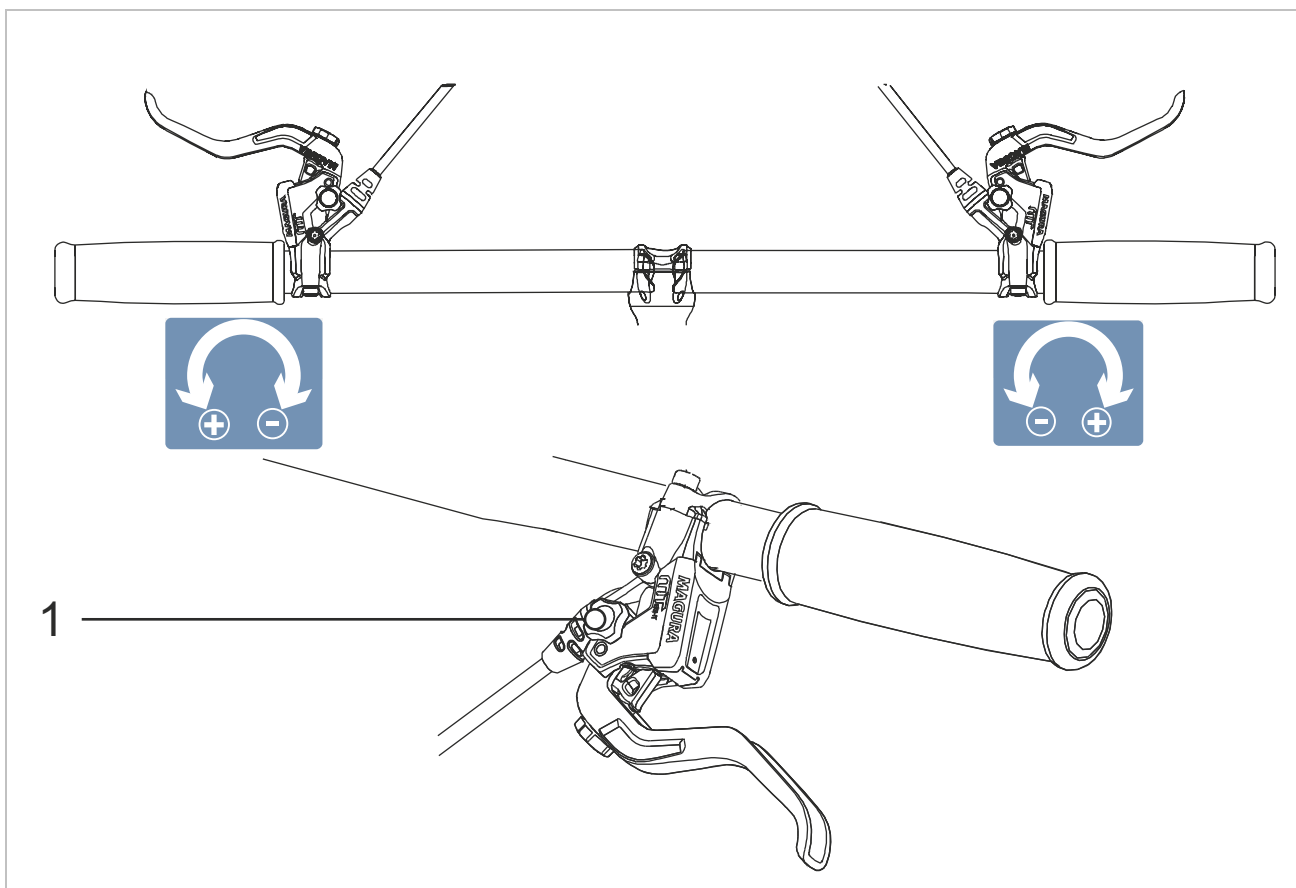


Figure 144: Using the twist knob (1) to adjust the pressure point

### 6.4.9.7 Setting the grip distance for a MAGURA handbrake disc brake

Only applies to pedelecs with this equipment

#### **! WARNING**

#### Crash caused by incorrectly set grip distance

If brake cylinders are set incorrectly or installed wrongly, the braking power may be lost at any time. This may cause a crash with injuries.

- ▶ Ensure that the fully applied handbrake is at a minimum distance of 20 mm from the handlebars.

The handbrake position can be adjusted to the rider's requirements. Such adjustment does not affect the pressure point or the position of the brake linings.

- ▶ Turn the setting screw/twist knob (5) anti-clockwise towards minus (-).
  - ⇒ The handbrake will move closer to the handlebar grip.
- ▶ Turn the setting screw/twist knob (5) clockwise towards plus (+).
  - ⇒ The handbrake will move away from the handlebar grip.

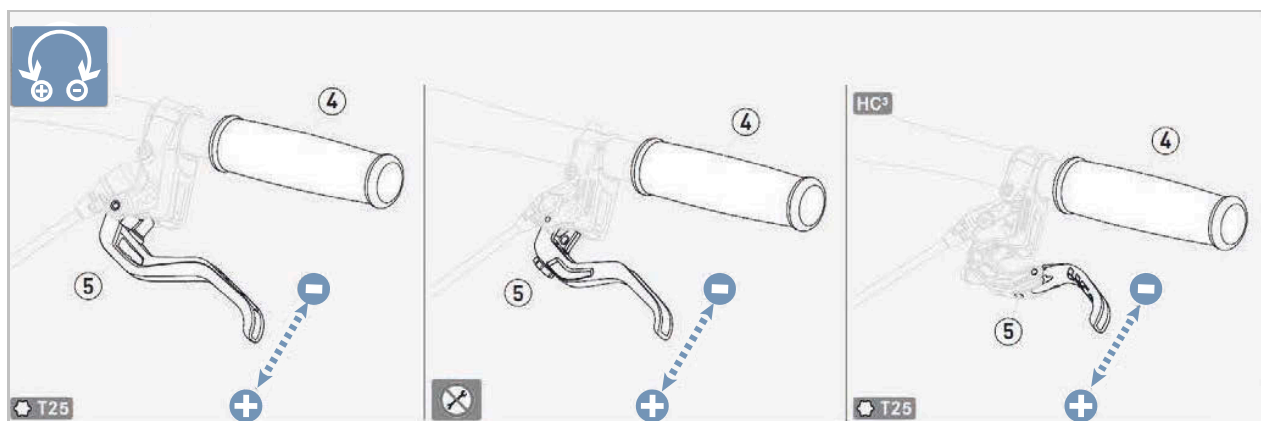


Figure 145: Adjusting the grip distance for a MAGURA handbrake disc brake

### 6.4.9.8 Adjusting the grip distance on a SHIMANO ST-EF41 handbrake

#### Only applies to pedelecs with this equipment

The handbrake position can be adjusted to the rider's requirements. Such adjustment does not affect the pressure point or the position of the brake linings.

- ▶ Turn setting screw anti-clockwise towards minus (-).
- ⇒ The handbrake will move closer to the handlebar grip.
- ▶ Turn setting screw clockwise towards plus (+).
- ⇒ The handbrake will move away from the handlebar grip.



Figure 146: Setting screw position (1)

### 6.4.9.9 Adjusting the grip distance on SHIMANO handbrakes

Only applies to pedelecs with this equipment

#### Handbrake with Reach Adjust

On brake levers with the Reach Adjust feature, the grip distance of the handbrake can be adjusted using a setting screw. Such adjustment does not affect the pressure point or the position of the brake linings.

- ▶ Turn setting screw anti-clockwise towards minus (-).  
⇒ The handbrake will move closer to the handlebar grip.
- ▶ Turn setting screw clockwise towards plus (+).  
⇒ The handbrake will move away from the handlebar grip.

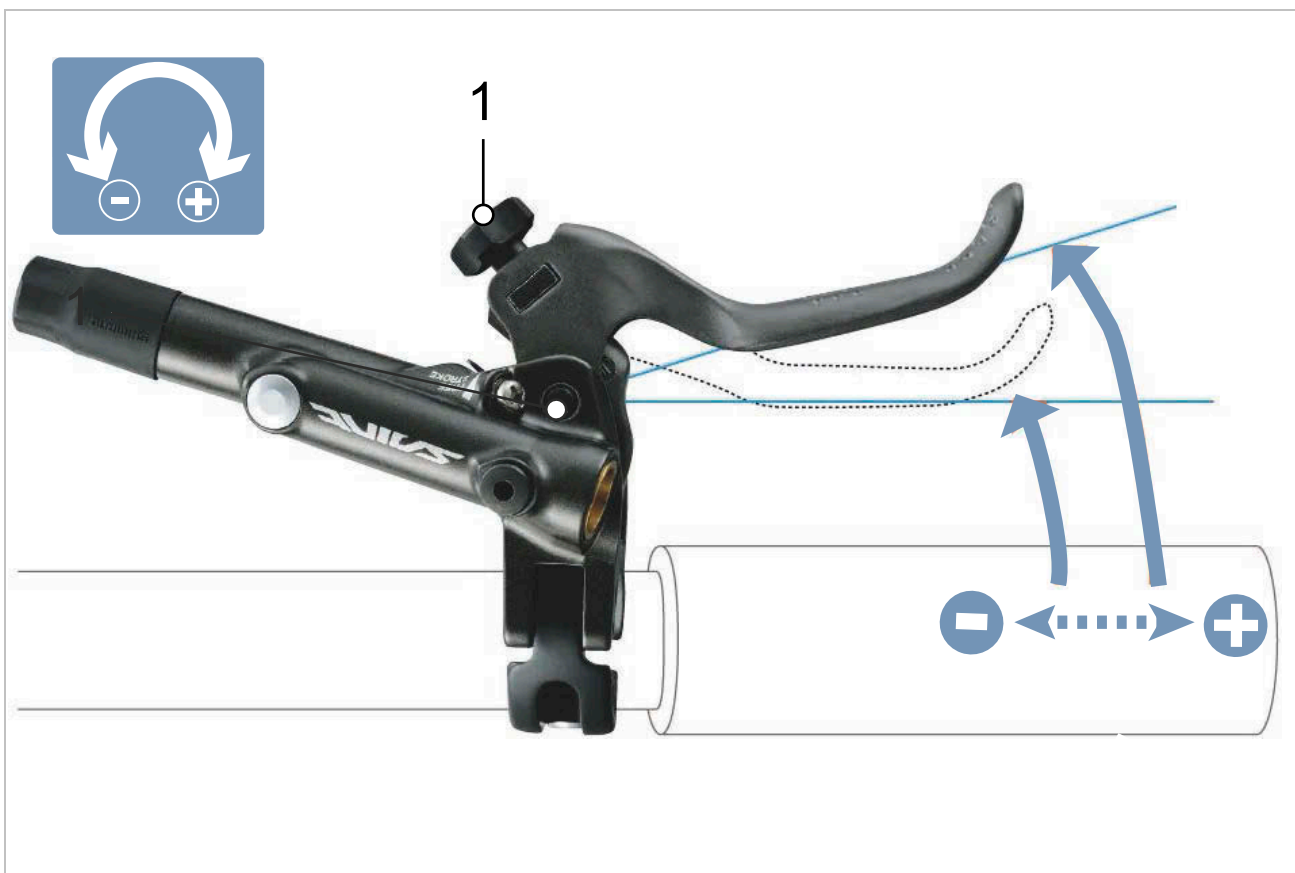


Figure 147: Setting screw position (1)

### Handbrake with Free Stroke

On brake levers with the Free Stroke function, there is a degree of free play before the brake linings (3) touch the brake disc (4). As a result, the distance from the original position of the lever to the contact point of the brake linings (2) can be adjusted to the grip width.

- ▶ Turn the setting screw (1) anti-clockwise towards minus (-). Make sure that the brake linings do not touch the brake disc.
- ⇒ The handbrake will move closer to the handlebar grip.
- ▶ Turn setting screw (1) clockwise towards plus (+).
- ⇒ The handbrake will move away from the handlebar grip.

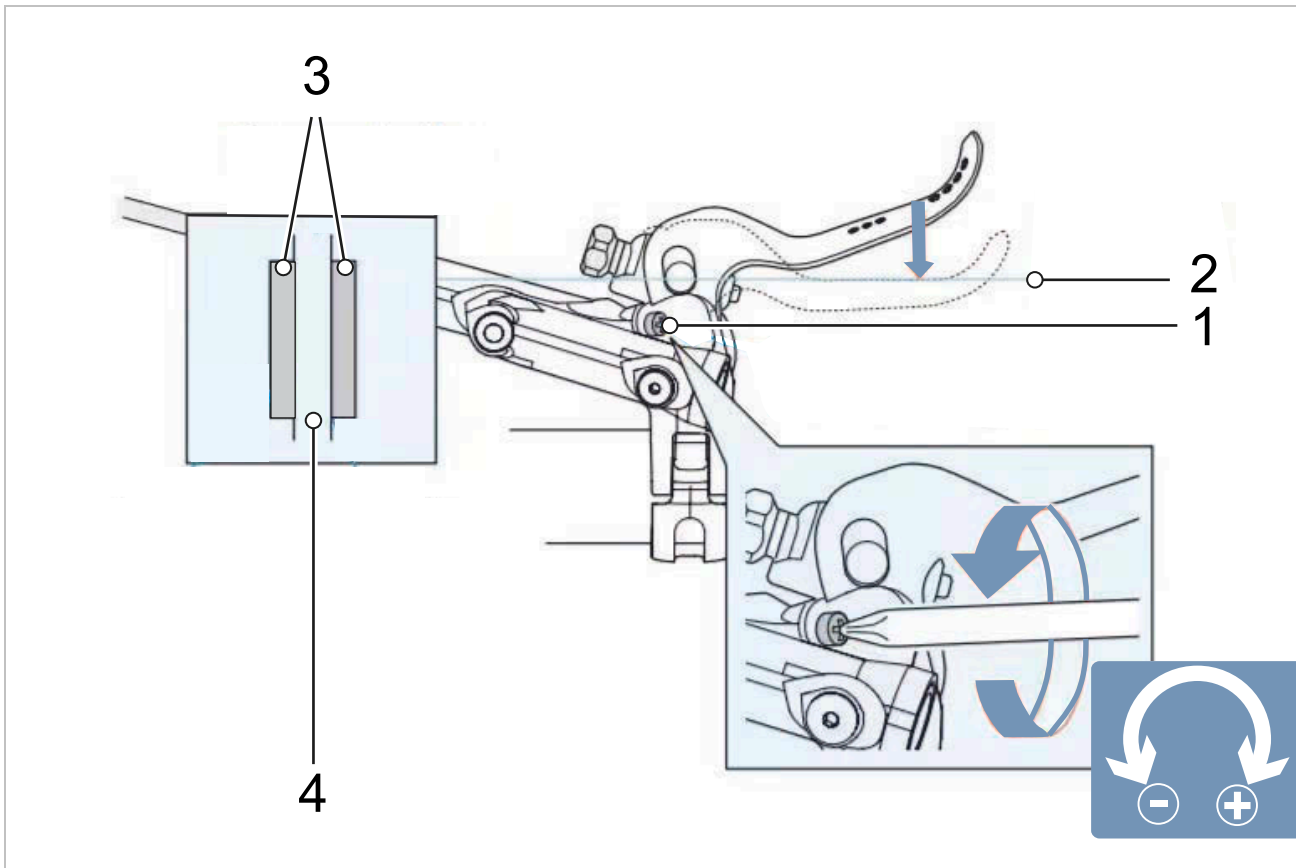


Figure 148: Setting screw position (1)



### 6.4.9.10 Setting the grip distance on a TEKTRO handbrake

Only applies to pedelecs with this equipment

#### Notice

If the setting screw is fully removed, components inside the handbrake will also be permanently twisted off as well. The handbrake will be permanently damaged.

- ▶ Never completely remove setting screws.

The handbrake position can be adjusted to the rider's requirements.

- ▶ Undo 2 mm setting screw anti-clockwise.
  - ⇒ The handbrake will move closer to the handlebar grip.
- ▶ Turn 2 mm setting screw clockwise.
  - ⇒ The handbrake will move away from the handlebar grip.
  - ⇒ This adjustment affects the position of the brake linings.
- ▶ Re-adjust the brake linings after adjustment.

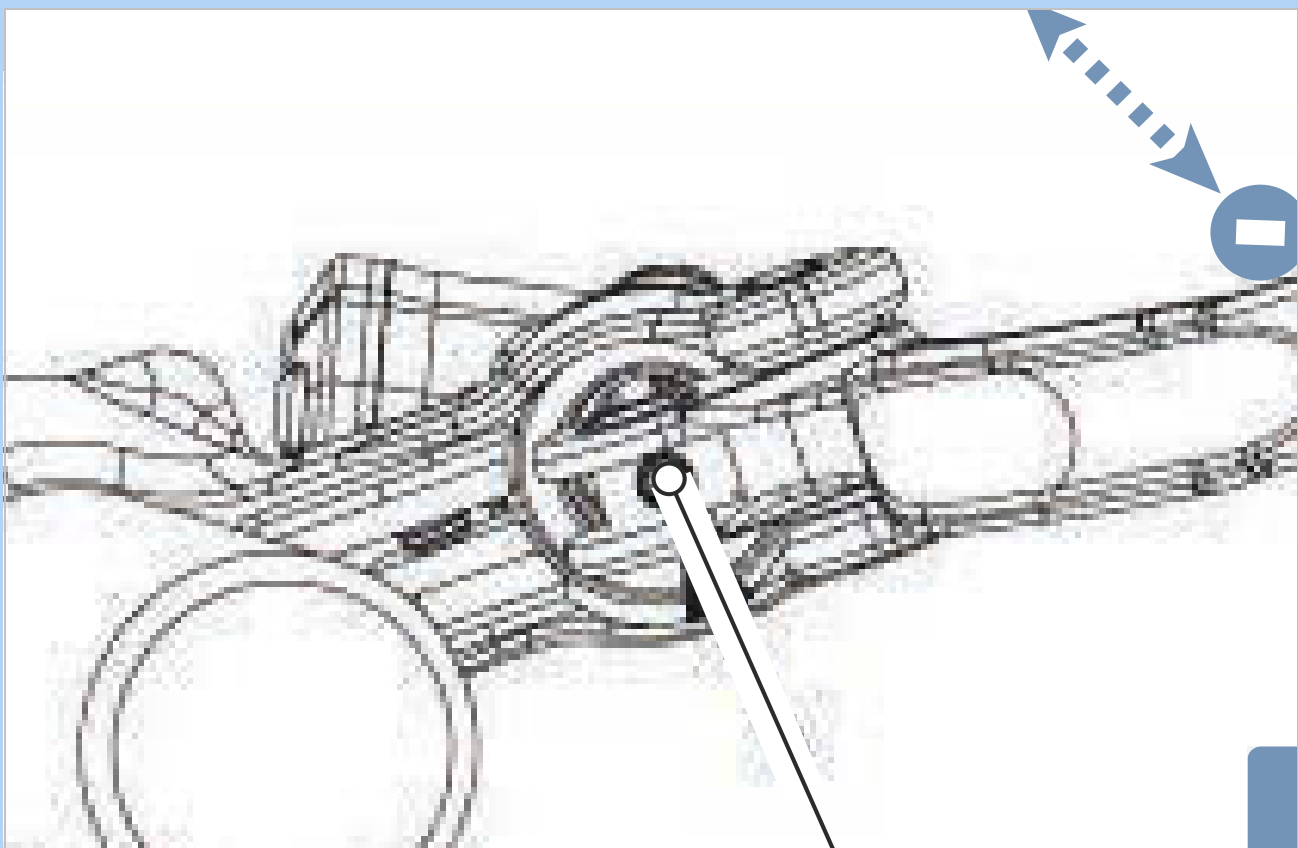


Figure 149: Setting screw position (1)



### 6.4.10 Control panel and gear shift

The control panel and gear shift must be adjusted to the rider's needs.

- 1 Undo attachment screw.
- 2 Place control panel or gear shift into the position where the rider can use the control panel or the shifter with their thumb and/or index finger.
- 3 Fasten attachment screw into position with a 4 mm hex bit with 3 Nm.

#### 6.4.10.1 SHIMANO shifter

Only applies to vehicles with this equipment

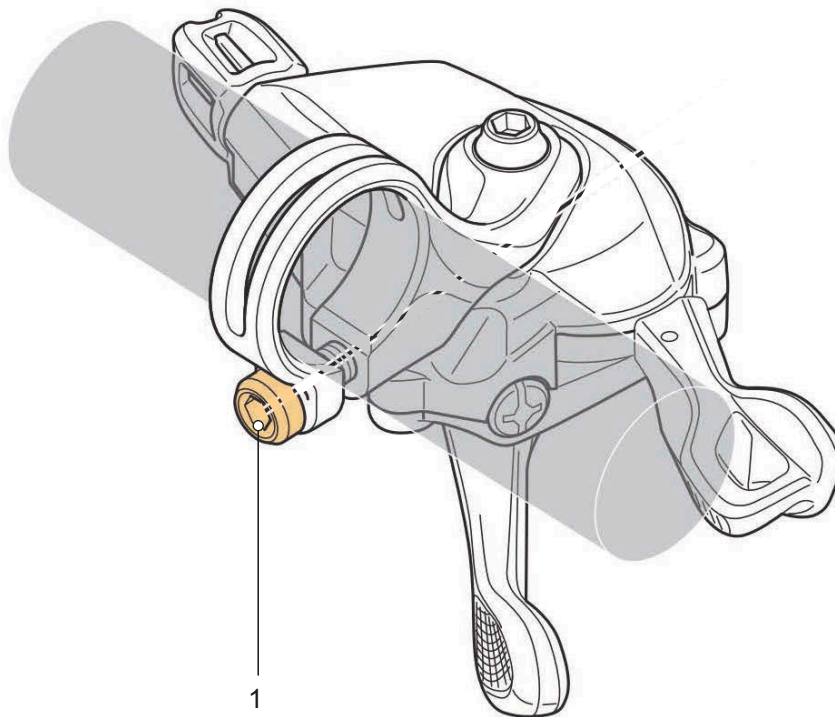


Figure 150: Position of attachment screw (1)

### 6.4.11 Suspension and damping

Suspension and damping can be adjusted to the rider's weight in up to six increments, depending on the suspension system.

► Follow the correct order for adjustment.

Sequence	Adjustment	Section	For pedelecs with components only	
			Suspension fork	Rear frame damper
1	Adjusting the suspension fork sag	6.4.12	x	
2	Adjusting the rear frame damper sag	6.4.13		x
3	Adjusting the suspension fork rebound damper	6.4.14	x	
4	Adjusting the rear frame damper rebound damper	6.4.15		x
5	Before each ride:			
	Adjust the rear frame damper compression damper	6.16.3		x
6	While riding:			
	Adjusting the suspension fork	6.23	x	

**Table 48: Correct order for suspension and damping adjustment**

### 6.4.12 Adjusting the suspension fork sag



#### Crash caused by incorrectly set suspension

If the suspension is set incorrectly, the suspension fork may become damaged, meaning problems may occur when steering. This will cause a crash with injuries.

- Never ride without air in air suspension forks.
- Never use the pedelec without adjusting the suspension fork to the body weight.

Adjustments on the chassis change ride performance significantly. The rider needs to get used to the pedelec and break it in to prevent accidents.

The sag depends on the position and body weight and should be set based on preferences and on how the pedelec is used.

#### Greater sag

A greater sag increases sensitivity to bumps, thus producing greater suspension motion. A greater sensitivity to bumps ensures more comfortable ride performance and is used on pedelecs with longer deflection.

#### Decreased sag

A decreased sag reduces sensitivity to bumps, thus producing less suspension motion. A lower sensitivity to bumps ensures a firmer, more efficient ride performance and is generally used on pedelecs with shorter deflections. The adjustment shown here represents a default setting. The default settings should change, adapted to suit the surface and preferences.

It is advisable to make a note of the default settings. These can then be used as a starting point for subsequent optimised settings and as a safeguard against unintentional changes.

### 6.4.12.1 Adjusting the sag for SR SUNTOUR air suspension fork

#### Only applies to pedelecs with this equipment

- 1 Turn the **air valve cap** (see Section 3.6.7.1) anti-clockwise away from the **air valve (suspension fork)**.
- 2 Attach the high-pressure damper pump to the **air valve (fork)**.
- 3 Pump air suspension to the required pressure level. Stop at the levels specified in the SR SUNTOUR pressure table for the air suspension fork. Never exceed the recommended maximum filling pressure.

Recommended air pressure [psi]						
Body weight [kg]	RUX38/Durolux38	Durolux36/Auron35/Mobie35	Axon34-werx/elite	Aion35/Zeron 45 Mobie34-air/Mobie45 air	Axon34/Raidon 34/XCR34	Axon32/Epixon32/Raidon32/XCR32-air
< 55	< 40	35... 50	40... 55	35... 50	40... 55	40... 55
55... 65	40... 50	50... 60	55... 65	50... 60	55... 65	55... 65
65... 75	50... 60	60... 70	65... 75	60... 70	65... 75	65... 75
75... 85	60... 70	70... 85	75... 85	70... 85	75... 85	75... 85
85... 95	70... 85	85... 105	85... 100	85... 105	85... 100	85... 100
>95	+ 85	+105	+100	+105	+100	+100
Filling pressure set in the factory	70	90	95	90	95	110
Maximum pressure	105	120	145	120	145	145
Suspension operative up to body weight [kg]	118	128	138	109	138	138

Recommended air pressure [psi]						
Body weight [kg]	XCR 24" air	XCM-Jr.	Mobie25 air	GVX32	NRX-air	NCX-air
< 55	40... 55	40... 55	40... 55	40... 55	40... 55	40... 55
55... 65	...	...	55... 65	55... 65	55... 65	55... 65
65... 75	...	...	65... 75	65... 75	65... 75	65... 75
75... 85	...	...	75... 85	75... 85	75... 85	75... 85
85... 95	...	...	85... 100	85... 100	85... 100	85... 100
>95	...	...	+100	+100	+100	+100
Filling pressure set in the factory	50	50	100	110	85	80
Maximum pressure	100	100	130	120	120	120
Maximum body weight [kg]	100	100	124	114	114	114

Table 49: SR SUNTOUR filling pressure table for the air fork

- 4 Detach high-pressure damper pump.
- 5 Measure the distance between the fork crown and the dust seal. This distance is the total deflection for the suspension fork.
- 6 Push a cable tie attached temporarily downwards against the dust seal.
- 7 Put on normal pedelec clothing (including baggage).
- 8 Sit on the pedelec in your usual riding position and support yourself against an object, such as a wall or tree.
- 9 Get off the pedelec without it deflecting.
- 10 Measure distance between the dust seal and the cable tie.
  - ⇒ This measurement is the sag. The recommended value is between 15% (hard) and 30% (soft) of the total suspension fork deflection.
- 11 Increase or reduce the filling pressure.
  - ⇒ The required sag is attained.
- 12 Tighten the **air valve cap** onto the **air valve (suspension fork)** in a clockwise direction.
- 13 If you are unable to achieve the required sag, the suspension fork will need to be adjusted internally. Contact specialist dealer.



### Adjusting preload internally

- ▶ Only your specialist dealer may make an internal adjustment to the preload.

The air volume spacers can be replaced on some fork models. This changes the value for the centre stroke and the bottom-out (bounce) resistance.

- ▶ If the sag is set correctly and the deflection is reached too easily, install one or more spacers. This will increase the impact resistance.
- ▶ If the sag is set correctly and the full deflection range is not used, remove one or more spacers. Resistance to impact is reduced.

#### 14 Check the sag.

Installation procedures and optimisation options as in the following table may be recommended:

		RUX38		Durolux36		Durolux38		Auron35		Mobie35		Axon34-werx		
Plastic volume spacer		8.6cc		8.2cc		7.5cc		...		...		...		
Rubber volume spacer		...		7.5cc-15 mm		7.5cc-15 mm		5cc-10 mm		5cc-10 mm		5cc-10 mm		
		FR	mS	FR	mS	FR	mS	FR	mS	FR	mS	FR	mS	
Plastic volume spacer		5	5	3	3	3	3	...	...	...	...	...	...	
Rubber spacer	Deflection [mm]	200	...	...	...	...	...	...	...	...	...	...	...	
		180	...	...	2	6	1	6	...	...	...	...	...	
		170	...	...	3	6	2	6	...	...	...	...	...	
		160	...	...	4	6	3	6	7	10	7	11	...	
		150	...	...	...	...	4	6	8	10	8	11	...	
		140	...	...	...	...	...	...	9	10	9	11	...	
		130	...	...	...	...	...	...	...	...	10	11	...	
		120	...	...	...	...	...	...	...	...	11	11	3	8
		110	...	...	...	...	...	...	...	...	...	...	3	8
		100	...	...	...	...	...	...	...	...	...	...	3	8

FR = Factory reset

mS = maximum number of spacers

	Aion35		Zeron35		Axon32		Mobie34-air		Mobie45-air		GVX	
Rubber volume space	5cc		5cc		4.3cc		5cc		5cc		4.3cc	
Deflection [mm]	FR	mS	FR	mS	FR	mS	FR	mS	FR	mS	FR	mS
160	3	6	...	...	...	...	...	...	...	...	...	...
150	3	6	3	6	...	...	...	...	...	...	...	...
140	3	6	3	6	...	...	...	...	...	...	...	...
130	3	6	3	6	...	...	...	...	...	...	...	...
120	3	6	...	...	2	4	...	...	...	...	...	...
100	...	...	...	...	2	4	2	5	2	5	...	...
80	...	...	...	...	...	...	2	5	2	5	...	...
60	...	...	...	...	...	...	...	...	2	5	4	4
50	...	...	...	...	...	...	...	...	...	...	4	4
40	...	...	...	...	...	...	...	...	...	...	4	4

FR = Factory reset

mS = maximum number of spacers

### 6.4.12.2 Adjusting the sag for the SR SUNTOUR steel suspension fork

#### Only applies to pedelecs with this equipment

You can pre-tension the steel suspension to adjust to the rider's weight and their preferred

riding style. It is not the coil spring hardness which is adjusted; it is its preload.

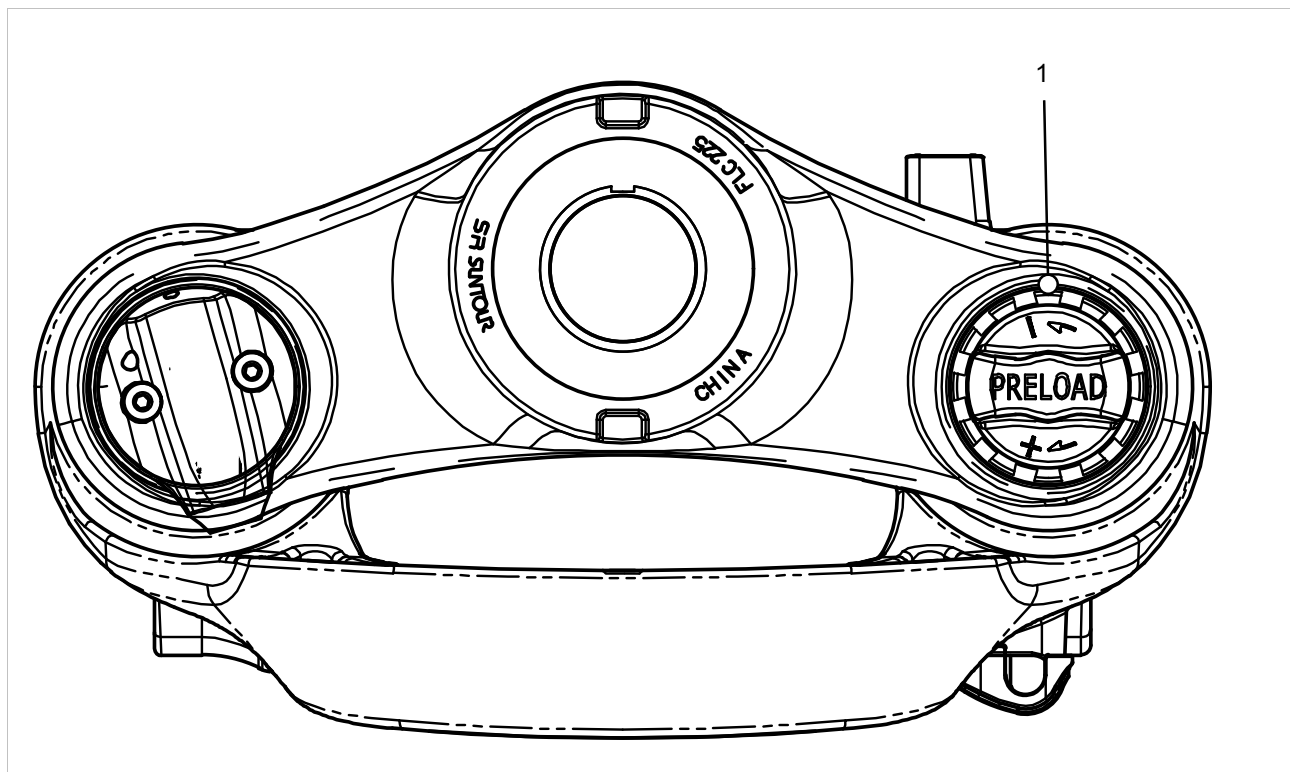


Figure 151: Example with SR SUNTOUR, sag setting wheel on the fork crown

- 1 Put on normal cycling clothing (including baggage).
- 2 Turn the **sag setting wheel** (see Section 3.6.7.1) until the required sag is reached.
  - ▶ Turn the **sag setting wheel** clockwise.
    - ⇒ The spring preload is increased.
  - ▶ Turn the **sag setting wheel** anticlockwise.
    - ⇒ The spring preload is reduced.
- 3 If you are unable to achieve the required degree of hardness, contact your specialist dealer.

### 6.4.12.3 Adjusting the RockShox steel suspension fork sag

Only applies to pedelecs with this equipment

1 Turn the **sag setting wheel** anti-clockwise until it stops.

⇒ The softest spring pre-tensioning is set.

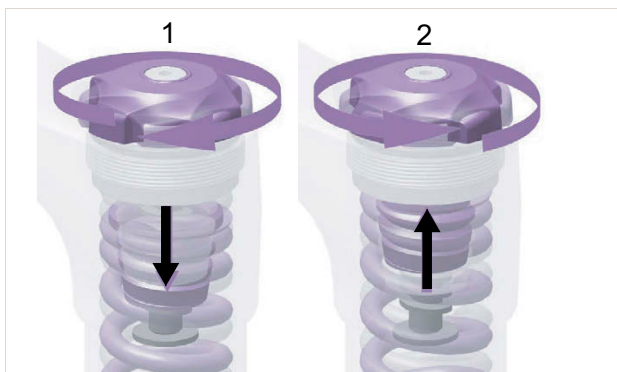


Figure 152: Turning the sag setting wheel in (1) and out (2)

2 Put on normal cycling clothing. Ask someone to hold the pedelec.

3 Stand on the pedals. Allow the damper to deflect three times. Sit or stand on the pedelec in a normal riding position.

4 Ask your helper to push the O-ring downwards until it reaches the top of the dust wiper seal.



Figure 153: Moving the suspension fork O-ring

5 Get off the pedelec without it deflecting.

6 Note distance between dust wiper and the O-ring. This distance is the sag.

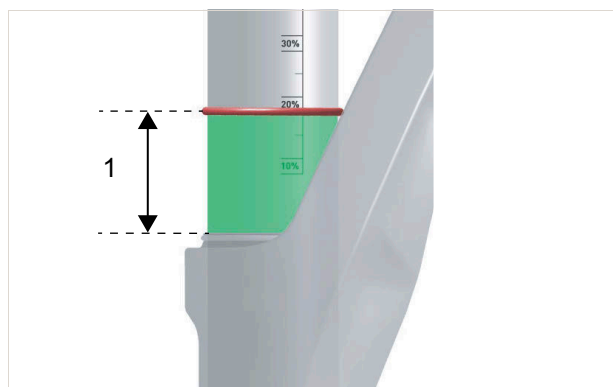


Figure 154: Sag (1)

Setting	Sag
Prohibited	>30%
High sensitivity	20... 30%
Low sensitivity	10... 20%
Prohibited	<10%

Table 50: Recommended sag

7 If the desired sag is not achieved, you need to undo the sag setting wheel adjustment ring little by little. Repeat step 3 to 8 after each turn until the right sag is set.

8 The coil spring must be replaced if the desired sag cannot be achieved by twisting the preload adjustment ring. Contact specialist dealer.



#### 6.4.12.4 Adjusting the RockShox air suspension fork sag

##### Only applies to pedelecs with this equipment

- ✓ The pressure should be measured at an ambient temperature of 21 °C to 24 °C.
- 1 Place all dampers in the open position before adjusting the sag. To do so, turn the adjuster anti-clockwise until it will go no further. If the green LEDs on the LED Remote are flashing, this means that installation is still running and everything is OK. If the pedelec has a handlebar remote control, position the compression dashpot in the open position.
- 2 The **air valve** (fork) is located under a cover on the head of the shock absorber. Unscrew the **air valve cap** anti-clockwise.

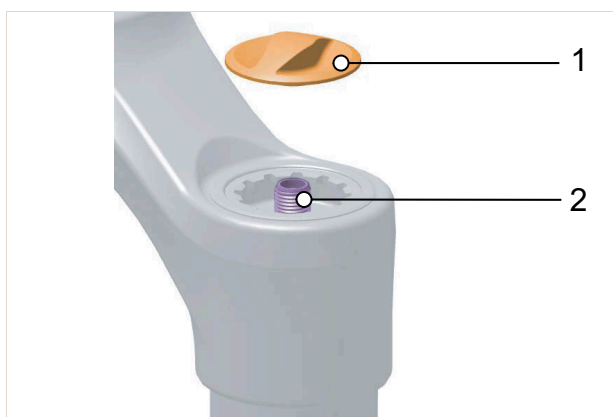


Figure 155: Removing the cover (1) from the air valve (2)

- 3 Attach high-pressure damper pump to the **air valve (fork)**.

- 4 Pump the suspension fork to the required pressure. Observe the levels in the air pressure table. Never exceed or fill below the recommended minimum and maximum tyre pressure.

Body weight	Tyre pressure	
	psi	bar
kg		
< 55	< 55	< 3.8
55... 63	55... 65	3.8... 4.5
63... 72	65... 75	4.5... 5.2
72... 81	75... 85	5.2... 5.9
81... 90	85... 95	5.9... 6.6
90... 99	95... 105	6.6... 6.8
>99	105+	6.8+
<b>Max. pressure</b>	<b>163</b>	<b>11.2</b>

Table 51: ROCKSHOX air suspension fork tyre pressure table: 35 Gold 29", Lyrik Select 29", Lyrik Ultimate 29"

Body weight	Tyre pressure	
	psi	bar
kg		
< 55	< 75	< 5.2
55... 63	75... 85	5.2... 5.9
63... 72	85... 95	5.9... 6.6
72... 81	95... 105	6.6... 7.2
81... 90	105... 115	7.2... 7.9
90... 99	115 ...125	7.9... 8.6
>99	125+	8.6 +
<b>Max. pressure</b>	<b>194</b>	<b>13.4</b>

Table 52: ROCKSHOX air suspension fork tyre pressure table: 35 Gold 27.5"

Body weight	Tyre pressure	
	psi	bar
kg		
< 55	< 34	< 2.3
55... 63	34... 42	2.3... 2.9
63... 72	42... 51	2.9... 3.5
72... 81	51... 59	3.5... 4.1
81... 90	59... 67	4.1... 4.6
90... 99	67... 75	4.6... 5.2
>99	75+	5.2+
<b>Max. pressure</b>	<b>148</b>	<b>10.2</b>

Table 53: ROCKSHOX ZEB Select (deflection: 190 mm)

- 5 The recommendations for air pressure are indicated on the rear of the fork and can also be found at <https://trailhead.ROCKSHOX.com/en>.
- 6 Detach high-pressure damper pump.
- 7 Put on normal cycling clothing (including baggage).
- 8 Ask someone to hold the pedelec. Stand on the pedals. Allow the damper to deflect three times. Sit or stand on the bicycle in a normal riding position.
- 9 Ask your helper to push the **O-ring** downwards until it reaches the top of the dust wiper seal.



Figure 156: Moving the O-ring on the suspension fork

- 10 Get off the pedelec without allowing it to deflect. Measure or read the distance between the dust wiper and the O-ring. This measurement is the sag. The recommended sag is between 10% and 20% (hard) or 20% and 30% (soft).

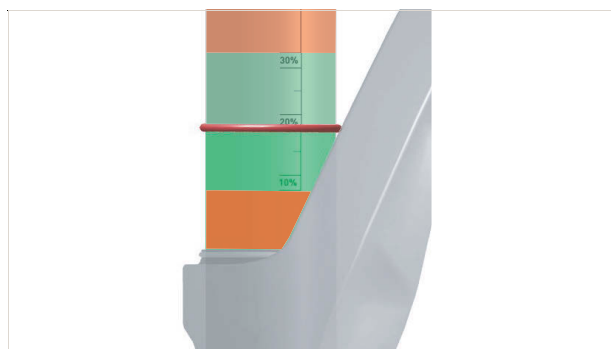


Figure 157: Mandatory sag range (green) and prohibited sag range (red)

- 11 Increase or reduce the air pressure until you have reached the desired sag. If the sag is correct, re-tighten the **air valve cap** on the valve in a clockwise direction.
- 12 If you are unable to achieve the desired sag, internal settings may need to be made. Contact your specialist dealer.



### Adjusting preload internally

- Only your specialist dealer may make an internal adjustment to the preload.

The air spring characteristic curve at the end of the stroke (i.e. the puncture resistance) can be adjusted using bottomless tokens to reduce the air spring volume.



Figure 158: Two bottomless tokens in the DebonAir suspension

If the sag is set correctly but the suspension bottoms out quickly and frequently, the desired bottoming-out behaviour can be achieved by adding bottomless tokens.

Bottomless tokens reduce the air spring volume and increase the sag resistance. Combined with the right sag, a reduced volume increases the spring characteristic curve in the middle and at the end of the stroke without significantly affecting the sag and sensitivity to small to medium bumps.

A higher spring characteristic curve in the limit stop section can be advantageous for larger drops or fast, bumpy sections where the fork uses almost all its deflection.

You will find the maximum number of bottomless tokens allowed for the fork in Section 03.03.01.

The procedure for installing and removing bottomless tokens can be found in the maintenance manual for the fork concerned.

#### **13** Check the sag.

Bottomless tokens are added to fine-tune the sag. The sag must be checked again after they are added.

### 6.4.13 Adjusting the rear frame damper sag

#### **CAUTION**

#### **Crash caused by broken rear frame damper**

If the rear frame damper's maximum air pressure is exceeded, this can cause the rear frame damper to break. This can result in loss of control and a crash with cut injuries or even death.

- ▶ Never exceed the indicated maximum air pressure when adjusting the sag.

Adjustments on the chassis change ride performance significantly. The rider needs to get used to the pedelec and break it in to prevent accidents.

The adjustment shown here represents a default setting. The rider should change the default setting to suit the surface and their preferences.

It is advisable to make a note of the default settings. These can then be used as a starting point for subsequent optimised settings and as a safeguard against unintentional changes.

#### **Negative deflection (sag)**

The sag is the percentage of total spring deflection that is compressed by the rider's body weight, including equipment (such as a backpack), their seating position and frame geometry. Sag is not caused by riding.

#### **Greater sag**

A greater sag increases sensitivity to bumps, thus producing greater suspension motion. A greater sensitivity to bumps ensures more comfortable ride performance and is used on pedelecs with a longer deflection.

#### **Decreased sag**

A decreased sag reduces sensitivity to bumps, thus producing less suspension motion. A lower sensitivity to bumps ensures a firmer, more efficient ride performance and is generally used on pedelecs with a shorter deflection.

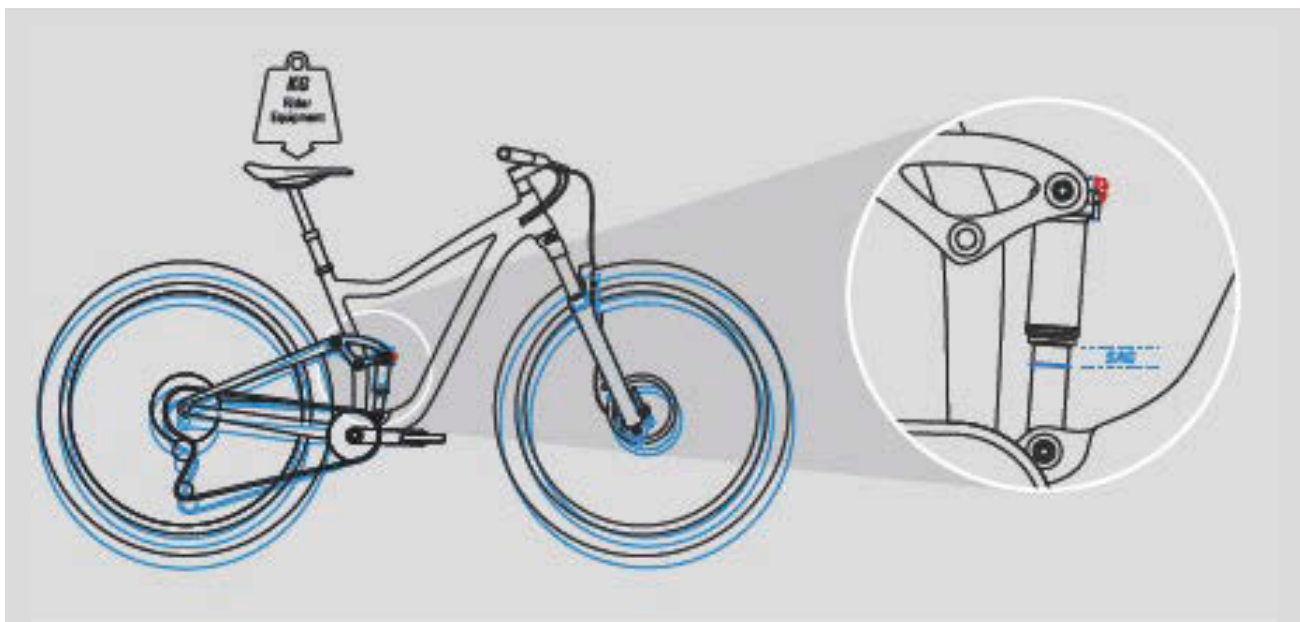


Figure 159: SAG rear frame damper

When optimally adjusted, the rear frame damper deflects quickly and unhindered when the bike hits bumps and absorbs a bump. The traction is maintained.

### 6.4.13.1 Adjusting the RockShox rear frame damper sag

Only applies to pedelecs with this equipment

- ✓ Adjusting the suspension fork sag (see Section 6.4.12).
- ✓ When adjusting the sag, ensure that all dampers are in the open position, i.e. turned anti-clockwise until they stop.

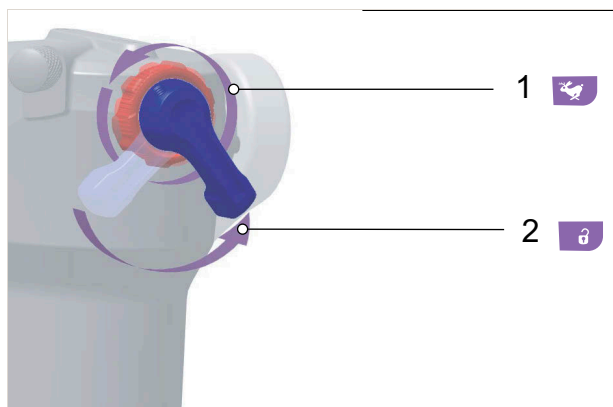


Figure 160: Opening the rebound damper (1) and compression adjuster (2)

- 1 Release air completely from rear frame damper.
- 2 Pressurise the air spring chamber to 100 PSI (6.9 bar) with a high-pressure damper pump.
- 3 Detach high-pressure damper pump.
- 4 Fully deflect rear frame damper five times to compensate the positive and negative air suspension.
- 5 Use a high-pressure damper pump to fill the rear frame damper to the pressure corresponding to the total weight of the person riding, including clothing and baggage.

#### Notice

If the air pressure in the rear frame damper is exceeded or undershot, the damper can be permanently damaged. The details are on the rear frame damper.

Weight		Air pressure	
Kilogram	Pound (lbs)	Pound per square inch	bar
55	121	121	8.3
60	132	132	9.1
65	143	143	9.9
70	154	154	10.6
75	165	165	11.4
80	176	176	12.1
85	187	187	12.9
90	198	198	13.7
95	209	209	14.4
100	220	220	15.7
110	242	242	16.7

Table 54: Filling pressure table for ROCKSHOX rear frame dampers

- 6 Deflect rear frame damper to compensate the air pressure.
- 7 Put on normal cycling clothing (including baggage).
- 8 Ask someone to hold the pedelec. Stand on the pedals.
- 9 Deflect rear frame damper fully gently two or three times.
- 10 Ask your helper to push the **O-ring** against the wiper seal.



Figure 161: Moving the O-ring on the rear frame damper

**11** Read the sag value on the scale.

The optimum sag percentage is 25%. The sag level may be adjusted by  $\pm 5\%$ , depending on the rider's preferences (20% to 30%).

**12** The air pressure must be adjusted if the sag level is not reached.

- ▶ Increase the air pressure to reduce the sag.
- ▶ Decrease the air pressure to increase the sag.

#### 6.4.14 Adjusting the suspension fork rebound damper

##### Only applies to pedelecs with this equipment

Rebound damping is adjusted to the rider's body weight, spring stiffness, deflection, the terrain and the pedelec rider's preferences.

If the air pressure or spring stiffness increases, the extension and rebound speeds also increase. Rebound damping needs to be increased to achieve an optimal setting if the air pressure or spring stiffness is increased.

### 6.4.14.1 Adjusting the SR Suntour rebound damper suspension fork

Only applies to pedelecs with this equipment

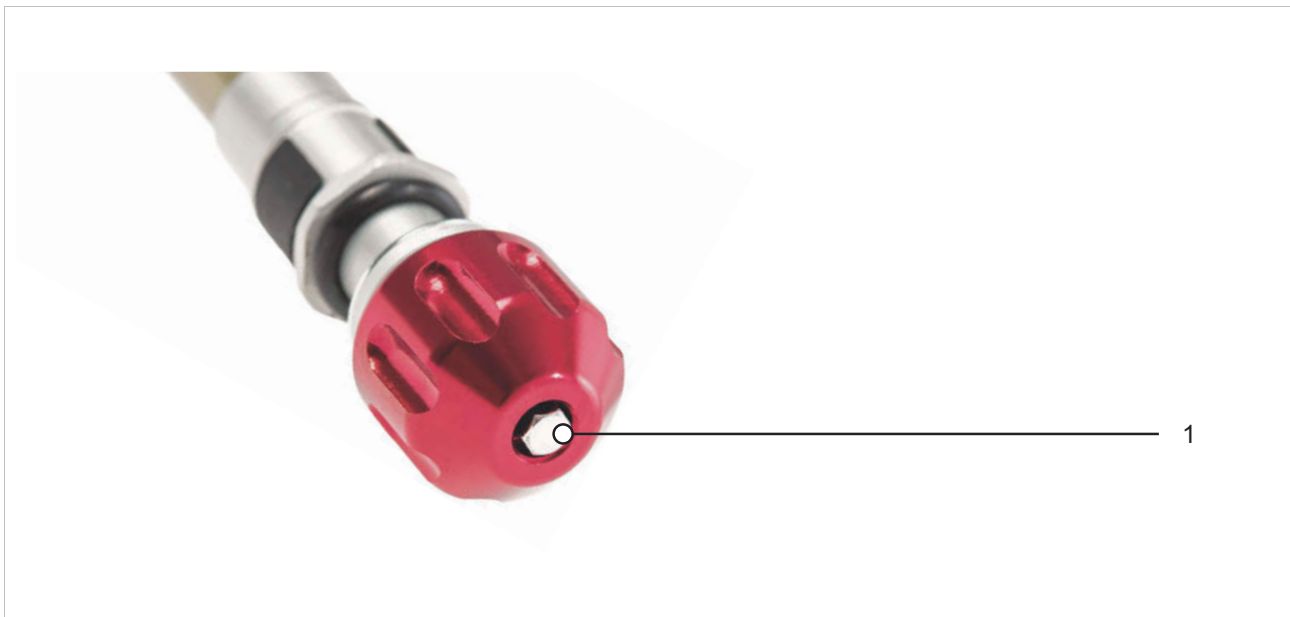


Figure 162: Example of SR SUNTOUR rebound adjuster (suspension fork) (1)

- ✓ Adjusting the suspension fork sag (see Section 6.4.12).
- 1 Turn the rebound adjuster (suspension fork) clockwise to the closed position until it stops.
- 2 Turn **rebound adjuster (suspension fork)** gently anti-clockwise.
- ⇒ Adjust the rebound damper in such a way that the suspension fork rebounds quickly but without bottoming out upward. Bottoming out refers to occasions when the suspension fork rebounds too quickly and stops moving abruptly once it has reached the full rebound distance. You can hear and feel a slight impact when this happens.



#### 6.4.14.2 Adjusting the ROCKSHOX suspension fork rebound damper

Only applies to pedelecs with this equipment

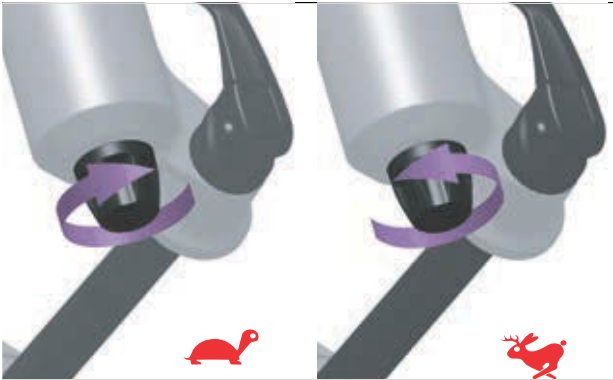


Figure 163: Adjusting the ROCKSHOX rebound damping

- ✓ Adjusting the suspension fork sag (see Section 6.4.12).
- ▶ Turn the rebound adjuster (suspension fork) clockwise towards the tortoise symbol.
  - ⇒ The rebound speed is decreased (slower return).
- ▶ Turn the rebound adjuster (suspension fork) anti-clockwise towards the hare symbol.
  - ⇒ The rebound speed is increased (faster return).

## 6.4.15 Adjusting the rear frame damper rebound damper

### Only applies to pedelecs with this equipment

Adjust the rebound damper so that the rear frame damper rebounds quickly but without bottoming out upwards. Bottoming out refers to occasions when the rear frame damper rebounds too quickly and stops moving abruptly once it has reached the full rebound distance. You can hear and feel a slight impact when this happens.

### Adjusting high-speed and low-speed rebound dampers on the rear frame damper

#### Only applies to pedelecs with this equipment

Adjustment of the high-speed rebound (HSR) is advantageous for enabling the rear frame damper to quickly recover from heavier impacts and impacts on right-angled obstacles in order to absorb successive impacts.

Adjustment of the low-speed rebound (LSR) is advantageous for enabling control of the suspension behaviour of the damper when brake pitching, during technically demanding climbs and when riding at an angle when additional traction is required.

### 6.4.15.1 Adjusting the ROCKSHOX rear frame damper rebound damper

Only applies to pedelecs with this equipment

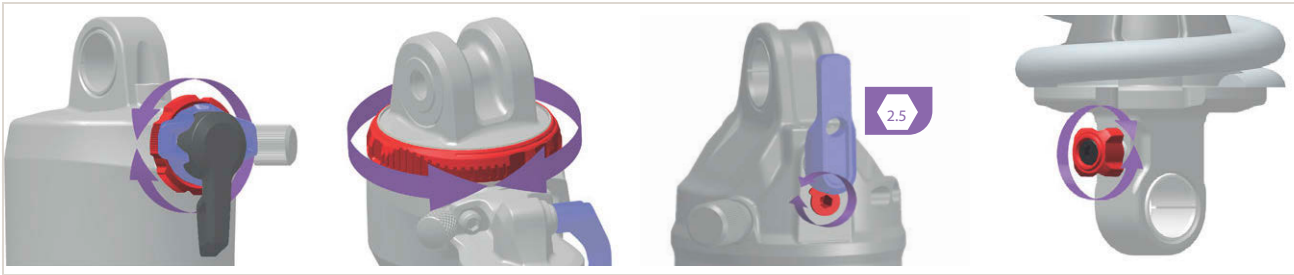


Figure 164: The position and shape of the rebound adjuster (rear frame damper) depends on the model. Rebound adjusters are always red

- ✓ Adjusting the rear frame damper sag (see Section 6.4.13).
- ▶ Turn **rebound adjuster (rear frame damper)** clockwise.
  - ⇒ The rebound damping is increased.
- ▶ Turn **rebound adjuster (rear frame damper)** anti-clockwise.
  - ⇒ The rebound damping is reduced.

### 6.4.16 Adjusting the rear frame damper compression damper

When optimally adjusted, the rear frame damper deflects quickly and unhindered when the bike hits bumps and absorbs a bump. Traction is retained (blue line).

The saddle rises slightly when absorbing a bump (green line).

#### Compression adjuster set to hard

- Allows the rear frame damper to move higher in the deflection range. This makes it easier to improve efficiency and maintain momentum when pedalling or riding over uniformly hilly terrain and around bends.
- Deflection feels somewhat harder on bumpy terrain.

#### Compression adjuster set to soft

- Allows the damper to deflect quickly and easily. This makes it easier to maintain speed and momentum when riding over bumpy terrain.
- Deflection feels somewhat less hard on bumpy terrain.



Figure 165: Optimum rear frame damper ride performance over bumps

#### Threshold

The damping threshold prevents deflection until a medium impact or downward force occurs. Threshold mode increases drive efficiency over level terrain.

The threshold setting can be used to improve pedalling efficiency over flat, hilly, level or slightly rugged terrain. In threshold mode, higher pedelec speeds lead to greater impact force when a pedelec hits a bump, causing the fork to deflect, and the bump is absorbed.

	Mode	Use
1	OPEN	<b>Ideal for setting off</b> The rear frame damper quickly deflects unhindered through its entire deflection range.
2	THRESHOLD	<b>Ideal for saving energy while riding on roads and/or for maximum pedalling efficiency on flat or smooth terrain.</b> When the threshold is activated, the rear frame damper counteracts deflection until a medium bump or downward force occurs.
3	LOCK	<b>Tarmacked roads</b> (see Section 6.16.1) The locked rear frame damper counteracts deflection until a strong impact or upward force occurs.

### 6.4.16.1 Adjusting the ROCKSHOX compression damper

#### Only applies to pedelecs with this equipment

The position and shape of the compression adjuster depends on the model. ROCKSHOX **compression adjusters (rear frame damper)** are always blue.

The ideal setting for the rebound damper has been achieved when the rebound movement of the rear wheel feels comparable to that of the front wheel.

- ✓ The pedelec's sag is configured.
- ✓ The pedelec's rebound damping has been set.

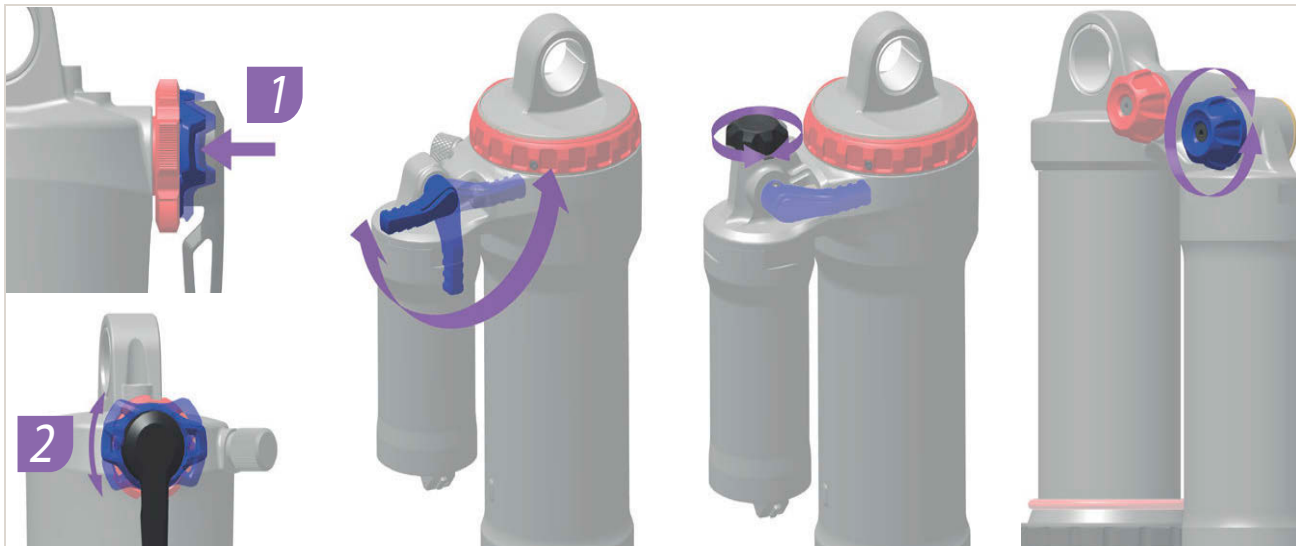


Figure 166: Position and shape of ROCKSHOX compression adjusters on different models

#### Setting to hard

- 1 Place **compression adjuster (rear frame damper)** in the middle position.
  - 2 Ride the pedelec over a small obstacle.
  - 3 Turn **compression adjuster (rear frame damper)** clockwise.
- ⇒ The damping and compression hardness is increased. The deflection stroke speed is reduced.

#### Setting to soft

- 1 Place **compression adjuster (rear frame damper)** in the middle position.
  - 2 Ride the pedelec over a small obstacle.
  - 3 Turn **compression adjuster (rear frame damper)** anti-clockwise.
- ⇒ The damping and compression hardness is reduced. The deflection stroke speed is increased.

## 6.4.17 Riding light

### 6.4.17.1 Replacing the headlight

Not included in price



Headlights may only be replaced after approval by the manufacturer or system provider.

### 6.4.17.2 Replacing the rear light and (spoke) reflector

Not included in price



The rear light and (spoke) reflector may be replaced without special approval provided they comply with the laws of the country where the pedelec will be ridden.

### 6.4.17.3 Setting the riding light

#### Example 1

If the headlight is positioned too high, oncoming traffic will be dazzled. This can cause a serious accident with fatalities.

#### Example 2

Positioning the headlight correctly can ensure that oncoming traffic is not dazzled and no-one is put at risk.

#### Example 3

If the headlight is positioned too low, the space ahead is not illuminated to an optimum extent and the rider's vision is reduced in the dark.

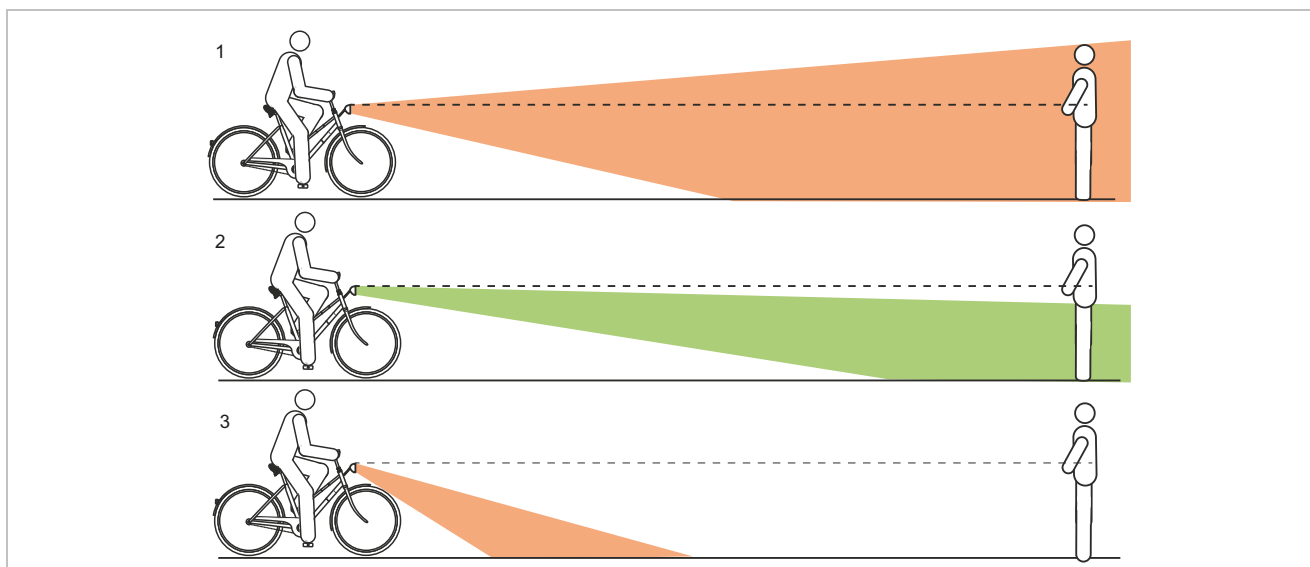


Figure 167: Light positioned too high (1), correctly (2) and too low (3)

#### 6.4.17.4 Adjusting the headlight

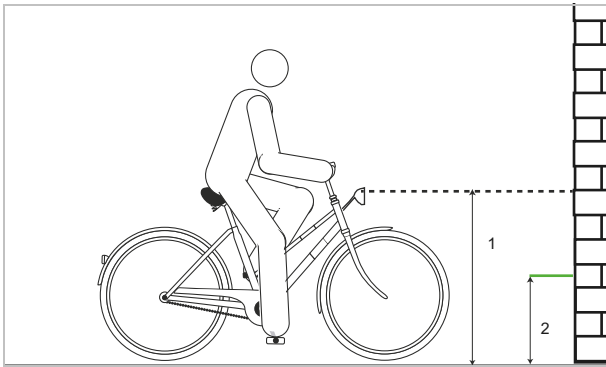


Figure 168: Measuring on the wall

- 1 Position the pedelec so that its front is facing a wall.
- 2 Mark the height of the headlight (1) on the wall with chalk.
- 3 Mark half the height of the headlight (2) on the wall with chalk.

- 4 Place pedelec 5 m in front of the wall.
- 5 Stand the pedelec up straight.

- 6 Hold the handlebars straight with both hands. Do not use the kickstand.
- 7 Switch on riding light.

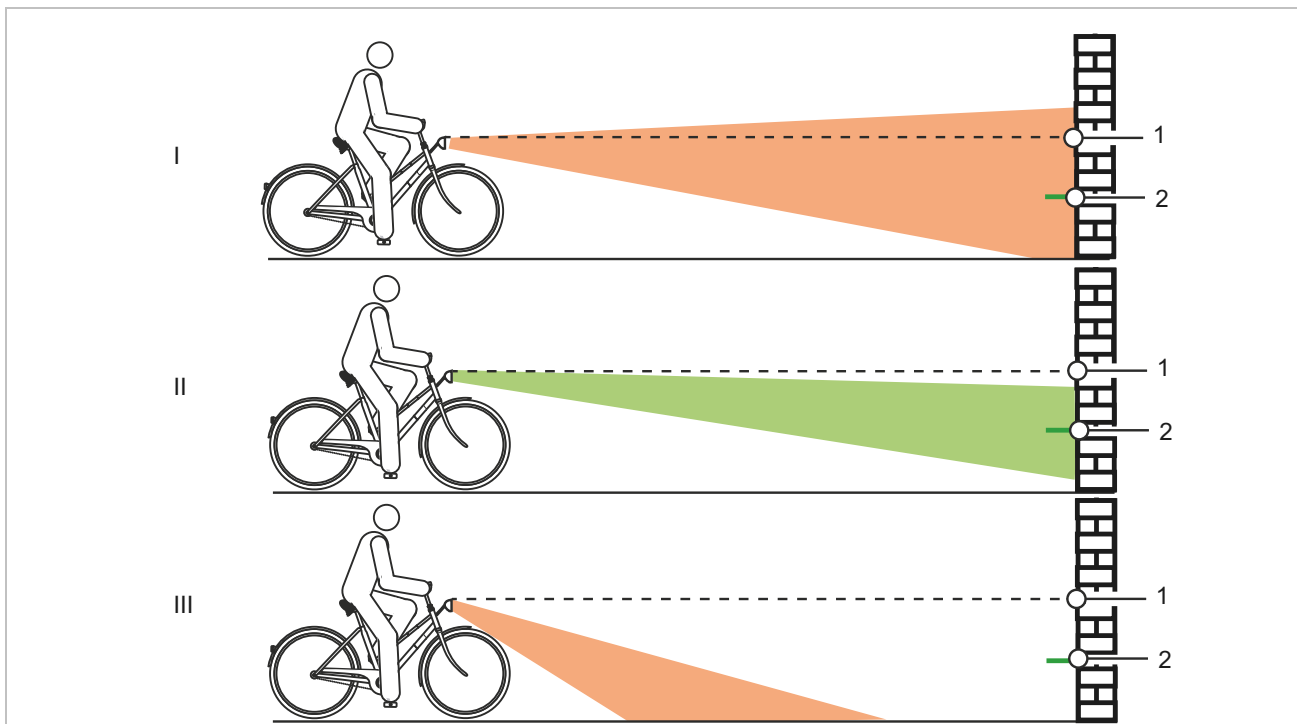


Figure 169: Light positioned too high (1), correctly (2) and too low (3)

- 8 Check the position of the light beam.
  - ▶ (I) if the upper edge of the light beam is above the headlight height mark (1), the riding light will dazzle. The headlight must be positioned lower.
  - ▶ (II) If the mid-point of the light beam is on or slightly below the mark showing half the height of the headlight (2), the lighting is optimally positioned.
  - ▶ (III) If the light beam is in front of the wall, move the headlight up.

## 6.4.18 On-board computer

A smartphone with the eBike Flow application is required to use all drive system functions. The pedelec is connected to the app via a Bluetooth® connection.

### 6.4.18.1 Creating a user account

The rider needs to register online and create a user account first.

#### Registering on a PC

- 1 Create the user account on the BOSCH website.
- 2 Enter all the details required for registration.

#### Registering on a smartphone

##### Apple iPhones

- ▶ Download the Bosch eBike Flow smartphone app from the App Store free of charge.

##### Android devices

- ▶ Download the eBike Flow smartphone app from the Google Play Store free of charge.

### 6.4.18.2 Connecting the on-board computer to a smartphone

- ✓ The BOSCH eBike Flow app is downloaded onto the smartphone.
- ✓ The drive system is switched on.
- ✓ The pedelec is stationary.

- 1 Launch app.
- 2 Select the <My eBike> tab in the app.
- 3 Select the <Add new eBike device> tab in the app.
- 4 Press the **On-Off button on the pedelec** for longer than 3 seconds.
  - ⇒ The top bar on the control panel battery level indicator flashes blue.
  - ⇒ The on-board computer will switch the Bluetooth® Low Energy connection on and change to pairing mode.
- 5 Release **the On-Off button**.
- 6 Accept the connection prompt in the app.

- 7 Follow the instructions on the display.

- ⇒ The user data will be synchronised once the pairing process is complete.

### 6.4.18.3 Update software

Software updates are managed by the Bosch eBike Flow smartphone app.

- ✓ The on-board computer is now connected to the smartphone.
- ✓ The drive system is switched on.
- ✓ The pedelec is stationary.
- ⇒ A new software update is downloaded automatically onto the on-board computer.
- ⇒ The battery level indicator will flash green during updates to show how the update is progressing.
- ⇒ The system is restarted after an update has completed successfully.

### 6.4.18.4 Activating activity tracking

- ✓ Your location will only be logged if the on-board computer is connected to the Bosch eBike Flow smartphone app.
- ▶ Agree to activities being collected and stored on the platform or in the app.
  - ⇒ All the pedelec's activities are stored and displayed on the platform and in the app.

### 6.4.18.5 Setting up the lock function (optional)

The user account can be used to activate the lock function. This will create a digital key on the smartphone, which is required to start the drive system.



Once the lock function is switched on, the pedelec can only be put into use if:

- the configured smartphone is switched on,
- the smartphone is charged sufficiently and
- the smartphone is directly next to the control panel.

If the key is not immediately verified on the smartphone, the battery level indicator and the display of selected level of assistance on the pedelec flash white to indicate a search for the key.

If the key is found, the battery level indicator flashes white. The last configured level of assistance is displayed. If the key cannot be found on the smartphone, the pedelec drive system switches off. The indicators on the control panel go off.

As the smartphone is only used as a contactless key to switch on the pedelec, the battery and control panel can still be used on another, unblocked pedelec.

#### 6.4.18.6 Inserting the display

- 1 Place display (1) on the locking hook (2) on the front edge of display mount (3) facing the direction of travel.
- 2 Press display rear onto the display mount.

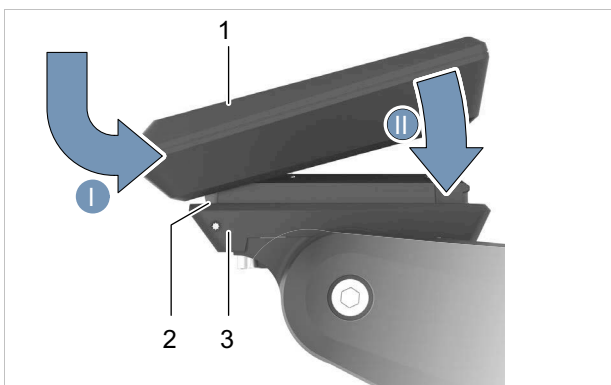


Figure 170: Inserting the display

#### 6.4.18.7 Securing the on-board computer (optional)

It is possible to secure the on-board computer so that it cannot be removed. The locking plate does not offer theft detection.

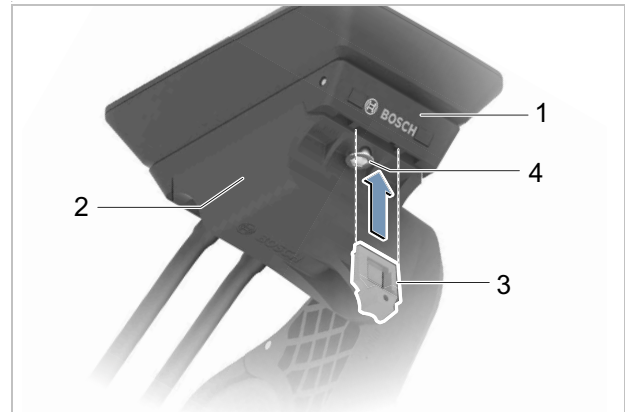


Figure 171: Position of headset screw

- 1 Insert locking plate (3) into the adapter tray (2) until you hear the locking plate lock into position.
- ⇒ The display mount (1) can now only be removed if the two attachment screws (4) are undone.

#### 6.4.18.8 Removing the on-board computer

- ⇒ The on-board computer can be removed if it is not secured.

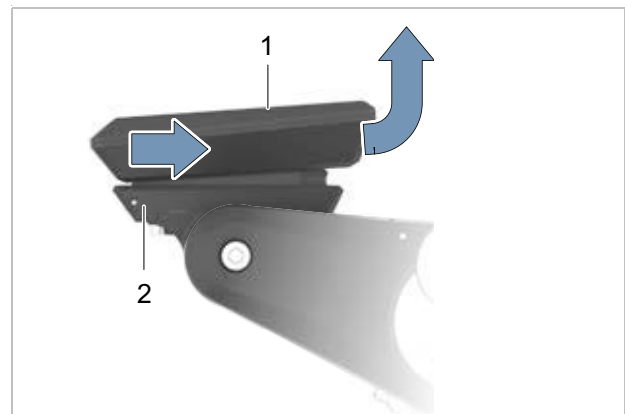


Figure 172: Removing the on-board computer

- Pull display (1) forwards until the display lifts from the display mount (2).

### 6.4.18.9 Adjusting the on-board computer

#### Notice

- ▶ Never use on-board computer, the display or the display mount as a handle. If the on-board computer, display or display mount are used to lift the pedelec, components can become irreparably damaged.

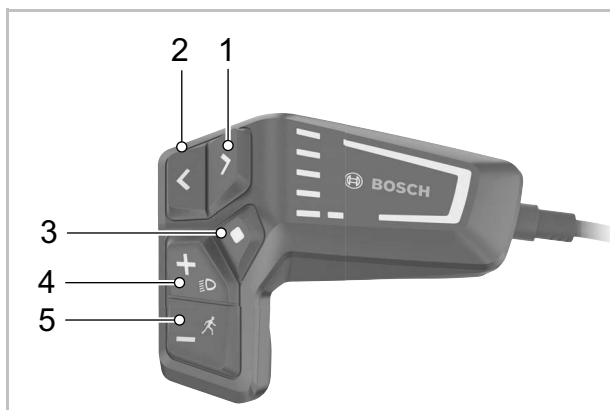


Figure 173: BOSCH LED Remote operating elements

	Symbol	Designation
1	>	Increase brightness button/ Forward button (scroll left)
2	<	Decrease brightness button/ Back button (scroll right)
3	◆	Select button
4	+	Plus button/ light button
5	-	Minus button/ push assist button

Table 55: Description of BOSCH LED Remote operating elements

You can use the **select button** (4) to perform the following functions:

- Open the QUICK MENU while riding.
- Open the SETTINGS MENU on the STATUS SCREEN while the bicycle is stationary.
- Confirm values and accept information notifications.
- Leave a dialogue.

You can use the **forward button** (1) and **back button** (2) to access the different user interfaces with information on ride values even when riding. This means both hands remain on the handlebars while you are cycling.

You can use the **plus button** (4) and the **minus button** (5) to increase and decrease the level of assistance. You can use the buttons to scroll up and down a list (such as the SETTINGS menu).

#### Open start screen

- ▶ Press **On-Off button**.
- ⇒ The START SCREEN is displayed.

#### Opening the screens

- ▶ Press the **Forward button** or **Back button**.
- ⇒ A new screen is displayed.

#### Open Status screen

- 1 Open the START SCREEN.
  - 2 Press the **Back button**.
- ⇒ The STATUS SCREEN is displayed.

#### 6.4.18.10 Adjusting the on-board computer

- ✓ The pedelec is stationary. You cannot open and adjust the settings while riding.
- ✓ Inserting the display.
- ✓ [Switching on the electric drive system.](#)

1 Open STATUS SCREEN.

2 Press the **Select button**.

The settings menu is displayed.

Menu	Submenu
My eBike	
	→ <Range reset>
	→ <Auto trip reset>
	→ <Wheel circumf.>
	→ <Service>
	→ <Components>
My Kiox	
	→ <Status bar>
	→ <Language>
	→ <Units>
	→ <Time>
	→ <Time Format>
	→ <Brightness>
	→ <Settings reset>
Information	
	→ <Contact>
	→ <Certificates>

Table 56: Basic menu and submenu structure for Kiox 300

- ⇒ Use the **Plus** and **Minus buttons** to select the required setting.
- ▶ Press the **Select button** to confirm.
- ▶ Use the **Back button** to return to the previous menu.
- ▶ Follow the instructions on the on-board computer.

#### 6.4.18.11 Selecting the the language

- 1 Open <System> menu item.
  - 2 Open <Language> sub-menu item.
  - 3 Follow the instructions on the on-board computer.
- ⇒ The language has been selected.

#### 6.4.18.12 Adjusting the clock

- 1 Open <System> menu item.
  - 2 Open <Time> sub-menu item.
  - 3 Follow the instructions on the on-board computer.
- ⇒ The time has been set.

#### 6.4.18.13 Adjusting the time format

- 1 Open <System> menu item.
  - 2 Open <Time format> sub-menu item.
  - 3 Follow the instructions on the on-board computer.
- ⇒ The Time Format is set.

#### 6.4.18.14 Selecting units

- 1 Open <System> menu item.
  - 2 Open <Units> sub-menu item.
  - 3 Follow the instructions on the on-board computer.
- ⇒ The unit of speed is displayed in the selected km/h or mph format.

#### 6.4.18.15 Setting the brightness

- 1 Open <System> menu item.
  - 2 Open <Brightness> sub-menu item.
  - 3 Follow the instructions on the on-board computer.
- ⇒ The brightness has been set.

---

#### 6.4.18.16 Reset settings

- 1 Open <System> menu item.
  - 2 Open <Settings reset> sub-menu item.
  - 3 Follow the instructions on the on-board computer.
- ⇒ All settings are reset to the factory settings. All user data has been cleared.

## 6.4.19 Adjusting the on-board computer

A smartphone with the eBike Flow application is required to use all drive system functions. The pedelec is connected to the app via a Bluetooth® connection.

### 6.4.19.1 Creating a user account

The rider needs to register online and create a user account first.

#### Registering on a PC

- 1 Create the user account on the BOSCH website.
- 2 Enter all the details required for registration.

#### Registering on a smartphone

##### Apple iPhones

- ▶ Download the Bosch eBike Flow smartphone app from the App Store free of charge.

##### Android devices

- ▶ Download the eBike Flow smartphone app from the Google Play Store free of charge.

### 6.4.19.2 Connecting the on-board computer to a smartphone

- ✓ The BOSCH eBike Flow app is downloaded onto the smartphone.
- ✓ The drive system is switched on.
- ✓ The pedelec is stationary.

- 1 Launch app.
- 2 Select the <My eBike> tab in the app.
- 3 Select the <Add new eBike device> tab in the app.
- 4 Press the **On-Off button on the pedelec** for longer than 3 seconds.
  - ⇒ The top bar on the battery level indicator (on-board computer) flashes blue.
  - ⇒ The on-board computer will switch the Bluetooth® Low Energy connection on and change to pairing mode.

- 5 Release the **On-Off button**.

- 6 Accept the connection prompt in the app.

- 7 Follow the instructions on the display.

- ⇒ The user data will be synchronised once the pairing process is complete.

### 6.4.19.3 Updating the software

Software updates are managed by the Bosch eBike Flow smartphone app.

- ✓ The on-board computer is now connected to the smartphone.
- ✓ The drive system is switched on.
- ✓ The pedelec is stationary.
- ⇒ A new software update is downloaded automatically onto the on-board computer.
- ⇒ The battery level indicator will flash green during updates to show how the update is progressing.
- ⇒ The system is restarted after an update has completed successfully.

### 6.4.19.4 Activating activity tracking

- ✓ Your location will only be logged if the on-board computer is connected to the Bosch eBike Flow smartphone app.
- ▶ Agree to activities being collected and stored on the platform or in the app.
- ⇒ All the pedelec's activities are stored and displayed on the platform and in the app.

#### 6.4.19.5 Setting up the lock function (optional)

The user account can be used to activate the lock function. This will create a digital key on the smartphone, which is required to start the drive system.

Once the lock function is switched on, the pedelec can only be put into use if:

- the configured smartphone is switched on,
- the smartphone is charged sufficiently and
- the smartphone is directly next to the on-board computer.

If the key is not immediately verified on the smartphone, the battery level indicator and the display of selected level of assistance on the pedelec flash white to indicate a search for the key.

If the key is found, the battery level indicator flashes white. The last configured level of assistance is displayed. If the key cannot be found on the smartphone, the pedelec drive system switches off. The indicators on the on-board computer go off.

As the smartphone is only used as a contactless key to switch on the pedelec, the battery and on-board computer can still be used on another, unblocked pedelec.

#### 6.4.19.6 Inserting the battery

- 1 Use a slotted-head screwdriver to pry open the battery compartment lid on the display rear.



Figure 174: Prying open the battery compartment lid

- 2 Insert new CR2450 battery. In doing so, ensure the seal rubber is in the right position.



Figure 175: Inserting the battery with the seal rubber (1) aligned correctly

- 3 Press on the battery compartment lid.  
⇒ The battery compartment is closed.

### 6.4.19.7 Inserting the display

- 1 Insert the battery compartment nub (1) into the bracket mount recess (2).
- 2 Gently press display downwards.

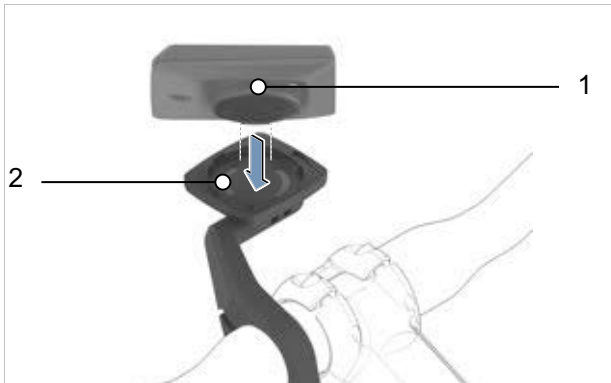


Figure 176: Putting the display into position

- 3 Turn display clockwise until it clicks into place.
- ⇒ The display is fastened into position.



Figure 177: Turning the display clockwise

### 6.4.19.8 Removing the on-board computer

- ✓ The display is not secured.
- ▶ Turn the display anticlockwise to release.
- ▶ Remove the display from the mount recess in the display mount.

### 6.4.19.9 Securing the on-board display (optional)

It is possible to secure the on-board computer so that it cannot be removed. Inserting the blocking screw does not provide protection against theft.

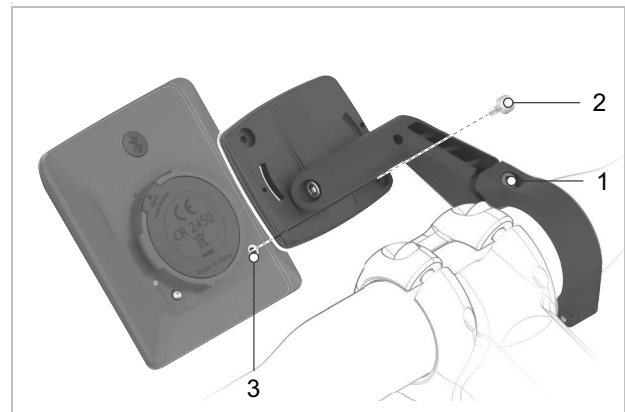


Figure 178: Position of headset screw

- ✓ The display is fastened into position.
- 1 Use a 3 mm hex key to unfasten the display mount (1) attachment screw.
- ⇒ The display mount can still move forwards.
- 2 Turn the display mount downwards until you can access the display's lower surface.
  - 3 Insert blocking screw (2) and fasten into the screw hole in the display (3).
  - 4 Turn the display mount back into its original position.
  - 5 Use a 3 mm hex key to fasten the display mount (1) attachment screw with 1 Nm.
- ⇒ The display can now only be removed if the blocking screw (2) is unfastened.

### 6.4.19.10 Adjusting the on-board computer

#### Notice

- ▶ Never use on-board computer, the display or the display mount as a handle. If the on-board computer, display or display mount are used to lift the pedelec, components can become irreparably damaged.

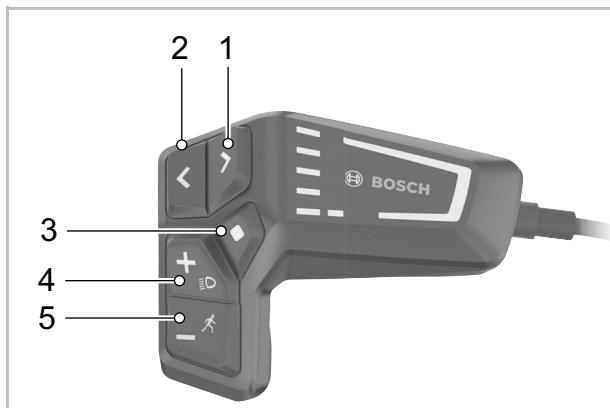


Figure 179: BOSCH LED Remote operating elements

	Symbol	Designation
1	>	Increase brightness button/ Forward button (scroll left)
2	<	Decrease brightness button/ Back button (scroll right)
3	◆	Select button
4	+	Plus button/ light button
5	-	Minus button/ push assist button

Table 57: Description of BOSCH LED Remote operating elements

You can use the **forward button** (1) and **back button** (2) to access the different user interfaces with information on ride values even when riding. This means both hands remain on the handlebars while you are cycling.

You can use the **plus button** (4) and the **minus button** (5) to increase and decrease the level of assistance. You can use the buttons to scroll up and down a list (such as the SETTINGS menu).

#### Opening the screens

- ▶ Press the **Forward button** or **Back button**.  
⇒ A new screen is displayed.

#### Open Status screen

- 1 Open the **START SCREEN**.
- 2 Press the **Back button**.  
⇒ The **STATUS SCREEN** is displayed.



### 6.4.19.11 Adjust on-board computer

- ✓ The pedelec is stationary. You cannot open and adjust the settings while riding.
- ✓ Inserting the display.
- ✓ Switching on the electric drive system.

1 Press the **Select button** until <SETTINGS> appears on the **text display**.

⇒ The <BASIC SETTINGS> menu is now open.

2 Press the **Forward button** or the **Back button** until the required setting appears on the **text display**.

Submenu	Explanation
<b>Change/exit basic settings</b>	
<Language>	Sets preferred display language
<Units>	Sets speed and distance to kilometres or miles
<Time>	Adjusts the clock
<Time format>	Sets to 12- or 24-hour format
<Shift recommendation>	Switches shift recommendations on or off
<Backlight>	Sets duration of backlight activation
<Brightness>	Adjusts the display brightness
<Settings reset>	Resets all settings to their factory settings

**Table 58: Basic menu and submenu structure for Intuvia 100**

3 Change the settings. Follow the instructions on the display to do so.

▶ Press the **select button** briefly until in the required value is displayed to change the basic settings.

▶ Press the **Back button** if the setting is correct.

⇒ You now exit the submenu. The changed values are saved automatically when you exit the submenu.

4 Press the **select button** briefly.

⇒ The <BASIC SETTINGS> menu is now closed.

### 6.4.19.12 Selecting the language

1 Open the <Language> submenu.

2 Press the **select button** briefly until the required language is displayed.

3 Press the **Back button**.

⇒ You now exit the submenu. The language has been set.

### 6.4.19.13 Selecting units

1 Open <Units> submenu.

2 Press the **Select button** briefly to choose between kilometres and miles.

3 Press the **Back button**.

⇒ You now exit the submenu. The unit has been selected.

### 6.4.19.14 Adjusting the clock

1 Open the <Time> submenu.

2 Follow the instructions on the on-board computer.

⇒ The time has been set.

3 Press the **Back button** if the correct time has been set.

⇒ You now exit the submenu. The clock has been set.

### 6.4.19.15 Setting the time format

1 Open <Time format> submenu.

2 Press the **Select button** briefly to choose between 12- and 24- hour format.

3 Press the **Back button**.

⇒ You now exit the submenu. The Time Format is set.

### 6.4.19.16 Setting the shift recommendation

1 Open <Shift recommendation> submenu.

2 Press the **Select button** briefly to choose between on and off.

3 Press the **Back button**.

⇒ You now exit the submenu. The shift recommendation has been set.

#### 6.4.19.17 Adjusting the backlight

- 1 Open <Backlight> submenu.
  - 2 Press the **Select button** briefly to select the duration of the backlight after pressing a button.
  - 3 Press the **Back button**.
- ⇒ You now exit the submenu. The backlight has been set.

#### 6.4.19.18 Setting the brightness

- 1 Open <Brightness> submenu.
  - 2 Press the **Select button** briefly to choose one of the 5 increments.
  - 3 Press the **Back button**.
- ⇒ You now exit the submenu. The brightness has been set.

#### 6.4.19.19 Resetting the settings

- 1 Open <Settings reset> sub-menu item.
  - 2 Press the select button briefly to return all settings to their original state on delivery.
  - 3 Press the **Back button**.
- ⇒ You now exit the submenu. All settings have been reset.

## 6.5 Accessories

Not included in price

### 6.5.1 Child seat



Child seats may only be used with the vehicle manufacturer's approval and only if they are approved for use on e-bikes.

#### **WARNING**

##### Crash caused by incorrect child seat

Pannier racks with a maximum load capacity under 27 kg and the down tube are unsuitable for mounting child seats and may break. Such an incorrect position may cause a crash with serious injuries for the pedelec rider or child.

- ▶ Never attach a child seat to the saddle, handlebars or down tube.

#### **CAUTION**

##### Crash caused by improper handling

When using child seats, the pedelec's handling characteristics and stability change considerably. This can cause a loss of control, a crash and injuries.

- ▶ You should practice how to use the child seat safely before using the pedelec in public spaces.

##### Risk of crushing due to exposed springs

The child may crush his/her fingers on exposed springs or open mechanical parts of the saddle or the seat post.

- ▶ Never install saddles with exposed springs if a child seat is being used.
- ▶ Never install suspension seat posts with open mechanical parts or exposed springs if a child seat is being used.

## Notice

- ▶ Observe the legal regulations on the use of child seats.
- ▶ Observe the operating and safety instructions for the child seat system.
- ▶ Never exceed the maximum permitted total weight.

The specialist dealer will advise you on which child seat system is suitable for the child and the pedelec.

The specialist dealer must install the child seat the first time to ensure that it is safely fitted.

When installing a child seat, it must be ensured that:

- the seat and the seat fastening are suitable for the pedelec
- all components are installed and securely fastened
- shift cables, brake cables, hydraulic and electrical cables are adjusted as necessary
- the pedelec rider has optimum freedom of movement
- the maximum permitted total weight of the pedelec is observed.

The specialist dealer will provide instruction on how to handle the pedelec and the child seat.

## 6.5.2 Trailer



Trailers may only be used with the vehicle manufacturer's approval and only if they are approved for use on e-bikes.



### Crash caused by brake failure

The braking distance may be longer if the trailer is carrying excessive load. The long braking distance can cause a crash or an accident and injuries.

- ▶ Never exceed the specified trailer load.

### Notice

- ▶ The *operating* and safety instructions for the trailer system must be observed.
- ▶ Observe the statutory regulations on the use of bicycle trailers.
- ▶ Only use type-approved coupling systems.

A pedelec which is approved for towing a trailer will bear an appropriate adhesive label. You may only use trailers with a tongue load and weight which do not exceed the permitted values.

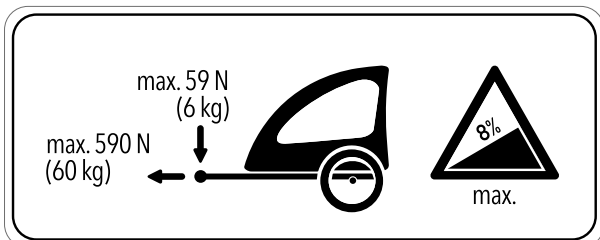


Figure 180: Trailer sign

The specialist dealer will advise you on which trailer system is suitable for the pedelec. The specialist dealer must install the trailer the first time to ensure that it is fitted safely.

### 6.5.2.1 Approval for trailer with Enviolo hub

#### Only applies to pedelecs with this equipment

Only compatible bicycle trailers are approved for ENVILO hub gears.

#### KETTLER

KETTLER Quadriga child trailer.

#### BURLY

Trailer	Adapter
Minnow Bee	Item no. 960038
Honey Bee	
Encore	
solo	
Cub	
D'Lite	
Normad	
Flatbed	
Tail Wagon	

#### CROOZER

Trailer	Adapter
Croozor Kid	Item no. 122003516, XL: +10 mm Item no. 122003716 Item no. 12200715 Croozor axle nut adapter with Thule coupling
Croozor Kid Plus	
Croozor Cargo	
Croozor Dog	

#### THULE

Trailer	Adapter
Thule Chariot Lite	Item no. 20100798
Thule Chariot Cab	
Thule Chariot Cross	
Thule Chariot Sport	
Thule Coaster XT	

### 6.5.2.2 Approval for trailer with ROHLOFF hub

Only applies to pedelecs with this equipment

#### ROHLOFF Speedhub 500/14

As a basic rule, it is permitted to use a trailer in combination with the ROHLOFF SPEEDHUB 500/14.

There must be **no component contact** with the cover of the ROHLOFF E-14 gear shift unit caused by pressure or tension at any time during assembly or when riding with the trailer **under any circumstances**.

Collision causing possible damage to the ROHLOFF E-14 gear shift unit can be avoided with suitable washers or special axle adapters (spacers or polygon) from the coupling manufacturer concerned.

#### Speedhub with A-12



#### Risk of an accident

The A-12 attachment screw has a very low screw-in depth. The screw or the thread in the axle plate can be damaged or ripped out if a trailer hitch is fitted directly onto the axle or the A-12 attachment screw. This may cause an accident with injuries.

- ▶ Never fit a trailer hitch directly on the axle and the A-12 attachment screw to a ROHLOFF Speedhub with an A-12 axle system in a 12 mm quick release axle frame.

### 6.5.3 Pannier rack



Front and rear pannier racks are only permitted with the vehicle manufacturer's approval and only if they are approved for use on e-bikes.

The specialist dealer will advise on choosing a suitable pannier rack.

The specialist dealer must install the pannier rack the first time to ensure that it is safely fitted.

When installing a pannier rack, the specialist dealer makes sure that the fastening mechanism is suitable for the pedelec and that all components are installed and firmly fastened. They will also ensure that shift cables, brake cables, hydraulic lines and electrical cables are adjusted as necessary, the person riding has optimum freedom of movement and the pedelec's maximum permitted total weight is not exceeded.

The specialist dealer will provide instruction on how to handle the pedelec and the pannier rack.

### 6.5.4 Panniers and cargo boxes



Panniers and cargo boxes are permitted if they are approved for use on e-bikes.

- ▶ Pay attention when loading the pannier rack and ensure correct load distribution.
- ▶ The maximum permitted total weight must not be exceeded during use.
- ▶ Use a paint protection film when attaching panniers. This will reduce abrasion on paint and wear on components.

The following panniers and cargo boxes are recommended:

Description	Article number
Protective cover for electrical components	080-41000 ff
Panniers, system component	080-40946
Rear wheel basket, system component	051-20603
Bicycle box, system component*	080-40947

Table 59: Recommended panniers and cargo boxes

### 6.5.5 Front baskets



Take care with front baskets because their load distribution is not fixed. They are only permitted with the vehicle manufacturer's approval and only if they are approved for use on e-bikes.

### 6.5.6 Bar ends



Handlebar ends are permissible provided they are professionally fitted to face the front at a specialist shop and only if they are approved for use on e-bikes. They must not seriously alter load distribution.

### 6.5.7 Kickstands



Kickstands are permitted if they are able to bear the weight of the pedelec.

We recommend a parking stand into which either the front wheel or rear wheel can be inserted securely for pedelecs which do not have a kickstand.

### 6.5.8 Additional battery headlight



Fitting additional battery headlights is permitted provided they comply with the laws of the country where the pedelec will be ridden and if they are approved for use on e-bikes.

### 6.5.9 Mobile holder

A holder for SP Connect mobile case is fitted to the stem.

- ✓ Observe the operating instructions for the mobile and the SP Connect mobile case.
- ✓ Use on tarmacked roads only.
- ✓ Protect mobile from theft.
- ▶ To attach: insert the SP Connect mobile case in the holder and turn 90° to the right.
- ▶ To release: turn the SP Connect mobile case 90° to the left and remove.

### 6.5.10 Suspension fork coil spring

If the desired suspension fork sag cannot be achieved after adjustment, the coil spring assembly must be replaced with a softer or harder spring.

- ▶ Fit a softer coil spring assembly group to increase the sag.
- ▶ Fit a harder coil spring assembly group to decrease the sag.

### 6.5.11 Fixed weather protection systems



Fixed weather protection systems are only permitted with the vehicle manufacturer's approval.

## 6.6 Personal protective equipment and accessories for road safety

Seeing and being seen is crucial in road traffic. The following requirements must be met for riding a pedelec safely on public roads.

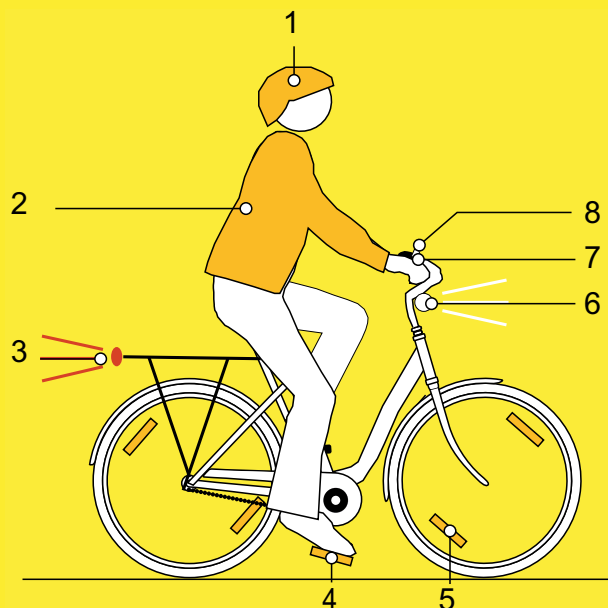


Figure 181: Road safety

- 1 The helmet must have a reflective strip or a light in a clearly visible colour.
- 2 **Cycle clothing** is essential at all times of year. Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety. Never wear a skirt. Always wear trousers which reach down to your ankles instead.
- 3 The **large red reflector** with a “Z” registration mark and the **red rear light** must be clean. The rear light is attached high enough so that cars can see it (minimum height 25 cm). The rear light must work.
- 4 The two **reflectors on the two non-slip pedals** must be clean.
- 5 The **yellow spoke reflectors** on both wheel or the **white, fluorescent surface** on both wheels must be clean.
- 6 The **white front light** must work and must be positioned so that it does not dazzle other road users. The white front light and the **white reflector** must be clean at all times.

- 7 The **two separate brakes** on the pedelec must work at all times.
- 8 The **clear sounding bell** must be fitted and must work.

## 6.7 Before each ride

- ▶ Check pedelec before each ride; see Section [7.1](#).

Check list before each ride		
<input type="checkbox"/>	Check everything is sufficiently clean.	See Section <a href="#">7.2</a>
<input type="checkbox"/>	Check guards.	See Section <a href="#">7.1.1</a>
<input type="checkbox"/>	Check battery to ensure it is firmly in place.	See Section <a href="#">6.17.2</a>
<input type="checkbox"/>	Check lights.	See Section <a href="#">7.1.13</a>
<input type="checkbox"/>	Check brake.	See Section <a href="#">7.1.14</a>
<input type="checkbox"/>	Check suspension seat post.	See Section <a href="#">7.1.9</a>
<input type="checkbox"/>	Check pannier rack.	See Section <a href="#">7.1.5</a>
<input type="checkbox"/>	Check bell.	See Section <a href="#">7.1.10</a>
<input type="checkbox"/>	Check handles.	See Section <a href="#">7.1.11</a>
<input type="checkbox"/>	Check rear frame damper.	See Section <a href="#">7.1.4</a>
<input type="checkbox"/>	Check frame.	See Section <a href="#">7.1.2</a>
<input type="checkbox"/>	Check wheel concentricity.	See Section <a href="#">7.1.7</a>
<input type="checkbox"/>	Check quick releases.	See Section <a href="#">7.1.8</a>
<input type="checkbox"/>	Check mudguards.	See Section <a href="#">7.1.6</a>
<input type="checkbox"/>	Check USB cover.	See Section <a href="#">7.1.12</a>

- ▶ Be alert to any unusual noises, vibrations or odours while riding. Be alert to any unusual operating sensations when braking, pedalling or steering. This indicates material fatigue.
- ✓ Take pedelec out of service if there are any deviations from the “Before each ride” checklist or any unusual behaviour. Contact specialist dealer.

## 6.7.1 Checking the ABS lamp

### Only applies to pedelecs with this equipment

- ✓ The ABS indicator lamp must light up after the system has started up and must go out once speed has reached about 5 km/h.
- ▶ The ABS is defective if the ABS indicator lamp does not light up after the electric drive system starts up.
- ⇒ An error code will be displayed on the display screen.

If the indicator lamp does not go out after you set off or it lights up while you are riding, this means there is an error in the ABS. The ABS is then no longer active. The brake system itself will continue to work. It is only the ABS control which no longer works. If the ABS indicator lamp is lit, the ABS function is not active.



## 6.8 Personal protective equipment and accessories for road safety

### 6.8.1 Riding in bike parks and off-road

Special protective equipment is mandatory when you ride in bike parks. You must wear a full-face helmet and complete protective equipment (full-face helmet, safety jacket and knee or shin pads).

- ▶ Before going to a bike park, make sure you are familiar with all specifications on the required protective clothing and observe them.

When you ride off road, the type of personal protective equipment depends on the route and the weather conditions. The clothing specified in Section 2.5 should be regarded as a minimum requirement.

### 6.8.2 Riding on public roads

The supplied mountain bike is not suitable for use on public roads. Before you use the pedelec on public roads, the pedelec must be adapted in accordance with the applicable laws. Likewise, off-road tyres must be exchanged for road tyres. The following requirements must be met for riding a pedelec safely on public roads.

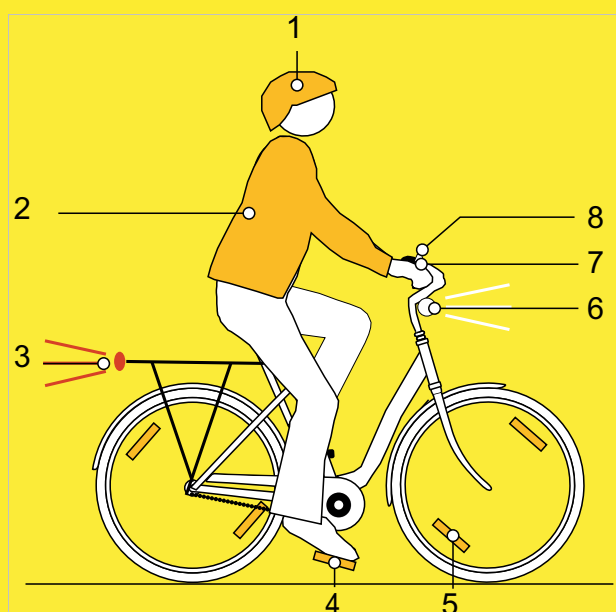


Figure 182: Road safety

- 1 The helmet must have a reflective strip or a light in a clearly visible colour.
- 2 **Cycle clothing** is essential at all times of year. Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety. Never wear a skirt. Always wear trousers which reach down to your ankles instead.
- 3 The **large red reflector** with a "Z" registration mark and the **red rear light** must be clean. The rear light is attached high enough so that cars can see it (minimum height 25 cm). The rear light must work.
- 4 The two **reflectors on the two non-slip pedals** must be clean.
- 5 The **yellow spoke reflectors** on both wheel or the **white, fluorescent surface** on both wheels must be clean.
- 6 The **white front light** must work and must be positioned so that it does not dazzle other road users. The white front light and the **white reflector** must be clean at all times.
- 7 The **two separate brakes** on the pedelec must work at all times.
- 8 The **clear sounding bell** must be fitted and must work.

## 6.9 Before each ride

- ▶ Check pedelec before each ride; see Section [7.1](#).

Checklist before each ride		
<input type="checkbox"/>	Check everything is sufficiently clean.	See Section <a href="#">7.2</a>
<input type="checkbox"/>	Check guards.	See Section <a href="#">7.1.1</a>
<input type="checkbox"/>	Check battery to ensure it is firmly in place.	See Section <a href="#">6.17.2</a>
<input type="checkbox"/>	Check lights.	See Section <a href="#">7.1.13</a>
<input type="checkbox"/>	Check brake.	See Section <a href="#">7.1.14</a>
<input type="checkbox"/>	Check suspension seat post.	See Section <a href="#">7.1.9</a>
<input type="checkbox"/>	Check pannier rack.	See Section <a href="#">7.1.5</a>
<input type="checkbox"/>	Check bell.	See Section <a href="#">7.1.10</a>
<input type="checkbox"/>	Check handles.	See Section <a href="#">7.1.11</a>
<input type="checkbox"/>	Check rear frame damper.	See Section <a href="#">7.1.4</a>
<input type="checkbox"/>	Check frame.	See Section <a href="#">7.1.2</a>
<input type="checkbox"/>	Check wheel concentricity.	See Section <a href="#">7.1.7</a>
<input type="checkbox"/>	Check quick releases.	See Section <a href="#">7.1.8</a>
<input type="checkbox"/>	Check mudguards.	See Section <a href="#">7.1.6</a>
<input type="checkbox"/>	Check USB cover.	See Section <a href="#">7.1.12</a>

- ▶ Be alert to any unusual noises, vibrations or odours while riding. Be alert to any unusual operating sensations when braking, pedalling or steering. This indicates material fatigue.
- ⇒ Take pedelec out of service if there are any deviations from the “Before each ride” checklist or any unusual behaviour. Contact specialist dealer.

## 6.10 Using the BOSCH battery

- ✓ Switch off the electric drive system.

### 6.10.1 Using the integrated battery

Only applies to pedelecs with this equipment

#### 6.10.1.1 Removing the integrated battery

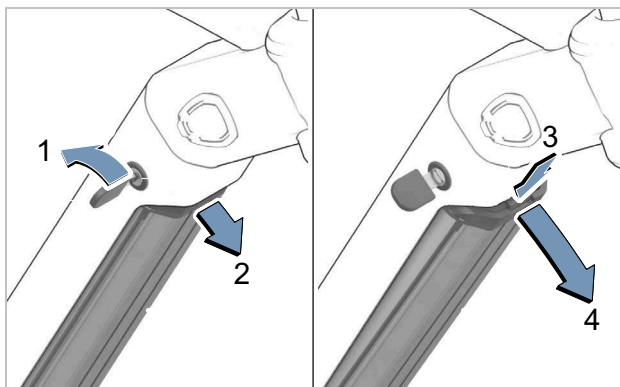


Figure 183: Removing the integrated battery

- 1 Open battery lock with battery key (1).  
⇒ The battery is released and falls into the retainer guard (2).
- 2 Hold the battery in your hand from below. Use the other hand to push on the retainer guard from above (3).  
⇒ The battery is released and falls into the hand (4).
- 3 Remove the battery from the frame.
- 4 Remove the battery key from the battery lock.

#### 6.10.1.2 Inserting the integrated battery

- ✓ The key is inserted in the lock.
- ✓ The lock is unlocked.

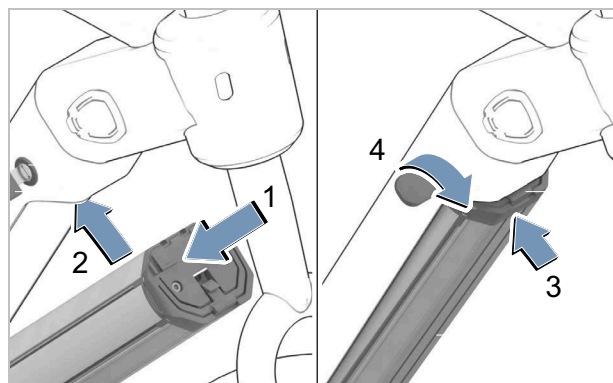


Figure 184: Inserting the integrated battery

- 1 Place the battery into the lower mount with the contacts facing the front (1).
- 2 Flip the battery upwards so that the battery is held by the retainer guard (2).
- 3 Keep the lock open with the key.
- 4 Push the battery upwards (3).  
⇒ The battery can be heard locking into place.
- 5 Check battery to ensure it is firmly in place on all sides.
- 6 Lock the battery with the battery key; otherwise, the battery may fall out of the mount when you open the see (4).
- 7 Remove the battery key from the battery lock.
- 8 Check the battery to ensure it is firmly in place before each ride.

## 6.10.2 Frame battery

### Only applies to pedelecs with this equipment

#### 6.10.2.1 Inserting the battery

- ✓ The key is inserted in the lock.
  - ✓ The lock is unlocked.
- 1 Place the battery into the lower mount with the contacts facing the front (1).

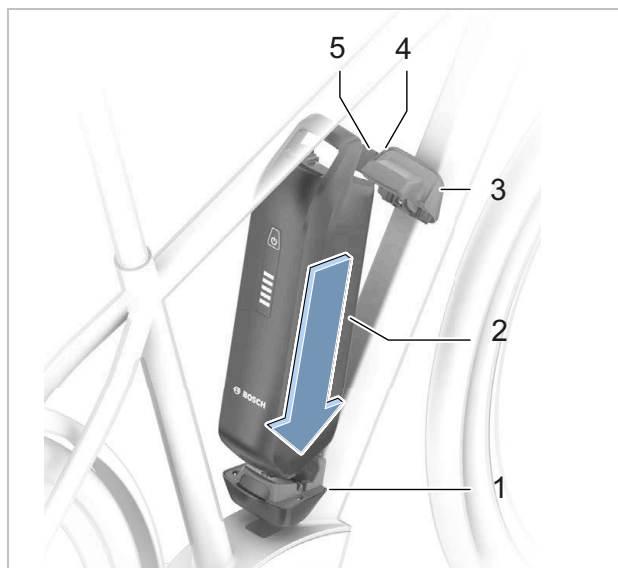


Figure 185: Inserting the PowerPack battery

- 2 Flip the battery upwards so that the battery is held by the retainer guard (2).



Figure 186: Closing the PowerPack battery upwards

- 3 Keep the lock open with the key.
- 4 Push the battery upwards (3).
  - ⇒ The battery can be heard locking into place.
- 5 Check battery to ensure it is firmly in place on all sides.
- 6 Lock the battery with the battery key; otherwise, the battery may fall out of the mount when you open the see (4).
- 7 Remove the battery key from the battery lock.
- 8 Check the battery to ensure it is firmly in place before each ride.

#### 6.10.3 Removing the battery

- 1 Open battery lock with battery key (1).
  - ⇒ The battery is released and falls into the retainer guard (2).
- 2 Hold the battery in your hand from below. Use the other hand to push on the retainer guard from above (3).
  - ⇒ The battery is released and falls into the hand (4).
- 3 Remove the battery from the frame.
- 4 Remove the battery key from the battery lock.

### 6.10.4 Charging the battery

The battery can remain on the pedelec or can be removed for charging. Interrupting the charging process does not damage the battery. The battery is fitted with a temperature monitoring system which only allows charging within a temperature range between 0 °C and 40 °C.

✓ The ambient temperature during the charging process lies within the range between 0 °C to 40 °C.

- 1 Remove the cable connection cover if necessary.
- 2 Connect the mains plug of the charger to a normal domestic, grounded socket.

Connection data	230 V, 50 Hz
-----------------	--------------

#### Notice

- ▶ Check that mains voltage! The power source voltage must match the voltage indicated on the charger nameplate. Chargers labelled 230 V may be operated at 220 V.

- 3 Connect the charging cable to the battery's charging port.

⇒ The charging process starts automatically.

⇒ The battery level indicator shows the battery level during charging. When the drive system is switched on, the *on-board computer* displays the charging process.

#### Notice

If an error occurs during the charging process, a system message is displayed.

- ▶ Remove the charger and battery from operation immediately and follow the instructions.

⇒ Charging is complete when the LEDs on the battery level indicator go out.

- 4 Once charging is complete, disconnect the battery from the charger.

▶ Disconnect the charger from the mains.

## 6.11 Straightening the quickly adjustable stem

Only applies to pedelecs with this equipment

- 1 Open stem clamping lever.

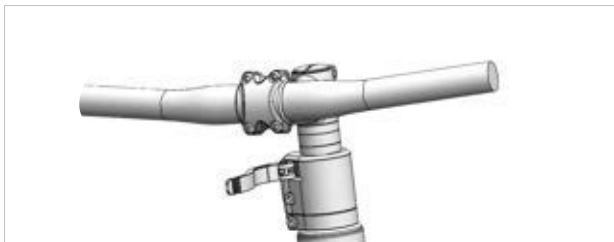


Figure 187: Example of All Up with open stem clamping lever

- 2 Pull handlebars into the highest possible position.

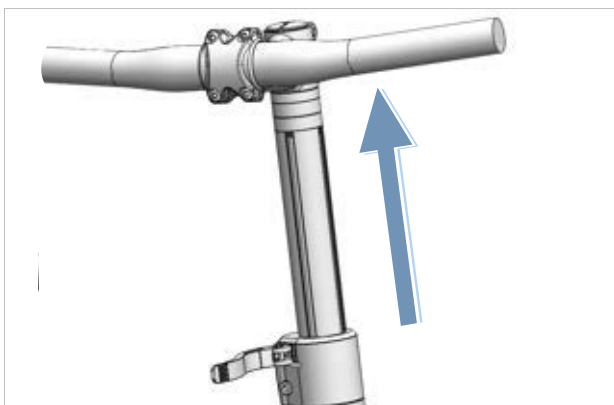


Figure 188: Example of All Up pulled into highest possible position

- 3 Turn handlebars 90° anti-clockwise so that they are straight.

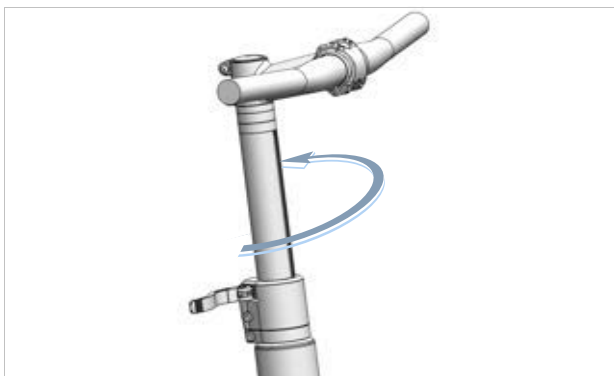


Figure 189: Example of All Up in straight position

- 4 Place handlebars at required height.
- 5 Close stem clamping lever.

## 6.12 Using the pannier rack

**CAUTION**

### Crash caused by loaded pannier rack

The pedelec is handled differently with a loaded *pannier rack*, in particular when the rider needs to steer and brake. This can lead to a loss of control. This may cause a crash with injuries.

- ▶ You should practice how to use a loaded *pannier rack* safely before using the pedelec in public spaces.

### Crushing the fingers in the spring flap

The spring flap on the *pannier rack* operates with a high clamping force. There is a risk of crushing the fingers.

- ▶ Never allow the spring flap to snap shut in an uncontrolled manner.
- ▶ Be careful where you position your fingers when closing the spring flap.

### Crash caused by unsecured baggage

Loose or unsecured objects on the *pannier rack*, e.g. belts, may become caught in the rear wheel. This may cause a crash with injuries.

Objects which are fastened to the *pannier rack* may cover the *reflectors* and the *riding light*. Other users may not see the pedelec on public roads as a result. This may cause a crash with injuries.

- ▶ Secure any objects which are attached to the *pannier rack* sufficiently.
- ▶ Objects fastened to the *pannier rack* must never cover the *reflectors*, the *headlight* or the *rear light*.
- ▶ Distribute the baggage as evenly as possible between the left- and right-hand side.
- ▶ We recommend the use of panniers and baggage baskets.

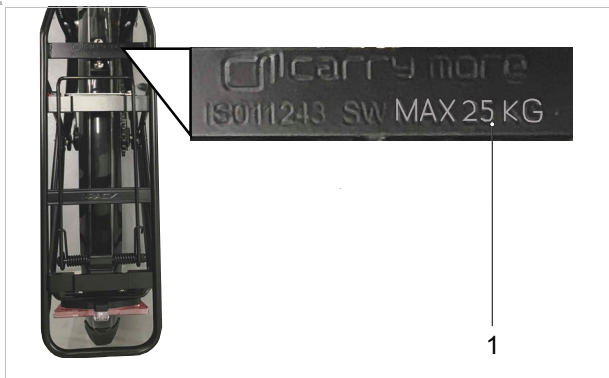


Figure 190: The maximum load bearing capacity is indicated on the pannier rack

- ▶ Pack the pedelec to its *maximum permitted total weight* (PTW) only.
- ▶ Pack the pedelec to the pannier rack's maximum load capacity only.
- ▶ Use the original pannier rack only.

### 6.13 Raising the kickstand

- ▶ Use your foot to raise kickstand completely before setting off.

### 6.14 Using the saddle

- ▶ Do not wear studded jeans as these can damage the saddle covering.
- ▶ Wear dark clothes for your first few rides as new leather saddles can stain clothing.

Riders often experience pain in the sitting bones, especially beginners or at the start of the season, after a longer break. The periosteum around the sitting bones is irritated as it is unaccustomed to the chafing. To reduce chafing:

- ▶ Wear cycling shorts with shock-absorbing seat padding.
  - ▶ Use a chamois cream or ointment.
- ⇒ The sensation of pain is reduced after five to six rides, although it may increase again after two to three weeks of riding.

#### 6.14.1 Using the leather saddle

Sunlight and UV light tarnish the colour and cause the leather to dry out and fade.

- ▶ Park pedelec in the shade.
- ▶ Always use a saddle cover.

Moisture may cause the leather to detach from material beneath and mould may form.

- ▶ If the leather saddle gets wet, dry saddle completely.
- ▶ Always use a saddle cover.

#### 6.15 Using the pedals

- ▶ The ball of the foot is placed on the pedal when riding and pedalling.

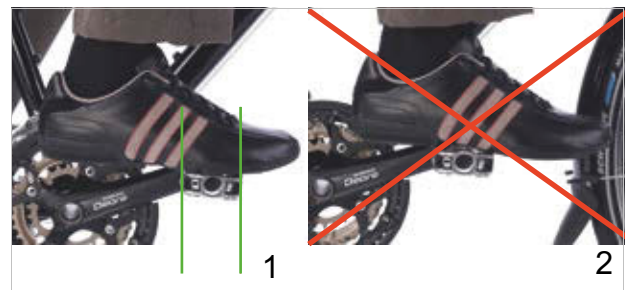


Figure 191: Correct (1) and incorrect (2) foot position on the pedal

## 6.16 Setting the saddle height with the remote control

Only applies to pedelecs with this equipment

### 6.16.1 Lowering the saddle

- 1 Sit on the saddle.
- 2 Press the remote control operating lever.
  - ⇒ The seat post will lower.
- 3 Release the remote control operating lever when you have reached the desired height.

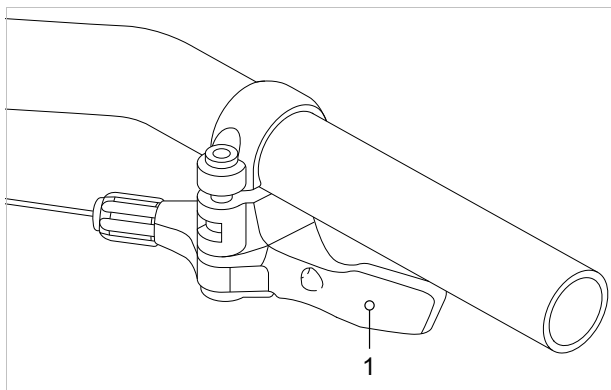


Figure 192: Remote control operating lever (1)

### 6.16.2 Raising the saddle

- 1 Remove any pressure from the saddle.
- 2 Press the remote control operating lever.
  - ⇒ The seat post will rise.
- 3 Release the remote control operating lever when you have reached the desired height.

## 6.17 Using the bell

- 1 Press the bell button downwards.
- 2 Let button spring back.

## 6.18 Using the handlebars

- ▶ Wear heavily padded cycling gloves.
  - ⇒ This helps protect sensitive areas of your palms.
- ▶ Vary your grip position continuously while riding.
  - ⇒ This prevents overstraining and fatigue in your hands.

### 6.18.1 Using multi-position handlebars

Only applies to pedelecs with this equipment

Multi-position handlebars are ideal for dynamic riding. The contoured ends of the handlebars, also known as horn handlebars, provide a variety of grip options. Changing muscle groups reduces strain on the hands, arms and back during longer rides.

- ▶ Vary your grip position continuously while riding.
  - ⇒ This prevents overstraining and fatigue in your hands.

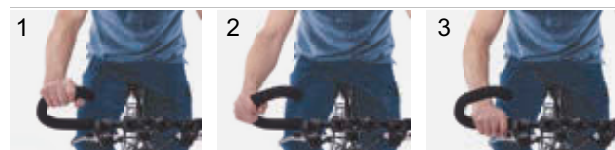


Figure 193: Grip positions on the multi-position handlebars

#### Grip position 1

The top grip position is suitable for riding slowly.

- ▶ Straighten your upper body without tensioning in this position.

#### Grip position 2 and 3

The middle and bottom grip position is suitable for fast rides and riding on inclines.

- ▶ In the middle position, hold the arm and wrist upright and relax tension.
- ▶ In the bottom position, place your upper body slightly lower. Keep your fingers close to the brake handle ready for use.



## 6.18.2 Using bar ends

### Only applies to pedelecs with this equipment

Bar ends can be added to normal handlebars.

Adjustable bar ends feature a ball joint which you can use to choose the optimum position as required.

- ▶ Adjust bar ends correctly. To do so, your hand, elbow and shoulder must be in line with one another when the hand takes hold of the bar ends.
  - ▶ During the ride, keep varying your grip position between a flat (1) and upright (2) hand position.
- ⇒ This prevents overstraining, fatigue and numbness in your hands and fingers.



Figure 194: Grip positions on a bar end

## 6.18.3 Using leather handles

### Only applies to pedelecs with this equipment

Sweat and grease from the skin are two of the greatest enemies of leather. They penetrate the surface of leather and cause it to disintegrate more quickly, meaning the leather can soften and abrade.

- ▶ Wear gloves.

Sunlight and UV light damage the colour and can cause the leather to dry out and fade.

- ▶ Park pedelec in the shade.

Moisture may cause the leather to detach from material beneath and mould may form.

- ▶ If the leather handles get wet, dry handles completely.

## 6.18.4 Adjusting the rear frame damper

- Before each ride, adjust the suspension and/or damping to the terrain if you have a rear frame damper.

Terrain	Position
<b>Suspension</b>	
Setting off	Open
Uphill or tarmacked roads	Lock out
Energy saved while riding on roads and/or for maximum pedalling efficiency on flat or smooth terrain	Threshold
<b>Damping</b>	
Downhill rides and terrain	Soft
Tarmacked roads	Hard

### 6.18.4.1 Adjusting the rear frame damper suspension

The suspension setting on the rear frame damper is optional and can have up to three settings:

- Open
- Locked out
- Threshold (optional)

#### Lockout (optional)

The suspension system absorbs a great deal of motor and muscle power during rides uphill or on optimally tarmacked roads. This increases energy consumption and reduces propulsion. It thus makes sense to lock the suspension on tarmacked roads and when riding uphill.

#### Threshold (optional)

Threshold mode increases drive efficiency over level terrain.

The threshold setting can be used to improve pedalling efficiency over flat, hilly, level or slightly rugged terrain. In threshold mode, higher pedelec speeds lead to greater impact force when a pedelec hits a bump, causing the suspension fork to deflect, and the bump is absorbed.

### 6.18.4.2 Lock out the ROCKSHOX rear frame damper

Only applies to pedelecs with this equipment

- ✓ Adjusting the rear frame damper rebound damper (see Section 6.4.15).
- ✓ The pedelec is stationary.

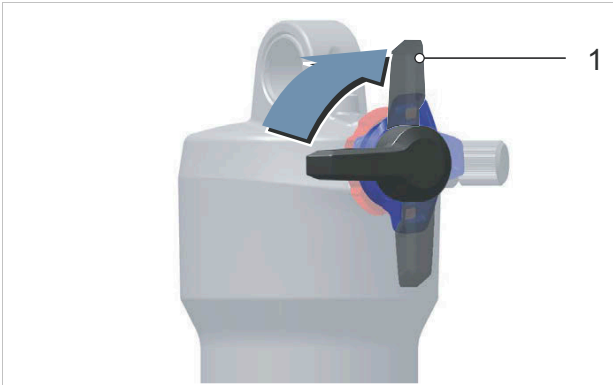


Figure 195: The compression adjuster's (black) closed position (1)

- ▶ Place locking lever (rear frame damper) into the closed position (1).
- ⇒ The rear frame damper is locked.

### 6.18.4.3 Opening the ROCKSHOX rear frame damper

Only applies to pedelecs with this equipment

- ✓ Adjusting the rear frame damper rebound damper (see Section 6.4.15).
- ✓ The pedelec is stationary.

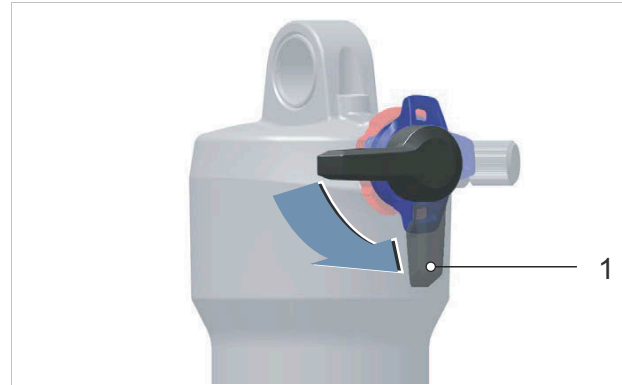


Figure 196: The compression adjuster's (black) open position (1)

- ▶ Place **locking lever (rear frame damper)** in the open position (1).
- ⇒ The rear frame damper is open.

#### 6.18.4.4 Adjusting the ROCKSHOX rear frame damper threshold

##### Only applies to pedelecs with this equipment

- ✓ The pedelec's sag is configured.
- ✓ The pedelec's rebound damping has been set.
- ✓ The pedelec is stationary.

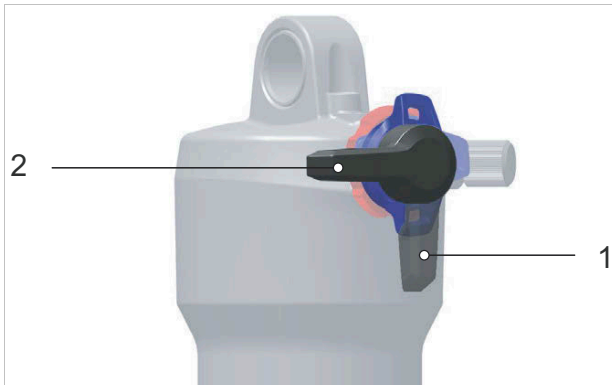


Figure 197: Open position (1) and position of the threshold (2) on the rear frame damper (black)

- ▶ Place **locking lever (rear frame damper)** in the threshold (2) position.
- ⇒ The threshold mode is enabled.

- ▶ To increase sensitivity to small bumps, turn **compression adjuster** anti-clockwise to decrease damping and hardness and increase the deflection speed.



Figure 198: Adjust the compression adjuster so that it is harder

## 6.19 Using the electric drive system

### 6.19.1 Switching on the electric drive system



#### Crash caused by lack of readiness for braking

When it is switched on, the drive system can be activated by applying force to the pedals. There is a risk of a crash if the drive is activated unintentionally and the brake is not reached.

- ▶ Never start the electric drive system, or switch it off immediately, if the brake cannot be reached safely and reliably.

- ✓ A sufficiently charged battery has been inserted into the pedelec.
- ✓ The battery is firmly positioned and locked. The battery key has been removed.
- ✓ The speed sensor is connected correctly.

There are two options for switching on the drive system.

#### On-Off button (on-board computer)

- ▶ Press the **On-Off button (on-board computer)** briefly (< 3 seconds).

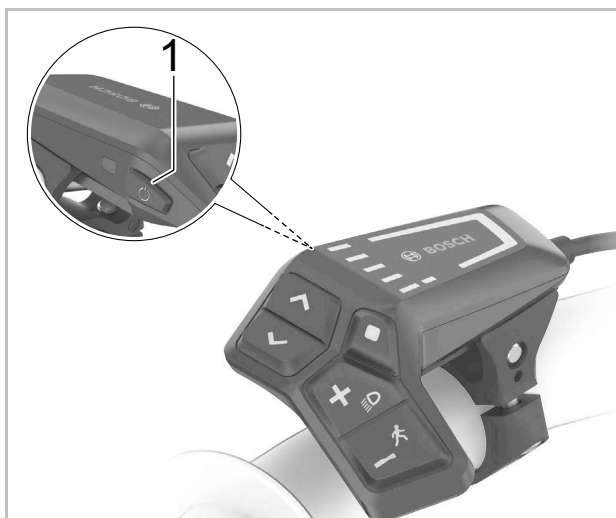


Figure 199: Position of the On-Off button on the BOSCH LED Remote

#### On-Off button (battery)

- ▶ Press the **On-Off button (battery)** briefly.
  - ⇒ All LEDs on the on-board computer will light up briefly.
  - ⇒ The battery level is displayed in colour by the battery level indicator (on-board computer) and the configured level of assistance by the indicator for the selected level of assistance. The pedelec is ready to ride.
  - ⇒ If the battery capacity is less than 5%, the battery level indicator will remain dark. Only the on-board computer indicates whether the drive system is switched on or not.

If the drive system is switched on, the drive is activated as soon as the pedals are moved with sufficient force (except if the selected level of assistance is "OFF"). The motor power is based on the level of assistance selected on the on-board computer.

### 6.19.2 Switching off the electric drive system

As soon as the rider stops pushing the pedals in normal mode or reaches a speed of 25 km/h, the drive system switches off the assistance system. The assistance system starts up again when you push the pedals and your speed is less than 25 km/h.

The system switches off automatically ten minutes after the last command.

There are two options for switching off the drive system manually.

#### On-Off button (on-board computer)

- ▶ Press the **On-Off button (on-board computer)** briefly (< 3 seconds).

#### On-Off button (battery)

- ▶ Press the **On-Off button (battery)**.
  - ⇒ The battery level indicator (on-board computer) and the indicator for the selected level of assistance go out.
  - ⇒ The pedelec is switched off.

## 6.20 Using the on-board computer

### Notice

- ▶ Never use on-board computer, the display or the display mount as a handle. If the on-board computer, display or display mount are used to lift the pedelec, components can become irreparably damaged.

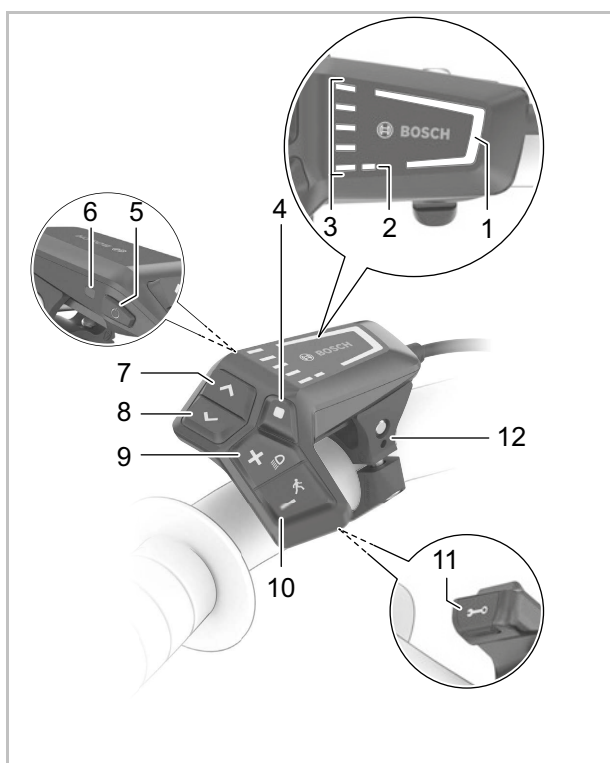


Figure 200: Overview of BOSCH LED Remote on-board computer

	Symbol	Designation
1		Selected level of assistance indicator
2		ABS indicator (optional)
3		Battery level indicator (on-board computer)
4	◆	Select button
5	⏻	On-Off button (on-board computer)
6		Ambient light sensor

Table 60: Overview for on-board computer

	Symbol	Designation
7	>	Increase brightness button/ forward button
8	<	Decrease brightness button/ back button
9	+	Plus button/ light button
10	-	Minus button/ push assist button
11		Diagnosis connection (for maintenance purposes only)
12		Mount

Table 60: Overview for on-board computer

### 6.20.1 Using the diagnosis port

#### Notice

A USB connection is not a waterproof plug connection. Any moisture penetrating through the USB port may trigger a short circuit in the on-board computer.

- ▶ Never connect an external device.
- ▶ Regularly check the position of the rubber cover on the USB port and adjust it as necessary.

The diagnosis connection is only designed for maintenance purposes and is not suitable for connecting external devices.

- ▶ Keep the diagnosis port flap closed at all times to ensure no dust or moisture can penetrate through the port.

### 6.20.2 Charging the on-board computer battery

If both the charge level in the battery and the on-board computer's internal battery are low, the on-board computer battery can be charged via the diagnosis port.

- ▶ Connect the internal battery to a power bank or another suitable power source with a USB type C® cable. (charge voltage: 5 V; charging current: max. 600 mA).

### 6.20.3 Using the riding light

- ✓ The drive system needs to be already switched on to turn on the *riding light*.



Figure 201: Position of riding light button (1)

- ▶ Press the **light button for more than 1 second**.
- ⇒ The front light and rear light are both switched on (*riding light symbol* is displayed) and switched off (*Riding light symbol* is switched off) at the same time.

### 6.20.4 Setting the brightness of indicators

The ambient light sensor regulates the indicator brightness.

- ✓ The ambient light sensor must be clean and must not be covered.

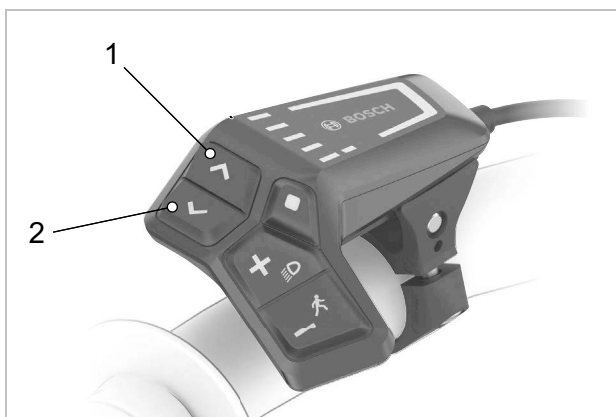


Figure 202: Position of increase brightness button (2) and decrease brightness button (1)

- ▶ Press the **increase brightness button** and **decrease brightness button** to set the brightness of the indicator LEDs.

### 6.20.5 Using the push assist system



#### Injury from pedals or wheels

The pedals and the drive wheel turn when the push assist system is used. There is a risk of injury if the pedelec wheels are not in contact with the ground when the push assist system is used (e.g. when carrying the pedelec up stairs or when placing it on a bicycle rack).

- ▶ Only use the push assist mode when pushing the pedelec.
- ▶ You must steer the pedelec securely with both hands when using push assist.
- ▶ Allow for enough freedom of movement for the pedals.

The push assist helps move the pedelec. The push assist system speed depends on the selected gear. The lower the selected gear is, the lower the speed in the push assist function is (at full power). The maximum speed is 6 km/h.

- ✓ We recommend using first gear for cycling uphill to protect the drive.



Figure 203: Position of push assist button (1)

- 1 Press **Push assist button** for longer than 1 seconds. Hold down the button.
  - ⇒ The battery level indicator goes out and a white running light in the direction of travel indicates push assist is ready.
- 2 One of the following actions must be taken within the next 10 seconds:
  - ▶ Push pedelec forwards.
  - ▶ Push pedelec backwards.
  - ▶ Make a weaving movement with the pedelec.
  - ⇒ The push assist is activated. The continuous white bars change colour to ice blue.
  - ⇒ The motor starts to push.
- 3 Release **push assist button** on the on-board computer to switch off motor assistance.
- 4 Push the **push assist button within 10 seconds to reactivate motor assistance.**
- 5 If motor assistance deactivates within 10 seconds, the push assist function switches off automatically.

Push assist will also switch off automatically if

- the rear wheel blocks
- speed bumps cannot be ridden over
- a part of the body is blocking the bicycle crank
- an obstacle turns the crank further
- the rider pedals
- the **plus button** or **On-Off button** is pressed.

The push assist mode of operation is subject to country-specific regulations and may therefore differ from the above description or may be deactivated.

## 6.20.6 Selecting the level of assistance

The on-board computer is used to configure to what extent the electric drive should assist the rider when pedalling. You can change the level of assistance at any time while you are cycling.



Figure 204: Position of plus and minus buttons

- ▶ Press the **plus button** (2) on the on-board computer to increase the level of assistance.
- ▶ Press the **minus button** (1) on the on-board computer to reduce the level of assistance.
- ⇒ The motor power used is displayed in colour in the level of assistance indicator.

If the system is switched off, the level of assistance last displayed is saved.



## 6.21 Using the on-board computer

### Notice

- ▶ Never use on-board computer, the display or the display mount as a handle. If the on-board computer, display or display mount are used to lift the pedelec, components can become irreparably damaged.

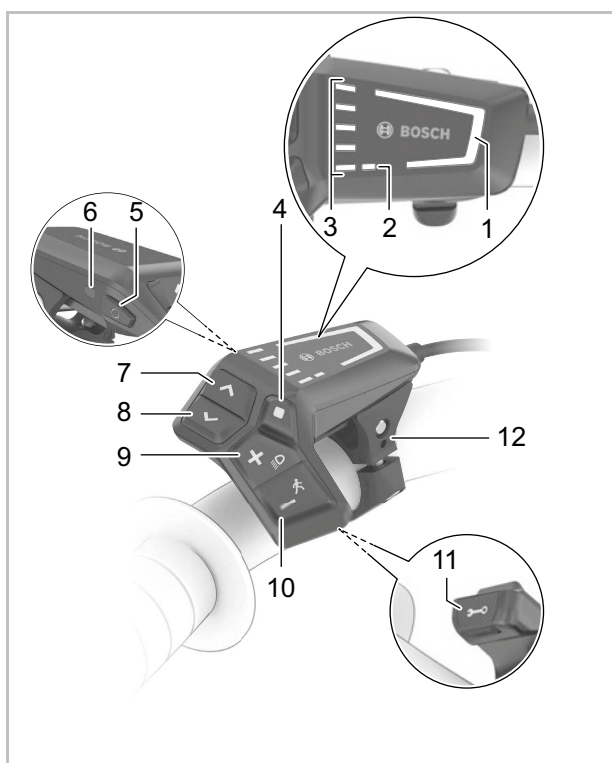


Figure 205: Overview of BOSCH LED Remote on-board computer

	Symbol	Designation
1		Selected level of assistance indicator
2		ABS indicator (optional)
3		Battery level indicator (control panel)
4	■	Select button
5	⏻	On-Off button (control panel)
6		Ambient light sensor

Table 61: Overview of control panel

	Symbol	Designation
7	>	Increase brightness button/ forward button
8	<	Decrease brightness button/ back button
9	+	Plus button/ light button
10	-	Minus button/ push assist button
11		Diagnosis connection (for maintenance purposes only)
12		Mount

Table 61: Overview of control panel

### 6.21.1 Using the diagnosis port

#### Notice

A USB connection is not a waterproof plug connection. Any moisture penetrating through the USB port may trigger a short circuit in the control panel.

- ▶ Never connect an external device.
- ▶ Regularly check the position of the rubber cover on the USB port and adjust it as necessary.

The diagnosis connection is only designed for maintenance purposes and is not suitable for connecting external devices.

- ▶ Keep the diagnosis port flap closed at all times to ensure no dust or moisture can penetrate through the port.

### 6.21.2 Charging the control panel battery

If both the charge level in the battery and the control panel's internal battery are low, the battery can be charged via the diagnosis port. M

- ▶ Connect the internal battery to a power bank or another suitable power source with a USB type C® cable. (charge voltage: 5 V; charging current: max. 600 mA).

### 6.21.3 Using the riding light

- ✓ The drive system needs to be already switched on to turn on the *riding light*.



Figure 206: Position of riding light button (1)

- ▶ Press the **light button** for more than 1 second.
- ⇒ The front light and rear light are both switched on (*riding light symbol* is displayed) and switched off (*Riding light symbol* is switched off) at the same time.

### 6.21.4 Setting the brightness of indicators

The ambient light sensor regulates the indicator brightness.

- ✓ The ambient light sensor must be clean and must not be covered.

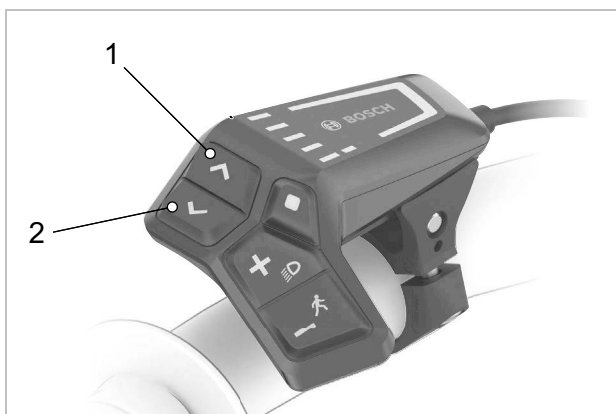


Figure 207: Position of increase brightness button (2) and decrease brightness button (1)

- ▶ Press the **increase brightness button** and **decrease brightness button** to set the brightness of the indicator LEDs.

### 6.21.5 Using the push assist system

**CAUTION**

#### Injury from pedals or wheels

The pedals and the drive wheel turn when the push assist system is used. There is a risk of injury if the pedelec wheels are not in contact with the ground when the push assist system is used (e.g. when carrying the pedelec up stairs or when placing it on a bicycle rack).

- ▶ Only use the push assist mode when pushing the pedelec.
- ▶ You must steer the pedelec securely with both hands when using push assist.
- ▶ Allow for enough freedom of movement for the pedals.

The push assist helps move the pedelec. The push assist system speed depends on the selected gear. The lower the selected gear is, the lower the speed in the push assist function is (at full power). The maximum speed is 6 km/h.

- ✓ We recommend using first gear for cycling uphill to protect the drive.



Figure 208: Position of push assist button (1)

- 1 Press **Push assist button** for longer than 1 seconds. Hold down the button.
  - ⇒ The battery level indicator goes out and a white running light in the direction of travel indicates push assist is ready.
- 2 One of the following actions must be taken within the next 10 seconds:
  - ▶ Push pedelec forwards.
  - ▶ Push pedelec backwards.
  - ▶ Make a weaving movement with the pedelec.
  - ⇒ The push assist is activated. The continuous white bars change colour to ice blue.
  - ⇒ The motor starts to push.
- 3 Release **push assist button** on the control panel to switch off push assist.
- 4 Push the **push assist button** within 10 seconds to reactivate motor assistance.
- 5 If motor assistance deactivates within 10 seconds, the push assist function switches off automatically.

Push assist will also switch off automatically if

- the rear wheel blocks
- speed bumps cannot be ridden over
- a part of the body is blocking the bicycle crank
- an obstacle turns the crank further
- the rider pedals
- the **plus button** or **On-Off button** is pressed.

The push assist mode of operation is subject to country-specific regulations and may therefore differ from the above description or may be deactivated.

### 6.21.6 Selecting the level of assistance

The control panel is used to set how much the electric drive should assist the rider when pedalling. You can change the level of assistance at any time while you are cycling.



Figure 209: Position of plus and minus buttons

- ▶ Press the **plus button** (2) on the control panel to increase the level of assistance.
- ▶ Press the **minus button** (1) on the control panel to reduce the level of assistance.
- ⇒ The motor power used is displayed in colour in the level of assistance indicator.

If the system is switched off, the level of assistance last displayed is saved.

## 6.22 Using the brake



### Crash caused by brake failure

Oil or lubricant on the brake disc in a disc brake or on the rim of a rim brake can cause the brake to fail completely. This may cause a crash with serious injuries.

- ▶ Never allow oil or lubricant to come into contact with the brake disc or brake linings or on the rim of a rim brake.
- ▶ If the brake linings have come into contact with oil or lubricant, contact specialist dealer to have the components cleaned or replaced.

If the brakes are applied continuously for a long time (e.g. while riding downhill for a long time), the fluid in the brake system may heat up. This may create a vapour bubble. This will cause air bubbles or water contained in the brake system to expand. This may suddenly make the lever travel wider. This may cause a crash with serious injuries.

- ▶ Release the brake regularly when riding downhill for a longer period of time.
- ▶ Use the front and rear wheel brakes alternately.

The motor's drive force is switched off during the ride as soon as the pedelec rider is no longer pedalling. The electric drive system does not switch off when braking.

- ▶ In order to achieve optimum braking results, do not pedal while braking.

### 6.22.1 Using the handbrake

Only applies to pedelecs with this equipment

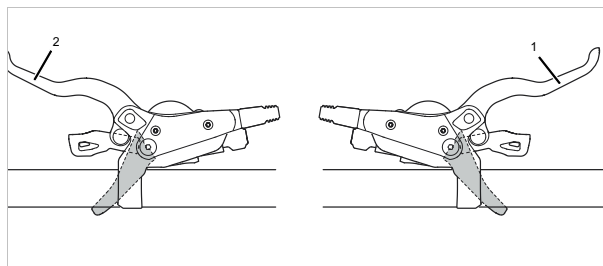


Figure 210: Handbrake, front (2) and rear (1) – SHIMANO brake used as an example

- ▶ Pull the left *handbrake* to apply the front wheel brake.
- ▶ Pull the right handbrake to apply the rear wheel brake.

### 6.22.2 Using the back-pedal brake

Only applies to pedelecs with this equipment

- 1 Move pedals a little beyond the 3 o'clock and 9 o'clock position.
- 2 Pedal in the opposite direction to the *direction of travel* until the desired speed has been reached.

### 6.22.3 Using ABS

Only applies to pedelecs with this equipment

#### WARNING

##### Accidents on bends and slippery ground

You are at greater risk of falling off if you use ABS braking on bends. Tyres are more likely to skid on slippery ground. This poses an increased risk of a crash with serious injuries.

- ▶ Adjust your riding to the current ambient conditions and your personal riding skills.

##### Accidents due to extended braking distance

The ABS suppresses blocking on the front wheel. This can sometimes cause the braking distance to be longer. This may cause an accident with serious injuries.

- ▶ Adjust your riding to the current ambient conditions and your personal riding skills.
- ▶ Never fool about when riding.

##### Accident due to ABS failure

If the ABS indicator lamp is lit, the ABS function is not active.

- ▶ Adapt riding to the circumstances.

In extreme riding situations, the ABS may not be able to regulate until the pedelec comes to a halt. This may cause a crash with serious injuries.

- ▶ Release the front wheel brake briefly. This allows you to brake with the ABS function again.
- ▶ Adjust your riding to the current ambient conditions and your personal riding skills.

#### WARNING

An ABS malfunction cannot be displayed if the ABS indicator lamp is defective.

Check that the ABS indicator lamp lights up when you start up the electric drive system; if it doesn't, the indicator lamp is faulty.

##### Accidents due to air in the hydraulic system

Less brake pressure can be generated due to air in the brake system. This is particularly common after the ABS activates. This may cause an accident with serious injuries.

- ▶ Pull on the brake before each ride to check if you can reach a clearly noticeable pressure point and ensure that the gap between the brake lever and handlebar grip is sufficient (about third of the way through the brake lever path).
- ▶ If in doubt, place the lever path adjuster in the maximum position possible.
- ▶ Contact your specialist retailer if there is air in the brake system.

##### Accidents due to manipulation

Manipulated or counterfeit ABS components impair the ABS function. This may cause a crash with serious injuries.

- ▶ Replace defective components with original parts only.
- ▶ Contact your specialist retailer if you require maintenance work or repairs.



### Damage to components and risk of crushing

There is a gap between the ABS control unit and the frame. Components and body parts can become trapped when the handlebars are turned completely, for example. This can cause injuries or damage to components.

- ▶ Ensure you do not pinch any components such as brake cables, wiring or parts of your body between the frame and the ABS control unit.
- ▶ If you attach accessories to the handlebars, ensure that handlebars can move freely to each side by at least 60° from their central position. You can prevent fingers becoming trapped with a clearance of 25 mm. Steering limiters should be used if necessary.

---

### 6.22.3.1 While riding

- ✓ The ABS indicator lamp lights after the system has started up and once a speed of about 5 km/h has been reached (see Section 6.8.1).
- ▶ Adjust your riding to the current ambient conditions and your personal riding skills.
- ▶ Always remember that the ABS can make the braking distance longer.
- ▶ Reduce your speed on slippery ground. Brake in bursts and in good time.

### Notice

The ABS indicator lamp may light up if the front and rear wheels are rotating at widely different speeds from one another – for example, if the rider manoeuvres on the rear wheel only or if a wheel is rotating for an unusually long time without making contact with the ground (fitting stand). The ABS will switch off at such times.

---

### 6.22.3.2 Reactivating the ABS

- 1 Stop the pedelec to switch on the ABS again.
- 2 Switch off pedelec.
- 3 Switch on pedelec.

## 6.23 Gear shift

The selection of the appropriate gear is a prerequisite for a physically comfortable ride and making sure that the electric drive system functions properly. The ideal pedalling frequency is between 70 and 80 revolutions per minute.

- ▶ Stop pedalling briefly when changing gears. This makes it easier to switch gears and reduces wear on the drivetrain.

### 6.23.1 Using the derailleur gears

The speed and range can be increased while applying the same force if you select the right gear.

- ✓ Stop pedalling briefly when changing gears. This makes it easier to switch gears and reduces wear on the drivetrain. However, keep the crank moving while switching gears.

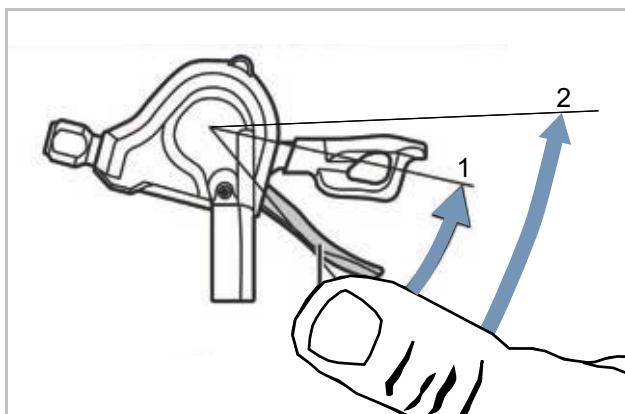


Figure 211: Switching gears with lever A, using gear shift SL-M315 as an example

Lever A switches up from the smallest sprocket to the largest sprocket.

- ▶ Place shifter A in position 1.
- ⇒ System shifts one sprocket higher.
- ▶ Place shifter A in position 2.
- ⇒ System shifts two sprockets higher.

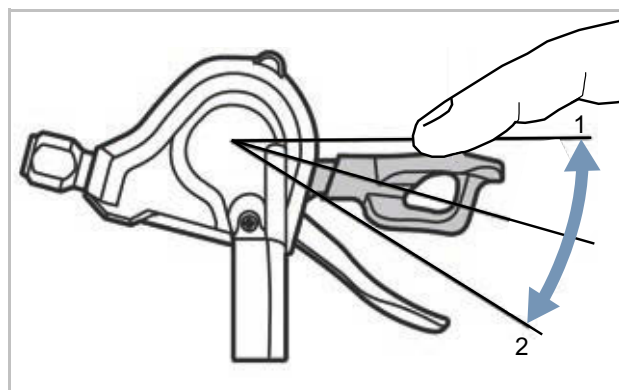


Figure 212: Switching gears with lever B, using gear shift SL-M315 as an example

Lever B switches up from the largest sprocket to the smallest sprocket. There are two ways to switch down a gear:

- ▶ Place shifter B in position 1.
- ⇒ System shifts one sprocket lower.
- ▶ Place shifter B in position 2.
- ⇒ System shifts one sprocket lower.

### Switching gears

- ▶ Select the appropriate gear with the gear shift unit.
- ⇒ The gear shift switches gear.
- ⇒ The shifter returns to its original position.
- ▶ Clean and lubricate the rear derailleur if gear changes block.

## 6.23.2 Using a SHIMANO hub gear

Only applies to pedelecs with this equipment

### CAUTION

#### Crash caused by incorrect use

If the rider applies too much pressure on the pedals during a gear change and activates the shifter or changes several gears at a time, their feet may slip from the pedals. This may cause a crash or flip-over with injuries.

Switching down several gears to a low gear may cause the twist grip outer sleeve to suddenly come off. This will not have an adverse effect on the twist grip's correct functioning since the outer guide returns to its original position after the gear change is complete.

- ▶ Apply little pressure on the pedals while changing gears.
- ▶ Never change more than one gear at a time.

### Notice

The interior hub is not completely waterproof. If water gets into the hub, it may rust and the gear switch function may no longer function as a result.

- ▶ Never use the pedelec in places where water may get into the hub.

In rare cases, noises may be heard from the rear derailleur in the hub interior after a gear change. This is normal when gears are changed.

- ▶ Never detach the hub yourself. Contact specialist dealer.

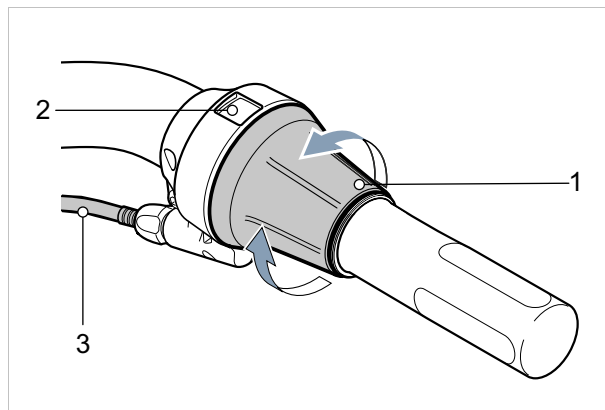


Figure 213: SHIMANO SL-C30000-70 gear shift

- ▶ Turn the twist grip (1) backwards to switch up a gear (4).
- ▶ Turn the twist grip (1) forwards to switch down a gear (2).
- ⇒ The gear shift switches gear.
- ⇒ The screen display (3) shows the changed gear.



### 6.23.3 Using eShift

eShift refers to the integration of electronic gear shift systems into the electric drive system.

#### 6.23.3.1 Using eShift with SHIMANO DI2 automatic hub gears

##### Only applies to pedelecs with this equipment

The automatic SHIMANO DI2 hub gear can be used in manual or automatic mode. Use the shifter to change gears in manual mode. In automatic mode, the shift system changes gear automatically depending on the speed, pedalling power and pedalling frequency. You will find how to switch from automatic to manual mode, depending on the shifter used, described in your operating instructions on the on-board computer. If you use the shifter when in automatic mode, the gear system will change to the next gear and it will remain in automatic mode. Manual gear changes in automatic mode influence shift behaviour in the gear system and adjust gear changes to ride performance. If the system is switched on for the first time when a new, unused wheel is used, the system will learn the gears first. To do so, the automatic system changes to the highest/most difficult gear and then switches through all gears during the first ride. The new gear is shown briefly on the on-board computer each time it is changed.

Since the motor detects the gear shift and consequently reduces motor assistance briefly, it is possible to switch gears under load or on hills. If the pedelec is brought to a halt from a speed greater than 10 km/h, the system can automatically switch back to a pre-set START GEAR.

- ▶ Adjust the START GEAR in the system settings if necessary.

#### 6.23.3.2 Using eShift with manual SHIMANO DI2 hub gears

##### Only applies to pedelecs with this equipment

The new gear is shown briefly on the on-board computer each time it is changed.

Since the motor detects the gear shift and consequently reduces motor assistance briefly, it is possible to switch gears under load or on hills.

If the pedelec is brought to a halt from a speed greater than 10 km/h, the system can automatically switch back to a pre-set START GEAR.

- ▶ Adjust the START GEAR in the system settings if necessary.

#### 6.23.3.3 Using eShift with SHIMANO DI2 automatic hub gears

##### Only applies to pedelecs with this equipment

Since the motor detects the gear shift and consequently reduces motor assistance briefly, it is possible to switch gears under load or on hills.

- ⇒ The new gear is shown briefly on the on-board computer each time it is changed.

### 6.23.4 Using an ENVILO gear shift gear

#### Only applies to pedelecs with this equipment

The selection of the appropriate gear is a prerequisite for a physically comfortable ride and making sure that the electric drive system functions properly. The ideal pedalling frequency is between 70 and 80 revolutions per minute.

- ▶ Stop pedalling briefly when changing gears. This makes it easier to switch gears and reduces wear on the drivetrain.

#### CAUTION

#### Crash caused by incorrect use

If the rider applies too much pressure on the pedals during a gear change and activates the shifter or changes several gears at a time, their feet may slip from the pedals. This may cause a crash or flip-over with injuries.

Switching down several gears to a low gear may cause the twist grip shifter outer sleeve to come off suddenly. This will not prevent the twist grip shifter from functioning correctly since the outer guide returns to its original position after the gear change is complete.

- ▶ Apply little pressure on the pedals while changing gears.
- ▶ Never change more than one gear at a time.

#### Notice

The interior hub is not completely waterproof. If water gets into the hub, it may rust and the gear switch function may no longer function as a result.

- ▶ Never use the pedelec in places where water may get into the hub.
- ▶ Never detach the hub yourself. Contact specialist dealer.

The hub cannot be switched through its entire transmission range when stationary. As a general rule, 50–70% of the transmission range can be used when switched to stationary. The remaining part of the transmission range can be adjusted when riding.

The automatic ENVILO gear shift includes a twist grip shifter with an indicator.

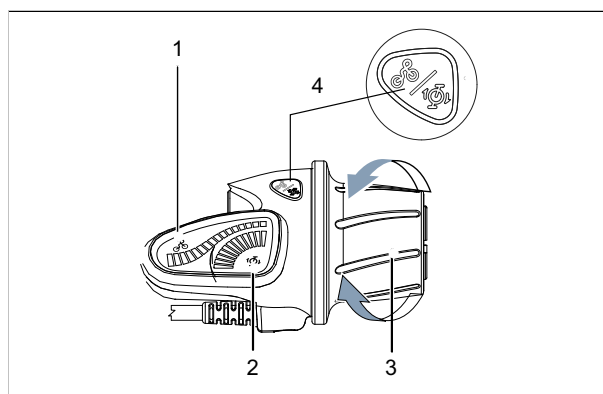


Figure 214: ENVILO twist grip shifter with indicator

- 1 Twist grip shifter with indicator
- 2 Manual gear shift indicator
- 3 Automatic gear shift indicator
- 4 Twist grip shifter
- 5 Mode button

### 6.23.4.1 Switching gear manually

#### Changing down

Switch to a low transmission ratio for setting off or driving uphill.

- ▶ Turn the twist grip shifter downwards.
- ⇒ A hill is shown on the display.

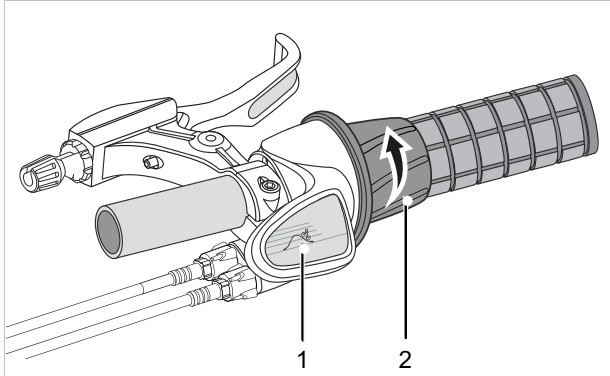


Figure 215: Hill display (1) when changing down (2)

#### Change up

Switch to a high transmission ratio for higher speeds.

- ▶ Turn the twist grip shifter forwards.
- ⇒ Flat terrain is shown on the display.

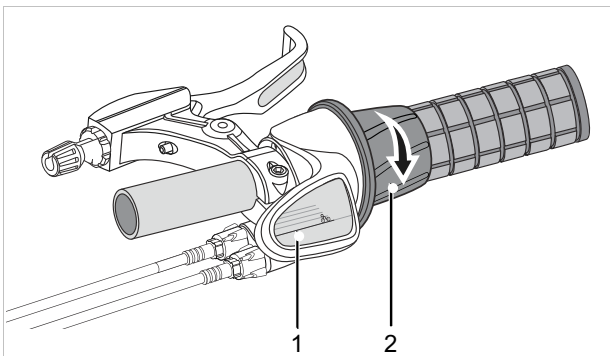


Figure 216: Flat terrain display (1) when changing up (2)

## 6.24 Use suspension and damping

### 6.24.1 Locking the suspension

A suspension system is designed to cushion and compensate for unevenness on a surface whether the user is riding on bumpy cycle paths, dirt roads or off road.

A suspension system absorbs a great deal of motor and muscle power during rides uphill or on optimally tarmacked roads. This increases energy consumption and reduces propulsion. It is thus a good idea to lock the suspension on tarmacked roads and when riding uphill.

Some suspension forks thus feature a lockout on the crown or a remote lockout activated on the handlebars.

	Mode	Use
1	OPEN	Setting off
2	Middle position	Uneven terrain
3	LOCK	Uphill, tarmacked roads

#### 6.24.1.1 Locking the SR SUNTOUR suspension fork



Table 62: Lockout on the crown on SR Suntour suspension forks

▶ Turn lockout (1) on the crown clockwise to LOCK.

⇒ The suspension fork is blocked.

▶ Turn lockout (1) on the crown anticlockwise to OPEN.

⇒ The suspension fork is open.



Table 63: SR Suntour suspension fork lockout on the handlebars

▶ Press locking lever (1) on the handlebars.

⇒ The suspension fork is blocked.

▶ Press release lever (2) on the handlebars.

⇒ The suspension fork is open.

## 6.24.2 Adjusting the suspension fork compression damper

The compression damper allows the rider to make quick adjustments to the suspension behaviour of the suspension fork to adapt to changes in terrain. It is intended for adjustments made during the ride.

It is a good idea to use the compression damper on

- bumpy sections
- marked shifts of weight at crossings and during cornering and braking.

When placed at an optimum setting, the suspension fork counteracts deflection on hilly terrain, remains higher in its deflection range and helps maintain speed when riding on terrain hilly sections.

The suspension fork also deflects quickly and unhindered when hitting bumps and cushions the bump when placed at an optimum setting. Traction is retained (blue line). The fork responds quickly to the bump. The headset and handlebars rise slightly when absorbing a bump (green line).

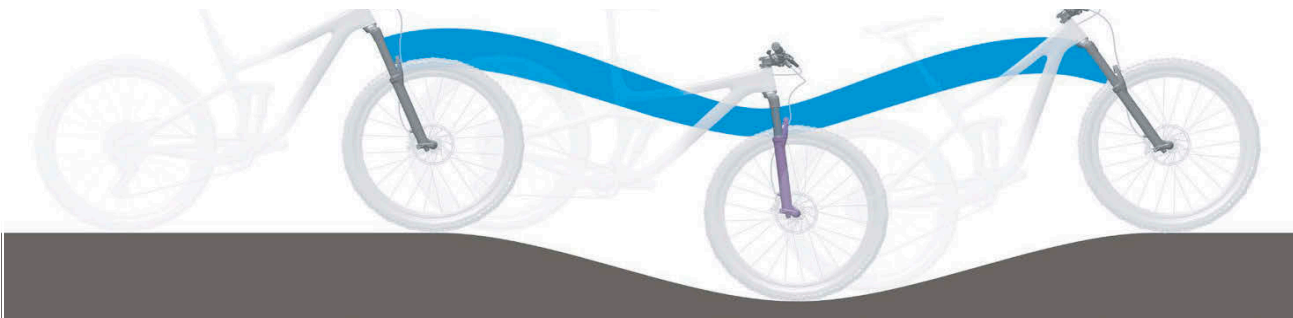


Figure 217: Optimum ride performance on hilly terrain

### Compression damper set to hard

- Causes the suspension fork to move higher within the deflection range. This makes it easier for the rider to improve efficiency and maintain momentum over uniformly hilly terrain and around bends.
- Deflection feels somewhat harder on bumpy terrain.

### Compression damper set to soft

- Causes the suspension fork to deflect quickly and easily. This makes it easier to maintain speed and momentum when riding on bumpy terrain.
- Deflection may feel somewhat less hard on more rugged terrain.



### 6.24.2.1 Using SR Suntour high-speed compression damping

A high speed is generated in the suspension fork, e.g. on a mogul slope or during landing after a jump.

The settings on the high-speed damper control the suspension behaviour of the fork during

- stronger impacts
- small, rapid impacts (e.g. stairs or mogul slopes)
- landings after quick, successive jumps.

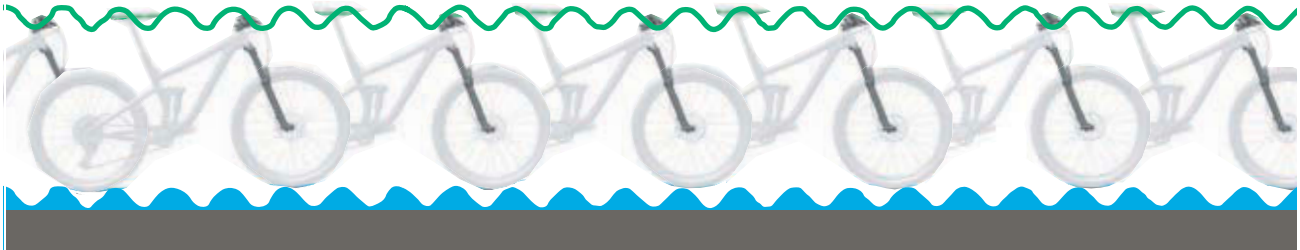


Figure 218: High-speed movements

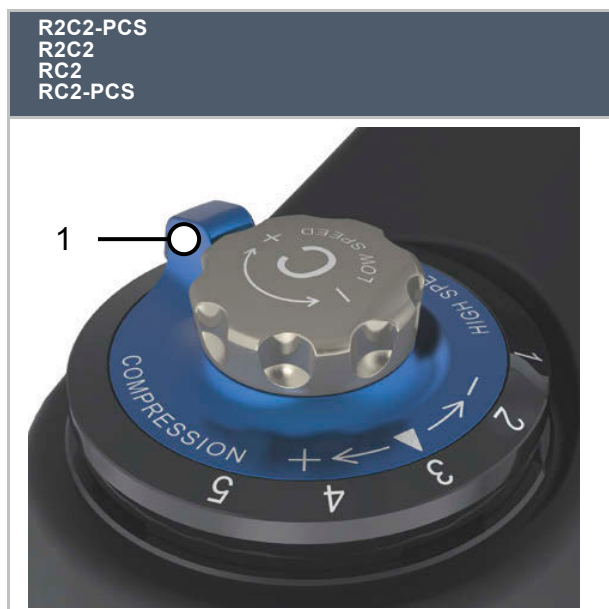


Table 64: High-speed lever (1) on the crown on the SR Suntour suspension fork

- ▶ Turn **high-speed lever (1)** on the crown clockwise gradually.
  - ⇒ The high-speed compression damper is placed in a harder setting.
- ▶ Gradually turn **high-speed lever (1)** on the crown anticlockwise.
  - ⇒ The high-speed compression damper is placed in a softer setting.

### 6.24.2.2 Using the SR Suntour low-speed compression damping

Low-speed movement in the suspension fork is caused, for example, by riding over bumps.

The settings on the high-speed damper control the suspension behaviour of the fork

- during staggered jumps
- during shifts in the rider's weight
- when force is applied slowly.



Figure 219: Low-speed movements

R2C2-PCS R2C2 RC2 RC2-PCS	RC-PCS RC	RLRC-PCS RLRC	LORC-PCS LORC
			

Table 65: Low-speed lever (1) on the fork crown on the SR Suntour suspension fork

► Gradually turn **low-speed lever (1)** on the crown clockwise.

⇒ The low-speed compression damper is placed in a harder setting.

► Gradually turn **low-speed lever (1)** on the crown anticlockwise.

⇒ The low-speed compression damper is placed in a softer setting.

## 6.24.2.3 Locking the ROCKSHOX suspension fork out

Only applies to pedelecs with this equipment



Table 66: Lockout on the fork crown on ROCKSHOX suspension forks

**Opening the suspension**

- ▶ Turn **lockout** on the fork crown anticlockwise to position 1 or
  - ▶ Press the **locking lever** on the handlebars.
- ⇒ The suspension fork is open.

**Locking the suspension**

- ▶ Turn **lockout** on the fork crown clockwise to position 2 or
  - ▶ Press the **unlocking lever** on the handlebars.
- ⇒ The suspension fork is blocked.
- ▶ Press **release lever** (2) on the handlebars.
- ⇒ The suspension fork is open.



### 6.24.2.4 Adjusting the ROCKSHOX suspension fork threshold

Only applies to pedelecs with this equipment

RCT3	RTCT R
	

Table 67: ROCKSHOX threshold (2) setting on the fork crown

#### Adjusting the threshold

► **Lockout** at Position 2 on the fork crown.

⇒ The threshold mode is enabled.

## 6.25 Parking

### Notice

Heat or direct sunlight can cause the *tyre pressure* to increase above the permitted maximum pressure. This can destroy the *tyres*.

- ▶ Never park the pedelec in the sun.
- ▶ On hot days, regularly check the *tyre pressure* and adjust it as necessary.

Moisture penetrating at low temperatures may impair individual functions due to the open structural design.

- ▶ Always keep the pedelec dry and free from frost.
- ▶ If the pedelec is used at temperatures below 3 °C, the specialist dealer must perform maintenance beforehand and prepare it for winter use.

The pedelec's force of weight may cause the kickstand to sink into soft ground, possibly causing the pedelec to topple over as a result.

- ▶ The pedelec must be parked on firm, level ground only.

- 1 Switch off drive system (see Section 6.18.2).
- 2 After getting off, use your foot to lower the kickstand completely before parking. Ensure that it is stable.
- 3 Park the pedelec carefully and check that it is stable.
- 4 Protect saddle with saddle cover if you park the pedelec outside.
- 5 Lock the pedelec with the bicycle lock.

6 Remove battery to protect against theft (see Section 6.7.1.1).

7 Clean and service pedelec after every ride; see Section 7.2.

### Checklist after each ride

Cleaning		
<input type="checkbox"/>	Lights and reflectors	See Section 7.2.5
<input type="checkbox"/>	Brake	See Section 7.2.5
<input type="checkbox"/>	Suspension fork	See Section 7.2.1
<input type="checkbox"/>	Suspension seat post	See Section 7.2.6
<input type="checkbox"/>	Rear frame damper	See Section 7.2.7
<input type="checkbox"/>	Pedal	See Section 7.2.4
Care		
<input type="checkbox"/>	Suspension fork	See Section 3

### 6.25.1 Screwing in the quickly adjustable stem

Only applies to pedelecs with this equipment

Screw in the quickly adjustable stem to save space when parking.

- 1 Open stem clamping lever.

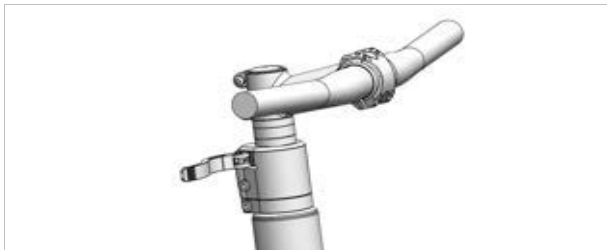


Figure 220: Example of All Up with open stem clamping lever

- 2 Pull handlebars into highest possible position.

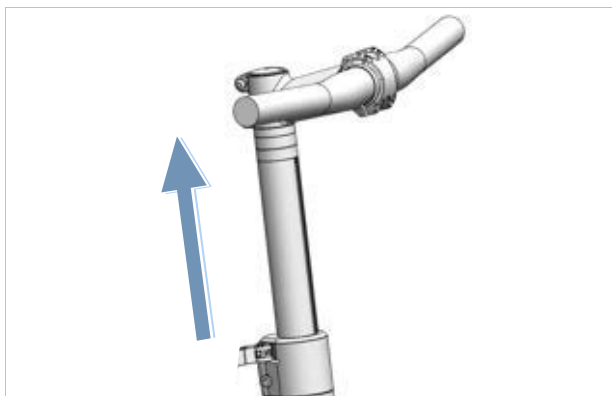


Figure 221: Example of All Up pulled into highest possible position

- 3 Turn handlebars 90° in a clockwise direction.

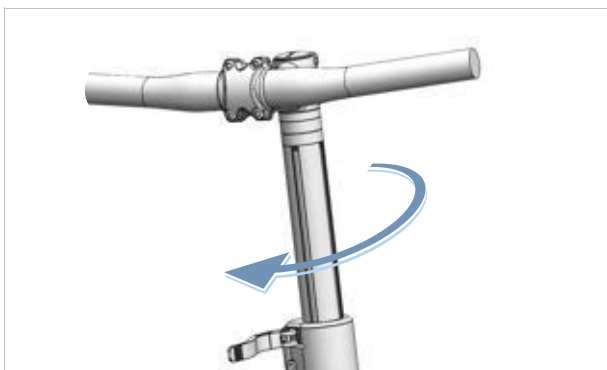


Figure 222: Example of All Up screwed in

- 4 Place handlebars at required height.
- 5 Close stem clamping lever.

### 6.25.2 Folding up the pedal

- ✓ Clean the pedal (see Section 7.2.4).

- 1 Use two fingers to pull the pedal folding latch (1) downwards and hold in position.

⇒ The folding system is unlocked.

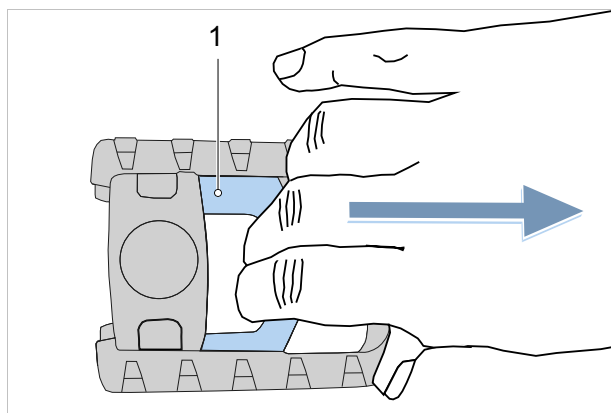


Figure 223: Pulling the pedal folding latch (1) downwards

- 2 Fold the pedal upwards.

- 3 Release your grip to carefully allow the pedal folding latch to return to its original position.

⇒ The pedal is folded away.

### 6.25.3 Activating the lock function

#### Only applies to pedelecs with this equipment

- ▶ Remove the on-board computer used during set-up.
- ⇒ The lock function is activated. The drive system now provides no assistance. However, the rider can continue to use the pedelec without assistance.
- ⇒ The drive unit will emit a lock sound (an audible signal) as long as the drive system is switched on.
- ⇒ The lock function status is displayed with a lock icon on the on-board computer for around 3 seconds.

## 7 Cleaning, maintenance and inspection

- Clean, maintain and inspect pedelec as indicated on checklists.  
Complying with these cleaning instructions can increase operational reliability, reduce wear on components, extend the service life of components and ensure safety.

Checklist: Before each ride		
<input type="checkbox"/>	Check everything is sufficiently clean	See Section 7.2
<input type="checkbox"/>	Check guards	See Section 7.1.1
<input type="checkbox"/>	Check battery to ensure it is firmly in place	
<input type="checkbox"/>	Check lights	See Section 7.1.13
<input type="checkbox"/>	Check brake	See Section 7.1.14
<input type="checkbox"/>	Check suspension seat post	See Section 7.1.9
<input type="checkbox"/>	Check pannier rack	See Section 7.1.5
<input type="checkbox"/>	Check bell	See Section 7.1.10
<input type="checkbox"/>	Check handles	See Section 7.1.11
<input type="checkbox"/>	Check rear frame damper	See Section 7.1.4
<input type="checkbox"/>	Check wheel concentricity	See Section 7.1.7
<input type="checkbox"/>	Check frame	See Section 7.1.2
<input type="checkbox"/>	Check quick releases	See Section 7.1.8
<input type="checkbox"/>	Check guards	See Section 7.1.6
<input type="checkbox"/>	Check USB cover	See Section 7.1.12
Checklist: After each ride		
<input type="checkbox"/>	Clean lights	See Section 7.2.1
<input type="checkbox"/>	Clean reflectors	See Section 7.2.1
<input type="checkbox"/>	Clean brake	See Section 7.2.5
<input type="checkbox"/>	Clean suspension fork	See Section 7.2.2
<input type="checkbox"/>	Maintain suspension fork	See Section 3
<input type="checkbox"/>	Clean suspension seat post	See Section 7.2.6
<input type="checkbox"/>	Clean rear frame damper	See Section 7.2.7
<input type="checkbox"/>	Clean the pedals	See Section 7.2.4

Checklist: weekly tasks		
<input type="checkbox"/>	Clean chain	See Section 7.3.19
<input type="checkbox"/>	City, folding, cargo and children's bikes and bicycles for young adults	<b>When dry:</b> every 10 days <b>In wet conditions:</b> every 2–6 days
<input type="checkbox"/>	Trekking and racing bikes	<b>When dry:</b> every 140... 200 km <b>In wet conditions:</b> every 100 km
<input type="checkbox"/>	Mountain bikes	<b>When dry:</b> every 60... 100 km <b>In wet conditions:</b> after every ride
<input type="checkbox"/>	Belt (every 250–300 km)	See Section 7.3.18
<input type="checkbox"/>	Servicing the chain	See Section 7.4.16 and 7.4.16.1
<input type="checkbox"/>	City, folding, cargo and children's bikes and bicycles for young adults	<b>When dry:</b> every 10 days <b>In wet conditions:</b> every 2... 6 days
<input type="checkbox"/>	Trekking and racing bikes	<b>When dry:</b> every 140... 200 km <b>In wet conditions:</b> every 100 km
<input type="checkbox"/>	Mountain bikes	<b>When dry:</b> every 60... 100 km <b>In wet conditions:</b> maintain all the time
<input type="checkbox"/>	Maintain all-round chain guard.	See Section 7.4.16.1
<input type="checkbox"/>	Check tyre pressure (at least once a week)	See Section 7.5.1.1
<input type="checkbox"/>	Check tyres (every 10 days)	See Section 7.5.1.2
<input type="checkbox"/>	Eightpins seat post Refill oil (every 20 hours)	See Section 7.4.19

Checklist: monthly tasks		
<input type="checkbox"/>	Cleaning the battery	See Section 7.3.2
<input type="checkbox"/>	Clean on-board computer	See Section 7.3.1
<input type="checkbox"/>	Clean on-board computer	See Section 7.3.1
<input type="checkbox"/>	Check disc brake linings (once a month or after braking 1,000 times)	See Section 3.5.4.3
<input type="checkbox"/>	Check rim brake brake linings (once a month or after braking 3000 times)	See Section 7.5.1.3
<input type="checkbox"/>	Checking the rim braking surface for wear	See Section 7.5.2.6
<input type="checkbox"/>	Clean handbrake	See Section 7.3.16.1
<input type="checkbox"/>	Clean brake disc	See Section 7.3.17
<input type="checkbox"/>	Check brake disc	See Section 7.5.2.4
<input type="checkbox"/>	Check brake Bowden cables	See Section 7.5.2.3
<input type="checkbox"/>	Clean pannier rack	See Section 7.3.4
<input type="checkbox"/>	Clean handles	See Section 7.3.7
<input type="checkbox"/>	Maintain handles	See Section 7.4.8
<input type="checkbox"/>	Check handbrake	See Section 7.5.2.1
<input type="checkbox"/>	Check hydraulic system	See Section 7.5.2.2
<input type="checkbox"/>	Clean cassette	See Section 7.3.15
<input type="checkbox"/>	Clean chain and all-round chain guard	See Section 7.3.19.1
<input type="checkbox"/>	Clean chain wheels	See Section 7.3.15
<input type="checkbox"/>	Clean leather handles	See Section 7.3.7.1
<input type="checkbox"/>	Maintain leather handles	See Section 7.4.8.2
<input type="checkbox"/>	Clean the leather saddle	See Section 7.3.9.1
<input type="checkbox"/>	Maintain leather saddle	See Section 7.4.11
<input type="checkbox"/>	Clean handlebars	See Section 7.3.6

Checklist: monthly tasks		
<input type="checkbox"/>	Cleaning the motor	See Section 7.3.3
<input type="checkbox"/>	Clean hub	See Section 7.3.12
<input type="checkbox"/>	Cleaning the frame	See Section 7.3.4
<input type="checkbox"/>	Clean tyres	See Section 7.3.10
<input type="checkbox"/>	Check back-pedal brake	See Section 7.5.2.5
<input type="checkbox"/>	Clean saddle	See Section 7.3.9
<input type="checkbox"/>	Clean seat post	See Section 7.3.8
<input type="checkbox"/>	Maintain seat post	See Section 7.4.9
<input type="checkbox"/>	Clean shifter	See Section 7.3.14.1
<input type="checkbox"/>	Cleaning gear shift	See Section 7.3.13
<input type="checkbox"/>	Clean shift cables	See Section 7.3.13
<input type="checkbox"/>	Check disc brake	See Section 7.5.2.4
<input type="checkbox"/>	Clean mudguard	See Section 7.3.4
<input type="checkbox"/>	Clean kickstand	See Section 7.3.4
<input type="checkbox"/>	Clean spokes and spoke nipples	See Section 7.3.11
<input type="checkbox"/>	Maintain spoke nipples	See Section 7.4.13
<input type="checkbox"/>	Clean rigid fork	See Section 7.3.4
<input type="checkbox"/>	Clean transmission	See Section 7.3.13
<input type="checkbox"/>	Clean front derailleur	See Section 7.3.15
<input type="checkbox"/>	Clean stem	See Section 7.3.5

Checklist: Quarterly tasks		
<input type="checkbox"/>	Check brake pressure point	See Section 7.5.2.1
<input type="checkbox"/>	Check rim brake (100 hours trip time or every 2,000 km)	See Section 7.5.2.6
<input type="checkbox"/>	Checking the spokes	See Section 7.5.1.3

Checklist: Tasks performed at least every six months (or every 1,000 km)	
<input type="checkbox"/>	Check Bowden cables gear shift See Section 7.5.11.2
<input type="checkbox"/>	Maintain handbrake See Section 7.4.18.1
<input type="checkbox"/>	Maintain carbon seat post See Section 7.4.9.2
<input type="checkbox"/>	Check gear shift electric cables See Section 7.5.11.1
<input type="checkbox"/>	Maintain suspension seat post See Section 7.4.9.1
<input type="checkbox"/>	Maintain rims See Section 7.4.10
<input type="checkbox"/>	Check rims See Section 7.5.1.3
<input type="checkbox"/>	Check rim hooks See Section 7.5.1.3
<input type="checkbox"/>	Maintain fork See Section 7.4.2
<input type="checkbox"/>	Check gear shift See Section 7.5.11
<input type="checkbox"/>	Maintain pannier rack See Section 7.4.3
<input type="checkbox"/>	Check chain See Section 7.5.11
<input type="checkbox"/>	Check derailleur gears See Section 7.5.11
<input type="checkbox"/>	Check chain tension See Section 7.5.3.1
<input type="checkbox"/>	Check wheel See Section 7.5.1
<input type="checkbox"/>	Maintain handlebars See Section 7.4.7
<input type="checkbox"/>	Check handlebars See Section 7.5.7
<input type="checkbox"/>	Check light See Section 7.5.5
<input type="checkbox"/>	Maintain hub See Section 7.4.12
<input type="checkbox"/>	Check hub See Section 7.5.11.4
<input type="checkbox"/>	Check nipple holes See Section 7.5.1.4
<input type="checkbox"/>	Maintain pedals See Section 7.4.15
<input type="checkbox"/>	Check pedal. See Section 7.5.9
<input type="checkbox"/>	Maintain frame See Section 7.4.1
<input type="checkbox"/>	Check belt tension See Section 7.5.4.3
<input type="checkbox"/>	Check saddle See Section 7.5.8
<input type="checkbox"/>	Maintain shifter See Section 7.4.14.2
<input type="checkbox"/>	Maintain rear derailleur articulated shaft See Section 7.4.14.1
<input type="checkbox"/>	Maintain rear derailleur jockey wheels See Section 7.4.14.1
<input type="checkbox"/>	Maintain kickstand See Section 7.4.5
<input type="checkbox"/>	Check kickstand stability
<input type="checkbox"/>	Check steering headset See Section 8.5.6

Checklist: Tasks performed at least every six months (or every 1,000 km)	
<input type="checkbox"/>	Servicing the stem See Section 7.4.6
<input type="checkbox"/>	Checking the stem See Section 7.5.6

Checklist: Annual tasks (or every 2000 km)	
<input type="checkbox"/>	Adjust hub with cone bearing See Section 8.5.6
<input type="checkbox"/>	Check nipple well (every 1,000 hours or every 2,000 km) See Section 7.5.1.5

 **WARNING**
**Crash caused by brake failure**

Oil or lubricant on the brake disc in a disc brake or on the rim of a rim brake can cause the brake to fail completely. This may cause a crash with serious injuries.

- ▶ Never allow oil or lubricant to come into contact with the brake disc or brake linings or on the rim of a rim brake.
- ▶ If the brake linings have come into contact with oil or lubricant, contact specialist dealer to have the components cleaned or replaced.
- ▶ After cleaning, servicing or repair, carry out a few test brake applications.

The brake system is not designed for use on a pedelec which is placed on its side or turned upside down. The brake may not function correctly as a result. This can cause a crash, which may result in injuries.

- ▶ If pedelec has been placed on its side or turned upside down, apply the brakes a couple of times before setting off to ensure they work as normal

The brake seals are unable to withstand high pressures. Damaged brakes can fail and cause an accident with injury.

- ▶ Never clean the pedelec with a pressure washer or compressed air.

Take great care when using a hosepipe. Never point the water jet directly at the seal section.

 **CAUTION**
**Crash and falling caused by unintentional activation**

There is a risk of injury if the electric drive system is activated unintentionally.

- ▶ Remove the battery before cleaning.

**Notice**

Water may enter the inside of the bearings if you use a steam jet. This dilutes the lubricant inside, the friction increases and, as a result, the bearings are permanently damaged in the long term. Water may also penetrate the electric components and damage them permanently.

- ▶ Never clean pedelec with a pressure washer, water jet or compressed air.

Greased parts, such as the seat post, the handlebars or the stem, may no longer be safely and reliably clamped.

- ▶ Never apply grease or oil to parts which are clamped.

Harsh cleaning agents such as acetone, methylene and trichloroethylene and solvents such as thinners, alcohol and corrosion protection can attack pedelec components and damage them permanently.

- ▶ Use approved care and cleaning products only.



## 7.1 Before each ride

Complying with these cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

### 7.1.1 Checking the guards

The chain or belt guards, mudguards or the motor cover may break and fall off when the pedelec is transported or parked outside.

- ▶ Check that all guards are in place.
- ▶ Take pedelec out of service if a guard is damaged or missing. Contact specialist dealer.

### 7.1.2 Checking the frame

- ▶ Check frame for cracks, warping and damage to the paintwork.
- ▶ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

### 7.1.3 Checking the fork

- ▶ Check fork for cracks, warping, tarnished components, leaked oil and damage to the paintwork. Also look at hidden parts on the underside.
- ⇒ If there are any cracks, warping, tarnished components, leaked oil or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

### 7.1.4 Checking the rear frame damper

- ▶ Check rear frame damper for cracks, warping, tarnished components, leaked oil and damage to the paintwork. Also look at hidden parts on the underside.
- ⇒ If there are any cracks, warping, tarnished components, leaked oil or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

### 7.1.5 Checking the pannier rack

- 1 Hold onto pedelec by its frame. Hold onto pannier rack with the other hand.
- 2 Move the pannier rack backwards and forwards to check that all screw connections are firmly in place.
  - ⇒ Tighten loose screws.
  - ⇒ Attach loose baskets permanently with a basket bracket or cable ties.

### 7.1.6 Checking the mudguards

- 1 Hold onto pedelec by its frame. Hold onto mudguard rack with the other hand.
- 2 Move the mudguard backwards and forwards to check that all screw connections are firmly in place.
  - ⇒ Tighten loose screws.

### 7.1.7 Check wheel concentricity

- ▶ Lift the front and rear wheels one after the other and spin each wheel when lifted.
- ⇒ If the wheel is loose or crooked when it turns, take pedelec out of service. Contact specialist dealer.

### 7.1.8 Checking the quick releases

- ▶ Check quick releases to ensure that all quick releases are firmly in their fully closed end position.
- ⇒ If a quick release is not firmly in its closed end position, open quick release and place in its end position.
- ⇒ If the quick release cannot be firmly placed in its end position, take pedelec out of service. Contact specialist dealer.

### 7.1.9 Checking the suspension seat post

- ▶ Deflect and let the suspension seat post rebound.
- ⇒ If you hear unusual noises when the suspension seat post deflects and rebounds, or it yields without any resistance, take pedelec out of service. Contact specialist dealer.

### 7.1.10 Checking the bell

- 1 Press the bell button downwards.
  - 2 Let button spring back.
- ⇒ If you do not hear a clear, distinct ring of the bell, replace bell. Contact specialist dealer.

### 7.1.11 Checking the handles

- ▶ Check the handles are firmly in place.
- ⇒ Screw loose handles firmly into place.

### 7.1.12 Checking the USB cover

- ⇒ If featured, check the position of the *cover on the USB port* on a regular basis and adjust if necessary.

### 7.1.13 Checking the riding light

- 1 Switch light on.
  - 2 Check that the headlight and rear light come on.
- ⇒ If the headlight and rear lights do not come on, take pedelec out of service. Contact specialist dealer.

### 7.1.14 Checking the brake

- 1 Pull both handbrakes when stationary.
  - 2 Push the pedals.
- ⇒ If no resistance is generated in the handbrake's usual position, take pedelec out of service. Contact specialist dealer.
  - ⇒ If the brake is losing fluid, take pedelec out of service. Contact specialist dealer.

## 7.2 After each ride

Complying with these cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

The following items should be ready for use to clean the pedelec after each ride:









Tool		Cleaning agent	
 Cloth	 Bucket	 Water	 Dish-washing liquid
 Brush	 Fork oil	 Silicone or Teflon oil	 Acid-free lubricating grease

Table 68: Required tools and cleaning agents after each ride

### 7.2.1 Cleaning the riding light and reflectors



- 1 Clean headlight, rear light and reflectors with a damp cloth.

### 7.2.2 Cleaning the suspension fork



- 1 Remove dirt and deposits from the stanchions and deflector seals with a damp cloth. Check stanchions for dents, scratches, staining or leaking oil.
- 2 Lubricate the dust seals and stanchions with a few drops of silicone spray.
- 3 Maintain the suspension fork after cleaning.

### 7.2.3 Maintaining the suspension fork



- Treat dust seals with fork oil.

### 7.2.4 Cleaning the pedals



- Clean pedals with a brush and soapy water.

### 7.2.5 Cleaning the brake



- Clean dirt on the rim and brake components with a slightly dampened cloth.

### 7.2.6 Cleaning the suspension seat post



- Clean dirt on the articulated joints with a slightly dampened cloth immediately after a ride.

### 7.2.7 Cleaning the rear frame damper



- Clean dirt on the articulated joints with a slightly dampened cloth immediately after a ride.

## 7.3 Basic cleaning

Complying with these basic cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

The following are required for basic cleaning:

Tool		Cleaning agent	
 Gloves	 Toothbrush	 Water	 Lubricant
 Cloth	 Paintbrush	 Dish-washing liquid	 Brake cleaner
 Sponge	 Watering can	 Degreaser	 Leather cleaner
 Brushes	 Bucket		

**Table 69: Required tools and cleaning agents for basic cleaning**

- ✓ Remove battery and on-board computer before thorough cleaning.

### 7.3.1 Cleaning the on-board computer and control panel



#### Notice

If water enters the on-board computer, it will be permanently damaged.

- ▶ Never immerse the on-board computer in water.
  - ▶ Never use a cleaning agent.
- 
- ▶ Carefully clean the on-board computer and control panel with a soft, damp cloth.

### 7.3.2 Cleaning the battery



#### CAUTION

#### Risk of fire and explosion due to penetration by water

The battery is only protected from simple spray water. Penetration by water can cause a short circuit. The battery may self-ignite and explode.

- ▶ Keep contacts dry and clean.
- ▶ Never immerse the battery in water.

#### Notice

- ▶ Never use a cleaning agent.

- 1 Clean the battery electrical connections with a dry cloth or paintbrush only.
- 2 Wipe off the decorative sides with a damp cloth.

### 7.3.3 Cleaning the motor



#### Notice

If water enters the motor, it will be permanently damaged.

- ▶ Never open the motor.
  - ▶ Never immerse the motor in water.
  - ▶ Never use cleaning agents.
- 
- ▶ Carefully clean the motor on the outside with a soft, damp cloth.

### 7.3.4 Cleaning the frame, fork, pannier rack, guards and kickstand



- 1 Soak the components with dish-washing detergent if the dirt is thick and ingrained.
- 2 After leaving it to soak for a short time, remove the dirt and mud with a sponge, brush and toothbrushes.
- 3 Rinse off the components with water from a watering can.
- 4 Wipe away oil stains with a degreaser.

### 7.3.5 Cleaning the stem



- 1 Clean stem with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.

### 7.3.6 Cleaning the handlebars



- 1 Clean handlebars, including handles and all gears or twist grip shifter, with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.

### 7.3.7 Cleaning the handles



- 1 Clean handles with sponge, water and soapy water.
- 2 Rinse off component with water from a watering can.
- 3 Care for rubber handles after cleaning (see Section [7.4.8.1](#)).

#### 7.3.7.1 Cleaning leather handles



Leather is a natural product and has similar properties to human skin. Regular cleaning and care help to prevent leather dehydrating, fading or becoming brittle or stained.

- 1 Remove dirt with a soft, damp cloth.
- 2 Remove stubborn stains with a leather cleaner.
- 3 Care for leather handles after cleaning (see Section [7.4.8.2](#)).

### 7.3.8 Cleaning the seat post



 
- 1 Clean seat post with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.
- 3 Wipe away any grease or assembly paste residue with a cloth and degreaser.

### 7.3.9 Cleaning the saddle



- 1 Clean the saddle with lukewarm water and a cloth dampened with soapy water.
- 2 Rinse off component with water from a watering can.


#### 7.3.9.1 Cleaning the leather saddle



Leather is a natural product and has similar properties to human skin. Regular cleaning and care help to prevent leather dehydrating, fading or becoming brittle or stained.

- 1 Remove dirt with a soft, damp cloth.
- 2 Remove stubborn stains with a leather cleaner.
- 3 Care for leather saddle after cleaning (see Section [7.4.11](#)).

### 7.3.10 Cleaning the tyres

 


- 1 Clean tyres with a sponge, a brush and soap cleaner.
- 2 Rinse off component with water from a watering can.
- 3 Remove any embedded chips and small stones.

### 7.3.11 Cleaning the spokes and spoke nipples

 - 1 Clean spokes from the inside to the outside with a sponge, brush and soapy water.
- 2 Clean rim with a sponge.
- 3 Rinse off component with water from a watering can.
- 4 Care for spoke nipples after cleaning (see Section [7.4.13](#)).

### 7.3.12 Cleaning the hub



- 1 Put on protective gloves.
- 2 Remove dirt from hub with a sponge and soapy water.
- 3 Rinse off component with water from a watering can.
- 4 Wipe off oily dirt with a degreaser and a cloth.

### 7.3.13 Cleaning the switching elements



- 1 Clean gear shift and shift cables with water, a brush and dish-washing detergent.
- 2 Rinse off component with water from a watering can.

### 7.3.14 Cleaning the SRAM AXS rear derailleur



#### Notice

The battery will be permanently damaged if water enters the rear derailleur battery or the battery mount.

- ▶ If fitted, remove the rear derailleur battery from the SRAM rear derailleur and insert the battery separator into the rear derailleur before cleaning.
  - ▶ Never immerse the rear derailleur in water.
  - ▶ Never use acidic or degreasing agents on the electrical components.
  - ▶ Never use chemical cleaning agents or solvents as they can destroy the plastic components.
- 
- ▶ Clean all derailleur components with a damp cloth.

### 7.3.14.1 Cleaning the shifter



- Carefully clean shifter with a damp, soft cloth.

### 7.3.15 Cleaning the cassette, chain wheels and front derailleur



- 1 Put on protective gloves.
- 2 Spray cassette, chain wheels and front derailleur with degreasing agent.
- 3 Clean coarse dirt with a brush after soaking for a short time.
- 4 Wash down all parts with dish-washing detergent and a toothbrush.
- 5 Rinse off component with water from a watering can.

### 7.3.16 Cleaning the brake

#### 7.3.16.1 Cleaning the handbrake



- Carefully clean the handbrake with a damp, soft cloth.

#### 7.3.17 Cleaning the brake disc



#### Notice

- Protect brake disc against lubricants and grease from hands.

- 1 Put on protective gloves.
- 2 Spray brake disc with brake disc cleaning spray.
- 3 Wipe with a cloth.

#### 7.3.18 Cleaning the belt



#### Notice

- Never use aggressive (acid-based) cleaners, rust removers or degreasers when cleaning the belt.

- 1 Dampen a cloth with soapy water. Place the cloth on the belt.
- 2 Hold and apply slight pressure while slowly turning the rear wheel so that the belt passes through the cloth.

### 7.3.19 Cleaning the chain



#### Notice

- ▶ Never use aggressive (acid-based) cleaners, rust removers or degreasers when cleaning the chain.
- ▶ Never use gun oil or rust remover spray.
- ▶ Never use chain cleaning devices or chain cleaning baths.
- ▶ Have chain with all-round guard cleaned and cared for during major inspection.

- ✓ Place newspaper or paper towels underneath to collect dirt.
- 1 Slightly dampen a brush with dish-washing liquid. Brush both sides of the chain.
- 2 Dampen a cloth with soapy water. Place the cloth on the chain.
- 3 Hold and apply slight pressure while slowly turning the rear wheel, so the chain passes through the cloth.
- 4 Wipe off oily, dirty chains thoroughly with a cloth and degreaser.
- 5 Care for the chain after cleaning (see Section [7.4.16](#)).

#### 7.3.19.1 Cleaning the chain, including all-round chain guard



#### Notice

The chain guard must be removed before cleaning. Contact specialist dealer.

- ▶ Clean water hole on the chain guard lower surface.
- ▶ Care for the chain after cleaning (see Section [7.4.16.1](#)).



## 7.4 Maintenance

Complying with these servicing instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

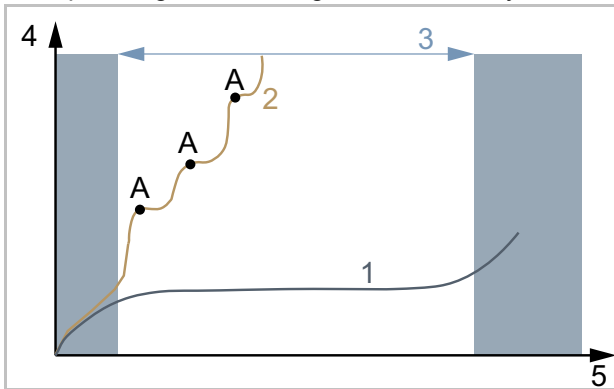


Figure 224: Diagram showing wear, operating hours (5) vs. material abrasion (4)

The service life (3) of an optimally serviced drive chain (1) is almost three times as long with lubrication (A) compared to a drive chain (2) lubricated on an irregular basis.

These tools and cleaning agents are required for servicing:












Tool		Cleaning agent	
			
Cloth	Toothbrush	Frame wax spray	Silicone or Teflon oil
			
		Acid-free lubricating grease	Fork oil
			
		Teflon spray	Spray oil
			
		Chain oil	Leather care product
			
		Battery terminal grease	

Table 70: Required tools and cleaning agents for servicing

### 7.4.1 Maintain frame



#### Notice

- ▶ Hard wax polish and protection wax are particularly resistant on gloss paintwork. These car accessory retail products are unsuitable for matt paint finishes.
- ▶ Try wax spray out on a small spot before application.

- 1 Dry frame with a cloth.
- 2 Spray frame with spray wax and leave to dry.
- 3 Wipe away any wax residue with a cloth.

### 7.4.2 Maintain fork



#### Notice

- ▶ Hard wax polish and protection wax are particularly resistant on gloss paintwork. These car accessory retail products are unsuitable for matt paint finishes.
- ▶ Try wax spray out on a small spot before application.

- 1 Dry fork with a cloth.
- 2 Spray frame care oil on frame and leave to dry.
- 3 Wipe away any wax residue with a cloth.

### 7.4.3 Maintain pannier rack



- 1 Dry pannier rack with a cloth.
- 2 Spray pannier rack with spray wax and leave to dry.
- 3 Wipe pannier rack with a cloth.
- 4 Protect chafing points on panniers with adhesive film. Replace worn adhesive film.
- 5 Maintain coil springs with silicone spray or wax spray from time to time.

### 7.4.4 Maintain mudguard



- ▶ Depending on the requirements for the material in the mudguard, apply hard wax polish, metal polish or a plastic care product as per the product instructions.

### 7.4.5 Servicing the kickstand



- 1 Dry kickstand with a cloth.
- 2 Spray kickstand rack with spray wax and leave to dry.
- 3 Wipe down kickstand with a cloth.
- 4 Lubricate the kickstand joints with spray oil.

### 7.4.6 Maintaining the stem



- 1 Spray painted and polished metal surfaces with wax spray and leave to dry.
- 2 Wipe away any wax residue with a cloth.
- 3 Apply silicone or Teflon oil to the stem shaft tube and the quick release lever pivot point with a cloth.
- 4 If you have a Speedlifter Twist, also apply oil to the unlocking bolt groove in the Speedlifter body.
- 5 Apply a little acid-free lubricant grease between the stem quick release lever and the sliding piece to reduce the quick release lever operating force.
- 6 If you have a stem with a cone clamp, apply a new protective layer of assembly paste onto the stem and fork steerer contact point once a year.

### 7.4.7 Maintaining the handlebars



- 1 Spray painted and polished metal surfaces with wax spray and leave to dry.
- 2 Wipe away any wax residue with a cloth.

## 7.4.8 Maintaining the handles

### 7.4.8.1 Maintaining rubber handles

- 1 Apply talcum powder to sticky rubber handles.

#### Notice

- ▶ Never apply talcum powder to leather or foam handles.

### 7.4.8.2 Maintaining the leather handles



Standard leather care products keep leather smooth and resistant, brighten its appearance and improve or replace stain protection.

- 1 Try leather care product out on a less visible spot before use.
- 2 Care for leather handles with a leather care product.

## 7.4.9 Maintaining the seat post

- 1 Carefully preserve screw connections with wax spray. In doing so, ensure that no wax is applied to the metal contact surfaces.
- 2 Replace the assembly paste protective layer on the metal contact surfaces on the seat post and seat tube every year.

### 7.4.9.1 Maintaining the suspension seat post



- 1 Lubricate articulated joints with spray oil.
- 2 Deflect and let the suspension seat post rebound five times. Remove any surplus lubricant with a clean cloth.

### 7.4.9.2 Maintaining the carbon seat post



#### Notice

Rain and puddle water can cause contact corrosion if carbon seat posts are used in an aluminium frame without protective assembly paste. It may then take a great deal of force to remove the seat post. The carbon seat post may break as a result.

- 1 Take out the carbon seat post.
- 2 Remove old assembly paste with a cloth.
- 3 Apply new assembly paste with a cloth.
- 4 Re-insert the carbon seat post.

### 7.4.10 Maintaining the rims



- ▶ Care for chrome rims, stainless steel rims and polished aluminium with chrome or metal polish. Never maintain the brake surface with polish.

### 7.4.11 Maintaining the leather saddle



Standard leather care products keep leather smooth and resistant, brighten its appearance and improve or replace stain protection.

- 1 Try leather care product out on a less visible spot before use.
- 2 Care for leather saddle from below with a leather care product. Only maintain the top of leather saddles with a leather care product if they are badly worn and dried-out.
- 3 Avoid wearing light-coloured trousers after care due to staining.

### 7.4.12 Maintaining the hub



- 1 Apply wax spray especially around the spoke holes. In doing so, ensure that no wax is applied to brake parts.
- 2 Treat rubber seals with a cloth with one or two drops of silicone spray. Never use oil if you have disc brakes.

### 7.4.13 Maintaining the spoke nipples



- 1 Apply wax spray onto the spoke nipples from the rim side.
- 2 Treat heavily corroded spoke nipples with a drop of penetrating or special care oil.

### 7.4.14 Maintaining the gear shift

#### 7.4.14.1 Maintaining the rear derailleur articulated shafts and jockey wheel



- ▶ Treat front and rear derailleur articulated shafts and jockey wheels with Teflon spray.

#### 7.4.14.2 Maintaining the shifter



#### Notice

- ▶ Never treat shifters with degreaser or penetrating oil spray.
- ▶ Lubricate articulated joints and mechanical parts which are accessible from outside with a few drops of spray oil or precision mechanics oil.

### 7.4.15 Maintaining the pedals



- 1 Treat pedals with spray oil. In doing so, ensure that no lubricant is applied to the pedal surfaces.
- 2 Lubricate seals and mechanical parts sparingly with a few drops of oil.
- 3 Remove any surplus lubricant with a clean cloth.
- 4 Spray metal foot rests with silicone spray.

### 7.4.16 Maintaining the chain



- ✓ Place newspaper or paper towels underneath to collect chain oil.
- 1 Lift rear wheel.
- 2 Turn the crank briskly in an anti-clockwise direction.
- 3 Use slight finger pressure to the chain oil bottle to apply a wafer-thin thread of oil to the chain links. The faster the crank is turned, the thinner the threads of oil will be.

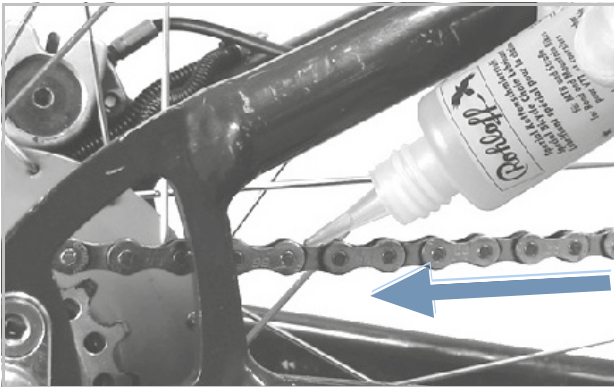


Figure 225: Lubricating the chain

- 4 Remove excessive chain oil with a cloth. If you apply too much oil, it will make the chain all the dirtier at a later point in time.
- 5 Leave chain oil to penetrate into the chain links for a few hours or overnight.

#### 7.4.16.1 Maintaining the chain and all-round chain guard



- ✓ Place newspaper or paper towels underneath to collect chain oil.
- 1 Lift rear wheel.
- 2 Turn the crank briskly in an anti-clockwise direction.
- 3 Use slight finger pressure to the chain oil bottle to apply a wafer-thin thread of oil onto the chain links through the oil hole on the upper surface of the chain guard. The faster the crank is turned, the thinner the threads of oil will be.
- 4 Remove excessive chain oil with a cloth. If you apply too much oil, it will make the chain all the dirtier at a later point in time.
- 5 Leave chain oil to penetrate into the chain links for a few hours or overnight.

### 7.4.17 Maintaining the battery



- ▶ Grease plug terminals on the battery with terminal grease or contact spray from time to time.

## 7.4.18 Maintaining the brake

### 7.4.18.1 Maintaining the handbrake



#### Notice

- ▶ Never treat brake handbrake with degreaser or penetrating oil spray.
- ▶ Lubricate articulated joints and mechanical parts which are accessible from outside with a few drops of spray oil or precision mechanics oil.

### 7.4.19 Lubricating the Eightpins seat post tube

- ▶ Use a 2.5 ml syringe to carefully fill Eightpins Fluid V3 very slowly into the lubricating nipple on the outer tube.



Figure 226: Lubricating the Eightpins seat post

#### Notice

- ▶ Fill a maximum of 2.5 ml since otherwise the reservoir inside will overflow and the oil will spill into the frame.

## 7.5 Inspection

The following tools are required for an inspection:








	Gloves
	Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm
	Torque spanner Working range 5... 40 Nm
	<b>by.schulz handlebars:</b> TORX® bits: T50, T55, and T60
	Hex key 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm
	Phillips screwdriver
	Slotted-head screwdriver

Table 71: Tools required for inspection

### 7.5.1 Checking the wheel

- 1 Hold pedelec.
- 2 Hold onto the front or rear wheel and try to move the wheel sideways. In doing so, check to see if the wheel nuts or quick releases move.
  - ⇒ If the wheel moves or the wheel nut or quick release moves sideways, take pedelec out of service. Contact specialist dealer.
- 3 Lift pedelec slightly. Turn front or rear wheel. In doing so, check whether the wheel deflects sideways or outwards.
  - ⇒ If the wheel deflects sideways or outwards, take pedelec out of service. Contact specialist dealer.

#### 7.5.1.1 Checking tyre pressure

### Notice

If the tyre pressure is too low in the tyre, the tyre does not achieve its load bearing capacity. The tyre is not stable and may come off the rim.

If the tyre pressure is too high, the tyre may burst.

Tyres are wear parts and wear away due to fatigue, storage, environmental influences or mechanical impacts. Only optimum tyre pressure will guarantee greater safety, lower rolling resistance, effective protection against punctures and a longer service life.

#### Air loss

Even the most airtight tube will lose pressure on a continuous basis since the air pressures in a pedelec tyre are significantly higher and the wall thicknesses significantly finer than in a car tyre. Pressure loss of 1 bar per month can be regarded as normal. During this process, the pressure loss is significantly faster at high pressures and significantly slower at low pressures.

#### Checking tyre pressure

The permitted pressure range is indicated on the side of the tyre.



Figure 227: Tyre pressure specification in bar (1) and psi (2)

- ▶ Verify tyre pressure against the value noted in the pedelec pass every 10 days as a minimum.

**Dunlop valve****Only applies to pedelecs with this equipment**

The tyre pressure cannot be measured on the simple Dunlop valve. You thus measure the tyre pressure in the filling hose while slowly pumping the bicycle air pump.

- ✓ It is recommendable to use a bicycle air pump with a pressure gauge.
- 1 Unscrew and remove the valve cap.
- 2 Undo the rim nuts.
- 3 Connect the bicycle air pump.
- 4 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- 5 Correct the tyre pressure to meet the specified value in the Pedelec pass.
- 6 If the tyre pressure is too high, unfasten the union nut, let air out and re-tighten the union nut.
- 7 Remove the bicycle air pump.
- 8 Screw the valve cap tight.
- 9 Screw the rim nut gently against the rim with the tips of your fingers.
- ⇒ Correct tyre pressure if necessary (see section 6.5.8.2).

**Schrader valve****Only applies to pedelecs with this equipment**

- ✓ It is recommended to use an air pump at a filling station or a modern bicycle air with a pressure gauge. Older and simple bicycle air pumps are unsuitable for filling tyres via a Schrader valve.
- 1 Unscrew and remove the valve cap.
- 2 Undo the rim nuts.
- 3 Connect the bicycle air pump.
- 4 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- ⇒ The tyre pressure has been adjusted as per the specifications.
- 5 Remove the bicycle air pump.
- 6 Screw the valve cap tight.
- 7 Screw the rim nut gently against the rim with the tips of your fingers.
- ⇒ Correct tyre pressure if necessary (see section 6.5.8.2).

**Presta valve****Only applies to pedelecs with this equipment**

- ✓ It is recommendable to use a bicycle air pump with a pressure gauge. You must observe the bicycle air pump operating instructions.
- 1 Unscrew and remove the valve cap.
- 2 Open the knurled nut around four turns.
- 3 Carefully attach the bicycle air pump so that you do not bend the valve insert.
- 4 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- 5 Correct the tyre pressure as per the specifications on the tyre.
- 6 Remove the bicycle air pump.
- 7 Tighten the knurled nut with your fingers.
- 8 Screw the valve cap tight.
- 9 Screw the knurled nut gently against the rim with the tips of your fingers.
- ⇒ Correct tyre pressure if necessary (see section 6.5.8.2).



### 7.5.1.2 Checking the tyres

The tread is far less important for bicycle tyres than it is for car tyres, for example. Consequently, tyres can still be used with a worn tread with the exception of tyres on mountain bikes.

- 1 Check the tread for wear. The tyre is worn if the anti-puncture protection or the carcass cords are visible.

Since resistance to punctures also depends on the thickness of the tread, it may make sense to change the tyre at an earlier stage.

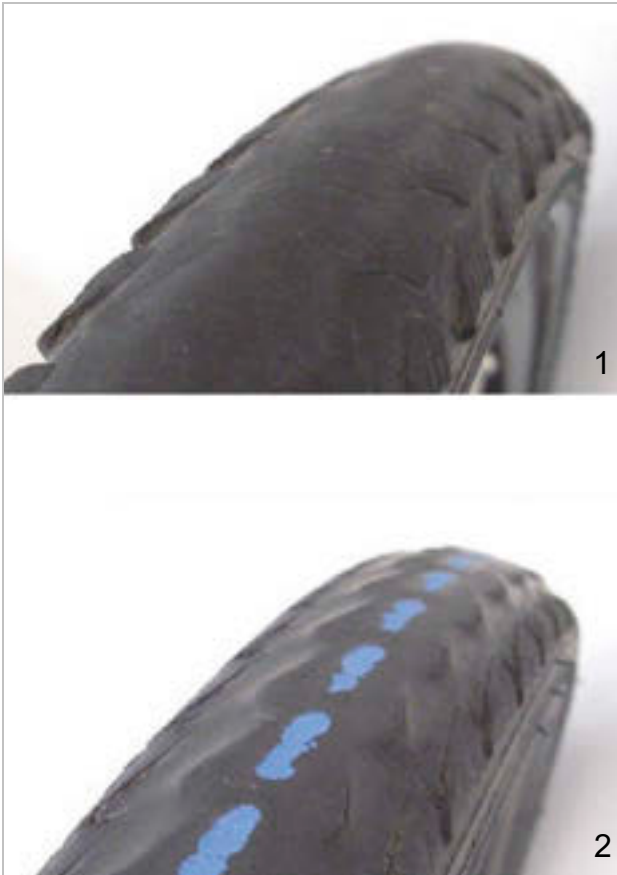


Figure 228: Tyres without a tread which can be replaced (1) and tyres with puncture protection showing through (2) must be replaced

- 2 Check the side walls for wear. If there are any cracks or tears, the tyre must be replaced.



Figure 229: Examples of fatigue cracks (1) and ageing cracks (2)

- 3 Replacing a wheel requires considerable mechanical expertise. If a tyre is worn, it needs to be replaced at a specialist dealer's.

### 7.5.1.3 Checking the rims



#### Crash caused by a worn rim

A worn rim can break and block the wheel. This may cause a crash with serious injuries.

- ▶ Check rim wear on a regular basis.
- ▶ Take pedelec out of service if the rim has any cracks or warping. Contact specialist dealer.

Rims are wear parts and wear away due to fatigue, mechanical impacts, environmental influences or due to braking if rim brakes are used.

- ▶ Check the rim well for wear.
- ⇒ The rims of a rim brake with invisible wear indicator are worn as soon as the wear indicator becomes visible in the area of the rim joint.
- ⇒ The rims with visible wear indicator are worn as soon as the black, all-round groove on the pad friction surface is no longer visible.
- ▶ We recommend that you also replace the *rims* at the same time as every second brake lining replacement.

### 7.5.1.4 Checking the nipple holes

Nipples cause fatigue and stress on the edge of the nipple hole.

- ▶ Check whether there are cracks on the edge of the nipple hole.

If there are cracks on the edge of the nipple hole, contact your specialist dealer.

### 7.5.1.5 Checking the nipple well

The nipple holes can weaken the tyre bed.

- ▶ Check to see if cracks are emerging from the nipple holes.
- ⇒ If there are cracks radiating from the nipple hole, contact your specialist dealer.

### 7.5.1.6 Checking the rim hooks

Mechanical impacts can warp the rim hooks. There is no longer a guarantee that a tyre can be fitted safely if this is the case.

- ▶ Check for twisted rim hooks.
- ⇒ Replace rims with twisted rim hooks. Never repair the rim with pliers and bend the hook back.

### 7.5.1.7 Checking the spokes

- ▶ Press spokes slightly together with your thumb and index finger. Check to ensure that the tension is the same for all spokes.
- ⇒ Contact your specialist dealer if the spokes are loose or are tensioned differently.

## 7.5.2 Checking the brake system



### Crash caused by brake failure

Worn brake discs and brake linings and a lack of hydraulic fluid in the brake cable reduce the braking power. This may cause a crash with serious injuries.

- ▶ Check brake disc, brake linings and the hydraulic brake system regularly. Contact specialist dealer.

The inspection interval for the brake depends on how often it is used and the weather conditions. If the pedelec is used under extreme conditions such as rain, dirt or high mileage, inspection must be performed more frequently.

### 7.5.2.1 Checking the handbrake

- 1 Check that all screws in the handbrake are firmly in place (see Section 8.5.10).
- 2 Tighten loose screws.
- 3 Check that handbrake is torsionally rigid on the handlebars (see Section 8.5.10).
- 4 Tighten loose screws.
- 5 Check that there is a gap of at least 1 cm between the handbrake and the handle when the handbrake is fully applied.
- 6 Adjust the grip distance if the gap is too narrow (see Section 6.4.9.5).
- 7 Check the braking effect by pedalling while pulling the handbrake.
  - ▶ If the braking power is too weak, adjust the brake pressure point.
  - ▶ Contact your specialist dealer if the pressure point cannot be reached.

### 7.5.2.2 Checking the hydraulic brake system

- 1 Pull on the handbrake and check whether any brake fluid leaks out of the lines, connections or on the brake linings.
- 2 If any brake fluid leaks from anywhere, take pedelec out of service. Contact specialist dealer.
- 3 Pull brake handbrake and hold several times.
- 4 If you are unable to clearly detect the pressure point and it changes, the brake needs to be bled. Contact specialist dealer.

### 7.5.2.3 Checking the Bowden cables

- 1 Pull on handbrake several times. Check whether the Bowden cables get stuck or they make scraping noises.
- 2 Check the physical condition of the Bowden cables for visible damage and check to see if wire strands are broken.
- 3 Have defective Bowden cables replaced. Contact specialist dealer.

### 7.5.2.4 Checking the disc brake

Only applies to pedelecs with this equipment

#### Checking the brake linings

- ▶ Check that the brake linings are no less than 1.8 mm wide at any point and there are no less than 2.5 mm between the brake lining and supporting plate.



Figure 230: Checking the brake lining when fitted with the help of the transport safety wear gauge

- 1 Check brake linings for damage and thick dirt.
  - ⇒ Have damaged or very dirty brake linings replaced. Contact specialist dealer.
- 2 Pull handbrake and hold.
- 3 In doing so, check whether the transport safety wear gauge can fit between the brake lining supporting plates.
  - ⇒ If the transport safety wear gauge fits between the supporting plates, the brake linings have not reached their wear limit.
  - ⇒ Contact your specialist dealer if they are worn.

#### Checking the brake discs

- ✓ Put on gloves as the brake disc is very sharp.
- 1 Take hold of brake disc and wiggle it gently to check whether the brake disc is positioned against the wheel free of backlash.
  - 2 Check that the brake linings move steadily and symmetrically back towards the brake disc when you pull and release handbrake.
    - ⇒ If the brake disc can be moved or the brake linings move erratically, contact your specialist dealer.
  - 3 Check that the brake disc is no less than 1.8 mm thick at any point.
    - ⇒ If the brake disc is under the wear limit and is less than 1.8 mm thick, the brake disc must be replaced. Contact specialist dealer.

### 7.5.2.5 Checking the back-pedal brake

#### Only applies to pedelecs with this equipment

- ✓ There are sharp corners and edges on the back-pedal brake. Wear gloves.
- 1** Hold and check counter support to ensure it is firmly attached to rear frame down tube.
  - ⇒ Tighten screw into the counter support if it is loose.
- 2** Carry out brake test. Listen for noises while doing so.
  - ⇒ If braking with the backpedal makes noises, contact specialist dealer.

### 7.5.3 Checking the chain

- ▶ Check chain for rust, damage and chain links that are difficult to move.
- ⇒ Replace rusted, damaged or difficult-to-move chains since they will not withstand the tensile loads from the drive and will soon break. Contact specialist dealer.

#### 7.5.3.1 Checking the chain tension

### Notice

Excessive chain tension increases wear. If the chain tension is too low, there is a risk that the chain will slip off the chain wheels.

- ▶ Check the chain tension once a month.

#### Check tension in derailleur gears

The rear derailleur tensions the chain on pedelecs with derailleur gears.

- 1 Check to see if the chain is sagging.
  - 2 Gently press the rear derailleur forwards to check whether it moves and whether it goes back into position by itself.
- ⇒ If the chain is sagging or the rear derailleur does not go back into position by itself, contact your specialist dealer.

#### Check tension in hub gear

- 3 Remove the chain guard on pedelecs with a circumferential chain guard.

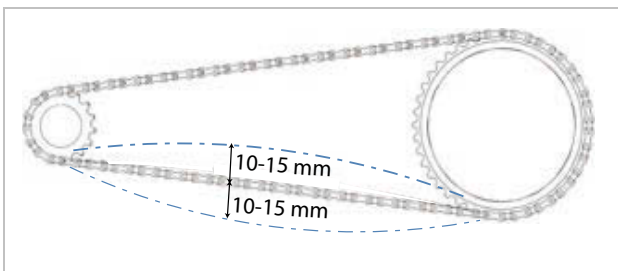


Figure 231: Checking the chain tension (example): 5 mm upwards, 10 mm downwards = 15 mm deviation

- 1 Lift chain upwards. Measure the distance to the centre. Press chain downwards. Measure the distance to the centre.
- 2 Add the two values together to calculate the deviation.

- 3 Check the chain tension at three to four points.

- ⇒ If the deviation is greater than 20 mm, tighten chain.
- ⇒ If the deviation is less than 10 mm, Loosen chain.
- ▶ If a hub gear is fitted, the rear wheel must be pushed backwards and forwards to tighten the chain. Contact specialist dealer.
- ▶ In the case of pedelecs with a hub gear or back-pedal brake, the chain is tensioned by an eccentric bearing or movable fork end in the bottom bracket axle. Special tools and specialist knowledge are required to tension the chain. Contact specialist dealer.

#### 7.5.3.2 Checking the belt for wear

Each chain has a wear limit. If this limited is exceeded, the chain needs to be replaced.

Manufacturer	Wear limits
SHIMANO	>1%
KCM	>0.8 mm per link
SRAM	>0.8%
ROHLOFF	S: >0.1 mm per link A: >0.075 mm per link

Table 72: Chain wear limit by manufacturer

#### Rough check

You can perform a rough check on the chain wheel by hand on conventional chains.

- 1 Place the chain on the largest chain wheel.
  - 2 Lift the chain from the front to the centre of the bike.
- ⇒ If the chain can be lifted more than half a link from the chain wheel, carry out a check or contact your specialist dealer.

**Check**

There is a different wear gauge for each chain, depending on the manufacturer:



Figure 232: Example of a KMC gauge



Figure 233: Example of a SHIMANO gauge

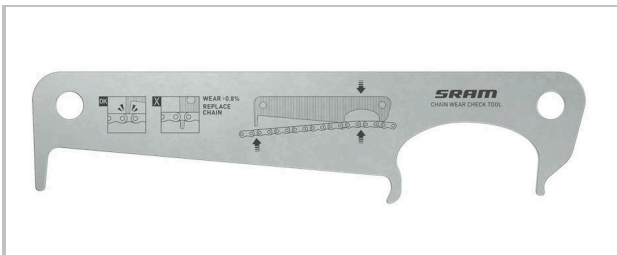


Figure 234: Example of a SRAM gauge



Figure 235: Example of a ROHLOFF gauge



Figure 236: Example of a KMC digital gauge

- 1 Insert gauge between two chain links on the right-hand side.

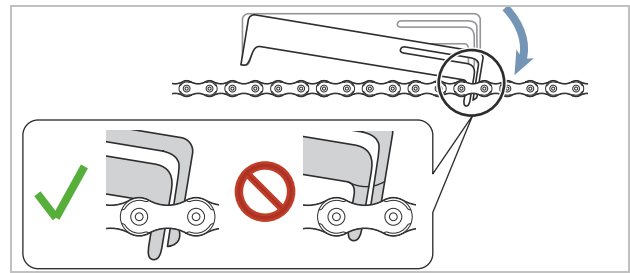


Figure 237: Gauge is inserted

- 2 Lower gauge down to the left-hand side.

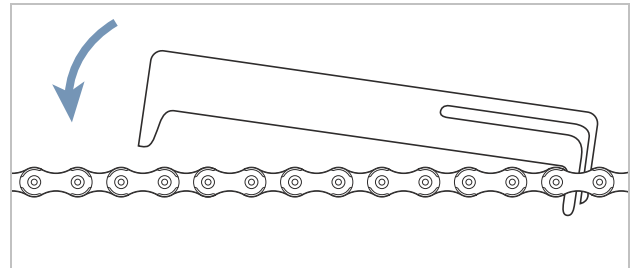


Figure 238: Lower gauge to the left

- ⇒ If the gauge does not fit between the links, the chain is not worn yet.

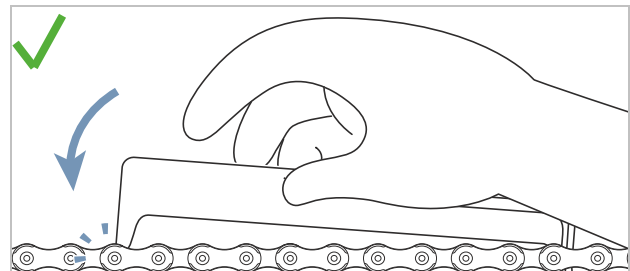


Figure 239: Gauge does not fit

- ⇒ If the gauge does not fit between the links, the chain is worn and must be replaced. Contact specialist dealer.

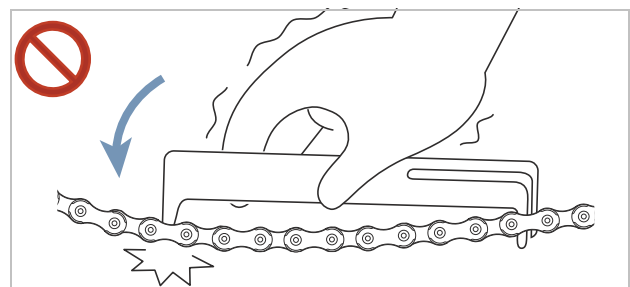


Figure 240: Gauge fits

## 7.5.4 Checking the belt

### 7.5.4.1 Checking the belt for wear

► Check belt for indications of wear:

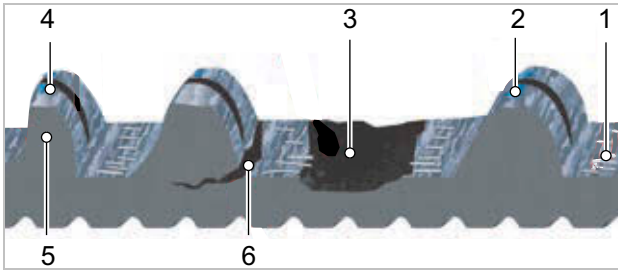


Figure 241: Indications of wear on a belt

- 1 Carbon tensile fibres are exposed
- 2 Worn webbing with visible polymer
- 3 Missing belt tooth
- 4 Imbalance
- 5 Shark tooth
- 6 Cracks

⇒ If there is one or more indications of wear, contact your specialist dealer. The belt needs to be replaced.

### 7.5.4.2 Checking the belt sprockets for wear

► Check belt sprocket.

⇒ The tooth profile is rounded and the teeth are thick. The belt sprocket does not need to be replaced.

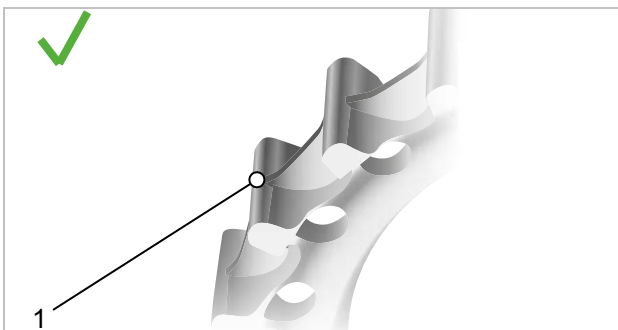


Figure 242: Optimum tooth profile

⇒ The tooth profile is pointed and teeth have worn thinner. Contact specialist dealer. The belt sprocket does need to be replaced.

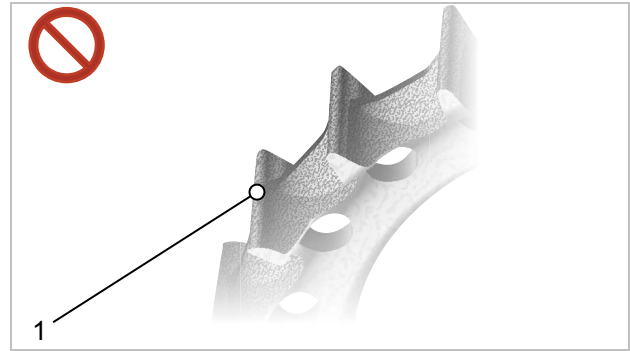


Figure 243: Worn tooth profile

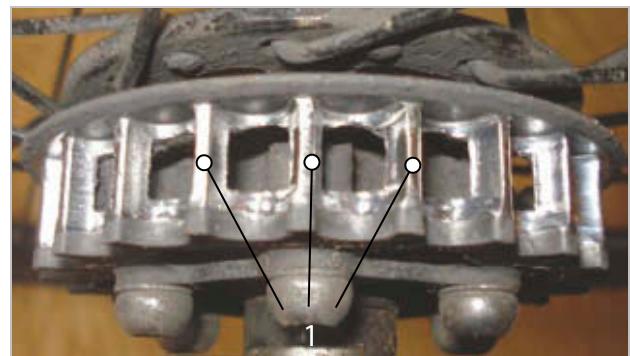


Figure 244: Photo showing example of worn tooth profile

### 7.5.4.3 Checking the belt tension

If the belt tension is too low, this can cause the system to skip over a tooth or slip, i.e. the teeth on the belt slip over the teeth on the rear wheel belt sprocket. Excessive tension can cause damage to the bearings, sluggishness in the system and increased wear on the electric drive system.

The adjustment of the belt tension varies depending on the pedelec. Common tensioning systems include angled or vertical drop-outs, horizontally sliding dropouts and eccentric bottom bracket axle.



There are three common methods of measuring belt tension:

- Gates Carbon Drive mobile app for iPhone® and Android®,
- Gates KrikIt tension meter and
- Eco tension tester.

With any of these methods, the tension along the belt may vary slightly, so you should repeat the process several times. Turn the pedal a quarter after each measurement. Measure again.

The tools measure the tension only. They do not provide specifications for the required voltage. The table below contains specifications for the correct tensioning range for Gates Carbon Drive belts.

	Steady pedalling	Sports usage
MTBs* and single-speed bicycles	45– 60 Hz (35– 45 lbs)	60– 75 Hz (45– 53 lbs)
Hub gear/pinion gear	35– 50 Hz (28– 40 lbs)	

Table 73: Specifications for tensioning

\* The CDN and SideTrack systems are not permitted for mountain bikes, e-bikes with mid-drive motor or gears, bikes without a gear shift or for trekking or touring bikes.

These tension specifications are designed as initial guidance and may have to be corrected upwards or downwards depending on the body size, gear ratio and the force applied to the pedals.

### Gates Carbon Drive mobile app



The Gates Carbon Drive mobile app measures the belt tension based on the belt's natural frequencies (Hz). To do so, the app uses the phone's mic to record the sound of the belt and determines the main frequency.

- ✓ Download Gates Carbon Drive mobile app free of charge from the App Store or Google Play on your mobile phone.
- ✓ Measure in a quiet environment.
- ✓ Ensure that the phone microphone is switched on.

- 1 Open app.
  - 2 Click on the voltage symbol.
  - 3 Click on **MEASURE**.
  - 4 Point phone microphone towards the belt.
  - 5 Pluck the belt so that the belt vibrates like a guitar string.
  - 6 It is recommended to take several measurements for comparison. Turn the crank a quarter. Repeat frequency measurement.
  - 7 Check the belt frequency displayed against the specifications for tensions in Table [w Tabelle 73, Seite 313].
- ⇒ If the value is higher than the specification, reduce belt tension.
- ⇒ If the value is within the specified range, the belt tension has been correctly adjusted.
- ⇒ If the value is lower than the specification, increase belt tension.

### Gates KrikIt tension meter

#### Not included in price

- ✓ Check that the measurement indicator is at the very bottom.
- 1 Extend index finger into the finger loop. Place on the check gauge.

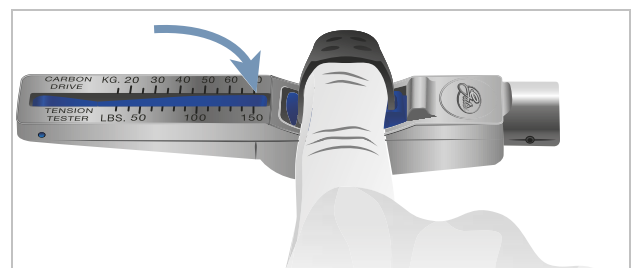


Figure 245: Index finger in the check gauge

- 2 Position check gauge on the upper surface of the belt. Position the check gauge in the middle of the belt length.

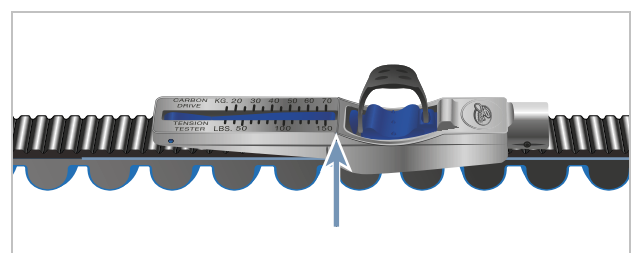


Figure 246: Check gauge on belt

- 3 Press the check gauge down with just one finger until it clicks into place.

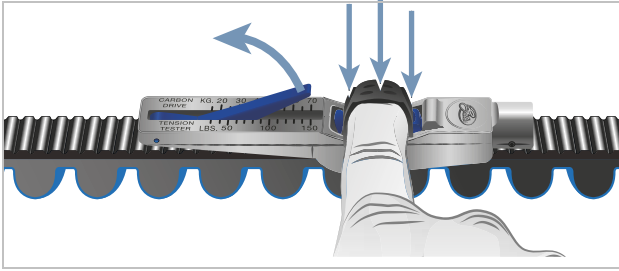


Figure 247: Pressing the check gauge down with one finger

- 4 Take reading where line A meets line B.

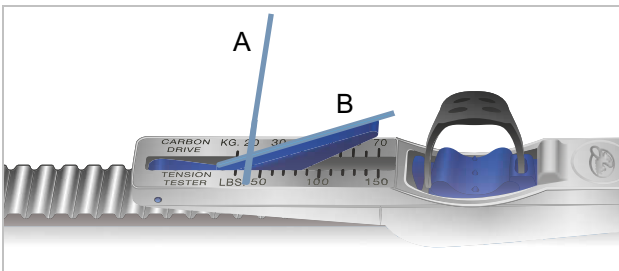


Figure 248: Example of a reading: 20 kg

- 5 Turn the pedal a quarter. Repeat measurement at least three times.
- 6 Convert value read from kg to pounds. The value is given in inches per pound.  
Example: 20 kg = 44 inch = 44 lbs
- 7 Compare value with Table 44 Tension specification.
  - ⇒ If the value is higher than the specification, reduce belt tension.
  - ⇒ If the value is within the specified range, the belt tension has been correctly adjusted.
  - ⇒ If the value is lower than the specification, increase belt tension.

## ECO tension tester

Not included in price

- 1 Attach the measuring stick on the belt.

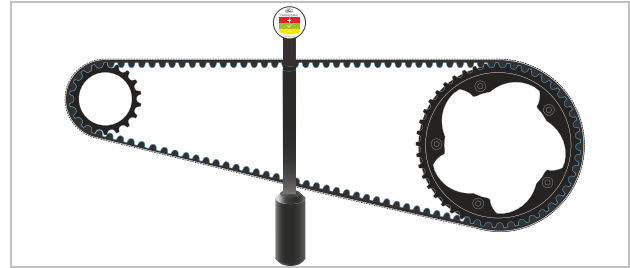


Figure 249: Attached measuring stick

- 2 Place the ruler on both belt sprockets.

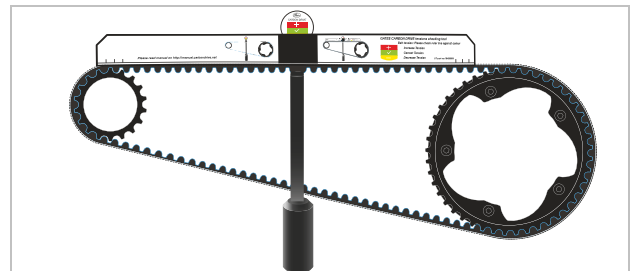


Figure 250: Ruler in place

- ⇒ Read tension on the tension indicator.

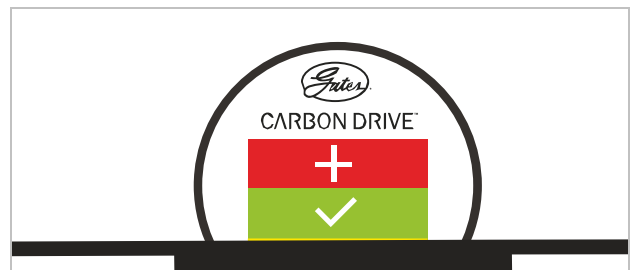


Figure 251: Example: On yellow along lower edge, so reduce belt tension slightly

- Red = increase belt tension
- Green = belt tension is set correctly
- Yellow = reduce belt tension

### 7.5.5 Checking the riding light

- 1 Check the cable connections on the headlight and rear light for damage and corrosion and ensure they are firmly in position.
  - ⇒ If the headlight or rear lights do not come on, take pedelec out of service. Contact specialist dealer.
- ⇒ If cable connections are damaged or corroded, or are not firmly in positioned. take pedelec out of service. Contact specialist dealer.
- 2 Switch light on.
- 3 Check that the headlight and rear light come on.
  - 4 Place pedelec 5 m from the wall.
  - 5 Stand the pedelec up straight. Hold the handlebars straight with both hands. Do not use the kickstand.

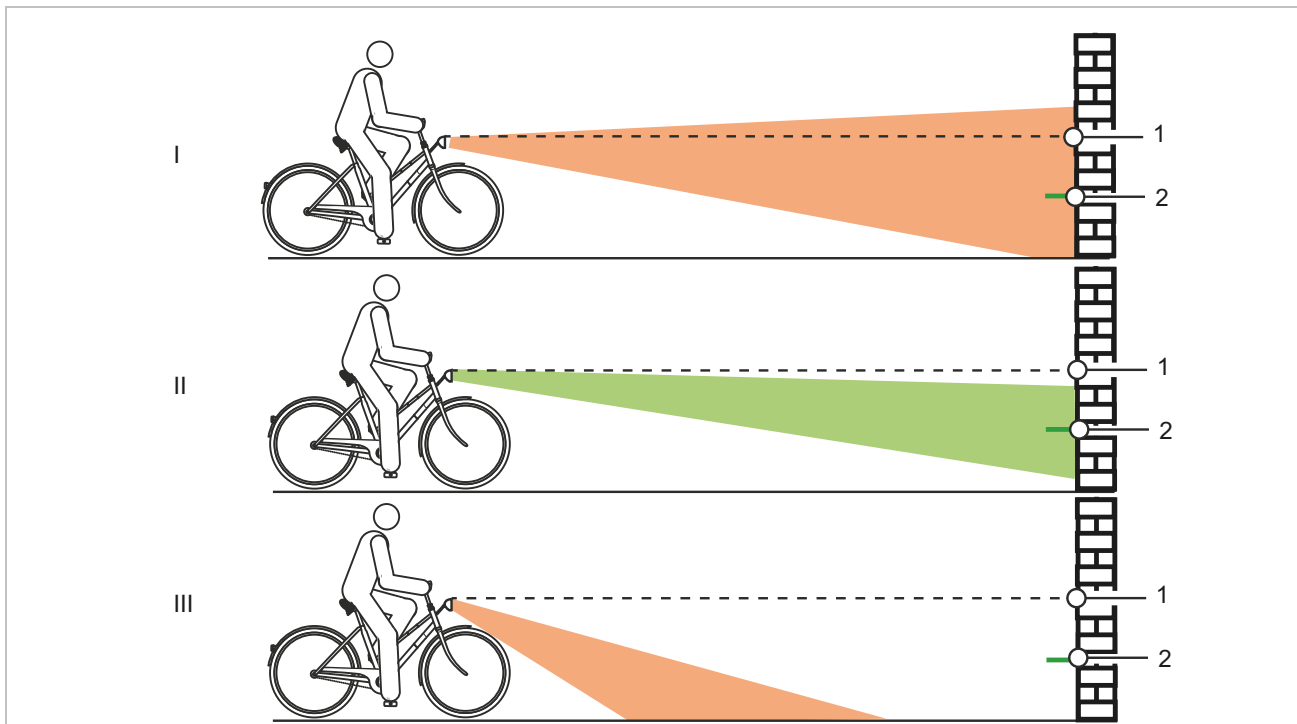


Figure 252: Light positioned too high (1), correctly (2) and too low (3)

- 6 Check the position of the light beam.
  - ⇒ If the light is positioned too high or too low, adjust riding light (see Section 6.4.17.1).

### 7.5.6 Checking the stem

- ▶ The stem and quick release system must be inspected at regular intervals. The specialist dealer should adjust them if they require adjustment.
- ▶ If the hexagon socket head screw is also loosened, the bearing clearance also needs to be adjusted. Medium-strength thread locker, such as Loctite blue, then needs to be applied to the loosened screws and the screws tightened as per specifications.
- ▶ Check metal contact surfaces on cone, stem clamping screw and fork steerer for corrosion.
- ⇒ Take pedelec out of service if there is any wear or signs of corrosion. Contact specialist dealer.

### 7.5.7 Checking the handlebars

- 1 Take hold of handlebars with both hands on the handles.
  - 2 Move handlebars up and down and press to tilt.
- ⇒ If the handlebars can move, contact your specialist dealer.
- 3 Place front wheel in position where it can't move sideways (e.g. in a bike stand).
  - 4 Hold handlebars firmly with both hands.
  - 5 Check if the handlebars are able to twist against the front wheel.
- ⇒ If the handlebars can move, contact your specialist dealer.

### 7.5.8 Checking the saddle

- 1 Hold saddle firmly.
  - 2 Check whether the saddle twists, tilts or can be pushed in one direction or other.
- ⇒ If the saddle twists, tilts or can be pushed in one direction or other, adjust the saddle (see Section 6.5.4).
  - ⇒ Contact your specialist dealer if the saddle cannot be fixed into position.

### 7.5.9 Checking the seat post

- 1 Take seat post out of the frame.
- 2 Check seat post for cracks and corrosion.
- 3 Reinsert seat post.

### 7.5.10 Checking the pedal

- 1 Hold pedal and try to move it sideways toward the inside or outside. In doing so, observe whether the crank arm or bearing move sideways.
- ⇒ If the pedal, crank arm or crank bearing moves sideways, fasten screw on the pedal crank rear.
- 2 Hold pedal and try to move it upwards and downwards vertically. In doing so, observe whether the pedal, crank arm or crank bearing moves vertically.
- ⇒ If the pedal, crank arm or crank bearing moves vertically, fasten screw.

### 7.5.11 Checking the gear shift

- 1 Check that all gear shift components are free of damage.
- 2 Contact your specialist dealer if components are damaged.
- 3 Place the pedelec on stand.
- 4 Turn the pedal crank clockwise.
- 5 Switch through all speeds.
- 6 Check that pedelec can switch through all speeds without making unusual noises.
- 7 Adjust the gear shift if gears cannot be changed correctly.

#### 7.5.11.1 Checking the electric gear shift

- 1 Check the cable connections for damage and corrosion and ensure they are firmly in position.
- ⇒ If cable connections are loose, damaged or corroded, contact your specialist dealer.

#### 7.5.11.2 Checking the mechanical gear shift

- 1 Change gear a number of times. Check whether the Bowden cables get stuck or they make scraping noises.
  - 2 Check the physical condition of the Bowden cables for visible damage and check to see if wire strands are broken.
- ⇒ Have defective Bowden cables replaced. Contact specialist dealer.

#### 7.5.11.3 Checking derailleur gears

The chain is tensioned by the rear derailleur in pedelecs with derailleur gears.

- 1 Place the pedelec on stand.
  - 2 Check to see if the chain is sagging.
  - 3 Gently press the rear derailleur forwards to check whether it moves and whether it goes back into position by itself.
- ⇒ If the chain is sagging or the rear derailleur does not go back into position by itself, contact your specialist dealer.

- 4 Check that there is clearance between the chain tensioner and spokes.
- ⇒ If there is no clearance or the chain scrapes against the spokes or tyres, contact your specialist dealer.
- 5 Check that there is clearance between the chain or rear derailleur and spokes.
- ⇒ If there is no clearance or the chain scrapes against the spokes, contact your specialist dealer.

#### 7.5.11.4 Checking the hub gear

In the case of pedelecs with a hub gear or back-pedal brake, the chain or the belt is tensioned by an eccentric bearing or movable fork end in the bottom bracket axle. Special tools and specialist knowledge are required to tension the chain. Contact specialist dealer.

- ✓ Remove the chain guard on pedelecs with a circumferential chain guard.

- 1 Place the pedelec on stand.
- 2 Check the chain or belt tension in three or four positions, turning the crank a full revolution.

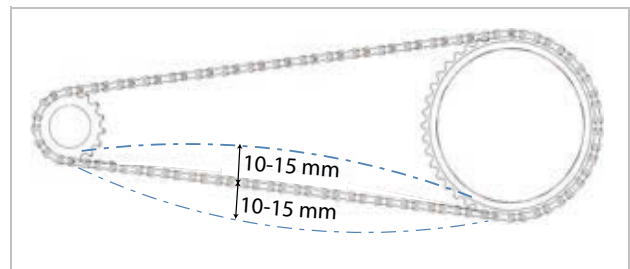


Figure 253: Checking the chain tension (example): 5 mm upwards, 10 mm downwards = 15 mm deviation

- 3 If the chain or the belt can be pushed more than 2 cm, the chain will need to be re-tensioned. Contact specialist dealer.
- ⇒ If the chain or belt can only be pushed up and down less than 1 cm, you will need to the chain or belt slightly. Contact specialist dealer.
- ⇒ The ideal chain and belt tension has been achieved if the chain can be pushed between a maximum of 10 and 15 mm in the middle between the sprocket and the toothed wheel. The crank must also turn without resistance.

### 7.5.11.5 Adjusting the ROHLOFF hub

Only applies to pedelecs with this equipment

- 1 Check whether shift cable tension is set in such a way that there is a perceptible play of around 5 mm when the shift handle is turned.
  - 2 Adjust the shift cable tension by turning the **tension adjuster**.
- ⇒ Unscrew the **tension adjuster** to increase the shift cable tension.
- ⇒ Tighten the **tension adjuster** to decrease the shift cable tension.

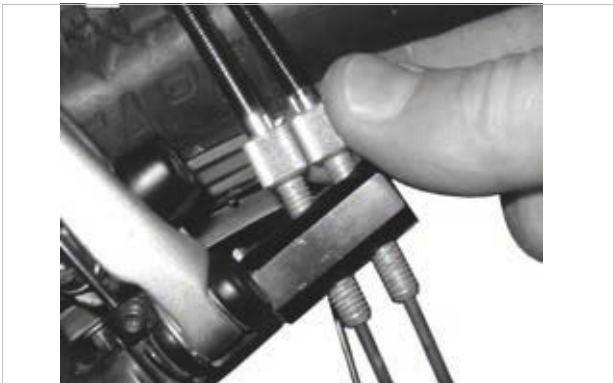


Figure 254: The tension adjuster on ROHLOFF hub versions with internal switch control is located on the tension counter support



Figure 255: The tension adjuster on ROHLOFF hub versions with external switch control is located on the cable box positioned on the left-hand side

- 3 If the marking and numbers on the shift handle do no longer coincide after the gear shift is adjusted, tighten one of the tension adjusters and screw out the other tension adjuster to the same extent.

### 7.5.11.6 Adjusting the cable-operated gear shift, dual-cable

Only applies to pedelecs with this equipment

- ▶ For a smooth gear shift, adjust the **adjusting sleeves** underneath the chain stay on the frame.
- ▶ The shift cable has around 1 mm play when it is pulled out gently.

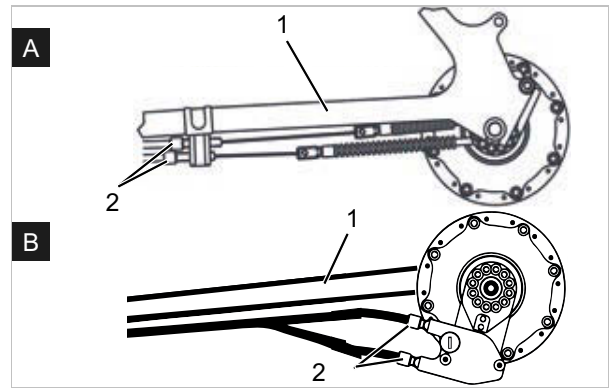


Figure 256: Adjusting sleeves (2) on two alternative versions (A and B) of a dual-cable, Bowden-cable-operated gear shift on the chain stay (1)

### 7.5.11.7 Adjusting the dual-cable, Bowden-cable-operated twist grip shifter

Only applies to pedelecs with this equipment

- ▶ For a smooth gear shift, adjust the **adjusting sleeves** on the shifter housing.
- ⇒ There is noticeable play of 2 to 5 mm (1/2 gear) when you turn the twist grip shifter.

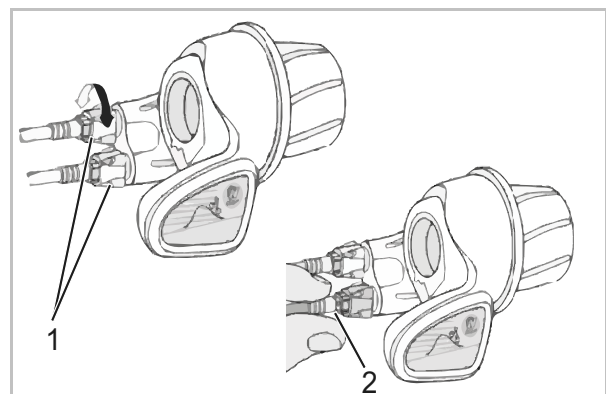


Figure 257: Twist grip shifter with adjusting sleeves (1) with play (2)

### 7.5.11.8 Checking kickstand stability

- 1 Place the pedelec on a slight elevation of 5 cm.
  - 2 Extend kickstand.
  - 3 Jolt pedelec to check stability.
- ⇒ If pedelec topples over, tighten screws or change height of the kickstand.

## 8 Inspection and maintenance

### 8.1 Initial inspection

#### After 200 km or 4 weeks after purchase

Vibrations produced while riding can cause screws and springs that were tightened during pedelec manufacture to settle or come loose.

- ▶ Arrange an appointment for the initial inspection directly when purchasing the pedelec.
- ▶ Have the initial inspection entered and stamped in the maintenance book.



- ▶ Carrying out the initial inspection, see Section 8.4.

### 8.2 Major inspection

#### Every six months

You must have your specialist dealer perform a major inspection every six months as a minimum. This is the only way to ensure that the pedelec remains safe and fully functional.

The tasks require technical expertise, special tools and special lubricants. The pedelec may become damaged if the stipulated major inspection and procedures are not carried out. This is why only specialist dealers may carry out the major inspection.

- ▶ Contact your specialist dealer and arrange an appointment.
- ▶ Enter and stamp major inspection tasks in the maintenance book.



- ▶ Perform major inspection.

### 8.3 Component-specific maintenance

High-quality components require extra maintenance. The tasks require technical expertise, special tools and special lubricants. The pedelec may become damaged if the stipulated maintenance intervals and procedures are not carried out. This is why only specialist dealers may carry out maintenance.

Correct maintenance on the fork not only guarantees a long service life, but also ensures optimal performance.

Each maintenance interval shows the maximum cycling hours for the required type of maintenance that the component manufacturer recommends.

- ▶ Optimise performance with shorter maintenance intervals, depending on use, terrain and environmental conditions.



- ▶ Enter any components with extra maintenance requirements with their corresponding maintenance intervals into the maintenance book when the pedelec is purchased.
- ▶ Inform the buyer of the additional maintenance schedule.
- ▶ Enter and stamp maintenance tasks in the maintenance book.



Inspection and maintenance intervals for suspension fork		
SR SUNTOUR suspension fork		
<input type="checkbox"/>	Maintenance 1	Every 50 hours
<input type="checkbox"/>	Maintenance 2	Every 100 hours
FOX suspension fork		
<input type="checkbox"/>	Maintenance	Every 125 hours or once a year
RockShox suspension fork		
<input type="checkbox"/>	<b>Maintenance of stanchions for:</b> Paragon™, XC™ 28, XC 30, 30™, Judy®, Recon™, Sektor™, 35™, Bluto™, REBA®, SID®, RS-1™, Revelation™, PIKE®, Lyrik™, Yari™, BoXXer	Every 50 hours
<input type="checkbox"/>	<b>Maintenance of spring and damper unit for:</b> Paragon, XC 28, XC 30,30 (2015 and earlier), Recon (2015 and earlier), Sektor (2015 and earlier), Bluto (2016 and earlier), Revelation (2017 and earlier), REBA (2016 and earlier), SID (2016 and earlier), RS-1 (2017 and earlier), BoXXer (2018 and earlier)	Every 100 hours
<input type="checkbox"/>	<b>Maintenance of spring and damper unit for:</b> 30 (2016+), Judy (2018+), Recon (2016+), Sektor (2016+), 35 (2020+), Revelation (2018+), Bluto (2017+), REBA (2017+), SID (2017+), RS-1 (2018+), PIKE (2014+), Lyrik (2016+), Yari (2016+), BoXXer (2019+)	Every 200 hours

Inspection and maintenance intervals for seat post		
by,schulz suspension seat post		
<input type="checkbox"/>	Maintenance	After the first 250 km; every 1500 km after that
Eightpins suspension seat post		
<input type="checkbox"/>	Clean wiper	20 hours
<input type="checkbox"/>	Clean slide bushing	40 hours
<input type="checkbox"/>	Replace slide bushing, wiper and felt strip	100 hours
<input type="checkbox"/>	Seal service for gas pressure spring	200 hours
FOX suspension seat post		
<input type="checkbox"/>	Maintenance	Every 125 hours or once a year
KINDSHOCK suspension seat post		
<input type="checkbox"/>	Maintenance	Every 6 months
RockShox dropper post		
<input type="checkbox"/>	Venting of remote control lever and/or maintenance of lower seat post unit for: Reverb™ A1/A2/B1, Reverb Stealth A1/A2/B1/C1...	Every 50 hours
<input type="checkbox"/>	Detach lower seat post, clean brass pins, check and replace if necessary and apply new grease for Reverb AXS™ A1...	Every 50 hours
<input type="checkbox"/>	Venting of remote control lever and/or maintenance of lower seat post unit for: Reverb B1, Reverb Stealth B1/C1..., Reverb AXS™ A1...	Every 200 hours
<input type="checkbox"/>	Complete maintenance of seat post for: Reverb A1/A2, Reverb Stealth A1/A2	Every 200 hours
<input type="checkbox"/>	Complete maintenance of seat post for: Reverb B1, Reverb Stealth B1	Every 400 hours
<input type="checkbox"/>	Complete maintenance of seat post for: Reverb AXS™ A1..., Reverb Stealth C1...	Every 600 hours
SR SUNTOUR suspension seat post		
<input type="checkbox"/>	Maintenance	Every 100 hours or once a year
All other suspension seat posts		
<input type="checkbox"/>	Maintenance	Every 100 hours

Inspection and maintenance intervals for rear frame damper		
RockShox rear frame damper		
<input type="checkbox"/>	Service air chamber assembly	Every 50 hours
<input type="checkbox"/>	Service damper and spring	Every 200 hours
FOX rear frame damper		
<input type="checkbox"/>	Maintenance	Every 125 hours or once a year
SR SUNTOUR rear frame damper		
<input type="checkbox"/>	Complete shock absorber service including damper reassembly and air seal replacement	Every 100 hours
Inspection and maintenance intervals for motor		
pinion C1.12, C1.9XR, C1.6		
<input type="checkbox"/>	<p>Maintenance 1 Check shift cables, outer sleeves, chains/belts, chainring and sprockets or belt sprockets for wear; replace if necessary. Check shift cables to ensure they are tensioned and move easily. Adjust or replace if necessary.</p> <p>Open shift box. Clean cable pulley, slide surfaces and gear box interior, epicyclic wheels and similar thoroughly and grease generously. Check and tighten all screw connections except gear box screws to ensure they are firmly in place and fasten with correct tightening torque.</p>	Every 500 km
<input type="checkbox"/>	Maintenance 2 Oil change	Every 10,000 km or once a year
pinion E1.12, E1.9		
<input type="checkbox"/>	Oil change	Every 10,000 km

Inspection and maintenance intervals for hub		
SHIMANO 11-speed hub		
<input type="checkbox"/>	Internal oil change and maintenance	1,000 km after start of use, then every 2 years or 2,000 km
All other SHIMANO gear hubs		
<input type="checkbox"/>	Lubricate internal components	Once a year or every 2,000 km
ROHLOFF Speedhub 500/14		
<input type="checkbox"/>	Clean cable box and grease cable drum interior	Every 500 km
<input type="checkbox"/>	Oil change	Every 5,000 km or at least once a year
Pinion		
<input type="checkbox"/>	<p>Maintenance 1 Check shift cables, outer sleeves, chains/belts and sprockets or belt sprockets for wear; replace if necessary. Check shift cables to ensure they are tensioned and move easily. Adjust or replace if necessary.</p> <p>Open shift box. Clean cable pulley, slide surfaces and gear box interior, epicyclic wheels and similar thoroughly and grease generously. Check and tighten all screw connections except gear box screws to ensure they are firmly in place and fasten with correct tightening torque.</p>	Every 500 km
<input type="checkbox"/>	Maintenance 2 Oil change	Every 10,000 km

 **WARNING**
**Injury due to damaged brakes**

Special tools and specialist knowledge are required to repair the brakes. Incorrect or unauthorised assembly can damage the brakes. This may lead to an accident with serious injuries.

- ▶ Only specialist dealers may carry out repairs on brakes.
- ▶ Only carry out work or changes, such as dismantling, sanding or painting, which are permitted and described in the brake operating instructions.

**Injury to the eyes**

Problems may arise if the settings are not made properly and you may sustain serious injuries as a result.

- ▶ Always wear safety glasses during Inspection and maintenance work.

 **CAUTION**
**Crash and falling caused by unintentional activation**

There is a risk of injury if the electric drive system is activated unintentionally.

- ▶ Remove the battery before inspection or maintenance.

**Crash caused by material fatigue**

If the service life of a component has expired, the component may suddenly fail. This may cause a crash with injuries.

- ▶ Have the specialist dealer carry out basic cleaning of the pedelec every six months, preferably at the same time as the required servicing work.

 **CAUTION**
**Hazard for the environment due to toxic substances**

The brake system contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

**Notice**

The motor is maintenance-free and only qualified specialist personnel may open it.

- ▶ Never open the motor.

**8.4 Carrying out initial inspection**

Incorrectly fastened screws may come loose due to impact. The stem may no longer be firmly fixed in its position as a result. This will cause a crash with injuries.

- ▶ Check the handlebars and the stem quick release system are firmly in position after the first two hours of riding.

Vibrations produced while riding can cause screws and springs that were tightened during manufacture of the pedelec to settle or come loose.

- 1 Check quick release system is fixed in position.
- 2 Check all tightening torques of screws and screw connections.



## 8.5 Perform major inspection

Complying with these inspection and maintenance instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

Diagnosis and documentation of current status

Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
<b>Chassis</b>							
Frame	Once a month	Dirt	...	Section 7.3.4	O.K.	Dirt	Cleaning
	6 months	Maintenance	...	Section 7.4.1	O.K.	Untreated	Wax
	6 months	Check for damage – fracture, scratches	Section 8.6.1	...	O.K.	Damage detected	Take pedelec out of service, new frame as specified in parts list
Carbon frame (optional)	Once a month	Dirt	Section 7.3.4	...	O.K.	Dirt	Cleaning
	6 months	Maintenance	...	Section 7.4.1	O.K.	No wax	Wax
	6 months	Damage to paintwork	Section 8.6.1.1	...	O.K.	Damage to paintwork	Apply paint
	6 months	Damage from impact	Section 8.6.1.1	...	O.K.	Damage from impact	Take pedelec out of service, new frame as specified in parts list
ROCKSHOX Rear frame damper (optional)	6 months	Check for damage, corrosion, fracture	See ROCKSHOX component maintenance instructions	Maintenance as specified by manufacturer  Air chamber assembly group, damper and spring	O.K.	Damage detected	New rear frame damper as specified in parts list
FOX Rear frame damper (optional)	6 months	Check for damage, corrosion, fracture	...	Send to FOX	O.K.	Damage detected	New rear frame damper as specified in parts list
SR SUNTOUR Rear frame damper (optional)	6 months	Check for damage, corrosion, fracture	See SR SUNTOUR component maintenance instructions	Maintenance as specified by manufacturer  Complete shock absorber service including damper reassembly and air seal replacement	O.K.	Damage detected	New rear frame damper as specified in parts list
<b>Steering system</b>							
Handlebars	Once a month	Cleaning	...	Section 7.3.6	O.K.	Dirt	Cleaning
	6 months	Wax	...	Section 7.4.7	O.K.	Untreated	Wax
	6 months	Check mount fastening	Section 7.5.7	...	O.K.	Loose, rust	Tighten screws; new handlebars as specified in parts list if necessary



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Stem	Once a month	Cleaning	...	Section 7.3.5	O.K.	Dirt	Cleaning
	6 months	Wax	...	Section 7.4.6	O.K.	Untreated	Wax
	6 months	Check mount fas- tening	Section 7.5.6 and Section 8.6.4	...	O.K.	Loose, rust	Retighten screws; new stem as specified in parts list if neces- sary
Handles	Once a month	Cleaning	...	Section 7.3.7	O.K.	Dirt	Cleaning
	Once a month	Care	Section 7.4.8	...	O.K.	Untreated	Talcum powder
	before each ride	Wear; check if fas- tened securely	Section 7.1.11	...	O.K.	Missing, wob- bles	Retighten screws, new handles and cov- erings as specified in parts list
Steering head- set	6 months	Clean and check for damage	...	Clean, lubricate and adjust	O.K.	Unclean	Clean and lubricate
Fork (rigid)	6 months	Check for damage, corrosion, fracture	...	Dismount, check, lubricate, refit	O.K.	Damage detected	New fork as specified in the parts list
Carbon fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer  Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
SR SUNTOUR suspension fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer  Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
FOX suspen- sion fork (optional)	6 months	Check for damage, corrosion, fracture	...	Send to FOX	O.K.	Damage detected	New rear frame damper as specified in parts list
RockShox sus- pension fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer  Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
Spinner sus- pension fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer  Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
<b>Wheel</b>							
Wheel	Before each ride	Concentricity	Section 7.1.7	...	O.K.	Not straight	Re-mount wheel
	6 months	Assembly	Section 7.5.1	...	O.K.	Loose	Adjust quick release
Tyres	Once a month	Cleaning	Section 7.3.10	...	O.K.	Dirt	Cleaning
	Once a week	Tyre pressure	Section 7.5.1.1	...	O.K.	Tyre pressure too low/too high	Adjust tyre pressure
	10 days	Wear	Section 7.3.10	...	O.K.	Worn profile	New tyre as specified in the parts list
Rims	6 months	Wax	...	Section 7.4.10	O.K.	Untreated	Wax
	6 months	Wear	Section 7.5.1.3	...	O.K.	Defective rim	New rim as specified in the parts list
	Once a month	Wear on brake surface	Section 7.5.2.4	...	O.K.	Worn brake surface	New rim as specified in the parts list
Spokes	Once a month	Cleaning	...	Section 7.3.11	O.K.	Dirt	Cleaning
	3 months	Check tension	Section 7.5.1.3	...	O.K.	Loose, tension varies	Re-tension spokes or new spokes as specified in parts list
	6 months	Check rim hooks	Section 7.5.1.3	...	O.K.	Twisted rim hooks	New rim as specified in the parts list
Spoke nipples	Once a month	Cleaning	...	Section 7.3.11	O.K.	Dirt	Cleaning
	Once a month	Wax	...	Section 7.4.13	O.K.	Untreated	Wax
Nipple holes	6 months	Check for cracks	Section 7.5.1.4	...	O.K.	Cracks	New rim as specified in the parts list
Nipple well	Once a year	Check for cracks	Section 7.5.1.5	...	O.K.	Cracks	New rim as specified in the parts list
Hub	Once a month	Cleaning	...	Section 7.3.12	O.K.	Dirt	Cleaning
	Once a month	Care	...	Section 7.4.12	O.K.	Untreated	Treat
Hub with cone bearing (optional)	Once a month	Cleaning	...	Section 7.3.12	O.K.	Dirt	Cleaning
	Once a month	Care	...	Section 7.4.12	O.K.	Untreated	Treat
	6 months	Check mount fastening	...	...	O.K.	Loose, rust	Retighten screws; new handlebars as specified in parts list if necessary
	Once a year	Adjust	...	...	O.K.	Not adjusted	New position



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Hub gear (optional)	Once a month	Cleaning	...	Section 7.3.12	O.K.	Dirt	Cleaning
	Once a month	Care	...	Section 7.4.12	O.K.	Untreated	Treat
	6 months	Check mount fas- tening	...	...	O.K.	Loose, rust	Retighten screws; new handlebars as specified in parts list if necessary
	6 months	Functional check	Section 7.5.11.4	...		incorrect switching	Readjust hub
<b>Saddle and seat post</b>							
Saddle	Once a month	Cleaning		Section 7.3.9	O.K.	Dirt	Cleaning
	6 months	Check mount fas- tening	Section 7.5.8	...	O.K.	Loose	Retighten screws
Leather saddle (optional)	Once a month	Cleaning	...	Section 7.3.9.1	O.K.	Dirt	Cleaning
	6 months	Care	...	Section 7.4.11	O.K.	Untreated	Leather wax
	6 months	Check mount fas- tening	Section 7.5.8	...	O.K.	Loose	Retighten screws
Seat post	Once a month	Cleaning	...	Section 7.3.8	O.K.	Dirt	Cleaning
	6 months	Care	...		O.K.	Untreated	Leather wax
	6 months	Complete clean, check fastening and paint protection film	...	Section 8.6.8	O.K.	Loose	Tighten screws, new paint protection film
Carbon seat post (optional)	Once a month	Cleaning	...	Section 7.3.8	O.K.	Dirt	Cleaning
	6 months	Care	...	Section 7.4.9.2	O.K.	Untreated	Assembly paste
	6 months	Complete clean, check fastening and paint protection film	...	Section 8.6.8.1	O.K.	Loose	Tighten screws, apply new paint protection film; new seat post as specified in parts list if damaged
Suspension seat post (optional)	Once a month	Cleaning	...	...	O.K.	Dirt	Cleaning
	6 months	Care	...	Section 7.4.9.1	O.K.	Untreated	Oils
	100 hours or 6 months	Complete clean, check fastening and paint protection film	Section 8.6.8	...	O.K.	Loose	Tighten screws, new paint protection film
by.schulz sus- pension seat post (optional)	After the first 250 km; every 1500 km after that	Complete clean, check fastening and paint protection film, lubricate	Section 8.6.8.2	...	O.K.	Loose	Tighten screws, apply new paint protection film; new seat post as specified in parts list if damaged
SR SUNTOUR suspension seat post	Every 100 hours or once a year	Complete clean, check fastening and paint protection film, lubricate	Section 8.6.8.3	...	O.K.	Loose	Tighten screws, apply new paint protection film; new seat post as specified in parts list if damaged



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
EIGHTPINS NGS2 Suspension seat post	20 hours	Refill oil	...	Section 7.4.19	O.K.	No oil	Refill oil
	20 hours	Clean wiper			O.K.	Dirt	Cleaning
	40 hours	Clean slide bushing			O.K.	Dirt	Cleaning
	100 hours	Replace slide bushing, wiper and felt strip			O.K.	No replacement	Replace
	200 hours	Seal service for gas pressure spring			O.K.	No service	Carry out the service
EIGHTPINS H01 Suspension seat post	20 hours	Refill oil	...	Section 7.4.19	O.K.	No oil	Refill oil
	20 hours	Clean wiper			O.K.	Dirt	Cleaning
	40 hours	Clean slide bushing			O.K.	Dirt	Cleaning
	100 hours	Replace slide bushing, wiper and felt strip			O.K.	No replacement	Replace
	200 hours	Seal service for gas pressure spring			O.K.	No service	Carry out the service
RockShox dropper post	50 hours	Venting	...	See manufacturer	O.K.		
	50 hours	Cleaning	...	See manufacturer	O.K.		
	200 hours	Venting	...	See manufacturer	O.K.		
	200 hours	Complete maintenance	...	See manufacturer	O.K.		
	400 hours	Complete maintenance	...	See manufacturer	O.K.		
	600 hours	Complete maintenance	...	See manufacturer	O.K.		
FOX suspension seat post	Every 125 hours or once a year	Complete maintenance	See manufacturer	At the manufacturer FOX	...	...	
<b>Safety guards</b>							
Belt or chain guards	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Guard	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Motor cover	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
<b>Brake system</b>							
Handbrake	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Brake fluid	6 months	Check fluid level	Depending on time of year	...	O.K.	Too little	Top up brake fluid; take Pedelec out of service if damaged; new brake hoses
Brake linings	6 months	Brake linings, brake discs and rims	Check for damage	...	O.K.	Damage detected	New brake linings, brake discs and rims





Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Back-pedal brake braking armature	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Brake system	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
<b>Lighting system</b>							
Light cabling	6 months	Connections, cor- rect wiring	Check	...	O.K.	Cable defec- tive, no light	New cabling
Rear light	6 months	Side light	Functional check	...	O.K.	No constant light	New rear light as specified in parts list; replace if necessary
Front light	6 months	Side light, daytime riding light	Functional check	...	O.K.	No constant light	New front light as specified in parts list; replace if necessary
Reflectors	6 months	All complete, state, fastening	Check	...	O.K.	Damaged or not all com- plete	New reflectors
<b>Drive/gear shift</b>							
Chain/cassette/ sprocket/chain- ring	6 months	Check for damage	Check for dam- age	...	O.K.	Damage	Refasten if necessary or replace as speci- fied in parts list
Chain guard/ spoke guard	6 months	Check for damage	Check for dam- age	...	O.K.	Damage	Replace as specified in parts list
Bottom bracket axle/crank	6 months	Check mount fas- tening	Check mount fastening	...	O.K.	Loose	Retighten screws
Pedals	6 months	Check mount fas- tening	Check mount fastening	...	O.K.	Loose	Retighten screws
Shifter	6 months	Check mount fas- tening	Check mount fastening	...	O.K.	Loose	Retighten screws
Shift cables	6 months	Check for damage	Check for dam- age	...	O.K.	Loose and defective	Adjust shift cables; new shift cables if necessary
Front derailleur	6 months	Check for damage	Check for dam- age	...	O.K.	Gear shift diffi- cult or not pos- sible	Adjust
Rear derailleur	6 months	Check for damage	Check for dam- age	...	O.K.	Gear shift diffi- cult or not pos- sible	Adjust
<b>Electric drive system</b>							
On-board com- puter	6 months	Check for damage	Check for dam- age	...	O.K.	No screen, defective screen display	Restart, test battery, new software or new on-board computer, decommissioning,
Control panel	6 months	Check control panel for damage	Check for dam- age	...	O.K.	No response	Restart; contact con- trol panel manufac- turer, new control panel
Tachometer	6 months	Calibration	Speed meas- urement	...	O.K.	Pedelec travel- ling 10% too fast/slow	Take pedelec out of service until the source of the error is found
Cabling	6 months	Visual inspection	Visual inspec- tion	...	O.K.	Failure in sys- tem, damage, kinked cables	New cabling



Components	Frequency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Acceptance	Rejection	
Rechargeable battery	6 months	First examination	See Section on Assembly	...	O.K.	Error message	Contact battery manufacturer; take out of service, new battery
Battery mount	6 months	Firmly in position, lock, contacts	Check mount fastening	...	O.K.	Loose; lock doesn't close, no contacts	New battery mount
Motor	6 months	Visual inspection and mount	Check mount fastening	...	O.K.	Damage, loose	Refasten motor, contact motor manufacturer, new motor; take out of service
Software	6 months	Check version	Check software version	...	In latest version	Not latest version	Import update
Miscellaneous							
Pannier rack	Before each ride	Stability	Section 7.1.5	...	O.K.	Loose	Firm
	Once a month	Dirt	...	Section 7.3.4	O.K.	Dirt	Cleaning
	6 months	Maintenance	...	Section 7.4.3	O.K.	Untreated	Wax
	6 months	Check fastening and paint protection film	Section 8.5.2	...	O.K.	Loose	Tighten screws, new paint protection film
Kickstands	Once a month	Dirt	...	Section 7.3.4	O.K.	Dirt	Cleaning
	6 months	Maintenance	...	Section 7.4.5	O.K.	Untreated	Wax
	6 months	Attachment	Section 7.5.11.8	...	O.K.	Loose	Retighten screws
	6 months	Stability	Section 7.5.11.8	...	O.K.	Tips over	Change kickstand height
Bell	Before each ride	Sound	Functional check, Section 7.1.10.	...	O.K.	No ring, too quiet, missing	New bell as specified in the parts list
Attachments (optional)	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws

### Technical inspection, checking safety, test ride

Components	Description		Criteria		Measures if rejected
	Assembly/inspection	Tests	Acceptance	Rejection	
Brake system	6 months	Functional check	O.K.	No full braking; braking distance too long	Locate defective part in brake system and correct
Gear shift under operating load	6 months	Functional check	O.K.	Problems when shifting gear	Readjust gear shift
Suspension components (fork, shock absorber, seat post)	6 months	Functional check	O.K.	Suspension too deep or no longer exists	Locate defective component and correct
Electric drive system	6 months	Functional check	O.K.	Loose connection, problems when riding, accelerate	Locate faulty component in electric drive and remedy
Lighting system	6 months	Functional check	O.K.	No continuous light, not bright enough	Locate defective part in lighting system and correct
Test ride	6 months	Functional check	No strange noises	Strange noises	Locate source of noise and correct



### 8.5.1 Inspect frame

1 Check frame for cracks, warping and damage to the paintwork.

⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New frame as specified in the parts list.

#### 8.5.1.1 Inspecting the carbon frame

You need to distinguish between scratches on the paintwork and impacts if the carbon frame paintwork is damaged.

- ▶ Ask customer what caused the damage.
- ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged or delamination has taken place.

### 8.5.2 Inspecting the pannier rack

Scratches, cracks and breaks may appear on the pannier rack caused by the panniers and cargo boxes.

- 1 Examine pannier rack for scratches, cracks and breaks.
- ⇒ Replace damaged pannier racks.
- ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.

### 8.5.3 Inspecting and maintaining the rear frame damper

Only applies to pedelecs with this equipment



**WARNING**

#### Injury due to explosion

The air chamber is pressurised. If the air system is serviced in a rear frame damper, it can explode and cause serious injury.

- ▶ Wear safety goggles, protective gloves and safety clothing when assembling or carrying out maintenance on the bicycle.
- ▶ Release the air for the air chambers. Detach all air insert fitments.
- ▶ Never service or dismantle a rear frame damper if it has not completely rebounded.

#### Intoxication from suspension oil

Suspension oil is poisonous to the touch, irritates respiratory tracts and causes cancer, sterility and mutation in germ cells.

- ▶ Always wear safety goggles and nitrile gloves when carrying suspension oil.
- ▶ Never perform inspection or maintenance when you are pregnant.
- ▶ Use an oil catchment tray under the section where the rear frame damper is being serviced.

#### Intoxication from lubrication oil

The lubrication oil for Eightpins seat posts is toxic if touched or inhaled.

- ▶ Always wear safety goggles and nitrile gloves when working with lubrication oil.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and maintaining the vehicle.
- ▶ Use an oil catchment tray under the section where the seat post is serviced.


**CAUTION**
**Hazard for the environment due to toxic substances**

The rear frame damper contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

- 1 Dismantle the rear frame damper.
  - 2 Clean and inspect its interior and exterior.
  - 3 Recondition air springs.
  - 4 Replace airtight seals on air springs.
  - 5 Change oil.
- ⇒ Replace dust wipers.

#### 8.5.4 Inspecting the gear hub

##### 8.5.4.1 Adjusting the hub with cone bearing

In the case of hubs with a cone bearing, the bearing shell fixed in the hub cone body rotates with its larger ball bearing surfaces around the inner bearing cone resting against the fork end. The outer bearing shell rotating around the stationary bearing cone is subject to considerably more evenly distributed loads thanks to its larger ball running surface.

- 1 Attach a small, red colour marking on the lock nut.
  - 2 Turn the wheel axle 40° to 90° every 1,000 to 2,000 km.
- ⇒ The bearing cone is subject to evenly distributed loads.

#### 8.5.5 Inspecting the stem

Incorrectly fastened screws may come loose due to impact. The stem may no longer be firmly fixed in its position as a result. This will cause a crash with injuries.

- ▶ Check the handlebars and the stem's quick release are firmly in position.

#### 8.5.6 Inspect and grease steering headset

- 1 Remove fork.
- 2 Clean steering headset. If it is very dirty, flush the bearing with cleaning agents such as WD-40 or Karamba.
- 3 Check steering headset for damage.
  - ⇒ If the steering headset is damaged, replace steering headset as specified in the parts list.
- 4 Grease steering headset and bearing seat with highly viscous, water-repellent grease (e.g. Dura Ace special grease by SHIMANO).
- 5 Re-fit fork with steering headset as per fork instructions.



### 8.5.7 Inspecting the axle with quick release

#### CAUTION

##### Crash caused by unfastened quick release

A faulty or incorrectly installed quick release may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Install the front wheel quick release lever on the opposite side to the brake disc.

##### Crash caused by faulty or incorrectly installed quick release

The brake disc becomes very hot during operation. Parts of the quick release may become damaged as a result. The quick release comes loose. This will cause a crash with injuries.

- ▶ The front wheel quick release lever and the brake disc must be situated on opposite sides.

##### Crash caused by incorrectly set clamping force

Excessively high clamping force will damage the quick release and cause it to lose its function.

Insufficient clamping force will cause a detrimental transmission of force. The suspension fork or the frame may break. This will cause a crash with serious injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

- 1 Undo quick release.
- 2 Fasten quick release.
- 3 Check the position and clamping force of the quick release lever.

- ⇒ The quick release lever is flush with the lower housing.
- ⇒ You should be able to see slight impression on the palm of your hand when you close the quick release lever.

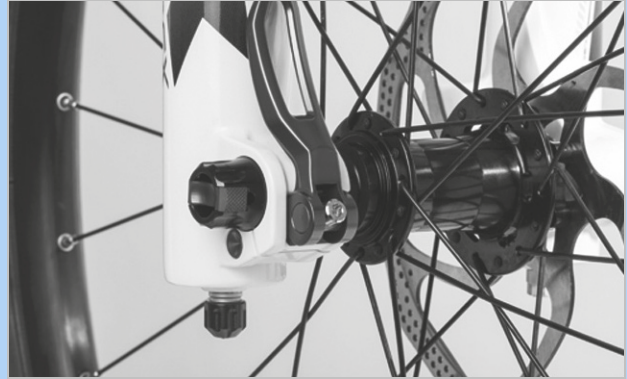


Figure 258: Adjusting the quick release clamping force

- 4 Use a 4 mm hexagon socket spanner to adjust the clamping lever clamping force if required.
- 5 Check the quick release lever position and clamping force again.

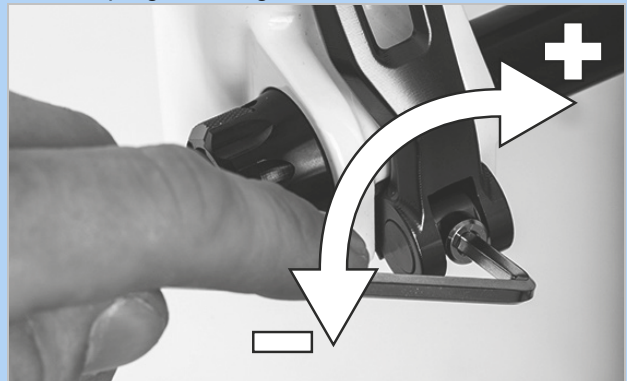


Figure 259: Adjusting the quick release clamping force



### 8.5.8 Inspecting the fork

#### WARNING

##### Injury due to explosion

The air chamber is pressurised. When the air system in a faulty suspension fork is maintained, it may explode and cause serious injury.

- ▶ Wear safety goggles, protective gloves and safety clothing when assembling or carrying out maintenance on the bicycle.
- ▶ Release the air for the air chambers. Detach all air insert fitments.
- ▶ Never service or dismantle a suspension fork if it has not completely rebounded.

#### CAUTION

##### Hazard for the environment due to toxic substances

The suspension fork contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
  - ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New fork as specified in the parts list.
- 3 Clean inside and exterior.
- 4 Grease fork.
- 5 Install fork.

### 8.5.8.1 Inspecting the carbon suspension fork

Only applies to pedelecs with this equipment

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
- 3 You need to distinguish between scratches on the paintwork and impacts if the carbon suspension fork paintwork is damaged.
  - ▶ Ask customer what caused the damage.
  - ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged or delamination has taken place.

### 8.5.8.2 Inspecting the suspension fork

Only applies to pedelecs with this equipment

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
  - ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New fork as specified in the parts list.
- 3 Dismantle suspension fork.
- 4 Lubricate dust seals and slide bushings.
- 5 Check torques.
- 6 Clean inside and exterior.
- 7 Grease fork.
- 8 Install fork.
- 9 Adjust suspension fork (see Section 6.3.14).



### 8.5.9 Inspecting the seat post



#### WARNING

#### Intoxication from lubrication oil

The lubrication oil for Eightpins seat posts is toxic if touched or inhaled.

- ▶ Always wear safety goggles and nitrile gloves when working with lubrication oil.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and maintaining the vehicle.
- ▶ Use an oil catchment tray under the section where the seat post is serviced.

- 1 Remove seat post from the frame.
- 2 Clean seat post on the inside and outside.
- 3 Examine seat post rack for scratches, cracks and fractures.
  - ⇒ Replace damaged seat post as specified in the parts list.
- 4 Fit seat post as per height specifications in the pedevec pass.

#### 8.5.9.1 Inspecting the carbon seat post

Only applies to pedevecs with this equipment

You need to distinguish between impacts and scratches on the paintwork if the carbon seat post paintwork is damaged.

- ▶ Ask customer what caused the damage.
- ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged or delamination has taken place.

### 8.5.9.2 Inspecting and greasing BY.SCHULZ suspension seat post

Only applies to pedevecs with this equipment

- 1 Remove seat post from the frame.
- 2 Remove safety and protective cover.
- 3 Clean seat post on the inside and outside.
- 4 Examine seat post rack for scratches, cracks and fractures.
  - ⇒ Replace damaged seat post as specified in the parts list.
- 5 Lubricate screws in the parallel suspension.
- 6 Reinsert seat post as per height specifications in the pedevec pass. Check screws for correct tightening torques.

<input type="checkbox"/>	<b>Torques G1</b> M8 seat clamp screw M5 fixing grub screws	20 ... 24 Nm 3 Nm
--------------------------	---	----------------------

<input type="checkbox"/>	<b>Torque G2</b> M6 seat clamp screw M5 fixing grub screws	12 ... 14 Nm 3 Nm
--------------------------	--	----------------------

- 7 Put on safety and protective cover.



### 8.5.9.3 Inspecting and greasing RS SUNTOUR suspension seat post

Only applies to pedelecs with this equipment

- 1 Remove seat post from the frame.
- 2 Remove safety and protective cover.
- 3 Examine seat post rack for scratches, cracks and fractures.
  - ⇒ Replace damaged seat post as specified in the parts list.
  - ⇒ If the paint protection film protecting a child seat is missing or has worn away, affix a new paint protection film.
- 4 Undo preload adjuster and take out steel suspension.
- 5 Clean seat post on inside and outside.
- 6 Grease seat post on inside with SR SUNTOUR grease no. 9170-001.
- 7 Lubricate pressure roller with bicycle chain oil.
  - ▶ Lubricate articulated joints in parallel suspension with bike chain oil.



Figure 260: SR SUNTOUR suspension seat post lubrication points


- 8 Reinsert seat post as per height specifications in the pedelec pass.
- 9 Check screws for correct tightening torques.

□	<b>SR SUNTOUR suspension seat post torques</b> Seat clamp screw M5 fixing grub screws	15–18 Nm 3 Nm
---	---	------------------

- 10 Put on safety and protective cover.



## 8.5.10 Torque

Model	Torque	Tool
<b>Axle</b>		
<b>Conventional axle nut</b>	35 ... 40 Nm*	15 mm spanner
<b>SR SUNTOUR screw-on axle 12AH2</b> Axle Securing screw	8 ... 10 Nm 5 ... 6 Nm	6 mm hex bit 5 mm hex bit
<b>SR SUNTOUR screw-on axle 15AH2</b> Axle Securing screw	8 ... 10 Nm 5 ... 6 Nm	6 mm hex bit 5 mm hex bit
<b>Intend. Edge</b> Axle Securing screw	3 ... 5 Nm 10 Nm	M6
<b>Rechargeable battery</b>		
<b>BOSCH PowerPack 400/500/600/800</b> 4 × attachment screws for casing base locking mechanism 2 × attachment screws for cover 2 × attachment screws for cover 2 × attachment screws for bracket on cable side 1 × attachment screw for bracket on cable side 2 × attachment screws for bracket on lock side 1 × attachment screws for bracket on lock side	5 Nm 2 Nm 2 Nm 1.3 Nm 5 Nm 5 Nm 1 Nm	Torx® T25, M5 × 20 M3.5 × 12 M3.5 × 12 (pointed) Torx® T15 Torx® T25, M5 × 20 Torx® T25 Torx® T15, M3.5 × 12
<b>Display</b>		
<b>FIT Comfort/Compact bracket</b> Attachment screw	0.5 Nm	Hex key, 2.5 mm
<b>FIT Comfort/Compact</b> Mounting bracket	0.8 Nm	Torx® T20
<b>On-board computer</b>		
<b>FIT Remote Basic</b> Mounting bracket	0.8 Nm	Torx® T20
<b>FIT Remote Display</b> Mounting bracket	0.8 Nm	Torx® T20
<b>BOSCH Intuvia 100 bracket</b>  Attachment screw 1, M3 × 22 Attachment screw 2, M3 × 14	1 Nm 1 Nm	3 mm hex bit 3 mm hex bit
<b>BOSCH System Controller</b> Attachment screw	0.5 Nm	Torx® T10

<b>BOSCH Mini Remote</b> Attachment screw	0.4 Nm (not 0.6 Nm, as written on mini-remote)	3 mm hex bit
<b>SHIMANO SC-E5003</b> Attachment screw	0.8 Nm	3 mm hex bit
<b>Brake linings</b>		
<b>SHIMANO</b> Circlip	2 ... 4 Nm	Hex key, 3 mm Slotted-head screwdriver
<b>TEKTRO for hydraulic disc brake system</b> Attachment screws	3 ... 5 Nm	Hex key, 3 mm
<b>Brake cable</b>		
<b>SHIMANO</b> Connecting screw, handbrake	5 ... 7 Nm	Screw wrench, 8 mm
<b>SHIMANO</b> Connecting screw, brake calliper, version for banjo type connection	5 ... 7 Nm 8 ... 10 Nm	Hex key, 3 mm Hex key, 4 mm
<b>SHIMANO</b> Connecting screw for brake calliper, straight version	5 ... 7 Nm	Hex key, 3 mm
<b>SHIMANO for racing bicycles</b> Connecting screw for cable sleeve	5 ... 7 Nm	Screw wrench, 8 mm
<b>TEKTRO for hydraulic disc brake system</b> Bleed valve on brake calliper	4 ... 6 Nm	#
<b>TEKTRO for hydraulic disc brake system</b> Lock screw for the fluid reservoir on the handbrake	2 ... 4 Nm	Torx® T15
<b>Brake calliper</b>		
<b>SHIMANO</b> Adapter attachment screw and brake calliper attachment screw, version with IS brake mount	6 ... 8 Nm	...
<b>SHIMANO</b> Brake calliper attachment screw, post-mount version	6 ... 8 Nm	...
<b>TEKTRO for hydraulic disc brake system</b> Adapter attachment screws	6 ... 8 Nm	#
<b>TEKTRO for hydraulic disc brake system</b> Brake calliper attachment screw	6 ... 8 Nm	Hex key, 5 mm
<b>Brake disc</b>		
<b>SHIMANO for centre lock type</b> Quick release attachment screw	40 ... 50 Nm	TL-LR15 TL-FC36/TL-LR11 Adjustable spanner
<b>SHIMANO for centre lock type</b> Attachment screw, nut version	40 ... 50 Nm	TL-LR10 Screw wrench

<b>SHIMANO for 5-hole version</b> Attachment screws	2 ... 4 Nm	Star bit [no. 25]
<b>SHIMANO for 6-hole version</b> Attachment screws	2 ... 4 Nm	Star bit [no. 25]
<b>TEKTRO for hydraulic disc brake system</b> Attachment screws	4 ... 6 Nm	Torx® T25
<b>Cantilever brake</b>		
<b>SHIMANO</b> Brake calliper attachment screw	5 ... 7 Nm	Hex key, 5 mm
<b>SHIMANO</b> Attachment screw for brake shoe	8 ... 9 Nm	Hex key, 5 mm Screw wrench, 10 mm
<b>SHIMANO</b> Bowden cable attachment screw	6 ... 8 Nm	Hex key, 5 mm
<b>Dual pivot rim brake</b>		
<b>SHIMANO</b> Attachment screw	8 ... 10 Nm	Hex key, 5 mm
<b>SHIMANO, models with nut</b> Attachment screw	8 ... 10 Nm	Screw wrench, 10 mm
<b>SHIMANO</b> Attachment screw for brake shoe	5 ... 7 Nm	Hex key, 4 mm
<b>SHIMANO, left side</b> Attachment screw for brake cable	6 ... 8 Nm	Hex key, 5 mm
<b>SHIMANO, right side</b> Attachment screw for brake cable	1 ... 1.5 Nm	Hex key, 2 mm
<b>Seat post remote control</b>		
<b>Eightpins</b> Attachment screw Bowden cable fastener	2.5 Nm 5 Nm	4 mm hex bit 3 mm hex bit
<b>Freewheel</b>		
<b>SHIMANO</b>	35 Nm	Multiple freewheel tool TL-FW3
<b>Suspension fork</b>		
<b>Intend Edge</b> Double bridge screw	12 Nm	
<b>SR SUNTOUR</b> Suspension side, top, plastic	5 Nm	
<b>SR SUNTOUR</b> Suspension side, top, aluminium	20 Nm	
<b>SR SUNTOUR</b> Suspension side, bottom	10 Nm	Hex bit (torque)
<b>SR SUNTOUR</b> Suspension side, bottom	8 Nm	Aluminium nut (torque)
<b>SR SUNTOUR</b> Suspension side, bottom, (Adjust deflection)	7 Nm	
<b>SR SUNTOUR</b> Damping side, top, plastic	5 Nm	

<b>SR SUNTOUR</b> Damping side, top, aluminium	20 Nm	
<b>SR SUNTOUR</b> Damping side, bottom, without adjuster	10 Nm	
<b>SR SUNTOUR</b> Damping side, bottom, with adjuster	7 Nm	
<b>SR SUNTOUR</b> Fork head clamps	7 Nm	
<b>SRAM RockShox, 35</b> Cover cap	28 Nm	socket nut, 24 mm
<b>SRAM RockShox, Lyrik, ZEB</b> Compression damper cover cap	28 Nm	RockShox cover cap/cassette tool (or standard cassette tool)
<b>SRAM RockShox, Lyrik, ZEB</b> DebonAir+ suspension cover cap	28 Nm	RockShox cover cap/cassette tool (or standard cassette tool)
<b>SRAM RockShox, Lyrik, ZEB</b> Dual Position air suspension cover cap	28 Nm	socket nut, 24 mm
<b>SRAM RockShox, 35</b> Attachment screw – compression adjustment ring and remote operation ring	1.4 Nm	2.5 mm hex bit
<b>SRAM RockShox, Lyrik, ZEB</b> Attachment screw – compression adjuster Charger RC (Select)	1.35 Nm	2.5 mm hex bit
<b>SRAM RockShox, Lyrik, ZEB</b> Attachment screw – compression adjustment ring Charger RC (Select)	0.75 ... 1.1 Nm	2.5 mm hex bit
<b>SRAM RockShox, 35</b> Attachment screw – deflection adjustment ring (Dual Position Coil)	1.35 Nm	2.5 mm hex bit
<b>SRAM RockShox, Lyrik, ZEB</b> ButterCup housing guide rod end plate - end plate to guide rod - air suspension and damper	3.3 Nm	Torx® T25
<b>SRAM RockShox, Lyrik, ZEB</b> ButterCup housing (top) to ButterCup housing (bottom) – air suspension and damper	3.3 Nm	23 mm spanner head
<b>SRAM RockShox</b> Bottomless Tokens	4 Nm	8 mm socket nut and 24 mm hex bit
<b>SRAM RockShox, Lyrik, ZEB</b> Sealing head (rebound) for damper cartridge barrel cover cap – Charger RC (Select), Rush RC (Base)	2 Nm	10 mm socket nut
<b>SRAM RockShox, Lyrik, ZEB</b> Pressure relief valve (PRV) and stopper	9 Nm	19 mm spanner head

<b>SRAM RockShox</b> Locking screw – remote control stop ring	Hand-tight or 0.1 ... 0.3 Nm	2 mm hex bit
<b>SRAM RockShox, Lyrik, ZEB</b> Clamping screw – rebound adjuster ring	0.84 Nm	2.5 mm hex bit
<b>SRAM RockShox, Lyrik, ZEB</b> Air suspension guide rod insert (Select+, Select, Base – only DebonAir+)	3.3 Nm	5 mm hex bit
<b>SRAM RockShox, Lyrik, ZEB</b> Cam adjuster clamping screw – compression damper adjuster (HSC) × 2	0.56 Nm	2.5 mm hex bit
<b>SRAM RockShox</b> Lower screws	6.8 Nm	5 mm hex bit
<b>Handbrake</b>		
<b>SHIMANO</b> Attachment screw	6 ... 8 Nm	Hex key, 4 mm Hex key, 5 mm
<b>SHIMANO</b> Attachment screw BL-M987/ BL-M9000/BL-M9020	4 ... 6 Nm	Hex key, 4 mm
<b>SHIMANO, lever for disc brake</b> Bleed nipple	4 ... 6 Nm	Socket wrench, 7 mm
<b>SHIMANO, lever for disc brake</b> Bleed screw	0.3 ... 0.5 Nm	...
<b>TEKTRO for hydraulic disc brake system</b> Attachment screws	5 ... 7 Nm	Hex key, 4 mm
<b>Chainring</b>		
<b>FIT, Brose FIT</b> Crank start spider locking	28 Nm	ISIS bottom bracket axle tool
<b>FIT, Panasonic FIT</b> Crank star screws	13 Nm	Hex key, 5 mm
<b>FIT, Panasonic FIT</b> Crank start spider locking	40 Nm	ISIS bottom bracket axle tool
<b>FIT, Panasonic FIT</b> Crank star screws	13 Nm	Hex key, 5 mm
<b>SHIMANO, for MTB/trekking</b> Largest chainring Medium chainring Smallest chainring	14 ... 16 Nm 16 ... 17 Nm	...
<b>SHIMANO, single version</b> Attachment screw for crank/chainring	12 ... 14 Nm	5 mm hex key/star bit [No. 30]
<b>SHIMANO, dual version</b> Largest chainring Smallest chainring	12 ... 14 Nm 16 ... 17 Nm	5 mm hex key/star bit [No. 30] 5 mm hex key/star bit [No. 30]
<b>SHIMANO, triple design</b> Largest chainring Medium chainring Smallest chainring	12 ... 14 Nm 16 ... 17 Nm	5 mm hex key/star bit [No. 30] 5 mm hex key/star bit [No. 30]

<b>SHIMANO, FC-M8000, single version</b> Attachment screw for crank/ chainring	12 ... 14 Nm	Star bit [no. 30]
<b>SHIMANO, FC-M8000, dual version</b> Largest chainring Smallest chainring	12 ... 14 Nm 16 ... 17 Nm	Star bit [no. 30] Star bit [no. 30]
<b>SHIMANO, FC-M8000, triple version</b> Largest chainring Medium chainring Smallest chainring	10 ... 12 Nm 16 ... 17 Nm	Star bit [no. 30] Star bit [no. 30]
<b>Chain guard</b>		
<b>Brose chain guard bash guard</b> Attachment screws	6 Nm	Hex key, 3 mm
<b>Chain guard for BOSCH Motor BDU37xx</b> Attachment screws	max. 10 Nm	M6 × 10; head: max. 5 mm; length: max. 8.5-mm
<b>Crank bearing/crank set</b>		
Conventional cartridge crank bearing	35 ... 45 Nm	...
<b>SHIMANO, HOLLOWTECH li/two-part crank set</b> Linker for adapter and inner sleeve	35 ... 50 Nm	TL-FC24/TL-FC25/TL-FC32/TL-FC36
<b>SHIMANO, HOLLOWTECH li/two-part crank set</b> Cap	0.7 ... 1.5 Nm	TL-FC16 / TL-FC18
<b>SHIMANO, HOLLOWTECH li/two-part crank set</b> Screw for left-hand crank arm	12 ... 14 Nm	Hex key, 5 mm
<b>SHIMANO, OCTALINK model</b> Linker for adapter and main body	50 ... 70 Nm	TL-UN74-S/ TL-UN66
<b>SHIMANO, OCTALINK model</b> Crank set	35 ... 50 Nm	Hex key, 8 mm Hex key, 10 mm
<b>SHIMANO, SQUARE model</b> Linker for adapter and body	50 ... 70 Nm	TL-UN74-S
<b>SHIMANO, SQUARE model</b> Crank set	35 ... 50 Nm	Hex key, 8 mm
<b>Handlebars</b>		
<b>Clamping screw, conventional</b>	5 ... 7 Nm*	#
<b>CONTROL TECH</b> Handlebar clamp with one or two screws	14 ... 16 Nm	#
<b>SHIMANO</b> Handlebar clamp with one or two screws	20 ... 29 Nm	#
<b>Motor</b>		
<b>FIT, Brose S-Mag FIT</b> Motor attachment screws (horizontal/vertical)	23/25 Nm	Socket wrench, AF 13 mm Hex key, AF 6 mm
<b>FIT, Panasonic FIT</b> Motor attachment screws	20 ... 24 Nm	Hex key, 6 mm

<b>BOSCH motor BDU37xx</b> 6 x attachment screws for motor	20 ± 2 Nm	Torx Plus® P40, M8 × 16
		
<b>Motor cover</b>		
<b>BOSCH motor cover BDU37xx</b>		
Attachment screws for lower motor cover	Initial fitting: 3 ± 0.5 Nm Retrofit: 2 ± 0.5 Nm	Torx® TX 20
Attachment screws for motor cover	Initial fitting: 3 ± 0.5 Nm Retrofit: 2 ± 0.5 Nm	Torx® TX 20, 4 × 8 mm
<b>Brose FIT motor cover</b>	1 Nm	Hex key, 3 mm
<b>Hub</b>		
<b>ROHLOFF, 14/500</b> Bayonet lock/cable drum screws	1.5 Nm	2 mm hex bit
<b>ROHLOFF, 14/500</b> Oil drain screw	0.5 Nm	3 mm hex bit
<b>ROHLOFF, 14/500</b> Attachment screw for chain tensioner and torque support collar	...	5 mm hex bit
<b>ROHLOFF, 14/500</b> To rotate the gear shift shaft	...	Open-end spanner 8 mm
<b>ROHLOFF, 14/500</b> All other screws	3 Nm	Torx® TX 20
<b>ROHLOFF, 14/500</b> CC versions	7 Nm	
<b>ROHLOFF, 14/500</b> Axle nut TS	30 ... 35 Nm	
<b>ROHLOFF, 14/500</b> Frame collar clamp attachment screw	6 Nm	4 mm hex bit
<b>ROHLOFF, 14/500</b> Axle plate attachment screw	7 Nm	5 mm hex bit
<b>ROHLOFF, 14/500</b> Chainring screws	7 Nm	5 mm hex bit
<b>ROHLOFF, 14/500</b> Attachment screw for disc brake mount	8 Nm	M6
<b>ROHLOFF, 14/500</b> Disc brake attachment screw	10 Nm	5 mm hex bit
<b>ROHLOFF, 14/500</b> Axle plate screws	3 Nm	Torx® TX 20
<b>ROHLOFF, 14/500</b> Torque support collar clamp screw	2.5 Nm	
<b>ROHLOFF, 14/500</b> Frame collar clamp	6 Nm	SW10 screw wrench; hold screw in place with 4 mm hex bit

<b>ROHLOFF, 14/500</b> Chain tensioner attachment screw	8 Nm	5 mm hex bit
<b>ROHLOFF, 14/500</b> Chain guide attachment screw	3 Nm	Torx® TX 20
<b>ROHLOFF, 14/500</b> Rear spacer sleeve attachment screw	3 Nm	Torx® TX 20
<b>ROHLOFF, 14/500</b> Attachment screw for shift handle on handlebars	1 Nm	2.5 mm hex bit
<b>ROHLOFF, 14/500</b> End stop	3 Nm	Torx® TX 20
<b>ROHLOFF, 14/500</b> Cable guide	6 Nm	4 mm hex bit
<b>SHIMANO quick release version</b> FH-M3050, FH-M4050, FH-MT200-B, FH-MT400, FH-MT400-B, FH-MT500, FH-MT500-B, FH-MT510, FH-MT510-B, FH-RM33, FH-RM35, FH-TX505 FH-TY505, FH-UR600 HB-M3050, HB-M4050, HB-MT200, HB-MT400, HB-MT400-B, HB-RM33, HB-TX505 <b>SLX</b> FH-M7000, FH-M7010, FH-M7010-B HB-M7000, HB-M7010, HB-M7010-B <b>DEORE</b> FH-M618, FH-M618-B, FH-M6000, FH-M6010, FH-M6010-B, HB-M618, HB-M618-B, HB-M6000, HB-M6010, HB-M6010-B Brake disc attachment screw	40 Nm	Adjustable spanner and special tool TL-LR15 (SHIMANO)
<b>SHIMANO E-THRU quick release axle</b> Retaining ring for brake disc	40 Nm	Special tool TL-FC36 (SHIMANO)
<b>SHIMANO, FH-M3050, FH-M4050, FH-M7000, FH-M6000, FH-RM33, FH-RM35, FH-UR600</b> Attachment screw, freewheel body	35 ... 50 Nm	10 mm hex bit
<b>SHIMANO, FH-MT200, FH-TX505, FH-TY505</b> Attachment screw, freewheel body	147 ... 200 Nm	12 mm hex bit
<b>SHIMANO, FH-M7010, FH-M7010-B, FH-M6010, FH-M6010-B, FH-M618, FH-M618-B, FH-MT400, FH-MT400-B, FH-MT500, FH-MT500-B, FH-MT510, FH-MT510-B</b> Lock nut	15 ... 20 Nm	Hub spanner, 17 mm



<b>SHIMANO</b> , HB-M7000, HB-M6000 HB-M4050 Lock nut	10 ... 15 Nm	Hub spanner, 13 mm and 17 mm
<b>SHIMANO</b> , HB-M7010, HB-M7010-B HB-M6010, HB-M6010-B, HB-M618, HB-M618-B, HB-MT400, HB-MT400-B Lock nut	21 ... 26 Nm	Hub spanner, 22 mm
<b>SHIMANO hub dynamo</b> E2 model	20 - 25 Nm	Screw wrench
<b>SHIMANO hub dynamo</b> J2 model	20 Nm	Screw wrench
<b>SHIMANO hub dynamo</b> J2-A model	20 Nm	Screw wrench
<b>Pedal</b>		
<b>Pedal, conventional</b>	33 ... 35 Nm	Screw wrench, 15 mm
<b>SHIMANO</b> Attachment screw	35 ... 55 Nm	Screw wrench, 15 mm
<b>Seat post</b>		
<b>by.schulz, G1</b> M8 seat clamp screw M5 fixing grub screws	20 ... 24 Nm 3 Nm	2.5 mm hex bit
<b>by.schulz, G2</b> M6 seat clamp screw M5 fixing grub screws	12 ... 14 Nm 3 Nm	2.5 mm hex bit
<b>EIGHTPINS NGS2</b> Seat post axle Slipper clutch Valve cover Post pin axle Rear clamping screw (saddle) M5 attachment screw for outer sleeve	8 Nm 18 Nm 0.5 Nm 8 Nm 8 Nm 0.5 Nm	6 mm hex bit 3 mm hex bit 5 mm hex bit 5 mm hex bit 3 mm hex bit 3 mm hex bit
<b>EIGHTPINS H01</b> Seat post axle Slipper clutch Valve cover Post pin axle Rear clamping screw (saddle) M5 attachment screw for outer sleeve	8 Nm 18 Nm 0.5 Nm 8 Nm 8 Nm 0.5 Nm	6 mm hex bit 3 mm hex bit 5 mm hex bit 5 mm hex bit 3 mm hex bit 3 mm hex bit
<b>LIMOTEC LimoDP</b> Clamping screw for seat post Clamping screw for saddle	6 ... 7 Nm 7 ... 9 Nm	
<b>SR SUNTOUR suspension seat post</b> Saddle clamp screw M5 fixing grub screws	15 ... 18 Nm 3 Nm	5.0 mm hex bit 2.5 mm hex bit
<b>Shifter</b>		
<b>SHIMANO DEORE SL-M4100</b> Attachment screw	3 Nm	4 mm hex bit
<b>SHIMANO DEORE SL-M5100</b> Attachment screw	3 Nm	4 mm hex bit
<b>SHIMANO DEORE SL-M6100</b> Attachment screw	3 Nm	4 mm hex bit

<b>SHIMANO DEORE XT SL-M8100</b> Attachment screw	3 Nm	4 mm hex bit
<b>SHIMANO DEORE XT SL-M8130</b> Attachment screw	3 Nm	4 mm hex bit
<b>SHIMANO, SLX SL-M7100</b> Attachment screw	3 Nm	4 mm hex bit
<b>SHIMANO XTR SL-M9100</b> Attachment screw	3 Nm	4 mm hex bit
<b>SRAM AXS Controller</b> Collar attachment screw	2 Nm	Torx® T25
<b>Rear derailleur</b>		
<b>SHIMANO for MTB/trekking</b> Attachment screw, standard type	8 ... 10 Nm	Hex key, 5 mm
<b>SHIMANO for MTB/trekking</b> Attachment screw with bracket	3 ... 4 Nm	Hex key, 5 mm
<b>SHIMANO for BMX bicycles</b> Attachment screw	3 ... 4 Nm	Adjustable spanner
<b>SHIMANO for MTB/trekking</b> Attachment screw for inner cable	6 ... 7 Nm	Hex key, 4 mm/ Hex key, 5 mm/ Adjustable spanner
<b>SHIMANO for MTB/trekking</b> Attachment screw for the guide pulley	2.5 ... 5 Nm	Hex key, 3 mm
<b>SHIMANO for MTB/trekking</b> Attachment screw for the tensioning roller	2.5 ... 5 Nm	Hex key, 3 mm
<b>SHIMANO for racing bicycles</b> Attachment screw, standard type	8 ... 10 Nm	Hex key, 5 mm
<b>SHIMANO for racing bicycles</b> Attachment screw with bracket	3 ... 4 Nm	Screw wrench
<b>SHIMANO for racing bicycles</b> Attachment screw for inner cable	6 ... 7 Nm	Hex key, 4 mm/ Hex key, 5 mm
<b>SHIMANO for racing bicycles</b> Attachment screw for pulley	2.5 ... 5 Nm	Hex key, 3 mm
<b>Headlight</b>		
<b>FUXON headlight</b> Attachment screw	>5 Nm	...
<b>SUPERNOVA, M99 Pure/ Pure+, V521s</b> Attachment screw	2 Nm	M6 attachment screw, self-locking nut, washer
<b>SUPERNOVA, M99 Pure/ Pure+, V521s</b> Stem screw	6 Nm	
<b>Front derailleur</b>		
<b>SHIMANO for MTB/trekking</b> Attachment screw, clip type, E-type and direct fitting	5 ... 7 Nm	Hex key, 5 mm

<b>SHIMANO for MTB/trekking</b> Inner bearing adapter	35 ... 50 Nm	...
<b>SHIMANO for MTB/trekking</b> Top swing screw, clip type and e-type	5 ... 7 Nm	Hex key, 5 mm/ Screw wrench, 9 mm
<b>SHIMANO for MTB/trekking</b> Down swing screw, clip type, direct fitting	5 ... 7 Nm	Hex key, 5 mm
<b>SHIMANO for racing bicycles</b> Attachment screw	5 ... 7 Nm	Hex key, 5 mm/ Screw wrench, 9 mm
<b>SHIMANO for racing bicycles</b> Bowden cable attachment screw	6 ... 7 Nm	Hex key, 5 mm
<b>Underride guard</b>		
<b>FIT, Brose</b> Attachment screws	6 Nm	Socket wrench, 8 mm Hex key, 4 mm Hex key, 3 mm
<b>V-Brake brake</b>		
<b>SHIMANO</b> Attachment screw for connecting cable	6 ... 8 Nm	Hex key, 5 mm
<b>SHIMANO</b> Brake shoe nut	6 ... 8 Nm	Hex key, 5 mm
<b>SHIMANO</b> Bowden cable attachment screw	6 ... 8 Nm	Hex key, 5 mm
<b>Stem</b>		
<b>FSA, carbon quill stem</b>	9 Nm	15 mm spanner

## 9 Troubleshooting, fault clearance and repair

### 9.1 Preventing pain

The pedelec is both a means of transport and a piece of sports equipment that promotes health.

After the first few rides, you may experience sore muscles the next day. However, permanent pain should never occur during or after a ride.

The most common complaints are:

- Sitting discomfort
- Pain in hips
- Backache
- Pain in shoulders and nape of neck
- Numb or aching hands
- Pain in upper thigh
- Pain in the knee
- Pain in the foot

If you suffer from one or more of the complaints above, take the following action steps:

- 1** Check the correct adjustment of all components. In most cases, however, pain after pedelec rides is due to a lack of training and components set incorrectly or components that are not adjusted to the rider's physique.
- 2** Consult a doctor as soon as possible and talk openly about the complaints. Pain may be a sign of medical problems that need to be treated.



- 3** If the doctor does not diagnose a medical condition, visit a gym, sports trainer or physiotherapist. Personalised stretching or musculature strengthening exercises must be supervised to ensure they are performed correctly.

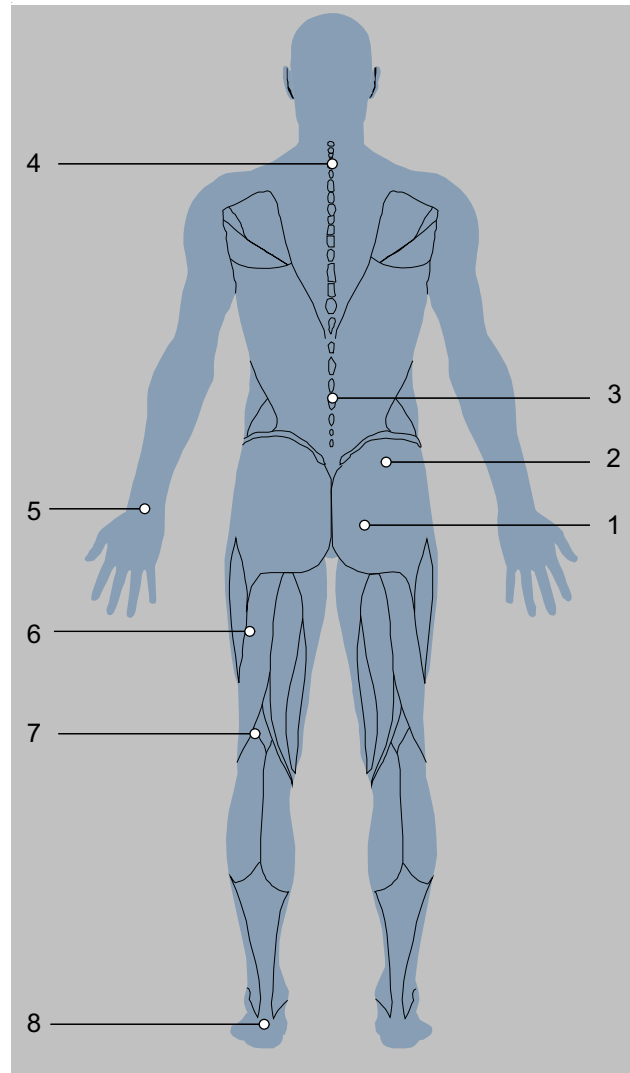


Figure 261: Known pain due to lack of training and/or incorrect component adjustment

### 9.1.1 Sitting discomfort

Around 50% of all pedelec riders experience sitting discomfort:

- Pressure pain in the sitting bones
- Pain in the lower back
- Pressure pain and numbness in perineal region

#### Solution

- Adopt an optimal riding position (see Section 6.5.2).
- Adjust the saddle height and tilt (see Section 6.5.4).
- Wear cycling shorts and use chamois cream (see Section 6.12).
- Use an ergonomically adjusted saddle (see Section 6.5.4).

- Ride standing up now and again.



### 9.1.2 Pain in hips

Lower back pain is often not caused by the back muscles, but by the iliopsoas muscle instead. This muscle is part of the inner hip musculature and flexes the hip. It is attached to the thigh bone and reaches up to the spine. Pain can occur in the back if this muscle is strained too much or shortened.

#### Solution

- Strengthening exercises for the iliopsoas muscle
- Stretching exercises for hip flexors and extensors.



### 9.1.3 Backache

Riding a pedelec strengthens the back musculature. The greater the saddle-to-bar drop is, the greater the strain on the back musculature is. At the beginning, a posture where you lean too far forward can lead to pain in the back, arms and wrists. The abdominal muscles are the counterpart to the back muscles and stabilise the pelvis and the back. Back pain is thus often caused by weak abdominal muscles.

#### Solution

- Contact specialist dealer. You need to adopt a more upright sitting position (see Section 6.5.3).
- Stretching exercises for the back and abdominal muscle ligaments and moderate bicycle training will lengthen the tendons and build new back and abdominal muscles.



The desired position can be adopted after a period of training.

### 9.1.4 Pain in shoulders and nape of neck

The weight of the upper body places a strain on the shoulders due to the bent-forward posture. The more stretched the position is, the more strain there is on the shoulders.

The specific posture adopted is often the source of pain. Pedelec riders often extend their arms. Impacts such as those occurring on bumpy roads are thus transmitted to the shoulders without suspension. This causes severe pain.

Another source of pain is a hunchback. Due to the posture adopted, the neck needs to be extended backwards excessively so that the rider can look forwards. This causes strain in the neck and shoulder muscles.

### 9.1.5 Numb or aching hands

Your hands are one of the three points of contact when you ride a pedelec. The hands transmit the weight of the upper body to the handlebars. In the upright Holland position, there is almost no weight applied whereas body weight is at its highest in the sports position. The force is applied to a small area on the handle, meaning the pressure load on the hands is very high. Hands are highly sensitive and can bear a maximum of 20% of body weight during prolonged exposure to load.

### 9.1.6 Pain in upper thigh

Pain in the upper thigh is usually due to muscular problems. A muscular imbalance between the extensors, flexors and adductors can cause this pain.

#### Solution



- A more upright riding position will immediately reduce pain.
- Always bend elbows slightly.
- ⇒ The elbow joint will not block. The arms cushion impacts.
- Adjust the handlebars (see Section 6.5.5).
- Always adopt an optimal riding position (see Section 6.5.3).

#### Solution

- Position handles perfectly (see Section 6.5.5.1, 6.5.5.2 and 6.5.8).
- Move hands and arms while riding (see Section 6.15).
- Use padded cycling gloves (see Section 2.15).
- Optimise handles (see Section 6.5.7).

#### Solution

- Increasing assistance on the pedelec will bring immediate relief.



- Targeted exercises to correct imbalance and shortening of the thigh muscles.
- Stretching exercises for the thigh muscles.

### 9.1.7 Knee pain

Pedelec riding is a sport that is easy on the knee joints and is recommended for beginners. Very powerful forces are transmitted from the thigh to the foot via the knee when pedalling. As a result, the tendons and cartilage in the knee are subjected to great stress.

Pain on the inside and outside of the knee is often caused by incorrect adjustment of the click system and the foot being out of position as a consequence. Pain in the lower part of the knee usually stems from an improper riding position.

Cold weather can also cause knee pain. Tendons are less elastic at low temperatures and thus rub against the knee more.

If the knee is out of position, the cartilage becomes very worn. Ligaments that are too short or muscular imbalances can increase this effect. Pain on the top of the kneecap often indicates a muscular imbalance. Pain under the kneecap is usually related to excessive pressure in the knee joint and consequential irritation to the patellar tendon.

### 9.1.8 Pain in the foot

Your feet are one of three points of contact when you ride a pedelec. Feet transmit force from the upper thigh to the pedal, thus driving the pedelec. In the process, your feet are subjected to between 100% and, during jumps, even up to 1,000% of your body weight.

Foot pain often arises when the saddle is too low or the foot is placed incorrectly on the pedal.

Unsuitable shoes can also be the cause of pain in the feet.

#### Solution

- Contact specialist dealer. Have the pedelec adjusted (see Section 6.5). Then measure the wheel.
- Avoid cold.



- Get imbalances under control through stretching exercises, strengthening the muscles and Blackroll training.

#### Solution

- Wear sturdy shoes which are not too tightly laced (see Section 2.5).
- Position feet correctly on the pedals (see Section 6.13).
- Adjust the saddle height to an optimum position (see Section 6.5.4).

## 9.2 Troubleshooting and fault clearance

The on-board computer indicates whether a critical or less critical error has arisen in the drive system.

The error messages generated by the drive system can be read in the eBike Flow app and by the specialist dealer.

The rider can use a link in the eBike Flow app to display all information on errors and assistance on eliminating errors.

### 9.2.1 Drive system or on-board computer does not start up

If the on-board computer and/or the drive system do not start up, proceed as follows:

- 1 Check whether the battery is switched on. If not, start the battery.
- ⇒ Contact your specialist dealer if the battery level indicator LEDs do not light up.
- 2 If the LEDs on the Battery Level indicator light up, but the drive system does not start, remove the battery.
- 3 Insert the battery.
- 4 Start the drive system.
- 5 If the drive system does not start up, remove the battery.
- 6 Clean all the contacts with a soft cloth.
- 7 Insert the battery.
- 8 Start the drive system.
- 9 If the drive system does not start up, remove the battery.
- 10 Fully charge the battery.

- 11 Insert the battery.
- 12 Start the drive system.
- 13 If the drive system does not start, press the **On-Off button (on-board computer) for at least 8 seconds.**
- 14 If the drive system does not start after about 6 seconds, press the **On-Off button (on-board computer) for at least 2 seconds.**
- 15 Contact your specialist dealer if the drive system won't start.



## 9.2.2 Errors in assistance function

Symptom	Cause	Remedy
Assistance is not available.	Is the battery charged sufficiently?	<ol style="list-style-type: none"> <li>1 Check battery is charged.</li> <li>2 Recharge the battery if it is almost flat.</li> </ol>
	Is the system switched on?	<p>▶ Press <b>On-Off button (battery)</b>.</p> <p>⇒ The drive system starts.</p>
	Is the level of assistance set to [OFF]?	<ol style="list-style-type: none"> <li>1 Set the assistance mode to a different level of assistance than [OFF].</li> <li>2 Contact your specialist dealer if you still feel that the no assistance is being supplied.</li> </ol>
	The rechargeable battery, on-board computer or assistance switch may be connected incorrectly, or one or more of them may have a problem.	▶ Contact specialist dealer.
	Are the pedals being pushed?	<p>The pedelec is not a motorbike.</p> <p>▶ Push the pedals.</p>
	Is the speed too high?	<p>The electronic gear assistance is only active up to a maximum speed of 25 km/h.</p> <p>▶ Check on-board computer indicators.</p>
	Is the lock function activated?	▶ Use suitable on-board computer.
	The battery may become too hot during rides at high temperatures, up long inclines or when carrying a heavy load for a long time.	<ol style="list-style-type: none"> <li>1 Switch off the drive system.</li> <li>2 Leave pedelec to cool down.</li> <li>3 Start the drive system.</li> </ol>
The assisted journey distance is too short.	Is the battery fully charged?	<ol style="list-style-type: none"> <li>1 Check charge level.</li> <li>2 Recharge the battery if it is almost flat.</li> </ol>
	The battery does not perform as well in winter weather.	This does not indicate a problem.
	The journey distance can be shorter depending on the road conditions, the gear level and the entire light usage time.	This does not indicate a problem.
	The battery is a consumable. Repeated charging and long periods of use cause the battery to degrade (loss of power).	<p>If the distance covered with a fully charged battery has become shorter, the battery may be affected.</p> <p>▶ Replace old battery with new one.</p>
It is difficult to pedal.	Are the tyres pumped to an adequate pressure?	1 Pump up tyres.
	Is the level of assistance set to [OFF]?	<ol style="list-style-type: none"> <li>1 Set level of assistance to [HIGH], [STD], [ECO] or [AUTO].</li> <li>2 Contact your specialist dealer if the pedals are still stiff.</li> </ol>
	Is the battery fully charged?	<ol style="list-style-type: none"> <li>1 Check charge level.</li> <li>2 Recharge the battery if it is almost flat.</li> </ol>
	Have you switched on the system with your foot on the pedal?	<ol style="list-style-type: none"> <li>1 Switch system on again without applying pressure to the pedal.</li> <li>2 Contact your specialist dealer if the pedals are still stiff.</li> </ol>

Table 74: Error solution for assistance system

### 9.2.3 Battery errors

Symptom	Cause	Remedy
The battery discharges very quickly.	The battery may be at the end of its useful life.	► Replace old battery with new one.
The battery cannot be recharged.	Is the charger mains plug firmly connected to the socket?	<ol style="list-style-type: none"> <li>1 Disconnect the charger mains plug and plug it in again.</li> <li>2 Start charging.</li> <li>3 If the battery still won't recharge, contact your specialist dealer.</li> </ol>
	Is the charger plug firmly connected to battery?	<ol style="list-style-type: none"> <li>1 Disconnect the charger plug and plug it in again.</li> <li>2 Start charging.</li> <li>3 If the battery still won't recharge, contact your specialist dealer.</li> </ol>
	Is the adapter firmly connected to the charger plug or the battery's charging port?	<ol style="list-style-type: none"> <li>1 Connect the adapter firmly to the charger plug or the battery charging port.</li> <li>2 Start charging.</li> <li>3 If the battery still won't recharge, contact your specialist dealer.</li> </ol>
	Is the connection terminal for the charger, charger adapter or batteries dirty?	<ol style="list-style-type: none"> <li>1 Wipe with a dry cloth to clean the connection terminals.</li> <li>2 Start charging.</li> <li>3 If the battery still won't recharge, contact your specialist dealer.</li> </ol>
The battery does not start charging when the charger is connected.	The battery may be at the end of its useful life.	► Replace old battery with new one.
The battery and charger become hot.	Has the battery or charger temperature exceeded the operating temperature range?	<ol style="list-style-type: none"> <li>1 Interrupt charging process.</li> <li>2 Leave battery and charger to cool down.</li> <li>3 Start charging.</li> </ol> <p>⇒ If the battery becomes too hot to touch, there might be a problem with the battery.</p> <ol style="list-style-type: none"> <li>4 Contact specialist dealer.</li> </ol>
The charger is hot.	If the charger is used continuously to charge batteries, it may become hot.	<ol style="list-style-type: none"> <li>1 Interrupt charging process.</li> <li>2 Leave charger to cool down.</li> <li>3 Start charging.</li> </ol>
The LED on the charger does not light up.	The LED on the charger will go out when the battery is fully charged.	This is not a malfunction.
	Is the charger plug firmly connected to battery?	<ol style="list-style-type: none"> <li>1 Check connection for any contaminants.</li> <li>2 Insert charger plug.</li> <li>3 If the battery still won't recharge, contact your specialist dealer.</li> </ol>
	Is the battery fully charged?	<ol style="list-style-type: none"> <li>1 Disconnect charger mains plug.</li> <li>2 Insert mains plug again.</li> <li>3 Start charging.</li> <li>4 Contact your specialist dealer if the LED on the charger still doesn't light up.</li> </ol>
The battery cannot be removed.		► Contact specialist dealer.
The battery cannot be inserted.		► Contact specialist dealer.
Fluid is leaking from the battery.		► Observe all the warnings in Section 2 Safety.

Table 75: Error solution for battery

Symptom	Cause	Remedy
There is an unusual smell.		<ol style="list-style-type: none"> <li>1 Remove from the battery immediately.</li> <li>2 Contact the fire service immediately.</li> <li>3 Observe all the warnings in Section 2 Safety.</li> </ol>
Fumes are emitted from the battery.		<ol style="list-style-type: none"> <li>1 Remove from the battery immediately.</li> <li>2 Contact the fire service immediately.</li> <li>3 Observe all the warnings in Section 2 Safety.</li> </ol>

Table 75: Error solution for battery

### 9.2.4 Display screen errors

Symptom	Cause	Remedy
No data are shown on the display screen if you press the <b>on-off button (battery)</b> .	The battery charge level may be insufficient.	<ol style="list-style-type: none"> <li>1 Charge the battery.</li> <li>2 Switch on the power.</li> </ol>
	Is the power switched on?	▶ Press the <b>On-Off button (battery)</b> to switch the power on.
	Is the battery charged?	If the battery is fitted to the pedelec and is being charged, it cannot be switched on. ▶ Interrupt charging.
	Is the connector fitted to the power cable correctly?	<ol style="list-style-type: none"> <li>1 Check whether the connector is fitted to the power cable correctly.</li> <li>2 If the connector is fitted correctly, contact your specialist dealer.</li> </ol>
	A component may be connected which the system is unable to recognise.	▶ Contact specialist dealer.
The gear level is not shown on the display screen.	The gear level is only shown if the electronic gear shift is used.	<ol style="list-style-type: none"> <li>1 Check that the power cable connector has not been disconnected.</li> <li>2 If this is not the case, contact your specialist dealer.</li> </ol>
The settings menu cannot be opened while you are pedalling.	The product is designed in such a way that the settings menu cannot be opened if the system detects that someone is riding the pedelec. This is not a malfunction.	<ol style="list-style-type: none"> <li>1 Stop the pedelec.</li> <li>2 Change settings when stationary only.</li> </ol>
The lock function cannot be set up or switched off.	It may be a firmware error.	▶ Contact specialist dealer.
The connect account has been deleted or deactivated and the lock function is still activated.	...	▶ Contact specialist dealer.

Table 76: On-board computer error solution

### 9.2.5 Lighting does not work

Symptom	Cause	Remedy
Front lamp or rear lamp does not go on, even when the switch is pressed.	The default settings in the electric drive system have probably been configured incorrectly.	<ol style="list-style-type: none"> <li>1 Take pedelec out of service immediately.</li> <li>2 Contact specialist dealer.</li> </ol>
	The light is defective.	

Table 77: Lighting error solution

## 9.3 Error message

### 9.3.1 On-board computer

The on-board computer indicates whether a critical or less critical error has arisen in the drive system.

The error messages generated by the drive system can be read in the eBikeFlow app or by the specialist dealer.

The rider can use a link in the eBike Flow app to display information on errors and assistance on eliminating errors.

#### 9.3.1.1 Critical errors


The indicator for the selected level of assistance and battery level indicator flash red to indicate critical errors.

Flash sequence	Meaning
	LED Remote is flashing red: Critical error

- ▶ Functions have failed. Contact your specialist dealer.
- ▶ Never connect a charger.

#### 9.3.1.2 Less critical errors

The indicator for the selected level of assistance will flash orange in the event of less critical errors.

Flash sequence	Meaning
	LED Remote is flashing orange: Less critical error

- ▶ Press selection button.

⇒ The error is acknowledged and the indicator for the selected level of assistance displays the colour for the configured level of assistance permanently.

You can eliminate errors yourself using the following table when necessary. Contact your specialist dealer if the problem persists.

Code	Description	Method of resolution
0x523005 0x514001 0x514002 0x514003 0x514006	The sensors do not detect the magnetic field properly.	<ul style="list-style-type: none"> <li>▶ Check that the magnet wasn't lost while riding.</li> <li>▶ If a magnet sensor is used, check that the sensor and magnet have been fitted properly. In doing so, ensure that the cable to the sensor is not damaged.</li> <li>▶ If a rim magnet is used, ensure that there are no magnetic field interference near the drive unit.</li> </ul>

Table 78: List of on-board computer error messages

### 9.3.2 Rechargeable battery

The battery is protected against deep discharge, overcharging, overheating and short circuits by Electronic Cell Protection (ECP). In the event of a hazard, a protective circuit switches the battery off automatically. If a fault is detected on the battery, the LEDs will flash on the battery level indicator.




Description	Method of resolution
Code: 	<ol style="list-style-type: none"> <li>1 Disconnect charger from battery.</li> <li>2 Leave battery to cool down or warm up.</li> <li>3 Contact your specialist dealer if the problem persists.</li> </ol>
If the battery is outside its charging temperature range, three LEDs will flash on the battery level indicator.	
Code: 	

Table 79: List of battery error messages

Description	Method of resolution
<p>If a battery fault is detected, two LEDs will flash on the battery level indicator.</p>	<p>► Contact specialist dealer.</p>
<p>Code: </p>	
<p>No LEDs will light up if there is no power.</p>	<ol style="list-style-type: none"> <li><b>1</b> Check all plug connections.</li> <li><b>2</b> Check contacts on the battery for dirt. Clean the contacts carefully if needed.</li> <li><b>3</b> Contact your specialist dealer if the problem persists.</li> </ol>

**Table 79: List of battery error messages**

## 9.4 Error message

### 9.4.1 On-board computer


The on-board computer indicates whether a critical or less critical error has arisen in the drive system.

The error messages generated by the drive system can be read in the eBike Flow app and by the specialist dealer.

The rider can use a link in the eBike Flow app to display information on errors and assistance on eliminating errors.

#### 9.4.1.1 Critical errors

The level of assistance indicator and battery level indicator (control panel) flash red to signal critical errors.

Flash sequence	Meaning
	LED Remote is flashing red: in the case of a critical error

- ▶ Press on the **mode button** on the System Controller or the **Select button** on the Mini Remote.
- ⇒ The error code is acknowledged. The level of assistance indicator and the battery level indicator (control panel) display the colour of the configured level of assistance and the battery level continuously again.


You can eliminate errors yourself using the following table. Contact your specialist dealer if the problem persists.

Code	Method of resolution
660001	▶ Do not charge battery and do not use again. Contact specialist dealer.
660002	
890000	<ol style="list-style-type: none"> <li>1 Acknowledge error code.</li> <li>2 <a href="#">Switching off the electric drive system</a> (see Section 6.13.2).</li> <li>3 <a href="#">Switching on the electric drive system</a> (see Section 6.13.1).</li> </ol> <p>If the problem persists:</p> <ol style="list-style-type: none"> <li>4 Acknowledge error code.</li> <li>5 Install software update.</li> <li>6 <a href="#">Switching off the electric drive system</a> (see Section 6.13.2).</li> <li>7 <a href="#">Switching on the electric drive system</a> (see Section 6.13.1).</li> </ol> <p>If the problem persists:</p> <ul style="list-style-type: none"> <li>▶ Contact specialist dealer.</li> </ul>

Table 80: List of on-board computer error messages

#### 9.4.1.2 Less critical errors

The level of assistance indicator (control panel) will flash orange in the event of less critical errors.

Flash sequence	Meaning
	LED Remote will flash orange in the case of less critical errors

- ▶ Press on the **mode button** on the System Controller or the **Select button** on the Mini Remote.
- ⇒ The error code is acknowledged. The level of assistance indicator and the battery level indicator (control panel) display the colour of the configured level of assistance and the battery level continuously again.




You can eliminate errors yourself using the following table when necessary. Contact your specialist dealer if the problem persists.

Code	Description	Method of resolution
523005 514001 514002 514003 514006	The sensors do not detect the magnetic field properly.	<ul style="list-style-type: none"> <li>▶ Check that the magnet wasn't lost while riding.</li> <li>▶ If a magnet sensor is used, check that the sensor and magnet have been fitted properly. In doing so, ensure that the cable to the sensor is not damaged.</li> <li>▶ If a rim magnet is used, ensure that there are no magnetic field interference near the drive unit.</li> </ul>

**Table 81: List of on-board computer error messages**

### 9.4.2 Rechargeable battery

The battery is protected against deep discharge, overcharging, overheating and short circuits by Electronic Cell Protection (ECP). In the event of a hazard, a protective circuit switches the battery off automatically. If a fault is detected on the battery, the LEDs will flash on the battery level indicator.

Description	Method of resolution
<p>Code: </p> <p>If the battery is outside its charging temperature range, three LEDs will flash on the battery level indicator.</p>	<ol style="list-style-type: none"> <li>1 Disconnect charger from battery.</li> <li>2 Leave battery to cool down or warm up.</li> <li>3 Contact your specialist dealer if the problem persists.</li> </ol>
<p>Code: </p> <p>If a battery fault is detected, two LEDs will flash on the battery level indicator.</p>	<ul style="list-style-type: none"> <li>▶ Contact specialist dealer.</li> </ul>
<p>Code: </p> <p>No LEDs will light up if there is no power.</p>	<ol style="list-style-type: none"> <li>1 Check all plug connections.</li> <li>2 Check contacts on the battery for dirt. Clean the contacts carefully if needed.</li> <li>3 Contact your specialist dealer if the problem persists.</li> </ol>

**Table 82: List of battery error messages**

### 9.4.3 Correcting disc brake faults

Symptom	Cause	Remedy
Ringing and unusual sounds from disc brakes.	Riding on asphalt with off-road tyres.	▶ Contact specialist dealer. Fit a city or trekking tyre.
Low braking power from the disc brake.	Dirty or greasy brake disc.	▶ Clean brake disc thoroughly with white spirit or brake cleaner.
	Worn brake disc.	▶ Contact specialist dealer. New brake disc.
	Worn brake lining.	▶ Contact specialist dealer. New brake linings.
	Brake lining vitrification.	
Metallic noises from disc brake.	Worn brake linings.	▶ Contact specialist dealer. New brake linings and brake disc.
Spongy, soft or poor pressure point in disc brakes.	Brake calliper fitted incorrectly, brake disc loose, brake disc or brake lining worn or brake system leaking.	▶ Contact specialist dealer.
Noises when a disc brake is applied.	Dirt.	1 Clean brake disc and brake thoroughly. 2 If the problem is not solved, contact your specialist dealer.
	Worn or wrong brake linings.	▶ Contact specialist dealer. New brake linings and brake discs.
	Wheel, hub or axle fitted incorrectly.	▶ Contact specialist dealer. Check brake system and wheel assembly.
	Brake calliper and/or brake disc fitted incorrectly.	
	Incorrect torques.	
	Brake disc damaged by side impact.	
	Vitrified brake linings.	
	Brake system leaking.	
	Incorrect brake mount height.	

**Table 83: Disc brake error solution**



### 9.4.4 Problems with back-pedal brake

Symptom	Cause	Remedy
Brake is too sensitive		<ol style="list-style-type: none"> <li>1 Contact specialist dealer. Lubricate brake hub.</li> <li>2 Replace brake shoe unit.</li> </ol>
Brake is too weak		<ol style="list-style-type: none"> <li>1 Contact specialist dealer. Replace brake shoe unit.</li> <li>2 If the problem should persist, replace the internal hub unit.</li> </ol>
The rider needs to push the pedals too far back before the brakes engage.		<ol style="list-style-type: none"> <li>1 Contact specialist dealer. Replace brake shoe unit.</li> <li>2 If the problem should persist, replace the internal hub unit.</li> </ol>
The wheels block if the pedelec is pushed backwards		<ul style="list-style-type: none"> <li>▶ Contact specialist dealer. Replace internal hub unit.</li> </ul>
Unusual noises when braking		<ol style="list-style-type: none"> <li>1 Contact specialist dealer. Lubricate brake hub.</li> <li>2 Replace brake shoe unit.</li> </ol>
Rotation feels stiff during free rotation		<ul style="list-style-type: none"> <li>▶ Contact specialist dealer. Replace brake shoe unit.</li> </ul>

**Table 84: Error solution for back-pedal brake**

### 9.4.5 Problems with ABS

Symptom	Cause	Remedy
ABS indicator lamp lights up	Speed is below 6 km/h on starting up.	► This is not a malfunction. The ABS indicator lamp switches off automatically above 6 km/h.
	The ABS indicator lamp may light up if the front and rear wheels are rotating at widely different speeds from one another in extreme situations – for example, if the rider manoeuvres on the rear wheel only.	1 Stop pedelec. 2 Switch off pedelec. 3 Switch on pedelec. ⇒ The ABS indicator lamp goes out above a speed of 6 km/h.
	The ABS indicator lamp may light up if the front and rear wheels are rotating at widely different speeds from one another if a wheel is rotating for a unusually long time without making contact with the ground (fitting stand).	
	The ABS is not active and the ABS indicator lamp does not light up if the power fails, there is no battery or the battery is flat.	1 Charge the battery.
...		1 Contact specialist dealer. Check ABS.

Table 85: Error solution for back-pedal brake

## 9.4.6 Correcting faults in the SR SUNTOUR suspension fork

### 9.4.6.1 Rebound too fast

The suspension fork rebounds too quickly, producing a "pogo stick" effect, where the wheel lifts from the ground in an uncontrolled way. This impairs traction and control (blue line).

Fork head and handlebars are deflected upwards if the wheel bounces back from the ground. Body weight may be thrown up and back in an uncontrolled way (green line).



Figure 262: Suspension fork rebounding too quickly

### Solution

► Turn **rebound adjuster (fork)** clockwise.

⇒ The rebound speed is decreased (slower return).



Figure 263: Example of SR SUNTOUR rebound adjuster (fork) (1)

### 9.4.6.2 Rebounding too slowly

The fork does not rebound quickly enough after absorbing a bump. The fork also remains deflected over subsequent bumps, which reduces deflection and increases the hardness of impacts. Available deflection, traction and control decrease (blue line).

The fork remains in a deflected state, causing the headset and handlebars to move to a lower position. Body weight is shifted forward after the impact (green line).

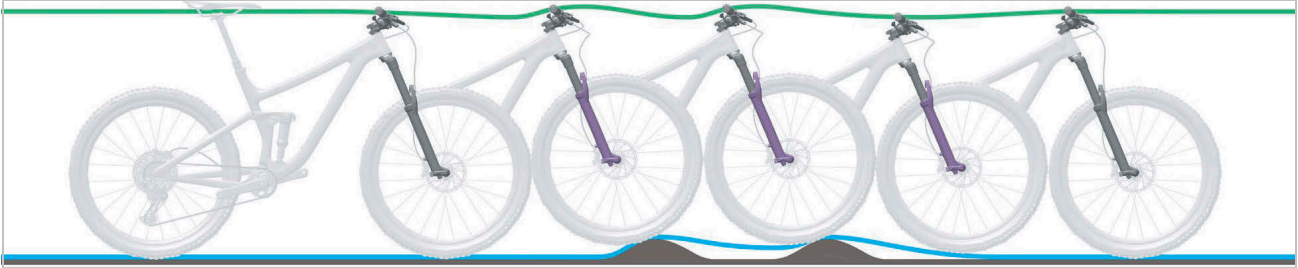


Figure 264: Suspension fork rebounding too slowly

#### Solution

► Turn **rebound adjuster (fork)** anti-clockwise.

⇒ The rebound speed is increased (faster return).



Figure 265: Example of SR SUNTOUR rebound adjuster (fork) (1)

### 9.4.6.3 Suspension too soft on inclines

The fork deflects at a low point in the terrain. The deflection is quickly used up, body weight shifts forward and the pedelec loses some momentum.

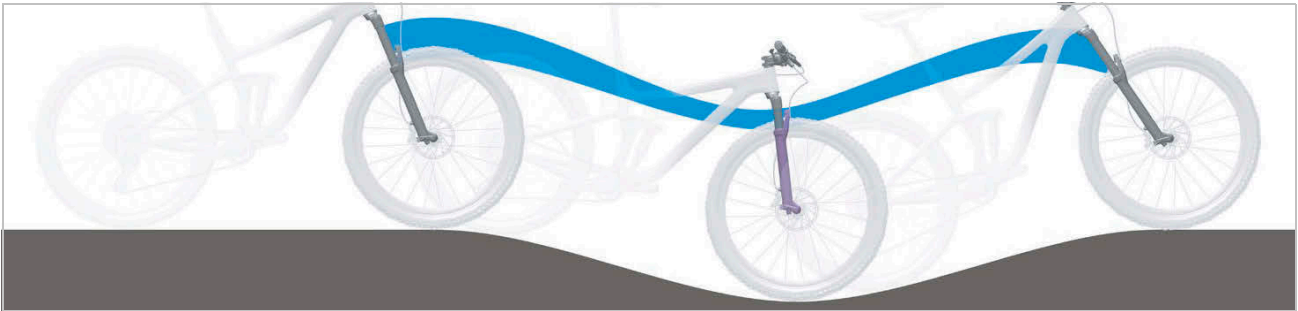


Figure 266: Excessively soft suspension in the suspension fork on hilly terrain

#### Solution

- ▶ Turn **compression lever** clockwise towards **LOCK**.

⇒ The damping and compression hardness are increased and the deflection stroke speed. Efficiency on hilly and flat terrain is improved.

R2C2-PCS R2C2 RC2 RC2-PCS	RC-PCS RC	RLRC-PCS RLRC	LORC-PCS LORC
			

Table 86: Low-speed lever (1) on the SR Suntour suspension fork on the fork crown

### 9.4.6.4 Excessively hard damping on bumps

When the bike hits a bump, the fork deflects too slowly and the wheel lifts up from the bump. Traction decreases when the wheel no longer touches the ground.

The headset and handlebars are deflected upwards significantly, which can impair control.



Figure 267: Excessively hard damping in the suspension fork on bumps

#### Solution

► Turn **compression lever** clockwise towards OPEN.

⇒ The damping and compression hardness reduces and the deflection stroke speed is reduced. Sensitivity to small bumps is increased.

R2C2-PCS R2C2 RC2 RC2-PCS	RC-PCS RC	RLRC-PCS RLRC	LORC-PCS LORC
			

Table 87: Low-speed lever (1) on the SR Suntour suspension fork on the fork crown

## 9.4.7 Correcting faults in the ROCKSHOX suspension fork

### 9.4.7.1 Rebound too fast

The suspension fork rebounds too quickly, producing a "pogo stick" effect, where the wheel lifts from the ground in an uncontrolled way. This impairs traction and control (blue line).

Fork head and handlebars are deflected upwards if the wheel bounces back from the ground. Body weight may be thrown up and backwards in an uncontrolled way (green line).



Figure 268: Suspension fork rebounding too quickly

### Solution

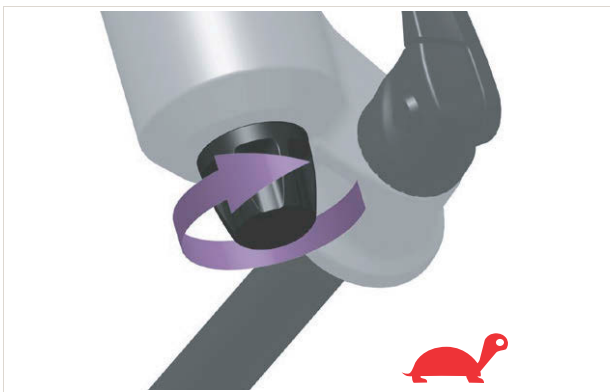


Figure 269: Turning the rebound adjuster (suspension fork) towards tortoise symbol

- ▶ Turn the rebound adjuster (suspension fork) clockwise towards the tortoise symbol.
- ⇒ The rebound speed is decreased (slower return).

### 9.4.7.2 Rebounding too slowly

The suspension fork does not rebound quickly enough after absorbing a bump. The suspension fork also remains deflected over subsequent bumps, which reduces deflection and increases the hardness of impacts. Available deflection, traction and control decrease (blue line).

The suspension fork remains in a deflected state, causing the headset and handlebars to move to a lower position. Body weight is shifted forward after impact (green line).



Figure 270: Suspension fork rebounding too slowly

#### Solution

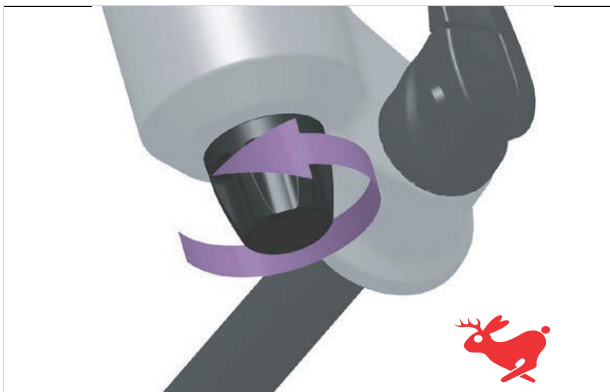


Figure 271: Turning the rebound adjuster (suspension fork) towards hare symbol

- ▶ Turn the rebound adjuster (suspension fork) anti-clockwise towards the hare symbol.
- ⇒ The rebound speed is increased (faster return).



### 9.4.7.3 Suspension too soft on inclines

The suspension fork deflects at a low point in the terrain. The deflection is quickly used up, body

weight shifts forward, and the pedelec loses some momentum.

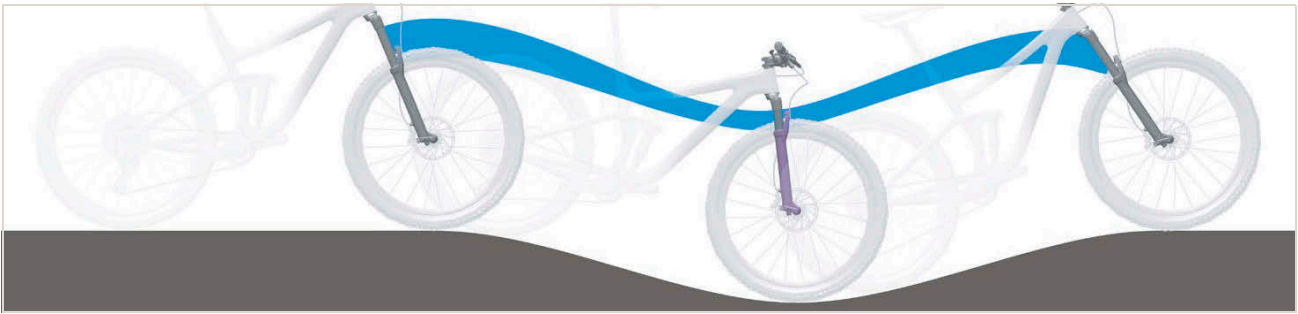


Figure 272: Excessively soft suspension in the suspension fork on hilly terrain

### Solution



Figure 273: Adjust the compression adjuster so that it is harder

- ▶ Turn the **compression adjuster** clockwise.
- ⇒ The damping and compression stroke hardness is increased while the deflection stroke speed is reduced. Efficiency on hilly and flat terrain is improved.

#### 9.4.7.4 Excessively hard damping on bumps

When the bike hits a bump, the suspension fork deflects too slowly and the wheel lifts up from the bump. Traction decreases when the wheel no longer touches the ground.

The headset and handlebars are deflected upwards significantly, which can impair control.



Figure 274: Excessively hard damping in the suspension fork on bumps

#### Solution



Figure 275: Adjust the compression adjuster so that it is softer

- ▶ Turn the **compression adjuster** anti-clockwise.
- ⇒ The damping and compression stroke hardness is reduced and the deflection stroke speed is increased. Sensitivity to small bumps is increased.

## 9.4.8 Correcting faults in the ROCKSHOX rear frame damper

### 9.4.8.1 Rebound too fast

The rear frame damper rebounds too quickly, producing a "pogo stick" effect or causing the bike to bounce after the wheel hits a bump and lands on the ground again. This impairs traction and control due to the uncontrolled speed at which the damper rebounds after deflecting (blue line).

Saddle and handlebars are deflected upwards when the wheel bounces back from the ground. The rider's body weight may be shifted upwards and forwards if the damper fully rebounds too quickly (green line).



Figure 276: Rear frame damper rebounding too quickly

### Solution

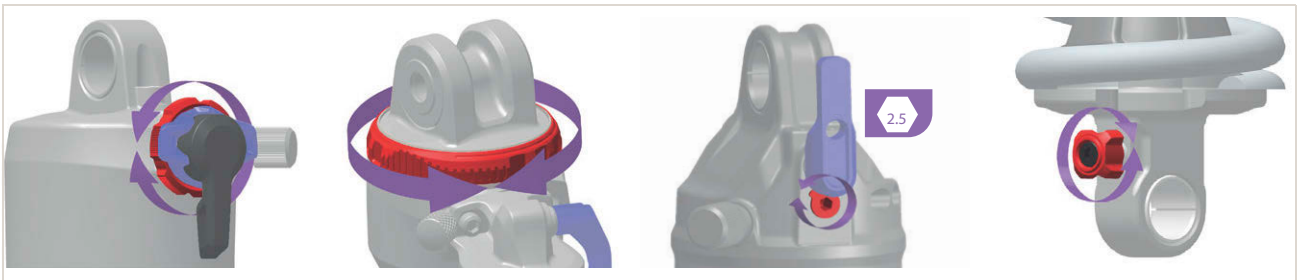


Figure 277: Position and shape of the rebound adjuster (rear frame damper) (red) depends on the model

- ▶ Turn **rebound adjuster (rear frame damper)** clockwise.
- ⇒ Rebound damping is increased. The rebound speed is reduced and traction and control is increased.

### 9.4.8.2 Rebounding too slowly

The rear frame damper does not rebound quickly enough after a bump has been compensated and is not in the required initial position when the wheel hits the next bump. The rear frame damper remains compressed during successive bumps, thus reducing deflection and ground contact and increasing hardness on the next impact. The rear wheel bounces off the second bump since the rear frame damper does not rebound quickly enough to make contact with the ground and return to the initial position again. The available deflection and traction are reduced (blue line).

The rear frame damper remains in a deflected state after contact with the first bump. When the rear wheel hits the second bump, the saddle follows the path of the rear wheel instead of remaining in a horizontal position. The available deflection and potential absorption of bumps are reduced, which causes instability and loss of control during successive bumps (green line).

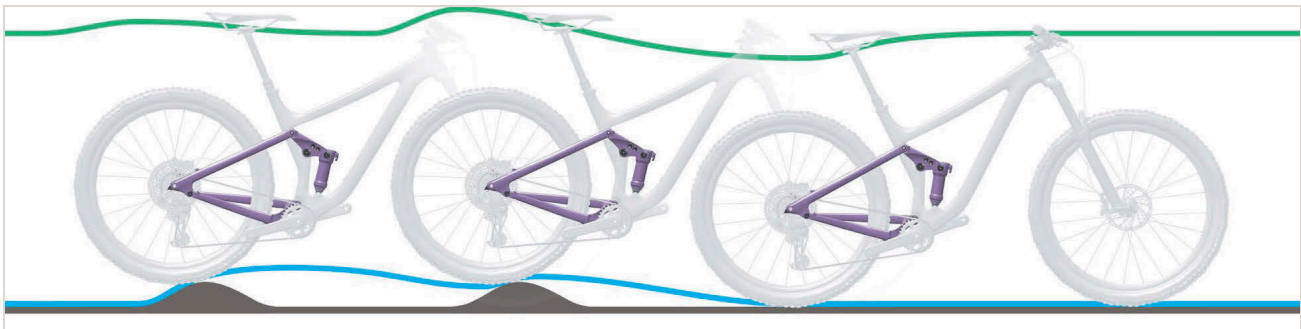


Figure 278: Rear frame damper rebounding too slowly

### Solution

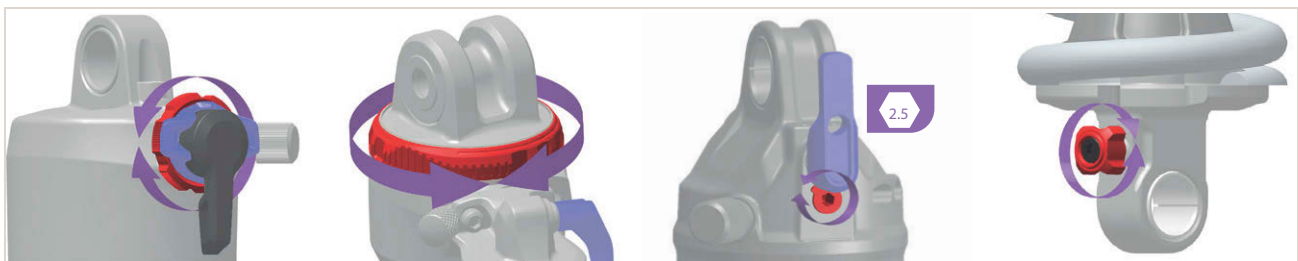


Figure 279: Position and shape of the rebound adjuster (red) depends on the model

- ▶ Turn **rebound adjuster** in an anti-clockwise direction.
- ⇒ Rebound damping is reduced. The rebound speed is increased. Performance while riding over bumps is improved.

### 9.4.8.3 Suspension too soft on inclines

The rear frame damper deflects deeply through the deflection range. Deflection is quickly used up,

to the pedelec rider's weight shifts forward and the pedelec loses some momentum.



Figure 280: Excessively soft suspension in the rear frame damper on hilly terrain

### Solution

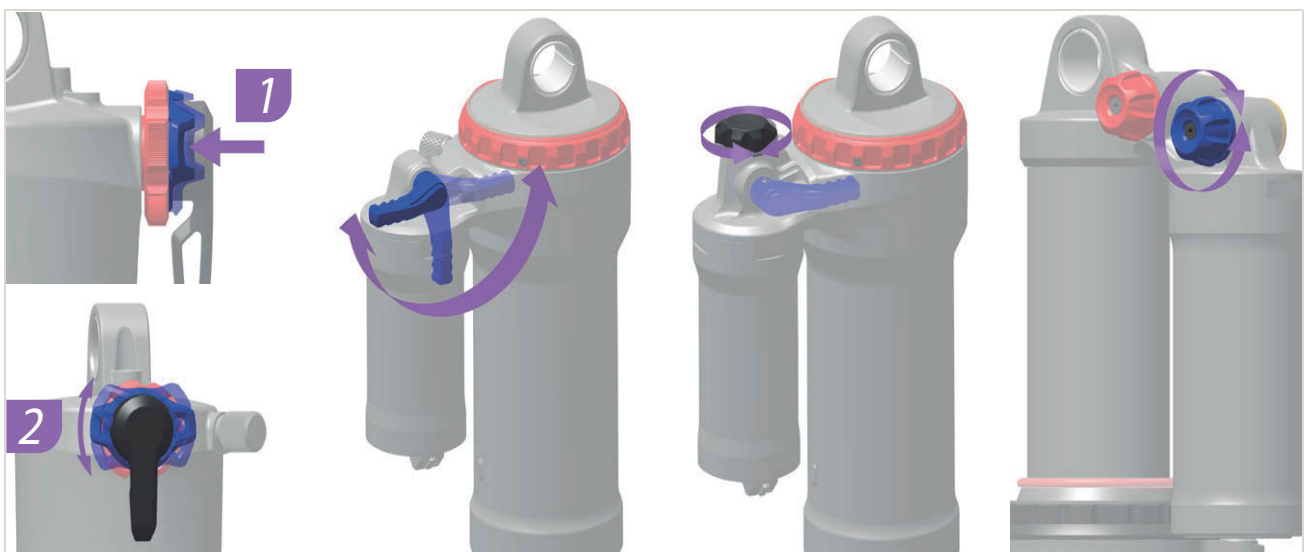


Figure 281: Position and shape of the compression adjuster (blue) depends on the model

- ▶ Turn the **compression adjuster** clockwise.
- ⇒ The damping and compression stroke hardness is increased while the deflection stroke speed is reduced.

#### 9.4.8.4 Excessively hard damping on bumps

When the bike hits a bump, the damper deflects too slowly and the rear wheel lifts up from the bump. Traction is reduced (blue line).

Saddle and pedelec rider are deflected upwards and forwards, the rear wheel loses contact with the ground and control is reduced (green line).



Figure 282: Excessively hard damping in the rear frame damper on bumps

#### Solution

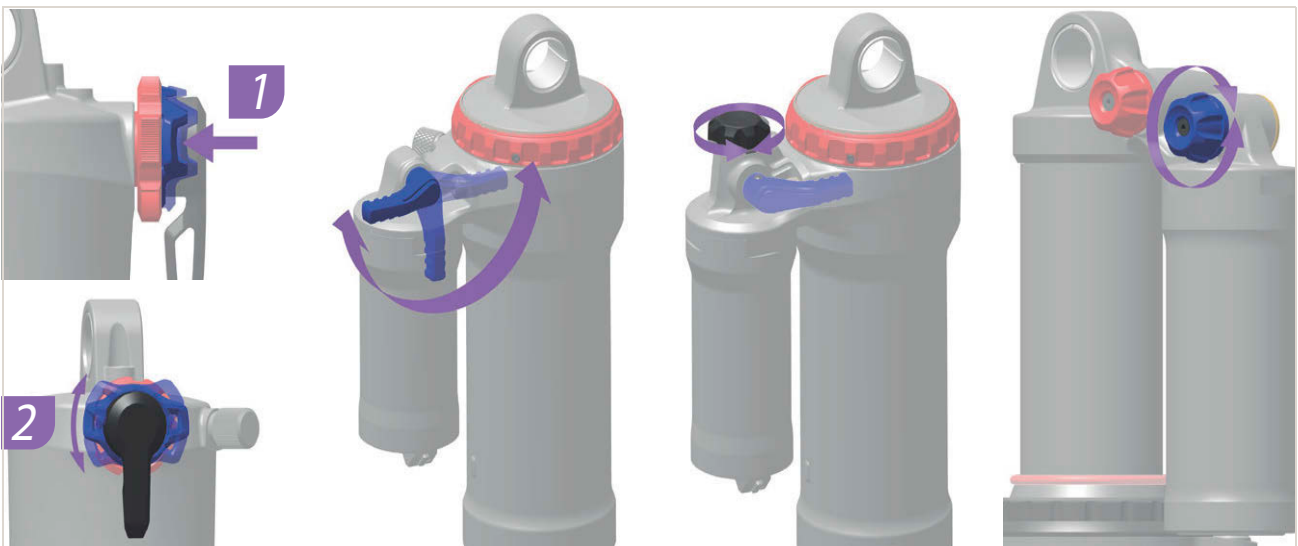


Figure 283: Position and shape of the compression adjuster (blue) depends on the model

- ▶ Turn the **compression adjuster** anti-clockwise.
- ⇒ The damping and compression stroke hardness is reduced and the deflection stroke speed is increased. Sensitivity to small bumps is increased.

## 9.4.9 Problems with hub gear

Symptom	Cause	Remedy
A noise is heard when the pedals are turning.	All gear speeds except 1.	▶ This is not a malfunction.
A noise is heard when the pedelec is pushed backwards.	All gear speeds except 1.	
Noises and vibrations occur on switching on.	All gear speeds.	
Gear shifting feels different, depending on the gear speed.	All gear speeds.	
A noise is heard whenever the rider isn't pedalling while riding.	All gear speeds.	
The gears are difficult to engage.	The cable has not been installed properly.	▶ Contact specialist dealer.
	The gear shift unit has been set to the override state.	▶ Contact specialist dealer (readjust gear shift unit).
Gears cannot be engaged smoothly.	Shift cable tension setting not correct.	▶ Carefully pull the <i>adjusting sleeve</i> away from the shifter housing, turning it as you do so. ▶ Check the gear shift function after each adjustment.
The gear speed cannot be changed.	The cable was not set correctly.	▶ Contact specialist dealer. (Reset gear shift unit; check whether the gear speed can be changed when the wheel is detached from the frame.)
Strange noises occur.	When switching gears	▶ Contact specialist dealer.
	When pedalling.	
The gear speed shown on the indicator differs from the speed in the hub.	The cable was not set correctly.	▶ Contact specialist dealer.
	The internal unit has a defect.	
The hub rotates with difficulty only or does not rotate smoothly.	The cone is firmly positioned.	▶ Contact specialist dealer.
	The internal unit has a defect.	▶ Contact specialist dealer.
A rattling noise is heard when pedalling.	The section around the cone is damaged.	▶ Contact specialist dealer.
Free rotation is not smooth if the rider does not pedal.		▶ Contact specialist dealer.
The brakes are too sensitive.		▶ Contact specialist dealer.
The brakes are not strong enough.		▶ Contact specialist dealer.
The rider needs to push the pedals too far back before the brakes engage.		▶ Contact specialist dealer.
The wheels block if the pedelec is pushed backwards.		▶ Contact specialist dealer.

Table 88: Error solution for limit stop

Symptom	Cause	Remedy
Strange noises occur when the brakes are applied.		▶ Contact specialist dealer.
Rotation feels stiff during free rotation.		▶ Contact specialist dealer.
Chain jumps between the gearwheels when gear is changed.	Gearwheels and/or chain worn.	▶ Contact specialist dealer. New chain, gearwheels or hub.

**Table 88: Error solution for limit stop**



### 9.4.10 Correcting freewheel faults

Symptom	Cause	Remedy
Freewheel blocked.	Cover forgotten after fitting.	▶ Contact specialist dealer. Check installation correct.
	After fitting, socket was compressed by over-tightening the quick-release axle.	▶ Contact specialist dealer. Measure the length of the socket. If the socket is shorter than 15.4 mm, replace socket.
Freewheel does not lock into place or slips.	After maintenance: Too much or wrong grease on the toothed discs.	▶ Contact specialist dealer. Remove hub. Clean and grease toothed disc.
	Toothed discs are worn.	▶ Contact specialist dealer. Replace toothed disc.
	One or both springs were forgotten after fitting.	▶ Contact specialist dealer. Check installation correct.
	One or both toothed discs are fitted the wrong way round after assembly.	▶ Contact specialist dealer. Check installation correct.
Hub has axial clearance.	Ball bearings are worn.	▶ Contact specialist dealer. Replace ball bearings.
	One or both toothed discs are fitted the wrong way round after assembly.	▶ Contact specialist dealer. Check installation correct.
Hub is stiff when turned.	Ball bearings are worn.	▶ Contact specialist dealer. Replace ball bearings.
	Ball bearings have been driven in too firmly after assembly	▶ Contact specialist dealer. Check installation correct.
	Installation sequence for ball bearings not observed.	▶ Contact specialist dealer. Check installation correct.
Hub makes noise.	Ball bearings are worn.	▶ Contact specialist dealer. Replace ball bearings.
Cassette caused notches on the freewheel body.	Steel cassette works its way into the aluminium bar on the freewheel body.	▶ Contact specialist dealer. Remove notches on the cassette surface with a file.
Freewheel body is stiff when turned.	Ball bearings in the freewheel body are worn.	▶ Contact specialist dealer. Replace freewheel body.
Freewheel is too loud or too quiet.	Perception of freewheel noise is subjective. While some pedelec riders prefer loud freewheel noise, others like a quite freewheel more.	▶ This is not a malfunction. The amount of grease between the toothed discs may have an effect on the freewheel noise. Less grease increases freewheel noise but also causes greater wear.

**Table 89: Error solution for freewheel**

### 9.4.11 Correcting lighting faults

Symptom	Cause	Remedy
The front light or rear light does not go on, even when the switch is pressed.	The default settings in the electric drive system have probably been configured incorrectly. The light is defective.	<ol style="list-style-type: none"> <li>1 Take pedelec out of service immediately.</li> <li>2 Contact specialist dealer.</li> </ol>

Table 90: Lighting fault solution

### 9.4.12 Correcting faults in tyres

Symptom	Cause	Remedy
Valve torn off.	Presta valve used with a sizeable valve hole. The hole's metal edge separates the valve stem from the tube.	► Contact specialist dealer. Fit another type of valve.

Table 91: Fault solution for tyres

### 9.4.13 Correcting control seat post faults


Symptom	Cause	Remedy
Seat post clicks or creaks.	Protective layer missing.	► Service seat post (see Section 7.4.9).
Seat post deflects and bobs periodically.	Incorrect preload.	► Adjust preload so that the suspension seat post does not compress under the rider's weight when at rest.
Seat post with remote control does not rise or lower.	Bowden cable is not tensioned correctly.	<p>► Adjust the Bowden cable with the setting screw (1) on the remote control.</p>  <p><b>Figure 284: Remote control with setting screw (1)</b></p> <ul style="list-style-type: none"> <li>• Reduce sensitivity: turn the setting screw clockwise.</li> <li>• Increase sensitivity: turn setting screw anti-clockwise.</li> </ul>

Table 92: Fault solution for the seat post

### 9.4.14 Correcting other faults and errors

Symptom	Cause	Remedy
Two beeps will sound if a switch is pressed but the switch cannot be operated.	Pressed switch mode has been deactivated.	▶ This is not a malfunction.
Three beeps are sounded.	A fault or warning has occurred.	▶ This occurs when a warning or an error is shown on the on-board computer. Follow the instructions for the code in Section 6.2 System Messages.
If an electronic gear shift is used, pedal assistance becomes less effective when the gear is changed.	This is because the computer sets the pedal assistance to the optimum level.	▶ This is not a malfunction.
A noise can be heard after switching.		▶ Contact specialist dealer.
It is normal to hear a noise coming from the rear wheel when cycling as normal.	The gear shift setting may not have been made properly.	▶ Contact specialist dealer.
If the pedelec is brought to a stop the pedelec, the gear transmission does not switch to the position pre-configured in the functional feature.	You may have applied too much pressure on the pedals.	▶ Press on the pedals only gently to make it easier to change the transmission.

**Table 93: Other drive system errors**

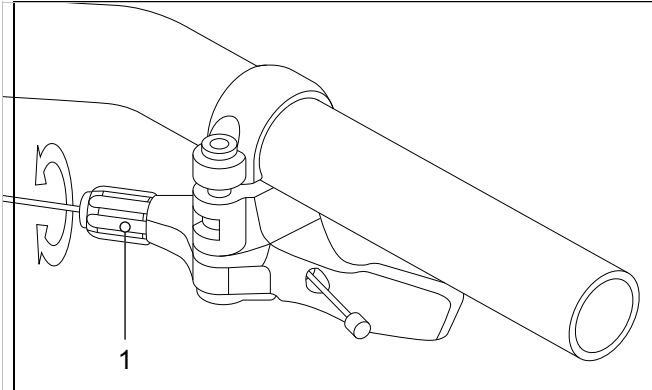

## 9.5 Repairs at the specialist dealer

Expert knowledge and special tools are required for many repairs. For this reason, repairs may only be carried out at a specialist dealer. These include:

- Replacing tyre, tube and spokes
- Replace brake linings, rims and brake discs
- Replace and tension the chain.

### 9.5.1 Original parts and lubricants

The individual pedelec parts have been carefully selected and matched to one other.

Only original parts and lubricants must be used for inspection and repair.

The constantly updated accessory approval and parts lists are in Section 11, Documents and Drawings.

- ▶ Follow the operating instructions for the new components.

### 9.5.2 Repairing the frame

#### 9.5.2.1 Removing paint damage on frame

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

#### 9.5.2.2 Removing damage from impact on the carbon frame

There may be damage to the laminate beneath the paintwork in the case of impact. The frame may break even under light stress.

- 1 Take pedelec out of service.
- 2 Send frame to a fibre composite repair company or purchase new frame as specified in the parts list.

### 9.5.3 Repairing the suspension fork

#### 9.5.3.1 Removing paint damage on the fork

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

#### 9.5.3.2 Removing damage from impact on the carbon frame

There may be damage to the laminate beneath the paintwork in the case of impact. The fork may break even under light stress.

- ▶ Take pedelec out of service. New fork as specified in the parts list.

⇒ The fork must be free from any defects.

- 4 Clean inside and exterior.
- 5 Grease fork.
- 6 Install fork.

#### 9.5.3.3 Repairing the seat post

Repairing paint damage on the seat post.

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

#### 9.5.3.4 Repairing damage from impact on the carbon seat post

There may be damage to the laminate beneath the paintwork in the case of impact. The carbon seat post may break even under light stress.

- 1 Take pedelec out of service.
- 2 New carbon seat post as specified in parts list.



### 9.5.4 Replacing the riding light

- ▶ Only use components in the corresponding power class for replacement.

### 9.5.5 Adjusting the headlight

- ▶ The *headlight* must be positioned so that its light beam shines on the road 10 m in front of the pedelec (see Section 6.4).

### 9.5.6 Checking suspension fork-tyre clearance

The tyre clearance needs to be checked each time a suspension fork tyre is replaced.

- 1 Release pressure from the suspension fork.
- 2 Press suspension fork together fully.
- 3 Measure the gap between the top of the tyre and the fork crown's lower surface. The gap must not be less than 10 mm. If the tyre is too large, the tyre will touch the lower surface of the fork crown when the fork is fully pressed together.
- 4 Release pressure on the suspension fork and pump it up again if it is an air suspension fork.
- 5 Take into account the fact that the gap will be smaller if there is a guard. Check again to ensure that there is sufficient clearance for the tyre.

## 9.5.7 Replacing pedelec components if lock function is installed

### 9.5.7.1 Replacing a smartphone

- 1 Install Bosch eBike connect app on the new smartphone.
  - 2 Log on using the same account which was used to activate the lock function.
  - 3 Connect on-board computer with the smartphone while the on-board computer is in use.
- ⇒ The lock function is shown as set up in the BOSCH eBike Connect app.

### 9.5.7.2 Replacing the on-board computer

- Connect on-board computer with the smartphone while the on-board computer is in use.
- ⇒ The lock function is shown as set up in the BOSCH eBike Connect app.

### 9.5.7.3 Activating the lock function after motor replacement

- ✓ The lock function is displayed as deactivated in the eBike Connect app when the motor has been replaced.
- 1 Open the <My eBike> menu item in the eBike Connect app.
  - 2 Push the <Lock function> slider to the right.
- ⇒ The drive unit assistance can now be deactivated by removing the on-board computer.

## 10 Recycling and disposal



This device is marked according to the European Directive 2012/19/EU on waste electrical and electronic equipment – WEEE and the European



Directive 2006/66/EC on accumulators. The directive provides the framework for the return and recycling of used devices

across the EU. Consumers are legally required to return all used batteries of any type. It is forbidden to dispose of batteries in domestic waste.

The battery manufacturer is legally obliged to take back used and old batteries free of charge according to Section 9 German Batteries Act. The pedelec frame, battery, motor, on-board computer and charger are recyclable materials. You must dispose of and recycle them separately from the domestic waste in compliance with applicable statutory regulations. Separate collection and

recycling saves reserves of raw materials and ensures that all the regulations for protection of health and the environment are adhered to when recycling the product and/or the battery.

- ▶ Never dismantle the pedelec, battery or charger for disposal.

The pedelec, on-board computer, the unopened and undamaged battery and the charger can be returned to any specialist dealer free of charge. Further disposal options may be available, depending on the region.

- ▶ Store the individual parts of the decommissioned pedelec in a dry place, free from frost, where they are protected from direct sunlight.

### 10.1 Guidelines on removal of waste

Waste type	Disposal
Non-hazardous waste	
Recycling	
Waste paper, cardboard	Return paper collection bin, paper container, undamaged transport packaging to suppliers
Scrap metal and aluminium	Take to municipal collection points or have collected by waste disposal companies
Tyres, tubes	Tyre manufacturers' collection points, collection forms and fax templates available from tyre manufacturer Otherwise, residual waste bin (grey bin)
Fibre composite components (e.g. carbon, GRP)	Large carbon components such as defective frames and carbon rims can be sent to special collection points for recycling; see <a href="http://www.cfk-recycling.de/index.php?id=57">www.cfk-recycling.de/index.php?id=57</a>
Dual system sales packaging made of plastic, metal and composite material, lightweight packaging	Collection by waste disposal firm where applicable; return transport packaging to suppliers Plastic waste bin (yellow bin)
CDs, DVDs	Take to municipal collection points since they are made of high-grade plastic and are easy to recycle Otherwise, residual waste bin (grey bin)

Table 94: Removal of waste guidelines


Waste type	Disposal
<b>Dispose of</b>	
Residual waste	Residual waste bin (grey bin)
Biodegradable lubricants Biodegradable oils Cleaning cloths covered in biodegradable oil	Residual waste bin (grey bin)
Filament lamps, halogen lamps	Residual waste bin (grey bin)
<b>Hazardous waste</b>	
 <b>Recycling</b>	
Batteries, rechargeable batteries	Return to the battery manufacturer.
Electric devices: Motor On-board computer Display Control panel Wiring	Take to a municipal collection point for electronic waste
<b>Dispose of</b>	
Waste oil Cleaning cloths daubed in oil Lubrication oil Gear oil Lubricating grease Cleaning fluids Kerosene White spirit Hydraulic fluid Brake fluid	<p>Never mix different oil fluids. Store in original container</p> <p>Small amounts (mainly &lt;30 kg) Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service)</p> <p>Larger quantities (&gt;30 kg) Collection by waste disposal companies</p>
Paints Varnishes Thinners	Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service)
Neon lights, energy-saving lamps	Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service)

Table 94: Removal of waste guidelines





# 11 Documents

## 11.1 Assembly report

Date:

Frame number:

Components	Description	Tests	Criteria		Measures if rejected
			Acceptance	Rejection	
Front wheel	Assembly		O.K.	Loose	Adjust quick release
Kickstands	Check mount fastening	Functional check	O.K.	Loose	Retighten screws
Tyres		Tyre pressure check	O.K.	Tyre pressure too low/ too high	Adjust tyre pressure
Frame	Check for damage – fracture, scratches		O.K.	Damage detected	<i>Take out of operation</i> , new frame
Handles, coverings	Check mount fastening		O.K.	Not provided	Retighten screws, new handles and coverings as specified in parts list
Handlebars, stem	Check mount fastening		O.K.	Loose	Retighten screws; new stem as specified in parts list if necessary
Steering headset	Check for damage	Functional check	O.K.	Loose	Retighten screws
Saddle	Check mount fastening		O.K.	Loose	Retighten screws
Seat post	Check mount fastening		O.K.	Loose	Retighten screws
Guard	Check mount fastening		O.K.	Loose	Retighten screws
Pannier rack	Check mount fastening		O.K.	Loose	Retighten screws
Attachments	Check mount fastening		O.K.	Loose	Retighten screws
Bell		Functional check	O.K.	No ring, too quiet, missing	New bell as specified in the parts list
<b>Suspension elements</b>					
Fork, suspension fork	Check for damage		O.K.	Damage detected	New fork as specified in the parts list
Rear frame damper	Check for damage		O.K.	Damage detected	New fork as specified in the parts list
Suspension seat post	Check for damage		O.K.	Damage detected	New fork as specified in the parts list
<b>Brake system</b>					
Handbrake	Check mount fastening		O.K.	Loose	Retighten screws
Brake fluid	Check fluid level		O.K.	Too little	Refill with brake fluid; new brake hoses if damaged
Brake linings	Check brake linings, brake discs and rims for damage		O.K.	Damage detected	New brake linings, brake discs and rims
Back-pedal brake braking armature	Check mount fastening		O.K.	Loose	Retighten screws
<b>Lighting system</b>					
Rechargeable battery	First examination		O.K.	Error message	<i>Take out of service</i> ; contact battery manufacturer, new battery
Light cabling	Connections, correct wiring		O.K.	Cable defective, no light	New cabling
Rear light	Side light	Functional check	O.K.	No constant light	<i>Take out of service</i> ; new rear light as specified in parts list; replace if necessary
Front light	Side light, daytime riding light	Functional check	O.K.	No constant light	<i>Take out of service</i> ; new front light as specified in parts list; replace if necessary
Reflectors	All complete, state, fastening		O.K.	Damaged or not all complete	New reflectors



Components	Description		Criteria		Measures if rejected
	Assembly /inspection	Tests	Acceptance	Rejection	
<b>Drive/gear shift</b>					
<b>Chain/cassette/sprocket/chainring</b>	Check for damage		O.K.	Damage	Refasten if necessary or replace as specified in parts list
<b>Chain guard/spoke guard</b>	Check for damage		O.K.	Damage	Replace as specified in parts list
<b>Bottom bracket axle/crank</b>	Check mount fastening		O.K.	Loose	Retighten screws
<b>Pedals</b>	Check mount fastening		O.K.	Loose	Retighten screws
<b>Shifter</b>	Check mount fastening	Functional check	O.K.	Loose	Retighten screws
<b>Shift cables</b>	Check for damage	Functional check	O.K.	Loose and defective	Adjust shift cables; new shift cables if necessary
<b>Front derailleur</b>	Check for damage	Functional check	O.K.	Switching gears difficult or not possible	Adjust
<b>Rear derailleur</b>	Check for damage	Functional check	O.K.	Switching gears difficult or not possible	Adjust
<b>Electric drive</b>					
<b>On-board computer</b>	Check for damage	Functional check	O.K.	No screen, defective screen display	Restart, test battery, new software or new on-board computer; <i>take out of service</i>
<b>Control panel</b>	Control panel Check for damage	Functional check	O.K.	No response	Restart; contact control panel manufacturer, new control panel
<b>Tachometer</b>		Speed measurement	O.K.	Pedelec travelling 10% too fast/slow	Take pedelec out of service until the source of the error is found
<b>Cabling</b>	Visual inspection		O.K.	Failure in system, damage, kinked cables	New cabling
<b>Battery mount</b>	Firmly in position, lock, contacts	Functional check	O.K.	Loose; lock doesn't close, no contacts	New battery mount
<b>Motor</b>	Visual inspection and mount		O.K.	Damage, loose	Refasten motor, contact motor manufacturer, new motor
<b>Software</b>	Check version		In latest version	Not latest version	Import update

### Technical inspection, checking safety, test ride

Components	Description		Criteria		Measures if rejected
	Assembly /inspection	Tests	Acceptance	Rejection	
<b>Brake system</b>		Functional check	O.K.	No full braking; braking distance too long	Locate defective part in brake system and correct
<b>Gear shift under operating load</b>		Functional check	O.K.	Problems when shifting gear	Readjust gear shift
<b>Suspension components (fork, shock absorber, seat post)</b>		Functional check	O.K.	Suspension too deep or no longer exists	Locate defective component and correct
<b>Electric drive system</b>		Functional check	O.K.	Loose connection, problems when riding, accelerate	Locate faulty components in electric drive and remedy
<b>Lighting system</b>		Functional check	O.K.	No continuous light, not bright enough	Locate defective part in lighting system and correct
<b>Test ride</b>			No strange noises	Strange noises	Locate source of noise and correct

<b>Date:</b>	
<b>Fitter's name:</b>	
<b>Final inspection by workshop manager:</b>	



## 11.2 Inspection and maintenance log

### Diagnosis and documentation of current status

Date:

Frame number:

Component	Frequency	Description			Criteria		Measures if rejected
		Inspection	Test		Acceptance	Rejection	
<b>Front wheel</b>	6 months	Assembly			O.K.	Loose	Adjust quick release
<b>Kickstands</b>	6 months	Check mount fastening	Functional check		O.K.	Loose	Retighten screws
<b>Tyres</b>	6 months		Tyre pressure check		O.K.	Tyre pressure too low/ too high	Adjust tyre pressure
<b>Frame</b>	6 months	Check for damage – fracture, scratches			O.K.	Damage detected	Take pedelec out of service, new frame
<b>Handles, coverings</b>	6 months	Wear; check if fastened securely			O.K.	Not provided	Retighten screws, new handles and coverings as specified in parts list
<b>Handlebars, stem</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws; new stem as specified in parts list if necessary
<b>Steering headset</b>	6 months	Check for damage	Functional check	Lubricating and adjustment	O.K.	Loose	Retighten screws
<b>Saddle</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Seat post</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Guard</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Pannier rack</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Attachments</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Bell</b>	6 months		Functional check		O.K.	No ring, too quiet, missing	New bell as specified in the parts list
<b>Suspension elements</b>							
<b>Fork, suspension fork</b>	To manufacturer's specifications*	Check for damage, corrosion, fracture		Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
<b>Rear frame damper</b>	To manufacturer's specifications*	Check for damage, corrosion, fracture		Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
<b>Suspension seat post</b>	To manufacturer's specifications*	Check for damage		Maintenance as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list



Component	Frequency	Description			Criteria		Measures if rejected
		Inspection	Test		Acceptance	Rejection	
<b>Brake system</b>							
<b>Handbrake</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Brake fluid</b>	6 months	Check fluid level		Depending on time of year	O.K.	Too little	Top up brake fluid; take Pedelec out of service if damaged; new brake hoses
<b>Brake linings</b>	6 months	Check brake linings, brake discs and rims for damage			O.K.	Damage detected	New brake linings, brake discs and rims
<b>Back-pedal brake braking armature</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Brake system</b>	6 months	Check mount fastening		Functional check	O.K.	Loose	Retighten screws
<b>Lighting system</b>							
<b>Rechargeable battery</b>	6 months	First examination			O.K.	Error message	Contact battery manufacturer; take battery out of service; new battery
<b>Light cabling</b>	6 months	Connections, correct wiring			O.K.	Cable defective, no light	New cabling
<b>Rear light</b>	6 months	Side light	Functional check		O.K.	No constant light	New rear light as specified in parts list; replace if necessary
<b>Headlight</b>	6 months	Side light, daytime riding light	Functional check		O.K.	No constant light	New headlight light as specified in parts list; replace if necessary
<b>Reflectors</b>	6 months	All complete, state, fastening			O.K.	Damaged or not all complete	New reflectors
<b>Drive/gear shift</b>							
<b>Chain/cassette/sprocket/chainring</b>	6 months	Check for damage			O.K.	Damage	Refasten if necessary or replace as specified in parts list
<b>Chain guard/spoke guard</b>	6 months	Check for damage			O.K.	Damage	Replace as specified in parts list
<b>Bottom bracket axle/crank</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Pedals</b>	6 months	Check mount fastening			O.K.	Loose	Retighten screws
<b>Shifter</b>	6 months	Check mount fastening	Functional check		O.K.	Loose	Retighten screws
<b>Shift cables</b>	6 months	Check for damage	Functional check		O.K.	Loose and defective	Adjust shift cables; new shift cables if necessary
<b>Front derailleur</b>	6 months	Check for damage	Functional check		O.K.	Switching gears difficult or not possible	Adjust
<b>Rear derailleur</b>	6 months	Check for damage	Functional check		O.K.	Switching gears difficult or not possible	Adjust



Component	Frequency	Description			Criteria		Measures if rejected
		Inspection	Test		Acceptance	Rejection	
<b>Electric drive system</b>							
<b>On-board computer</b>	6 months	Check for damage	Functional check		O.K.	No screen, defective screen display	Restart; test battery; new software or new on-board computer; take out of service
<b>Control panel</b>	6 months	Check control panel for damage	Functional check		O.K.	No response	Restart; contact control panel manufacturer, new control panel
<b>Tachometer</b>	6 months		Speed measurement		O.K.	Pedelec travelling 10% too fast/slow	Take pedelec out of service until the source of the error is found
<b>Cabling</b>	6 months	Visual inspection			O.K.	Failure in system, damage, kinked cables	New cabling
<b>Battery mount</b>	6 months	Firmly in position, lock, contacts	Functional check		O.K.	Loose; lock doesn't close, no contacts	New battery mount
<b>Motor</b>	6 months	Visual inspection and mount			O.K.	Damage, loose	Refasten motor, contact motor manufacturer, new motor; <i>take out of service</i>
<b>Software</b>	6 months	Check version			In latest version	Not latest version	Import update

### Technical inspection, checking safety, test ride

 
Component	Frequency	Description			Criteria
		Inspection	Test		Acceptance
<b>Brake system</b>	6 months	Functional check	O.K.	No full braking; braking distance too long	Locate defective part in brake system and correct
<b>Gear shift under operating load</b>	6 months	Functional check	O.K.	Problems when shifting gear	Readjust gear shift
<b>Suspension components (fork, shock absorber, seat post)</b>	6 months	Functional check	O.K.	Suspension too deep or no longer exists	Locate defective component and correct
<b>Electric drive</b>	6 months	Functional check	O.K.	Loose connection, problems when riding, accelerate	Locate faulty component in electric drive and remedy
<b>Lighting system</b>	6 months	Functional check	O.K.	No continuous light, not bright enough	Locate defective part in lighting system and correct
<b>Test ride</b>	6 months	Functional check	No strange noises	Strange noises	Locate source of noise and correct

<b>Date:</b>	
<b>Fitter's name:</b>	
<b>Final inspection by workshop manager:</b>	




**Notes**

## 11.3 Charger operating instructions



# Charger


BPC3400

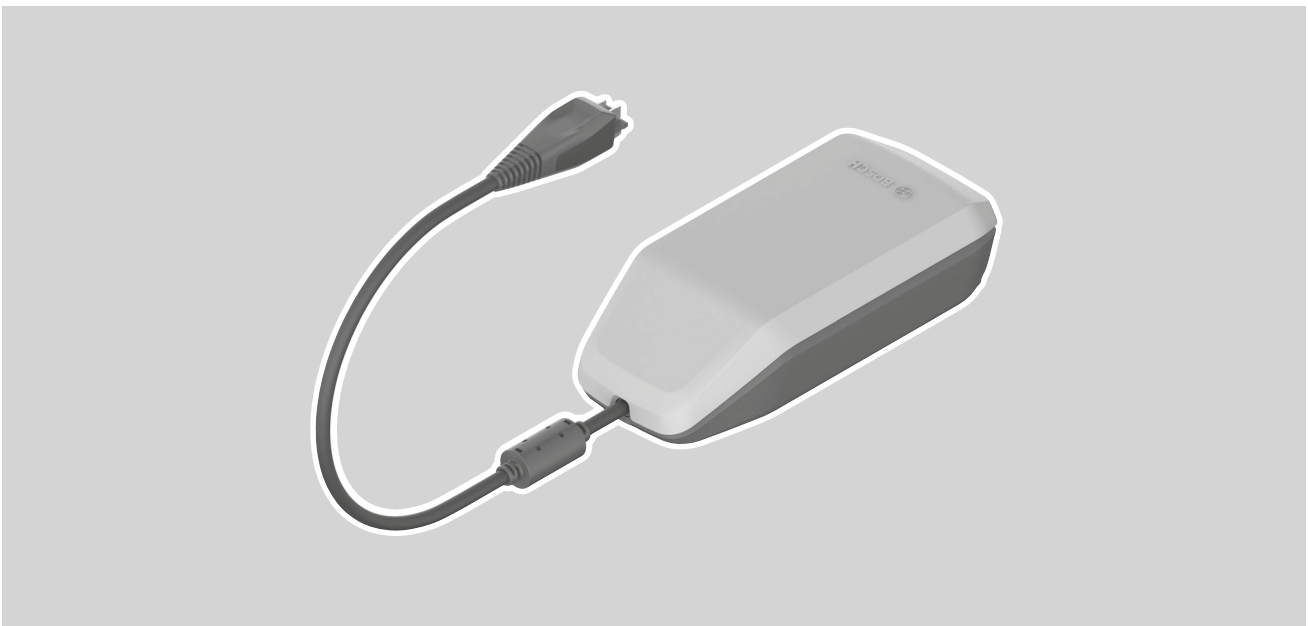

en Original operating instructions





2 |

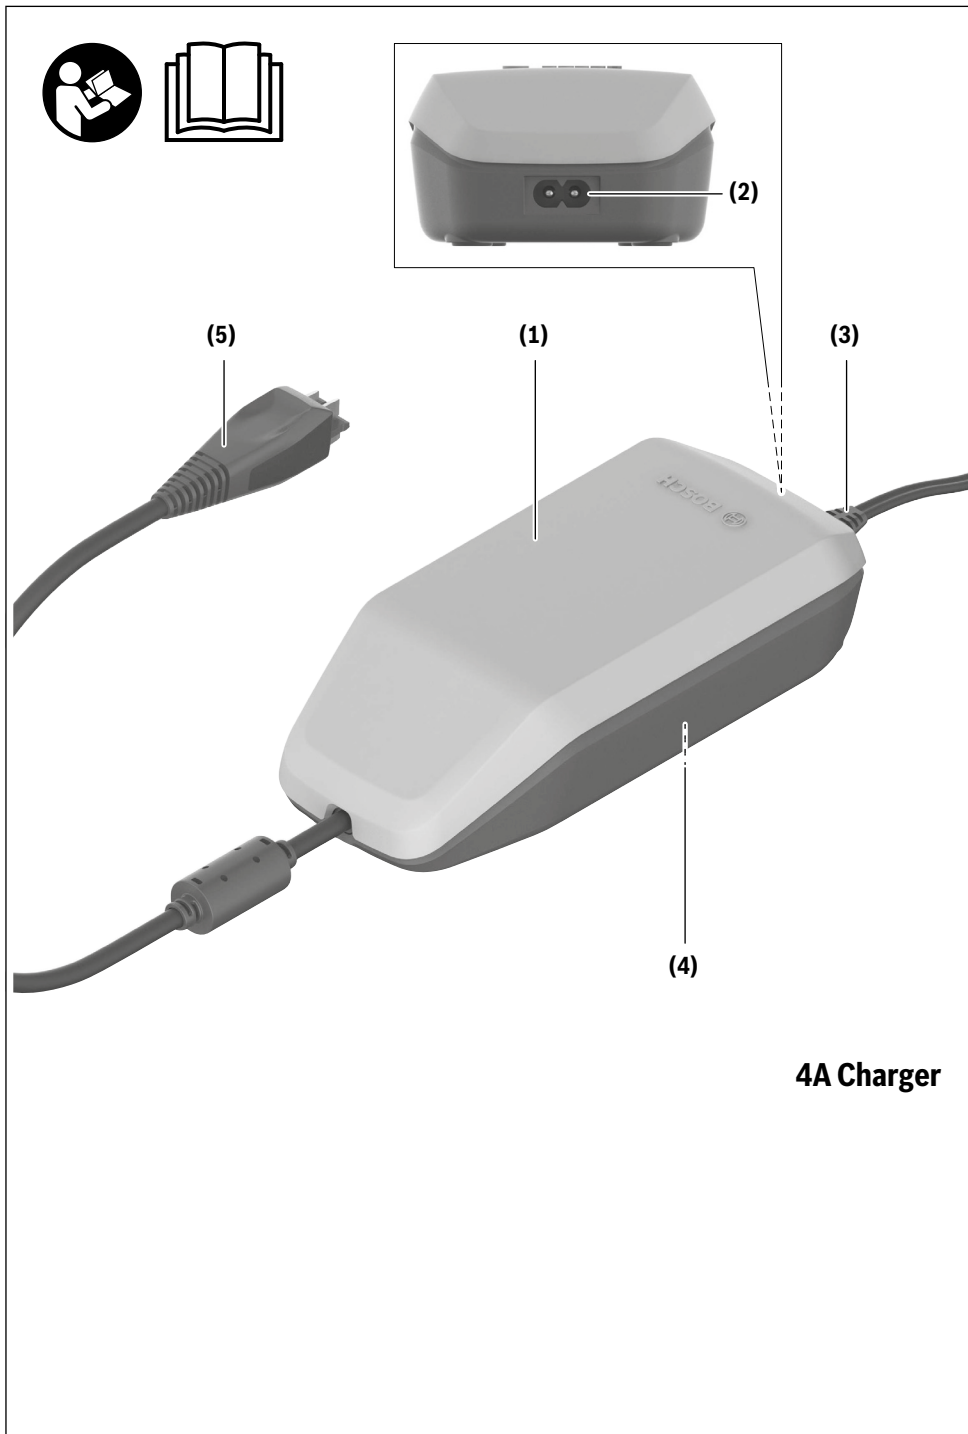


0 275 007 3CX | (09.06.2021)

Bosch eBike Systems



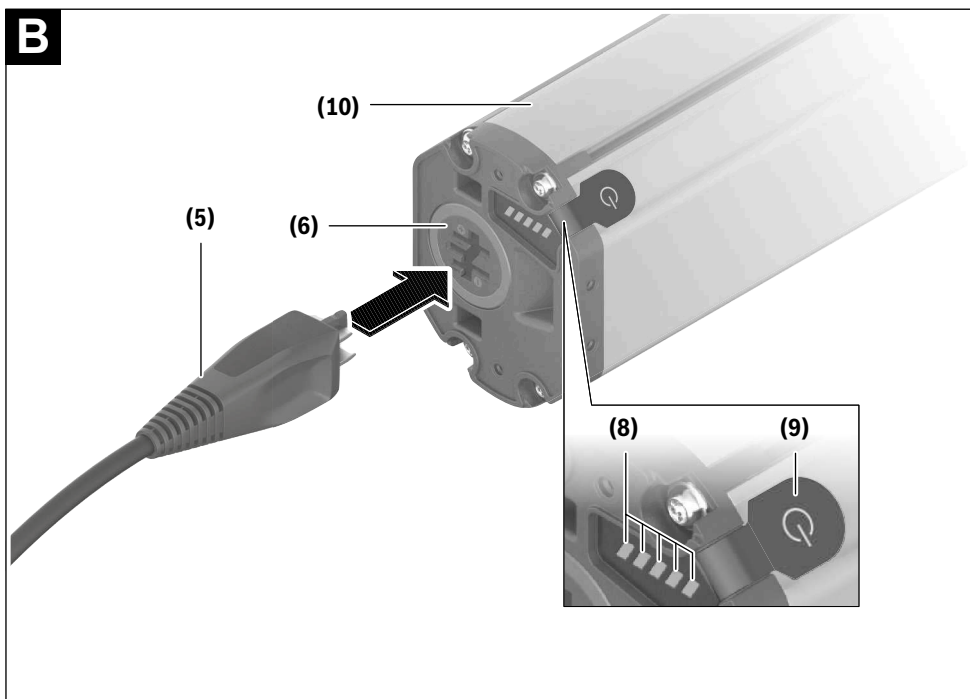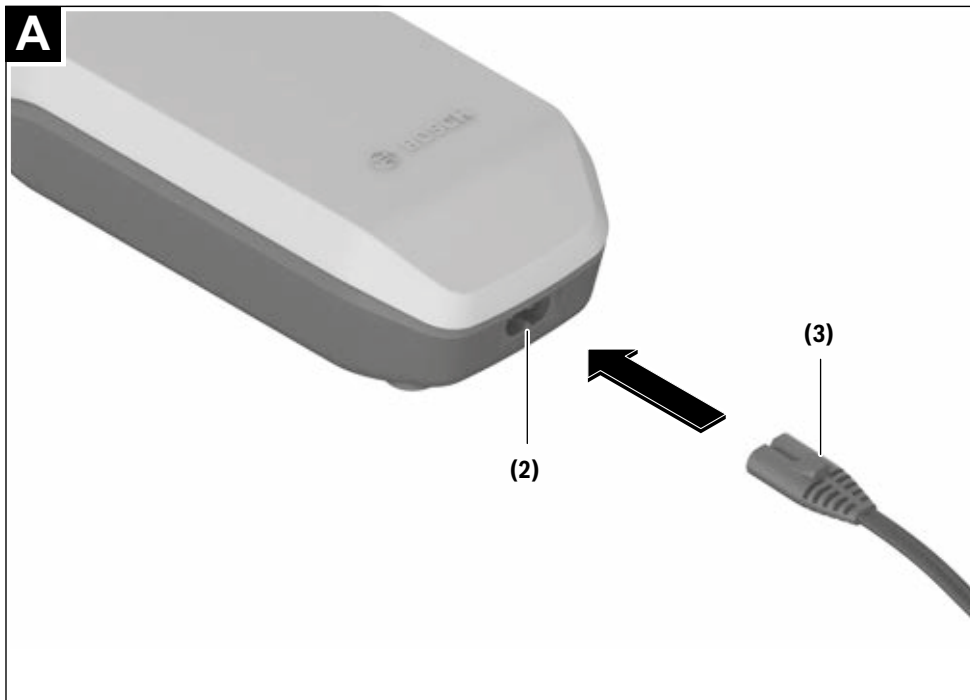

4 |

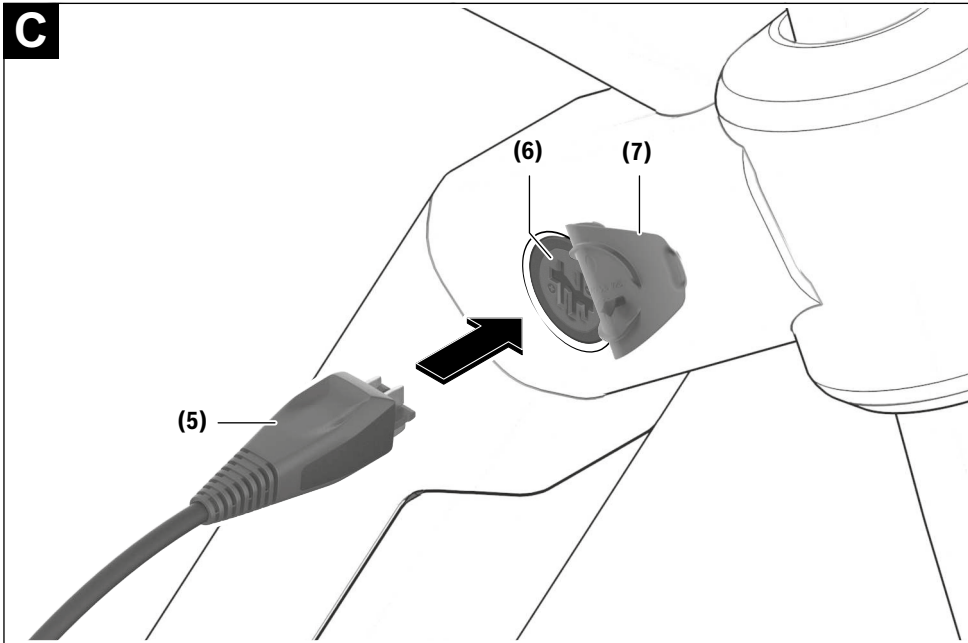

## Safety instructions



**Read all the safety and general instructions.** Failure to observe the safety and general instructions may result in electric shock, fire and/or serious injury.

**Save all safety warnings and instructions for future reference.**

The term **battery** is used in these instructions to mean all original Bosch eBike rechargeable battery packs.



**Do not expose the charger to rain or wet conditions.** If water enters a charger, there is a risk of electric shock.

- ▶ **Charge only Bosch lithium-ion batteries that are approved for use in eBikes. The battery voltage must match the battery charging voltage of the charger.** Otherwise there is a danger of fire and explosion.
- ▶ **Keep the charger clean.** Dirt poses a risk of electric shock.
- ▶ **Always check the charger, cable and plug before use. Stop using the charger if you discover any damage. Do not open the charger.** Damaged chargers, cables and plugs increase the risk of electric shock.
- ▶ **Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment.** There is a risk of fire due to the charger heating up during operation.

**onment.** There is a risk of fire due to the charger heating up during operation.

- ▶ **Take care if you touch the charger while it is charging. Wear protective gloves.** The charger can get very hot, especially when the ambient temperature is high.
- ▶ **The battery may give off fumes if it becomes damaged or is used incorrectly. Ensure the area is well ventilated and seek medical attention should you experience any adverse effects.** The fumes may irritate the respiratory system.
- ▶ **The eBike battery must not be left unattended while charging.**
- ▶ **Supervise children during use, cleaning and maintenance.** This will ensure that children do not play with the charger.
- ▶ **Children or persons who, owing to their physical, sensory or mental limitations or to their lack of experience or knowledge, are not capable of safely operating the charger may only use this charger under supervision or after having been instructed by a responsible person.** Otherwise, there is a danger of operating errors and injuries.
- ▶ **Read and observe the safety warnings and directions contained in all the eBike system operating instructions and in the operating instructions of your eBike.**
- ▶ A sticker in English is adhered to the bottom of the charger (marked **(4)** in the diagram on the graphics page). This says:

Use ONLY with BOSCH lithium-ion rechargeable batteries!

### eBike Battery Charger BPC3400

#### 4A Charger

**EB12.110.001**

Input: 220-240 V ~ 50-60 Hz 1.65 A

Output: 36 V= 4 A

Made in Vietnam

Robert Bosch GmbH

72757 Reutlingen, Germany

Li-Ion

Use ONLY with BOSCH Li-Ion batteries



## Product description and specifications

### Intended Use

In addition to the functions shown here, changes to software relating to troubleshooting and functional modifications may be introduced at any time.

The Bosch eBike chargers are intended exclusively for charging Bosch eBike batteries and must not be used for any other purpose.

### Product features

The numbering of the components shown refers to the illustrations on the graphics pages at the beginning of the manual.

Individual illustrations in these operating instructions may differ slightly from the actual conditions depending on the equipment of your eBike.

- (1) Battery charger
- (2) Device socket
- (3) Device connector
- (4) Charger safety instructions
- (5) Charging connector
- (6) Socket for charging connector
- (7) Charging socket cover
- (8) Operation/battery charge indicator
- (9) Battery on/off button
- (10) PowerTube

English – 2

**Technical data**

Charger	4A Charger	
Product code		BPC3400
Rated voltage	V~	198 to 264
Frequency	Hz	47 to 63
Battery charging voltage	V=	36
Charging current (max.)	A	4
Charging time for PowerTube 750, approx.	h	6
Operating temperature	°C	0 to 40
Storage temperature	°C	10 to 40
Weight, approx.	kg	0.7
Protection rating		IP40

The specifications apply to a rated voltage [U] of 230 V. These specifications may vary at different voltages and in country-specific models.

UK  
CA

**Operation****Start-up****Connecting the charger to the mains (see figure A)**

- **Pay attention to the mains voltage.** The voltage of the power source must match the voltage specified on the rating plate of the charger. Chargers marked 230 V can also be operated at 220 V.

Plug the device connector (3) of the power cable into the device socket (2) on the charger.

Connect the power cable (country-specific) to the mains.

**Charging the removed battery (see figure B)**

Switch the battery off and remove it from its holder on the eBike. When doing so, read and observe the operating instructions of the battery.

- **Ensure the battery is placed on clean surfaces only.** Avoid getting dirt, e.g. sand or soil, in the charging socket and contacts in particular.

Plug the charging connector (5) of the charger into the socket (6) on the battery.

**Charging the battery on the bike (see figure C)**

Switch the battery off. Clean the cover of the charging socket (7). Avoid getting dirt, e.g. sand or soil, in the charging

socket and contacts in particular. Lift the cover of the charging socket (7) and plug the charging connector (5) into the charging socket (6).

- **There is a risk of fire due to the charger heating up during charging. Ensure the battery on the bike is completely dry and placed on a fireproof surface before charging.** If this is not possible, remove the battery from the holder and charge it in a more suitable location. When doing so, read and observe the operating instructions of the battery.

**Charging process**

The charging process begins as soon as the charger is connected to the battery or charging socket on the bike and to the mains.

**Note:** The charging process is only possible when the temperature of the eBike battery is within the permitted charging temperature range.

**Note:** The drive unit is deactivated during the charging process.

The battery can be charged with and without the on-board computer. When charging without the on-board computer, the charging procedure can be observed on the battery charge indicator.

When the on-board computer is connected, a charging notification appears on the display.

The state of charge is displayed by the battery charge indicator (8) on the battery and by the bars on the on-board computer.

The LEDs on the battery charge indicator (8) flash during the charging process. Each solid illuminated LED represents approximately 20 % of the charging capacity. The flashing LED indicates the next 20 % currently charging.

Once the eBike battery is fully charged, the LEDs go out immediately and the on-board computer is switched off. The charging process is terminated. The state of charge can be displayed for 5 seconds by pressing the on/off button (9) on the eBike battery.

 


Disconnect the charger from the mains and the battery from the charger.

When the battery is disconnected from the charger, the battery is automatically switched off.

**Note:** If you have charged the battery on the bike, carefully close the charging socket (6) with the cover (7) after charging, so that no dirt or water can get in.

If the charger is not disconnected from the battery after charging, after a few hours the charger will switch itself back on, check the state of charge of the battery and begin the charging procedure again if necessary.

## Errors – causes and corrective measures

Cause	Corrective measures
 <p>Battery defective</p>	<p><b>Two LEDs flash on the battery.</b></p> <p>Contact an authorised bike dealership.</p>
 <p>Battery too warm or too cold</p>	<p><b>Three LEDs flash on the battery.</b></p> <p>Disconnect the battery from the charger until the charging temperature range has been reached.</p> <p>Do not reconnect the battery to the charger until it has reached the correct charging temperature.</p>
 <p>The charger is not charging.</p>	<p><b>No LEDs flashing (one or more LEDs will remain permanently lit depending on the state of charge of the eBike battery).</b></p> <p>Contact an authorised bike dealership.</p>
<b>Charging not possible (no indicator on battery)</b>	
Connector not attached properly	Check all connections.
Battery contacts dirty	Carefully clean the battery contacts.
Plug socket, cable or charger defective	Check the mains voltage, have the charger checked over by a bike dealership.
Battery defective	Contact an authorised bike dealership.

## Maintenance and servicing

### Maintenance and cleaning

If the charger fails, please contact an authorised bike dealership.

### After-sales service and advice on using products

If you have any questions about the eBike system and its components, contact an authorised bicycle dealer.

For contact details of authorised bike dealerships, please visit [www.bosch-ebike.com](http://www.bosch-ebike.com).

### Disposal

Chargers, accessories and packaging should be recycled in an environmentally friendly manner.

Do not dispose of chargers along with household waste.

#### Only for EU countries:



According to the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment and its implementation into national law, chargers that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

**Subject to change without notice.**

## 12 Glossary

### Bicycle for young adults

*Source: ISO 4210-2:* bicycle designed for use on public roads by a young adult whose weight is less than 40 kg, with maximum saddle height of 635 mm or more and less than 750 mm. (see ISO 4210).

### Brake lever

*Source: EN 15194:2017:* lever used to apply the brake.

### Braking distance

*Source: EN 15194:2017:* distance travelled by a pedelec between the commencement of braking and the point at which the pedelec comes to rest.

### Cargo bike

*Source: DIN 79010:* bicycle mainly designed to carry goods.

### CE marking

*Source: Directive on Machinery:* the manufacturer uses the CE marking to declare that the pedelec complies with the applicable requirements.

### City and trekking bicycle

*Source: ISO 4210-2:* bicycle designed for use on public roads primarily for means of transportation or leisure.

### Consumables

*Source: EN 82079-1:* any part or material that is needed to continue using or maintain the product.

### Continuous power rating

*Source: ISO 15194:2017,* output power specified by the manufacturer at which the motor reaches its thermal equilibrium under the specified ambient conditions.

### Decommissioning

*Source: DIN 31051:* intentional, unlimited interruption in an object's functional capability.

### Disc brake

*Source: EN 15194:2017:* brake in which brake pads are used to grip the lateral faces of a thin disc attached to or incorporated into the wheel hub.

### Drive belt

*Source: EN 15194:2017:* seamless ring belt which is used as a means of transmitting drive force.

### Electrical control system

*Source: EN 15194:2017:* electronic and/or electrical component or an assembly of components provided for installation into a vehicle, together with all electrical connections and associated wiring for the motor electrical power assistance.

### Electrically power assisted cycle, pedelec

*Source: EN 15194:2017:* electrically power assisted cycle pedelec EPAC bicycles, equipped with pedals and an auxiliary electric motor, which cannot be propelled exclusively by means of the auxiliary electric motor, except in start-up assistance mode.

### Emergency stop

*Source: ISO 13850:2015,* function or signal, designed: — to avert arising or reduce existing hazards to persons, damage to machinery or to work in progress; – to be initiated by a single human action.

### Fault

*Source: EN 13306:2018-02, 6.1:* state of an item (4.2.1) characterized by its inability to perform a required function (4.5.1), excluding such inability during preventive maintenance or other scheduled actions or due to lack of external resources.

### Folding bicycle

*Source: EN-ISO 4210-2:* bicycle designed to fold into a compact form, facilitating transport and storage.

**Fork steerer**

*Source: EN 15194:2017:* part of a fork that rotates around the steering axis of a pedelec frame head tube. It is normally connected to the fork crown or directly to the fork legs, and is normally the point of connection between the fork and the handlebar stem.

**Fracture**

*Source: EN 15194:2017:* unintentional separation into two or more parts.

**Maintenance**

*Source: DIN 31051:* maintenance is generally performed at regular intervals and often carried out by trained technical staff. This ensures a maximum service life and low wear and tear for the maintained items. Proper maintenance is often also a pre-requisite for providing a warranty.

**Manufacturer**

*Source: Directive 2006/42/EC on Machinery, 17.05.2006* Any natural or legal person who designs and/or manufactures machinery or partly completed machinery covered by this Directive and is responsible for the conformity of the machinery or the partly completed machinery with this Directive with a view to its being placed on the market, under his own name or trademark or for his own use.

**Maximum continuous power rating**

*Source: ZEG:* the maximum continuous power rating is the maximum power for the electric motor output shaft during 30 minutes.

**Maximum permitted total weight**

*Source: EN 15194:2017:* weight of the fully assembled pedelec plus the rider and baggage, as specified by the manufacturer.

**Maximum saddle height**

*Source: EN 15194:2017:* vertical distance from the ground to the point where the top of the seat surface is intersected by the seat-post axis, measured with the saddle in a horizontal position and with the seat-post set to the minimum insertion-depth mark.

**Maximum tyre pressure**

*Source: EN 15194:2017:* maximum tyre pressure recommended by the tyre or rim manufacturer for a safe and efficient performance. If the rim and tyre both indicate a maximum tyre pressure, the maximum inflation pressure is the lower of the two pressures indicated.

**Minimum insertion depth**

*Source: EN 15194:2017:* mark indicating the minimum insertion depth of handlebar stem into fork steerer (fork stem) or seat post into frame.

**Model year**

*Source: ZEG:* the model year refers to the first production year that the series-manufactured pedelec was manufactured in the version in question and is not always identical with the year of manufacture. The year of manufacture may be before the model year in some cases. If no technical modifications are introduced to the series, production may continue of pedelecs from a previous model year.

**Mountain bike, MTB**

*Source: ISO 4210-2:* bicycle designed for use off-road on rough terrain, on public roads, and on public pathways, equipped with a suitably strengthened frame and other components, and, typically, with wide-section tyres with coarse tread patterns and a wide range of transmission gears.

**Negative deflection**

*Negative deflection or sag* is fork compression caused by body weight and gear (e.g. a backpack), the rider's position and the frame geometry.

**Off-road rough terrain**

*Source: EN 15194:2017:* rough gravel tracks, forest trails and other generally off-road tracks where tree roots and rocks are likely to be encountered.

### Operating instructions

*Source: ISO/DIS 20607:2018:* part of the user information that machine manufacturers provide to machine operators; it contains guidance, instructions and tips related to the use of the machine in all its life cycle phases.

### Placing on the market

*Source: Directive 2006/42/EC on Machinery, 17.05.2006,* Making available for the first time in the Community machinery or partly completed machinery with a view to distribution or use, whether for reward or free of charge.

### Pressure point

*Source: ZEG:* the pressure point on a brake is the point on the brake lever where the brake disc and brake pads respond and the braking process is initiated.

### Quick-release device, quick release

*Source: EN 15194:2017:* lever actuated mechanism that connects, retains or secures a wheel or any other component.

### Racing bicycle

*Source: ISO 4210-2:* bicycle designed for amateur rides at high speed and for use on public roads having a control and steering assembly with multiple grip positions to provide an aerodynamic posture, a multi-speed transmission system and a tyre width not greater than 28 mm with the fully assembled bicycle having a maximum mass of 12 kg.

### Rebound

The rebound defines the speed at which the fork rebounds after being loaded.

### Rechargeable battery, battery

*Source: DIN 40729:1985-05:* a rechargeable battery is an energy storage device that can store supplied electrical energy as chemical energy (charging) and release it as electrical energy when required (discharging).

### Seat post

*Source: EN 15194:2017:* component that clamps the saddle (with a bolt or assembly) and connects it to the frame.

### Shut-off speed

*Source: EN 15194:2017:* speed reached, by the pedelec, at the moment the current has dropped to zero or to the no load current value.

### Slippage

*Source: DIN 75204-1:1992-05:* the difference in relation to vehicle speed between the vehicle speed and the speed of its wheels at their circumference.

### Spare part

*Source: EN 13306:2018-02, 3.5:* item intended to replace a corresponding item in order to retain or maintain the original required function of the item.

### Suspension fork

*Source: EN 15194:2017:* front wheel fork incorporating controlled, axial flexibility to reduce the transmission of road-shocks to the rider.

### Suspension frame

*Source: EN 15194:2017:* frame incorporating controlled, vertical flexibility to reduce the transmission of road-shocks to the rider.

### Total deflection

*Source: Benny Wilbers, Werner Koch: Neue Fahrwerkstechnik im Detail (New chassis technology in detail):* The distance that the wheel travels between an unloaded and a loaded position is called total deflection. When at rest, the vehicle's mass is applied to the springs and reduces the total deflection by the *negative deflection* to the positive deflection.

### Wear

*Source: DIN 31051:* reduction in useful life (4.3.4), caused by chemical and/or physical processes.



### Weight of the ready-to-ride pedelec

*Source: ZEG:* the indicated weight for a ready-to-ride pedelec refers to the weight of a pedelec at the time of sale. The weight of each additional accessory must be added to this weight

### Wheel

*Source: ISO 4210 - 2:* unit or combination of hub, rim and spokes or disc, but excluding tyre assembly.

### Work environment

*Source: ISO 9000:2015:* set of conditions under which work is performed.

### Year of manufacture

*Source: ZEG:* the year of manufacture is the year in which the pedelec was manufactured. The production period is always from May to July the following year.

## 12.1 Abbreviations

Abbreviation	Meaning/derivation
ABS	Anti-blocking system
BLE	Bluetooth Low Energy
EPAC	Electric power-assisted cycle
PTW	Permitted total weight

Table 95: Table of abbreviations

## 12.2 Simplified terms

The following terms are used for better legibility:

Term	Meaning
Operating instructions	Original operating instructions
Damper	Rear frame damper
Specialist dealer	Bicycle specialist dealer
Motor	Drive motor, sub-system
Belt drive	Toothed belt drive

Table 96: Table of simplified terms

## 13 Appendix

### I. Translation of the original EC/EU Declaration of Conformity

Manufacturer	Authorised representative for documentation*	
KETTLER Alu-Rad GmbH Longericher Strasse 2 50739 Köln Germany	c/o ZEG Zweirad-Einkaufs-Genossenschaft eG Longericher Strasse 2 50739 Köln Germany	
The machine, pedelec types:		
KB069-xxRW	QUADRIGA P5 HD BENELUX BELT (RT)	City and trekking bicycle
KB084-xxFW	E-COMFORT P5 (FL)	City and trekking bicycle
KB084-xxRW	E-COMFORT P5 (RT)	City and trekking bicycle
KB085-xxFW	E-COMFORT 8 (FL)	City and trekking bicycle
KB085-xxRW	E-COMFORT 8 (RT)	City and trekking bicycle
KB087-xxFW	E-COMFORT P5 BELT (FL)	City and trekking bicycle
KB087-xxRW	E-COMFORT P5 BELT (RT)	City and trekking bicycle
KB112-xxFD, KB112-xxFT, KB112-xxFW	QUADRIGA P5 (FL)	City and trekking bicycle
KB112-xxRD, KB112-xxRT, KB112-xxRW	QUADRIGA P5 (RT)	City and trekking bicycle
KB136-xxFD, KB136-xxFW	QUADRIGA CX5 HD BENELUX BELT (FL)	City and trekking bicycle
KB137-xxKD, KB137-xxKT, KB137-xxKW	QUADRIGA CX10 LG	City and trekking bicycle
KB156-xxFD, KB156-xxFT, KB156-xxFW	QUADRIGA P5 BELT (FL)	City and trekking bicycle
KB156-xxRD, KB156-xxRT, KB156-xxRW	QUADRIGA P5 BELT (RT)	City and trekking bicycle
KB158-xxKD, KB158-xxKW	TRAVELLER E-GOLD 10 PLUS	City and trekking bicycle
KB159-xxFW	TRAVELLER E-GOLD 5 PLUS (FL)	City and trekking bicycle
KB159-xxRW	TRAVELLER E-GOLD 5 PLUS (RT)	City and trekking bicycle
KB161-xxFW	TRAVELLER E-GOLD 5 PLUS BELT (FL)	City and trekking bicycle
KB161-xxRW	TRAVELLER E-GOLD 5 PLUS BELT (RT)	City and trekking bicycle
KB180-xxFD, KB180-xxFT, KB180-xxFW	QUADRIGA PRO BELT AUTOMATIC	City and trekking bicycle
KB181-xxKD, KB181-xxKW	Quadriga PRO CX11 LG	City and trekking bicycle
KB182-xxKD, KB182-xxKW	QUADRIGA TOWN & COUNTRY PRO CX 11 LG	City and trekking bicycle
KB183-xxKD, KB183-xxKT, KB183-xxKW	QUADRIGA TOWN & COUNTRY COMP CX11 LG	City and trekking bicycle
KB184-xxKD, KB184-xxKT, KB184-xxKW	QUADRIGA COMP CX11 LG	City and trekking bicycle
KB187-xxKD, KB187-xxKT, KB187-xxKW	QUADRIGA TOWN & COUNTRY COMP ABS CX11 LG	City and trekking bicycle
KB188-xxKD, KB188-xxKW	QUADRIGA TOWN & COUNTRY CX10 LG	City and trekking bicycle
KB189-xxKD, KB189-xxKT, KB189-xxKW	QUADRIGA TOWN & COUNTRY P10	City and trekking bicycle
KB190-xxKD, KB190-xxKT, KB190-xxKW	QUADRIGA P10	City and trekking bicycle
KB193-xxKD, KB193-xxKT, KB193-xxKW	TRAVELLER E-GOLD P9	City and trekking bicycle
KB194-xxFD, KB194-xxFW	TRAVELLER E-GOLD P5 (FL)	City and trekking bicycle
KB194-xxRD, KB194-xxRW	TRAVELLER E-GOLD P5 (RT)	City and trekking bicycle
KB195-xxKD, KB195-xxKW	TRAVELLER E-GOLD Town & Country P9	City and trekking bicycle
KB200-xxKD, KB200-xxKW	QUADRIGA TOWN & COUNTRY PRO ABS LTD CX11 LG	City and trekking bicycle

\* Community member who is authorised to compile the technical documentation

Year of manufacture 2022 to year of manufacture 2025, complies with the following applicable EU provisions:

- Machinery Directive 2006/42/EC.
- Directive 2011/65/EU RoHS - Restriction of the use of certain hazardous substances in electrical and electronic equipment
- Electromagnetic Compatibility Directive 2014/30/EU.

The safety objectives in the Low Voltage Directive 2014/35/EU have been met in compliance with Appendix I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

The following harmonised standards have been applied:

- EN 15194:2017 Cycles – Electrically power assisted cycles – EPAC bicycles  
**Except Section 6 Instructions for Use; harmonised standard EN ISO 20607:2019 used in its place**
- EN ISO 20607: 2019 Safety of machinery – Instruction handbook – General drafting principles.

The following other technical standards have been applied:

- EN ISO 11243:2016-12 Cycles – Pannier racks for bicycles – Requirements and test methods
- EN 17406:2021-11 Classification for bicycles usage
- EN 62133-2:2017-11 Secondary cells and batteries containing alkaline or other non-acid electrolytes. Safety requirements for portable sealed secondary cells, and for batteries made from them, for use in portable applications – Part 2: Lithium.



Cologne, 20.10.2023

.....  
Egbert Hageböck, Managing Director of KETTLER Alu-Rad GmbH

## II. Translation of original EC/EU Declaration of Conformity

### Manufacturer

KETTLER Alu-Rad GmbH  
 Longericher Strasse 2  
 50739 Köln  
 Germany

### Authorised representative for documentation\*

c/o ZEG Zweirad-Einkaufs-Genossenschaft eG  
 Longericher Strasse 2  
 50739 Köln  
 Germany

The machine, pedelec types:

KB160-xxKD, KB160-xxKW E-TRANSHILL CX11 LG

Mountain bike

Year of manufacture 2022 to year of manufacture 2025, complies with the following applicable EU provisions:

- Machinery Directive 2006/42/EC
- RoHS Directive 2011/65/EU Restriction of the use of certain hazardous substances in electrical and electronic equipment
- Electromagnetic Compatibility Directive 2014/30/EU.


The safety objectives in the Low Voltage Directive 2014/35/EU have been met in compliance with Appendix I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

The following harmonised standards have been applied:

- EN 15194:2017 Cycles – Electrically power assisted cycles – EPAC bicycles  
**Except Section 6 Instructions for Use; harmonised standard EN ISO 20607:2019 used in its place**
- EN ISO 20607: 2019 Safety of machinery – Instruction handbook – General drafting principles.

The following other technical standards have been applied:

- EN ISO 11243:2016-12 Cycles – Pannier racks for bicycles – Requirements and test methods
- EN 17406:2021-11 Classification for bicycles usage
- EN 62133-2:2017-11 Secondary cells and batteries containing alkaline or other non-acid electrolytes. Safety requirements for portable sealed secondary cells, and for batteries made from them, for use in portable applications – Part 2: Lithium.
- EN 17404 Cycles – Electrically power assisted cycles – EPAC mountain bikes.

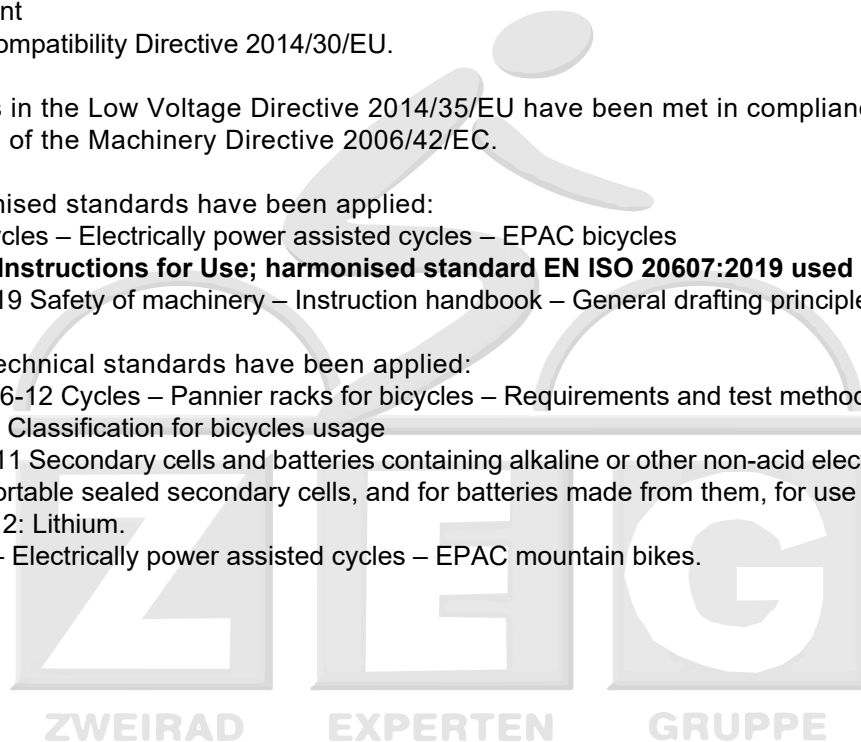

Cologne, 20.10.2023

.....  
 Egbert Hageböck, Managing Director of KETTLER Alu-Rad GmbH

\* Community member who is authorised to compile the technical documentation

## 14 Keyword index

- A**
- ABS,
    - use 269
  - Activity tracking,
    - activate 237
  - Air valve, 111
    - position, 111
  - Articulated shaft,
    - maintain 300
  - Axle,
    - torque, 337
- B**
- Backlight,
    - adjust, 242
  - Back-pedal brake, 128
    - brake, 268
    - check 309
  - Backsweep 109
  - Ball bearings,
    - position, 125
  - Basic cleaning 292
  - Battery housing, 140
  - Battery level indicator (battery), 140
  - Battery level indicator, 166
  - Battery,
    - check, 171
    - clean, 292
    - dispose, 383
    - remove, 251, 252
    - ship, 168
    - store, 169
    - transport, 168
    - torques, 337
  - Battery, see rechargeable battery
  - Bead core, 123
    - position, 121
  - Bell,
    - check 290
    - use 256
  - Belt guard 18
  - Belt sprocket, 138
  - Belt, 138
    - check belt for wear 312
    - check tension 312
    - clean, 296
    - Gates Carbon Drive mobile app 313
  - Bicycle for young adults, 398
  - Bike headset, see steering headset
  - Bluetooth,
    - malfunctions, 15
  - Bowden cable, 126
    - check, 307
  - Brake arm, 129
  - Brake booster 129
  - Brake cable, 126
    - torque, 338
  - Brake calliper, 127
    - position, 127
    - torque, 338
  - Brake disc, 127
    - check, 308
    - clean 295
    - replace, 380
    - position, 127
  - Brake lever, 127
    - adjust pressure point, 203
    - service, 302
  - Brake lining, 129
  - Brake linings, 127
    - check, 308
    - replace, 380
    - retract, 201
    - position, 127
    - torque, 338
  - Brake, 34
    - check brake disc, 308
    - check brake linings, 308
    - check pressure point, 307
    - check, 290, 307
    - clean, 291
    - secure during transport, 167
    - using, 268
  - cable clip, 126
  - cover cap, 126
  - hydraulic, 126
  - insert pin, 126
  - knob, 126
  - mechanical, 126
  - rim brake, 129
  - union nut, 126
- Braking distance, 398
- Break in operation, 169
  - carry out, 169
  - prepare, 169
- Brightness,
  - set. 242
- Button,
  - minus, 145, 262, 265
  - On-Off (battery) 140
  - push assist, 145, 262, 265
- C**
- Cantilever brake,
    - torque, 339
  - Carbon seat post,
    - maintain, 299
  - Carbon suspension fork,
    - inspect, 334
  - Carcass, 122
    - position, 121
  - Cargo bike, 398
  - Cassette,
    - clean, 295
  - CE marking, 398
  - Chain guard 18, 34
  - Chain guard,
    - clean, 296
    - torques 342
  - Chain stay, 101
  - Chain wheel, 138
  - Chain wheels,
    - clean, 295
  - Chain, 138
    - check 310
    - check for wear 310
    - check tension 310
    - clean, 296
    - maintain 301
    - replace, 380
    - service, 348
    - tension, 380
    - position, 34, 138
  - Chainring brake,
    - torque, 341
  - Charger, 139
    - dispose, 383
    - store, 169
  - Chassis, 101
  - Child seat, 243
  - City and trekking bicycles, 398
  - Clamping force,
    - adjust quick release 176
    - check quick release, 176
  - Clock,
    - adjust 235
    - adjust, 241
  - Compression damping, 114
  - Consumables, 398
  - Continuous power rating 398
  - Control panel,
    - clean, 292, 294
  - Conventional valve, see Dunlop valve
  - Crank bearing,

- torque, 342
- Crank set,
  - torque, 342
- Crown 118, 119
- Crown, 117, 120
- D**
- Decommissioning, 398
- Derailleur gears,
  - check 317
  - use, 271
- Disc brake, 398
  - torque, 338
- Display,
  - insert, 239
- Down tube, 101
- Drive belt, 398
- Drive system, 138
  - switch on, 261, 266
  - electric, 139
- Dual pivot rim brake,
  - torque, 339
- Dunlop valve, see conventional valve
- Dust seal 118, 119, 120
- Dust seal, 117
- E**
- eBike Flow,
  - register 232
  - register, 237
- Electrical control system, 398
- Emergency stop 398
- Emergency stop system 19
- F**
- Factory settings,
  - reset 236
- Fault, 398
- Folding bicycle, 398
- Fork lock,
  - position 143
- Fork steerer 118, 119, 399
- Fork steerer, 117, 120
- Fork,
  - check 289
  - maintain, 291
  - position, 34
  - suspended, 400
- Fracture, 399
- Frame number,
  - position, 34
- Frame, 101
  - 101
  - check 289
  - clean, 293
  - inspect, 331
  - maintain, 291, 297
- carbon frame, 101
  - position, 34
- Freewheel,
  - torque, 339
- French valve, see Presta valve
- Front derailleur,
  - clean, 295
  - torque, 346
- Front light, 139
  - position, 34
- Front wheel brake, 128, 129
  - brake, 268
- Front wheel, see Wheel
- G**
- Gear hub,
  - inspect, 332
- Gear shift,
  - adjust dual-cable, Bowden-cable-operated twist grip shifter 318
  - check 317
  - check electric gear shift, 317
  - switch gears, 274, 282
  - use, 271
- Guard,
  - position, 34
- Guards,
  - check 289
- H**
- Handbrake, 398
  - torque, 341
- Handlebars, 109
  - check, 180, 316
  - clean, 293
  - maintain, 298
  - use 256
  - use bar ends 257
  - use multi-position handlebars 256
- position, 34
- rise 109
- torque, 342
- width 109
- Handles,
  - check 290
  - clean 293
  - maintain, 299
  - use leather handles 257
- Head tube, 101
- Headlight,
  - adjust, 231
  - check, 315
  - clean 291
  - torque, 346
- Headlight, see Front light
- Headset, see steering headset
- Hub axle,
  - position, 125
- Hub body,
  - position, 125
- Hub gear,
  - check 317
- Hub, 125
  - adjust ROHLOFF 318
  - clean, 294
  - maintain 300
  - service 322
  - hub, 34
  - position, 121
  - torque, 343
  - without additional features, 125
- Hydraulic brake system,
  - check 307
- I**
- Initial commissioning, 171
- J**
- Jockey wheel,
  - maintain 300
- K**
- Key,
  - Plus, 234, 240
  - plus, 145, 262, 265
- Kickstand,
  - clean, 293
  - maintain, 298
  - stability 319
  - position, 34
- L**
- Language,
  - select 235, 236
  - select, 241
- Leather handles,
  - clean 293
  - maintain, 299
- Leather saddle,
  - clean, 294
  - maintain, 299
- Level of assistance, 146, 150, 152, 166
  - select 264, 267
  - select, 264, 267
- ECO, 146, 152
- OFF, 146, 150, 152
- TOUR, 146, 152
- TURBO, 146, 150, 152
- LIMOTEC A1 seat post, 135
  - length 135
  - minimum insertion depth

- 135
- piston stroke 135
- seat post remote control 135
- LIMOTEC seat post,
  - fit 173
- Lock function,
  - set up, 238
- Lockout,
  - position 143
- M**
- Maintenance, 399
- Manufacturer, 9, 399
- Mechanical,
  - gear shift 317
- Minimum insertion depth marking, 192
- Minimum insertion depth, 399
- Minus button, 145, 262, 265
- Model year, 399
- Motor cover 18
- Motor cover,
  - torques, 343
- Motor, 139
  - clean, 292
  - torques 342
- Mountain bike, 24, 399
- Mountain bike, see MTB
- MTB, see mountain bike
- Mudguard 18
- Mudguard,
  - clean, 293
  - maintain, 298
- Mudguards,
  - check, 289
- N**
- Negative deflection, 399
- Negative deflection, see Sag, 103
- Nipple holes,
  - check, 306
- Nipple well,
  - check, 306
- O**
- Off-road tyres, 122
- On-board computer,
  - adjust 237
  - adjust, 240
  - attach, 233, 239
  - charge battery, 262, 265
  - clean 292
  - connect to a smartphone. 237
  - remove 233
  - remove, 233, 239
- replace battery, 238
- secure 233
- store, 169
- torques, 337
- On-board display,
  - secure 239
- Operating instructions, 400
- P**
- Pannier rack battery,
  - remove, 251, 252
- Pannier rack,
  - care 298
  - change, 255
  - check 289
  - clean, 293
  - inspect, 331
  - use, 254
  - position, 34
- Patent seat post, 134
- Pedal, 128
  - clean, 291
  - fit 179
  - maintain, 300
  - torque, 345
- Pedelec, 398
  - adjust 184
  - after each ride, 291
  - assemble 170
  - before each ride 247, 249, 289
  - check, 303
  - clean 292
  - commission 171
  - initial inspection 320
  - inspect (specialist dealer) 320
  - major inspection 320
  - sell, 180
  - service 297
  - ship, 168
  - store, 169
  - transport, 167
  - unpacking 170
  - use 254
- Placing on the market, 400
- Plus button, 145, 234, 240, 262, 265
  - Position, 34
- Position, 34
- Pressure point, 400
- Puncture protection belt, 123
  - position, 121
- Push assist button, 145, 262, 265
- Push assist,
  - use, 263, 266
- Q**
- Quick release, 400
  - inspect, 333
  - position, 125
- Quick releases,
  - check 289
- Quickly adjustable 108
- R**
- Racing bicycle valve, see Presta valve
- Racing bicycle, 400
- Rear derailleur,
  - maintain, 300
  - position 138
  - torque, 346
- Rear frame damper, 103
  - adjust compression damper, 228
  - adjust rebound damper, 226
  - adjust threshold, 228
  - check 289
  - clean 291
  - inspect, 331
  - maintain, 322, 331
  - adjust sag, 215
  - structure, 104, 106, 107
- Rear frame fork end, 101
- Rear frame seat stay, 101
- Rear light, 139
  - clean 291
  - position, 34
- Rear wheel brake, 127, 128
- Rear wheel, see Wheel
- Rebound adjuster, 111
  - position, 111
- Rebound damping, 112
- Rebound, 400
- Rechargeable battery, 140, 400
- Rechargeable battery, see battery
- Reflector,
  - position, 34
- Reflectors,
  - clean 291
- Retainer guard, 140
- Riding light
  - switch on 263
- Riding light,
  - adjust, 231
  - check, 290, 315
  - switch off 263, 266
  - switch on 266
- Rim brake locking lever 126,

- 129
- Rim, 123
  - replace, 380
  - position, 121
- Rims,
  - maintain, 299
- Road tyres, 122
- Roller brake,
  - brake, 268
- S**
- Saddle, 255
  - adjust hardness 190
  - change the seat length, 192
  - check 316
  - clean, 293
  - determine saddle height, 191, 192
  - determine width 189
  - Select hardness 190
  - use, 255
  - position, 34
- Safety guards, 18
- Sag 103
- Sag setting wheel,
  - position, 111
- Sag,
  - setting wheel 118, 119
  - setting wheel position 143
  - setting wheel, 117, 120
- Sclaverand valve, see Presta valve
- Seat post, 34, 134, 400
  - check 290, 316
  - clean, 293
  - inspect, 335
  - maintain, 299
  - patent seat post 134
  - suspension seat post 134
  - remote control torque, 339
  - torque, 339
- Seat tube, 101
- Securing hook, 140
- Settings,
  - change 235
  - change, 241
  - reset, 242
- Shift recommendation,
  - set, 241
- Shifter,
  - clean, 295
  - maintain, 300
  - torque, 345
- Shut-off speed, 400
- Size, 101
- Slicks, 122
- Slippage, 400
- Software,
  - update, 237
- Spare part, 400
- Spoke nipples, 124
  - maintain, 300
  - position, 121
- Spokes, 124
  - check, 306
  - replace 380
  - position, 121
- Start screen, 234
- Steering headset 108
- Steering headset,
  - grease, 332
  - inspect, 332
  - position, 34
- Steering system, 108
- Stem, 108
  - adjust 254
  - check, 180, 316
  - clean, 293
  - inspect, 332
  - maintain, 298
  - position, 34
  - torque, 347
- Suspension fork, 109, 400
  - clean 291, 293
  - inspect, 334
  - maintain, 291, 297
- Suspension seat post 134
- Suspension seat post,
  - clean, 291
  - maintain, 299
- Switching element,
  - clean, 294
- T**
- Threshold, 228
- Time format,
  - set, 241
- Top tube, 101
- Total deflection 400
- Trailer, 244
- Transport, 167
- Transportieren siehe Transport
- Tread, 122
  - position, 121
- Tube,
  - replace, 380
- Tyre design types, 121
- Tyre pressure, 121
  - change, 303
  - check, 303
- Tyre size, 121
- Tyre,
  - position, 121
- Tyres, 121
  - check, 305
  - clean 294
- Tyres,- Tube-type tyres 121
- U**
- Underride guard,
  - torque, 347
- Units,
  - select 241
- USB cover,
  - check 290
- USB port,
  - use 262
  - use, 262, 265
- User account,
  - create, 237
- V**
- Valve, 121
  - Dunlop valve, 123
  - position, 121
- V-Brake brake,
  - torque, 347
- Vehicle,
  - technical data 29
- W**
- Wear, 400
- Wheel, 34, 121, 401
  - check concentricity 289
  - check, 303
  - fit 172, 174, 175, 178
- Winter break, see Break in operation
- Work environment, 401
- Y**
- Year of manufacture, 401